EcoStruxure™
Innovation At Every Level



PacT Series

ComPacT NSX
ComPacT INS/INV
MasterPacT NW
DC - DC PV - DC EP



Catalog 2021

Power Circuit Breakers and
Switch-disconnectors
Direct Current from 16 to 4000 A

se.com

Life Is On | Schneider Electric



Green Premium™

Green Premium™

More than 75% of our product sales offer superior transparency on the material content, regulatory information and environmental impact of our products:

- RoHS compliance
- REACh substance information
- Industry leading # of PEP's*
- Circularity instructions

The Green Premium program stands for our commitment to deliver customer valued sustainable performance. It has been upgraded with recognized environmental claims and extended to cover all offers including Products, Services and Solutions.

CO_2 and P&L impact through… Resource Performance

Green Premium brings improved resource efficiency throughout an asset's lifecycle. This includes efficient use of energy and natural resources, along with the minimization of CO_2 emissions.

Cost of ownership optimization through… Circular Performance

We're helping our customers optimize the total cost of ownership of their assets. To do this, we provide IoT-enabled solutions, as well as upgrade, repair, retrofit, and remanufacture services.

Peace of mind through… Well-being Performance

Green Premium products are RoHS and REACh compliant. We're going beyond regulatory compliance with step-by-step substitution of certain materials and substances from our products.

Improved sales through… Differentiation

Green Premium delivers strong value propositions through third-party labels and services. By collaborating with third-party organizations we can support our customers in meeting their sustainability goals such as green building certifications.

Discover what we mean by green
Check your products!

*PEP: Product Environmental Profile (i.e. Environmental Product Declaration)


ComPacT NSX, ComPacT INS/INV and MasterPact NW Direct Current

A Complete DC Offer from 16 to 4000 A

ComPacT NSX, ComPacT INS/INV and MasterPact NW direct current (DC) circuit breakers are used to protect and control low-voltage distribution systems.


They are installed in main low-voltage switchboards (MLVS) and in distribution switchboards (as incomers and outgoers). They can use all the accessories and auxiliaries for the AC ranges and are thus suitable for most DC systems and applications.



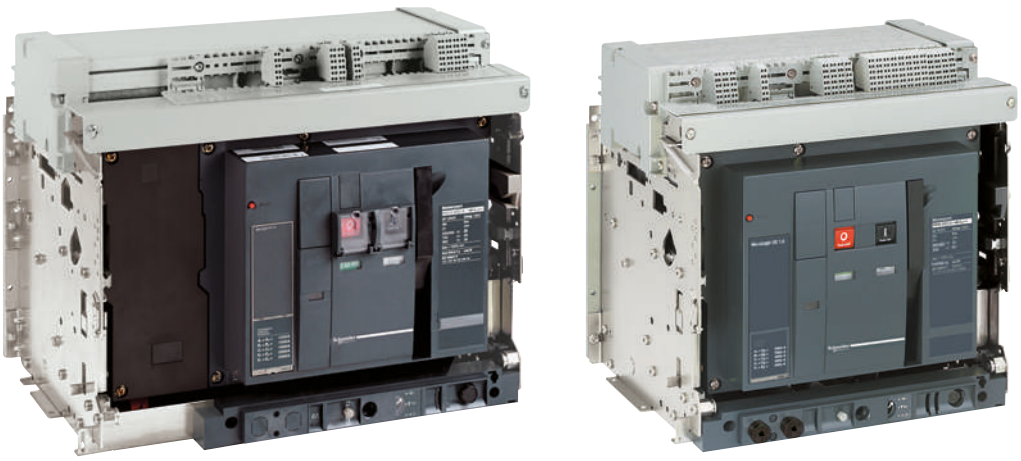

A Complete DC Offer

ComPacT NSX DC from 16 to 1200 A

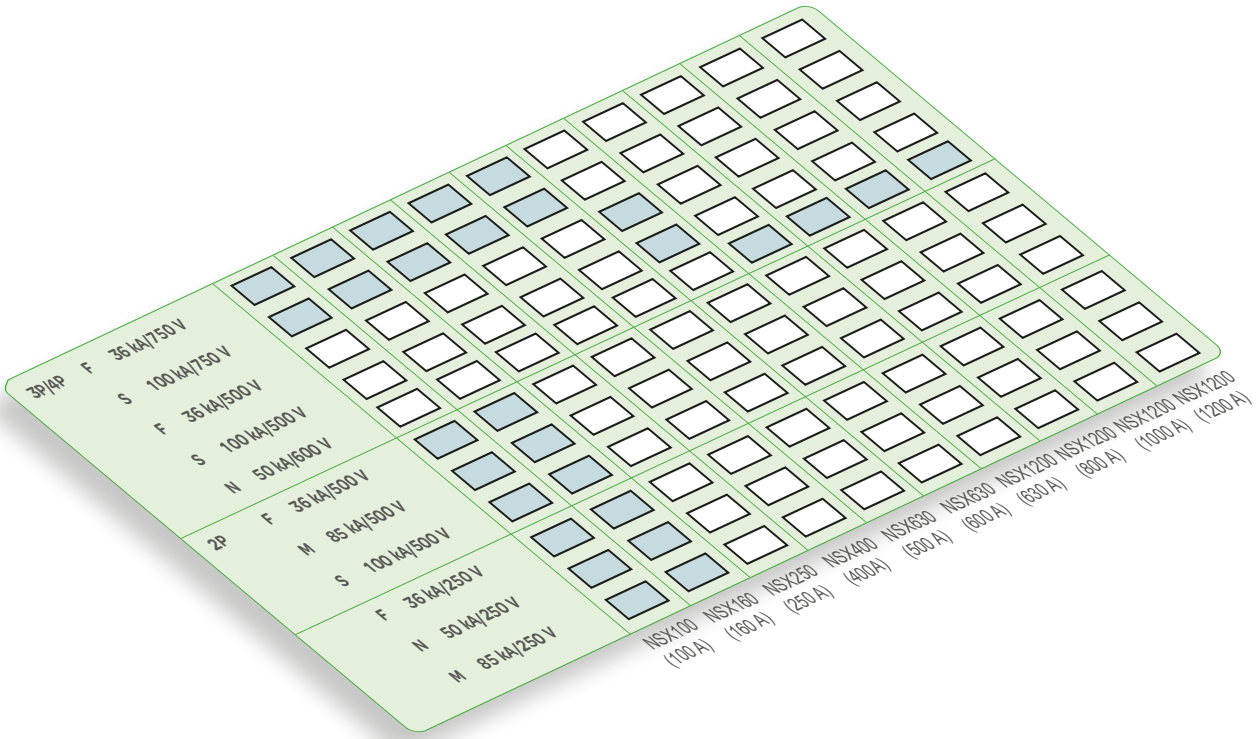

The ComPacT NSX range is designed for DC voltages from 24 to 750 V and offers:

■ A wide selection of models suited to many applications:

□ 1, 2, 3 and 4 poles up to 160 A

□ 3 and 4 poles from 250 to 630 A

□ 2 poles from 630 to 1200 A

■ High breaking capacities, with four performance levels F, N, M and S:

□ F

- 36 kA in a 1 pole version, for systems ⩽ 250 V
- 36 kA in a 2 poles version, for systems ⩽ 500 V
- 36 kA in a 3 or 4 poles version, for systems ⩽ 750 V

□ N

- 50 kA in a 1 pole version, for systems ⩽ 250 V
- 50 kA in a 2 poles version, for systems ⩽ 600 V

□ M

- 85 kA in a 1 pole version, for systems ⩽ 250 V
- 85 kA in a 2 poles version, for systems ⩽ 500 V

□ S

- 100 kA in a 2 poles version, for systems ⩽ 500 V
- 100 kA in a 3 or 4 poles version, for systems ⩽ 750 V

■ Fewer frame sizes: just two poles pitches (35 and 45 mm) for easy integration in installation systems (enclosures, machines, etc.)

■ Accessories for insulation and series or parallel connection of poles, suited to the particularities of DC applications

■ Fixed and withdrawable versions (3 and 4 poles, DC type).

Breaking capacity Icu for 250 V per pole and L/R = 15 ms [1] (1P: 250 V, 2P: 500 V, 3P: 750 V)

[1] L/R = time constant of the distribution system (see page A-11).



NSX160 DC -1P



NSX160 DC - 2P



NSX250 DC - 4P




NSX630 DC - 3P



NSX1200 DC - 2P

From 16 to 4000 A

MasterPact NW DC from 1000 to 4000 A

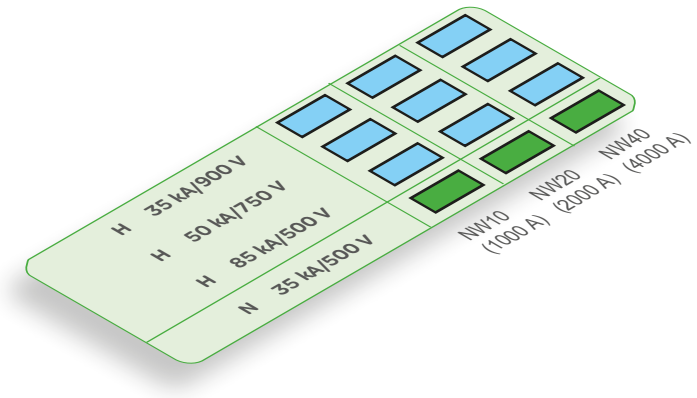


The MasterPact NW range is designed for DC voltages from 24 to 900 V and offers:
■ 2 versions: C/D (3 poles)
E (4 poles)
■ Three current ratings: 1000, 2000 and 4000 A
■ Two high breaking-capacity levels N and H.
Breaking capacity Icu for L/R = 15 ms [1] for 500, 750 or 900 V system voltages:
□ N
- 35 kA for systems ⩽ 500 V
□ H
- 85 kA for systems ⩽ 500 V
- 50 kA for systems ⩽ 750 V
- 35 kA for systems ⩽ 900 V
■ Two types of devices:
□ Circuit breaker for the protection of power circuits and loads
□ Switch-disconnector for circuit control and disconnection
■ Fixed and drawout versions for the entire range.
■ Specific offers dedicated to the specific conditions of some applications:
□ NW HADC-D switch-disconnectors for photovoltaic application under 1000 VDC
□ NW EPDC-D circuit breakers for Marine application under 1100 V DC are also presented in this catalog.

[1] L/R = time constant of the distribution system (see page A-11).



NW10 DC - C/D Version

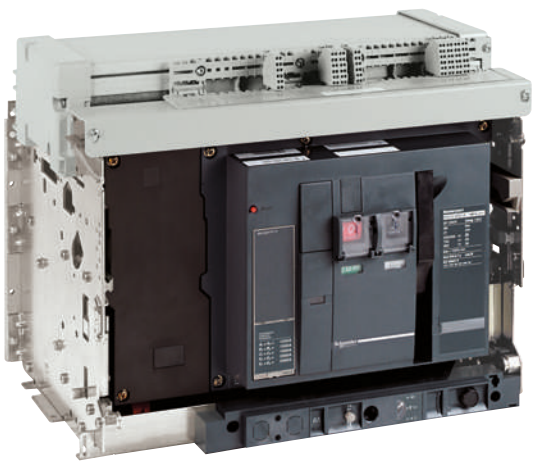

NW10 DC - E Version



ComPacT NSX DC PV - DC EP, ComPacT INS PV and MasterPact NW DC PV

A Complete DC Offer for Solar Application from 80 to 4000 A




ComPacT NSX DC PV - DC EP

Circuit Breakers and Switch-Disconnectors

Enhancing the Reliability and the Efficiency of your Photovoltaic Installation

Schneider Electric photovoltaic packages give you dependable, clean, and affordable solar power. High quality, highly efficient, and available everywhere, our systems are simple-to-install, giving you a competitive edge. The ComPacT NSX DC PV range of molded case circuit breakers and switch-disconnectors with operational voltage up to 1500 V DC includes the switchgears and the protection components you need to efficiently operate your photovoltaic installation in commercial buildings and power plants.



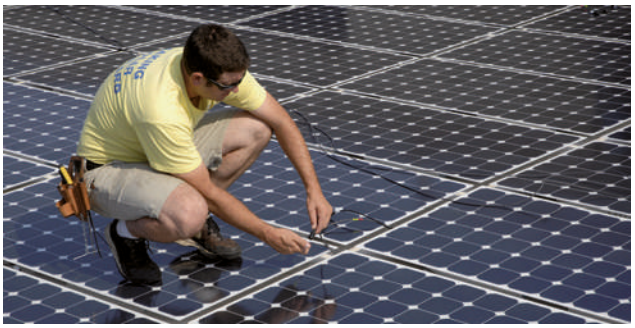



With heatsinks supplied as standard, the circuit breaker or switch-disconnector rating is optimized, avoiding the need to oversize protection components and saving space in the enclosure. As part of the ComPacT NSX range, all existing auxiliaries and accessories are compatible.
The terminal shields and phase barriers are available for insulation. The shunt trip auxiliary is available for remote disconnection.

ComPacT NSX DC PV - DC EP...

...with short heatsinks



...with long heatsinks



ComPacT INS PV
Switch-Disconnectors



No matter the size or scale of the project, Schneider Electric, has a photovoltaic solution to fit your needs. Fast ROI, high efficiency – it's all a part of our offer as the world leader in energy management.

The INS PV-1 is a direct current switch disconnector dedicated to array isolation and control with Voc until 600 V DC.

Photovoltaic Applications



MasterPact NW HADCD-PV
Switch-Disconnectors



Schneider Electric's MasterPact NW HADCD-PV switch-disconnectors are used for circuit control and disconnection.

Dedicated to Photovoltaic Application



MasterPact NW EPDC-D

Circuit-Breakers for Marine Applications at 1100 VDC



Alternative energies have a major contribution to reducing the carbon footprint in marine industry and building the environmental sustainability of power generation.
Vessels hybrid propulsion systems have continuously been growing worldwide in these last years. The competitive environment together with the increasing power of such systems have created the need for voltage increase on the DC side, in order to limit the cables cross section, to lower the DC power losses, and to reduce the installation costs.

MasterPact NW10-40 EPDC-D is a 1100 VDC air circuit breakers offer tested and certified for marine application.
Marine applications have particular characteristics and require equipment with specific performance. These performance requirements are identified for the IEC 60947-2 products in the IACS UR E10 unified requirements: "Test Specification for marine Type Approval". NW10-40 EPDC-D circuit breakers are certified as per the IEC 60947-2 and the IACS UR E10.




Architecture Overview

Smart Panels
Enerlin'X

Ethernet-Ready Smart Panels

Ethernet-ready Smart Panels enable electrical distribution control and expertise. 'Protect' - 'Measure' - 'Connect' are the 3 pillars of their technology.

PB115758.psd

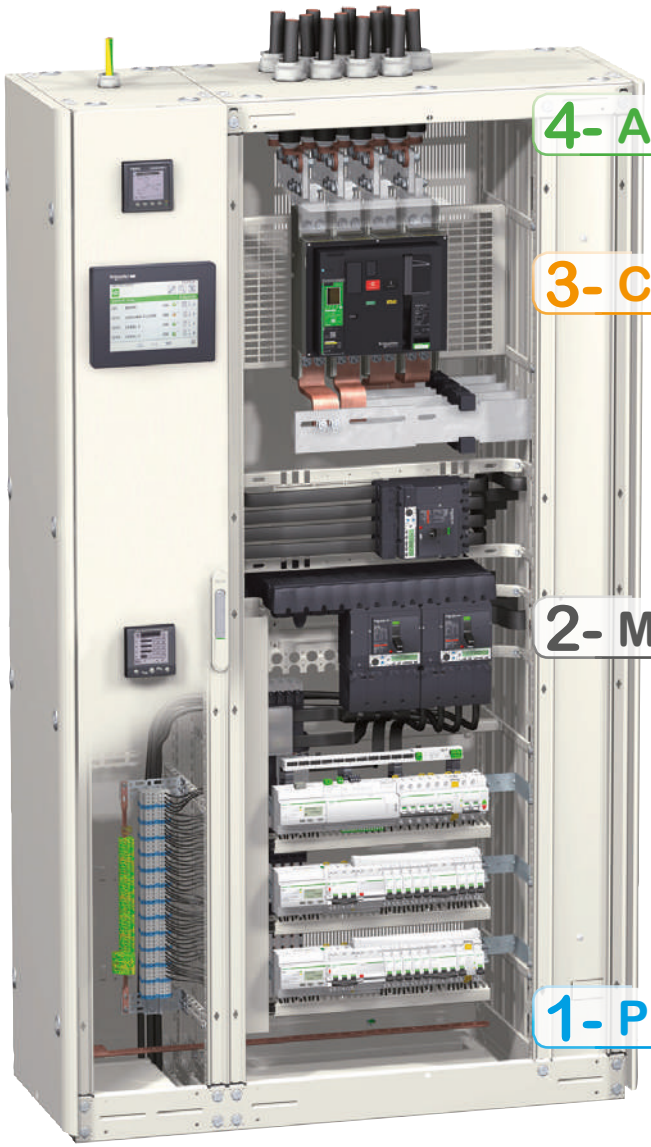

4- Act

3- Connect

Give a Voice to the Panel

Ethernet network data transmission is now part of the intrinsic design of protection and metering devices

2- Measure

Keeping a Close Eye on Energy Flows

The switchboard plays a key role in capturing building-related data, by gathering the critical protection and metering components.

1- Protect

Electrical Protection is at the Core of Smart Panel

High-performance technology is present in every breaker and every residual current device.

Architecture Overview

Future Savings, Peace-of-Mind

Access to Smart Panel status, values, is essential for taking advantages of monitoring and management services, locally or remotely.

Act in Small/Medium Buildings

with FDM 128, Com'X 510, Power View, EcoStruxure™ Facility Expert

PB111801-60.eps




Electrical device monitoring and control with FDM 128, locally

Optimizing Energy-Efficiency

- Visualize, record energy consumption and WAGES.
- Comply with regulation.

DD385918.ai

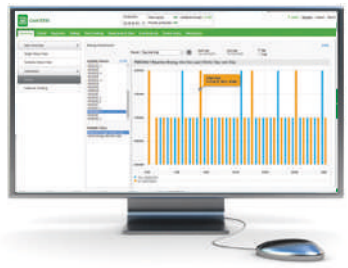


Com'X 510 web pages direct display, or Cloud based pages from other devices with Power View

Improving Continuity of Service

- Get instant notifications
- Manage with assets-maintenance platform
- Get and analyze data for quick crisis-recovery

DB436005.ai

DB423056.ai

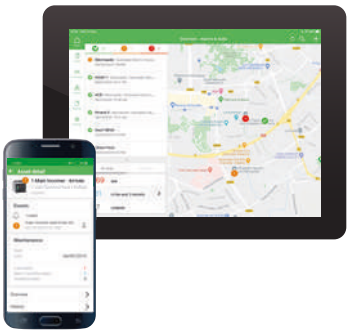

Distance management with EcoStruxure™ Facility Expert on Smartphone, tablet, PC

Increasing Maintenance Efficiency

- Operate preventive maintenance tools
- Follow maintenance & planning
- Provide business owner instant access to maintenance reports

Architecture Overview

Day-to-Day Energy Management
>> Power Availability and Quality, Energy Performance

For simply dealing with building user's needs and energy constraints.
EcoStruxure™ Building Management provides electrical management, monitoring and energy accounting.

Energy decisions are often crucial in large critical buildings, they must be informed.
EcoStruxure™ Power Monitoring Expert (software for PC) collects Smart Panels values to provide expert analyzis.

Act in Large Non-Critical Buildings

with EcoStruxure™ Energy Expert







Managing Equipment and Key Assets

- Check operating status, faults on custom on-line diagrams.

Monitoring Electrical Network

- Observe voltage disturbances, harmonics on graphics.
- Read power factor.

Accounting Energy

- Record power meter data on dashboards.
- Allocate energy consumption with costs.
- Follow conservation goals.

Act in Large Critical Buildings

with EcoStruxure™ Power Monitoring Expert [1]







Analyzing Power Events

- Speed up downtime crisis recovery.
- Determine incident root cause, events sequence.
- Troubleshoot power quality issues.

Monitoring Power quality

- Be alerted of equipment affected by power quality issue.
- Compare power quality against industry standards.
- Collect facts for future discussion with Utility.

Analyzing Energy Performance

- Evaluate building energy saving performance.
- Identify underperforming loads.
- Analyze Energy Conservation Measures (ECMs) according ISO50001 program.

[1] EcoStruxure™ Power Monitoring Expert, **https://pmedemo.biz/web/**
ID: demo & Password: demo

General Contents

ComPacT NSX DC - DC PV - DC EP
ComPacT INS/INV DC - DC PV
MasterPact NW DC - DC PV

Presentation

Functions and Characteristics

Installation Recommendations

Dimensions and Connection


Electrical Diagrams

Additional Characteristics


Catalog Numbers and Order Form

The Benefits of a Comprehensive and Optimized Range Design…


ComPacT NSX and MasterPact NW DC - DC PV - DC EP circuit breakers constitute a flexible and cost-effective means to meet the various needs of DC systems.

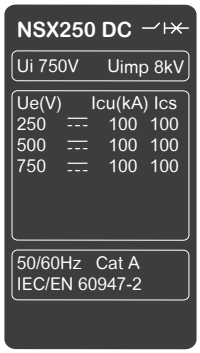


NSX250 DC rating plate

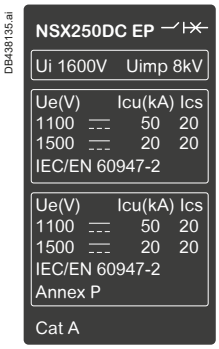


NSX200 DC EP rating plate

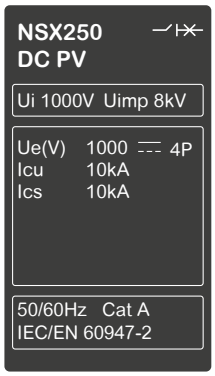


NSX200 DC PV rating plate

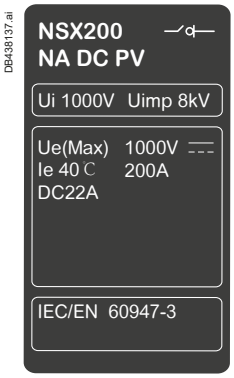


NSX200 NA DC PV rating plate

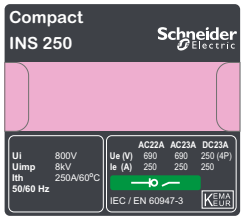

INS 250 rating plate

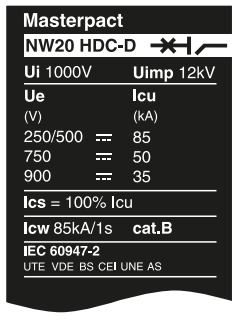

NW20 HDC-D rating plate

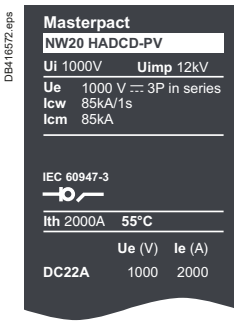

NW20 HADCD-PV rating plate

A Wide, Complete and High-Performance Range

Schneider Electric DC- DC PV - DC EP circuit breakers and switches provide a comprehensive solution for the many applications met in DC systems.
The ComPacT NSX and MasterPact NW DC ranges offer, a wide selection of current ratings (16 to 4000 A) and breaking capacities (up to 100 kA) for the common voltages up to 900 V DC.
The ComPacT NSX and MasterPact NW DC - DC PV ranges are designed for use under 1000 V for photovoltaic application.
The ComPacT INS/INV offers a wide selection of current ratings (40 to 2500 A) for the common voltage up to 250 V DC.

Flexible and Optimized Design

The ComPacT NSX, ComPacT INS/INV and MasterPact NW DC ranges use all the standard accessories and auxiliaries of the AC ranges.
The modular design and many possibilities offered by these systems provide a high degree of flexibility in customizing products, while benefiting from dependable and optimized industrial design.

Dependable and Simple Operation

Even though they use the accessories of the corresponding AC ranges, the ComPacT NSX, ComPacT INS/INV and MasterPact NW DC ranges have been specially designed for DC systems.
Specific accessories have been developed to meet the needs of series or parallel connection of poles by users in a simple and dependable manner (see page opposite). ComPacT NSX, ComPacT INS/INV and MasterPact NW DC devices can be installed in class II switchboards with a degree of protection up to IP54.

Compliance with Standards

ComPacT NSX, ComPacT INS/INV and MasterPact DC circuit breaker ranges comply with:

- The main international standards and in particular IEC 60947-1/2/3
- European (EN 60947-1 and EN 60947-2) and the corresponding national standards: France NF, Germany VDE, UK BS, Australia AS, Italy CEI
- The specifications of the marine classification companies (Veritas, Lloyd's Register of Shipping, Det Norske Veritas, etc.)
- French standard NF C 79-130 and the recommendations issued by the CNOMO organization for the protection of machine tools. For United States UL, Canadian CSA, Mexican NOM and Japanese JIS standards, please consult us.

ComPacT NSX, ComPacT INS/INV and MasterPact NW DC - DC PV switches and auxiliaries comply with the following:

- The main international standards and in particular IEC 60947-2 (circuit breaker), IEC 60947-3 (switch-disconnectors)
- European (EN 60947-1, EN 60947-2 and EN 60947-3) and the corresponding national standards: France NF, Germany VDE, United Kingdom BS, Australia AS, Italy CEI.

Open Communication

ComPacT NSX and MasterPact NW DC devices can be equipped with communication options for integration in a supervision system via Modbus.

Pollution Degree

ComPacT NSX and MasterPact NW DC circuit breakers are certified for operation under pollution conditions in industrial environments, as per standard IEC 60947, corresponding to:

- Pollution degree 3 (ComPacT NSX, ComPacT INS/INV)
- Pollution degree 3 (MasterPact NW).

Tropicalization

ComPacT NSX, ComPacT INS/INV and MasterPact NW DC circuit breakers have successfully passed the tests prescribed by the following standards for severe atmospheric conditions:

- IEC 60068-2-1 - dry cold (-40 °C)
- IEC 60068-2-1 - dry heat (+85 °C)
- IEC 60068-2-30 - damp heat (95 % relative humidity at +55 °C)
- IEC 68-2-52 (level 2) - salt mist.

Environmental Protection

Schneider Electric circuit breaker ranges benefit from Eco-design:

- Use of environment-friendly materials
- Non-polluting production units complying with ISO 14001 standards
- Filtered breaking for high current ratings to avoid pollution in the switchboard
- Low dissipated energy per pole, making energy losses insignificant
- Marking of products in view of sorting recyclable materials at the end of the service life.

… Specifically for DC- DC PV - DC EP Applications

Designed for Direct Current

Performance Levels and Quality Signed Schneider Electric

The creation of a dependable and high-performance DC range requires a large amount of specific design and development work in addition to that invested in the original AC range.
Schneider Electric called on its proven industrial experience in the AC field and its recognized know-how in current interruption to develop a high-performance DC range.
Schneider Electric decided to use the cases and accessories of its ComPacT NSX and MasterPact NW ranges with:

- A high-performance design for the breaking chambers or the poles intended specifically for DC applications (e.g. 100 kA at 250 V per pole for ComPacT NSX and 85 kA at 900 V for two poles for MasterPact NW)
- Fast trip units developed for DC applications
- Optimized pole-connection and isolation possibilities that are both simple and dependable.

Optimized Solutions for the Many Types of DC Systems

The many types of DC systems make it necessary, for cost and technical-optimization reasons, to connect the poles of two, three or four-pole circuit breakers in series or in parallel.
The ComPacT NSX and MasterPact NW ranges enable series connection of poles, thereby optimizing breaking capacity for high voltages.
Series connection reduces the voltage across the terminals of each pole (the total voltage is divided by two, three or four depending on the circuit breaker) and the operation of all poles provides the breaking capacity of the overall device.
This makes it possible to break short-circuit currents at high voltages while optimizing solutions (e.g. a ComPacT NSX 100 kA 250 V per pole can be used on a 750 V system with three poles connected in series, thus reducing the cost compared to a 750 V solution).
The ComPacT NSX range enables parallel connection of the poles, thereby optimizing the use of the rated currents.

Optimized and Dependable Series or Parallel Connection of Poles

Series Connection - Controlled Temperature Rise and Enhanced Performance


Schneider Electric DC circuit breakers comply with product standards IEC 60947-1 and 2.
To that end, series connection of poles meets:

- Temperature-rise conditions. Connections specifically designed to dissipate heat mean the thermal model is equivalent to that for AC applications. The devices dissipate the temperature rise produced by relatively short series connections.
- Connections are designed for severe operating conditions (insulation and safety clearances, ultimate breaking capacity, high pollution levels, etc.).


Parallel Connection - Optimization

Certain DC systems require high power levels (hundreds to thousands of amperes) at reduced voltages, most often ≤ 250 V.
The configurations of DC systems and the exceptional performance levels of ComPacT NSX circuit breakers mean the poles can be parallel connected.
This technique virtually doubles, triples or quadruples the current rating depending on the type of circuit breaker and thus reduces the cost of solutions.

ComPacT NSX DC and MasterPact NW DC circuit breakers offer optimized pole-connection possibilities.

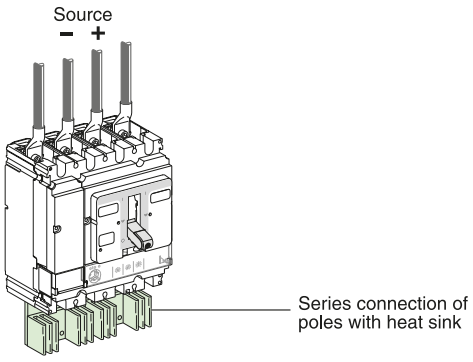

ComPacT NSX DC

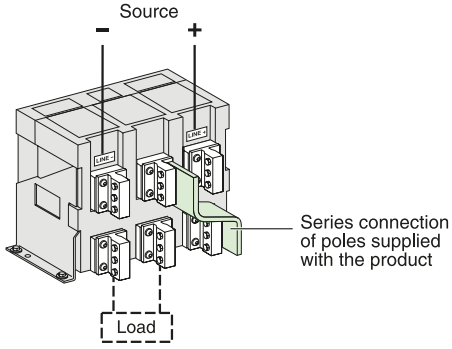


MasterPact NW DC - supplied ready for installation (here with vertical rear connections)

Great Flexibility in Adapting to DC Applications

Overview of Series Connection of Poles for ComPacT NSX DC

With ComPacT NSX DC circuit breakers, it is easy to create a large number of series pole arrangements using prefabricated connections mounted on site during equipment installation.

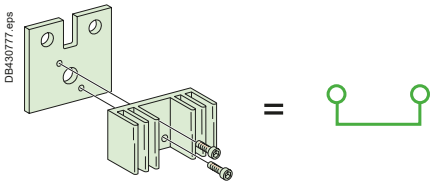


One type of connection per framesize, two catalog numbers for all series connections.

- All connections are possible for the fixed and withdrawable versions
- Indifferent connection of polarities, from left to right or right to left
- Indifferent connection of upstream and downstream cables to top or bottom terminals
- Series connection of poles is possible by upstream/downstream connections. Creation of the connections is the responsibility of the panel builder or the installer.


ComPacT NSX DC

Examples of Series Connection


Two-pole devices

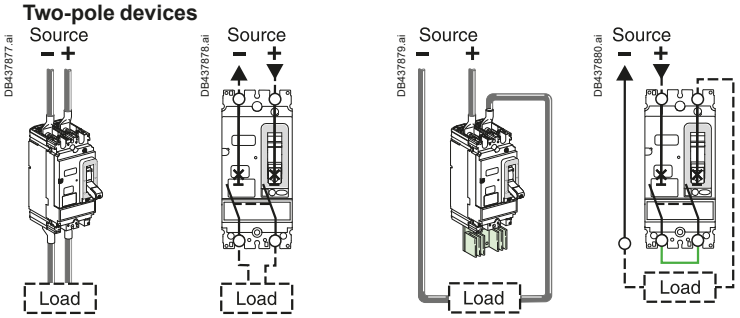


Three-pole devices

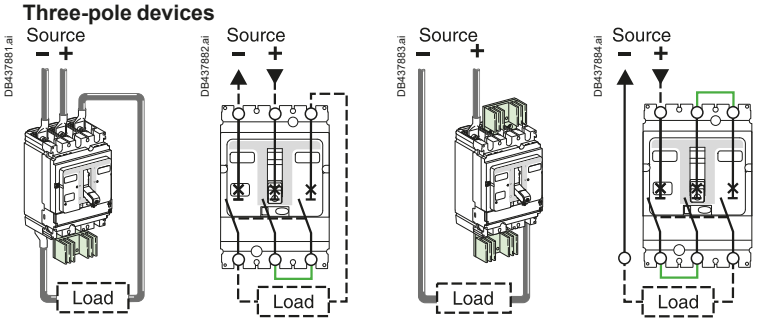

Four-pole devices

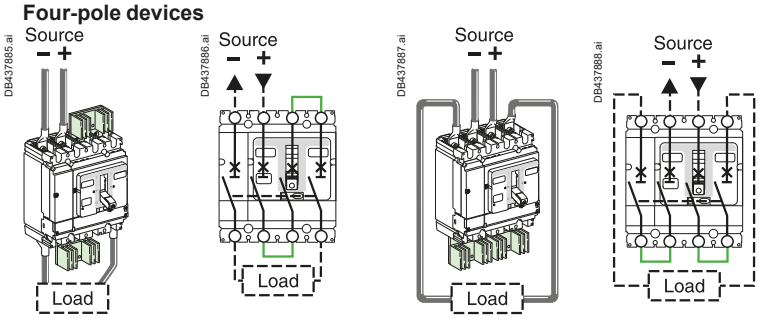


Great Flexibility for Connections

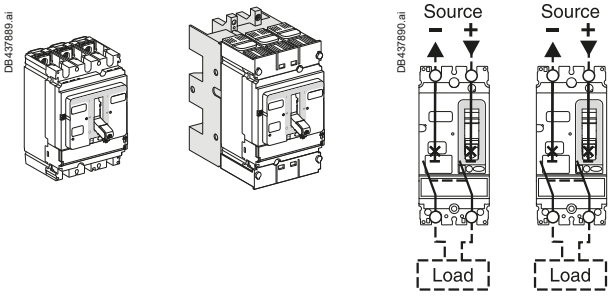

All connections are possible for the fixed and withdrawable versions

Indifferent connection of polarities

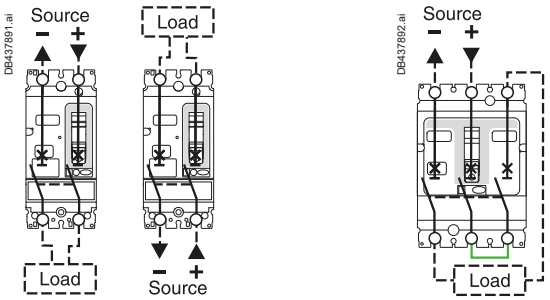


Upstream/downstream connections to top or bottom connectors

Series connection of poles is possible by upstream/downstream connections (user made)

Great Flexibility in Adapting to DC Applications

Overview of Series Connection of Poles for Com**PacT** INS/INV

With Com**PacT** INS/INV switch-disconnectors, it is easy to create a large number of series pole arrangements using prefabricated connections mounted on site during equipment installation.

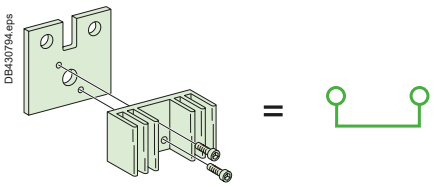


One type of connection per frame size, two catalog numbers for all series connections.

- Indifferent connection of polarities, from left to right or right to left
- Indifferent connection of upstream and downstream cables to top or bottom terminals
- Series connection of poles is possible by upstream/downstream connections. Creation of the connections is the responsibility of the panel builder or the installer.


Series Connection of Poles for Direct Current Applications

Examples of Series Connection


Three-pole devices

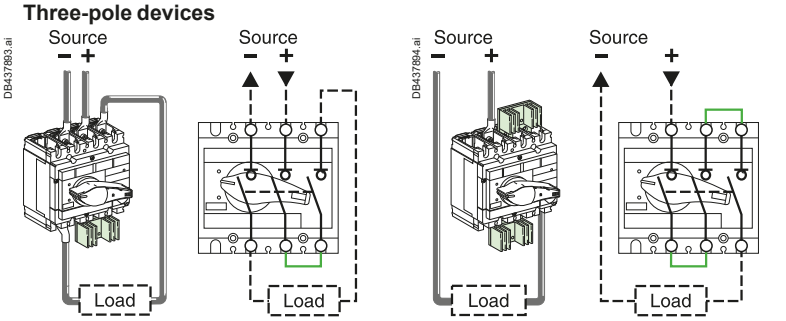


Four-pole devices

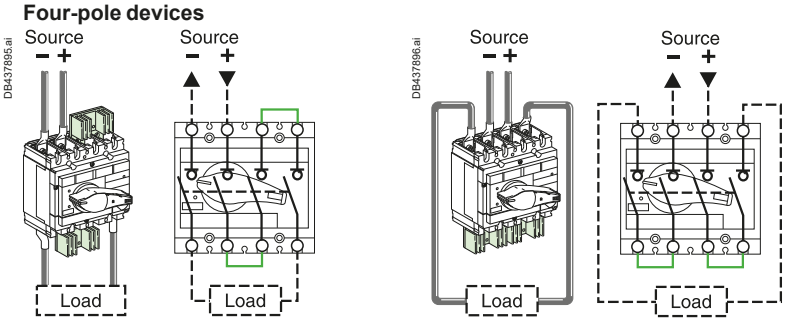


Great Flexibility for Connections

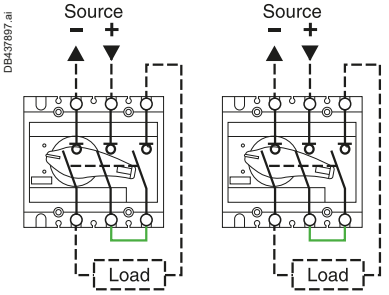

Indifferent connection of polarities

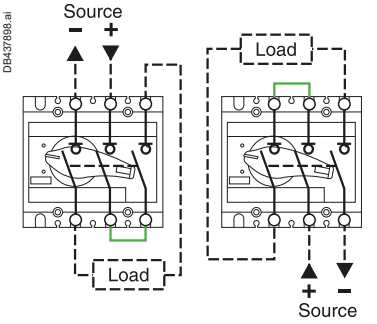

Upstream/downstream connections to top or bottom connectors

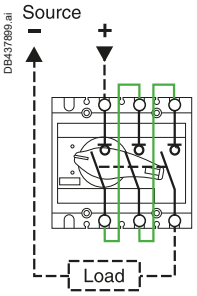


Series connection of poles is possible by upstream/downstream connections (user made)

Great Flexibility in Adapting to DC Applications

Overview of Series Connection of Poles for Master**Pact** NW DC

Master**Pact** NW DC circuit breakers, with high ratings and installed as incoming devices, offer three coupling versions C, D and E ready for connection.
The polarities “Line -”, “Line +” indicated on the rear connections of the Master**Pact** NW DC circuit breakers have to be respected in order to match the magnetic threshold tolerances.


The prefabricated series connections are factory made due to the power ratings. They also dissipate heat.

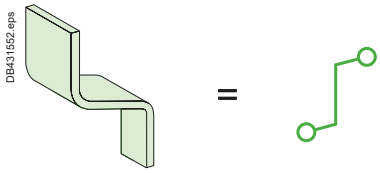


MasterPact NW DC

Three Versions Supplied Ready for Connection

Version C

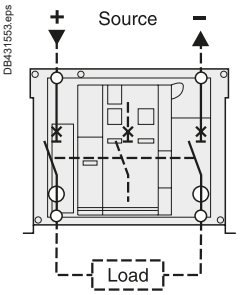


Front view: three-pole case - two poles in series

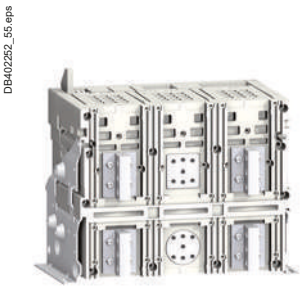


Rear view

Version D

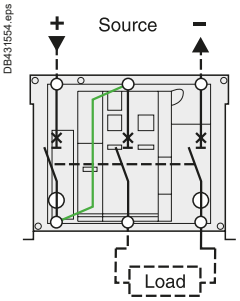


Front view: three-pole case - three poles in series

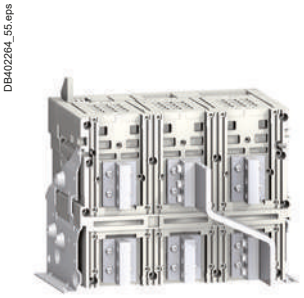


Rear view with connections

Version E

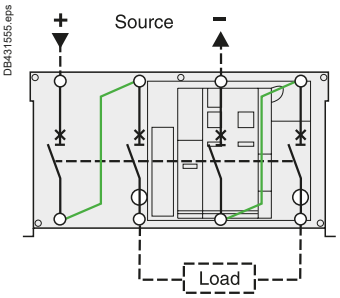


Front view: four-pole case - four poles in series

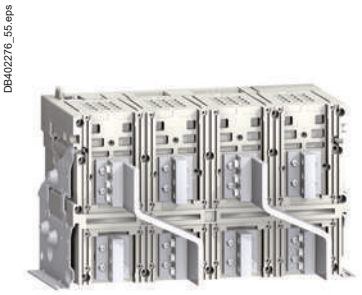

Rear view with connections

Great Flexibility in Adapting to DC Applications
Parallel Connection of Poles

The exceptional performance levels of Com**PacT** NSX DC, DC PV and DC EP circuit breakers mean the poles can be parallel connected. This technique virtually doubles, triples or quadruples the current rating depending on the type of circuit breaker and thus reduces the cost of solutions.




Parallel pole connection accessories are identical to those for series connections. The are equipped with heat sinks.
Customer connections are made directly to the connection plates after removing the heat sinks.




Specific connections are required for parallel connection of three poles.


Examples of Parallel Connection


Two-pole devices

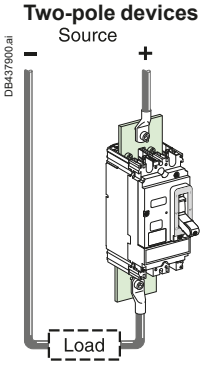

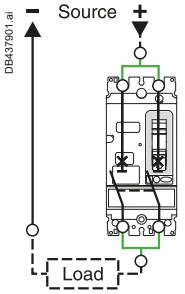



Three-pole devices

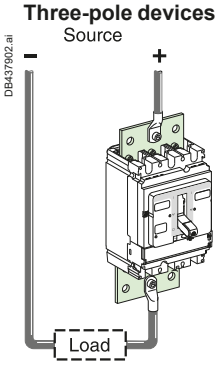

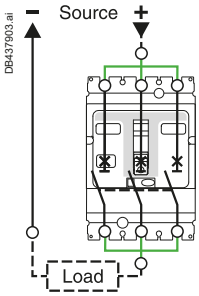



Four-pole devices (2 x 2 poles in parallel)

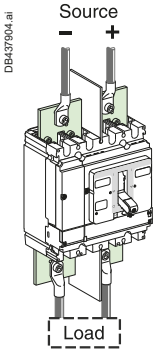

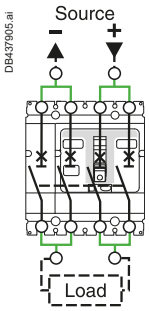

It Is Possible to Mix Series and Parallel Connections

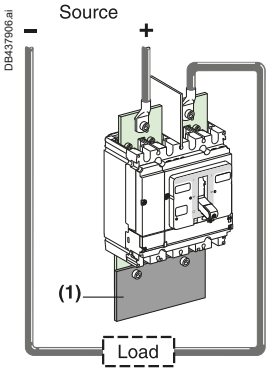

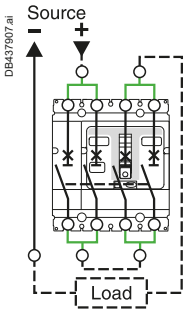


Note: Creation of the additional connection **[1]** is the responsibility of the panel builder or the installer.


Great Flexibility in Adapting to DC EP Applications

Overview of Series Connectors for NSX DC EP

ComPacT NSX TM DC EP

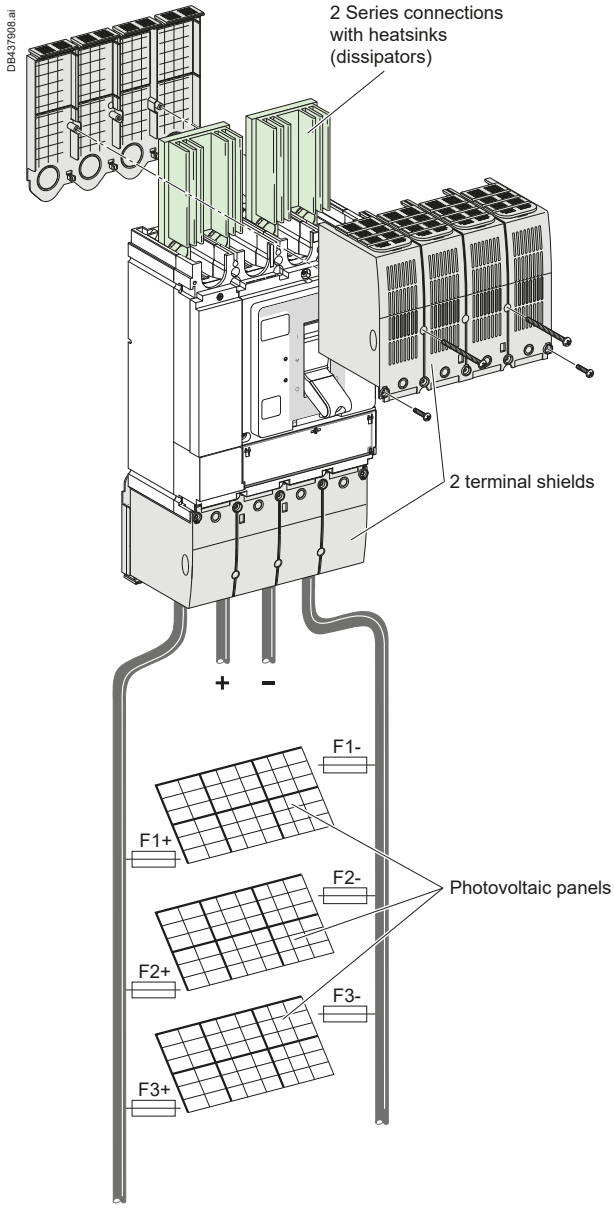

ComPacT NSX NA DC EP

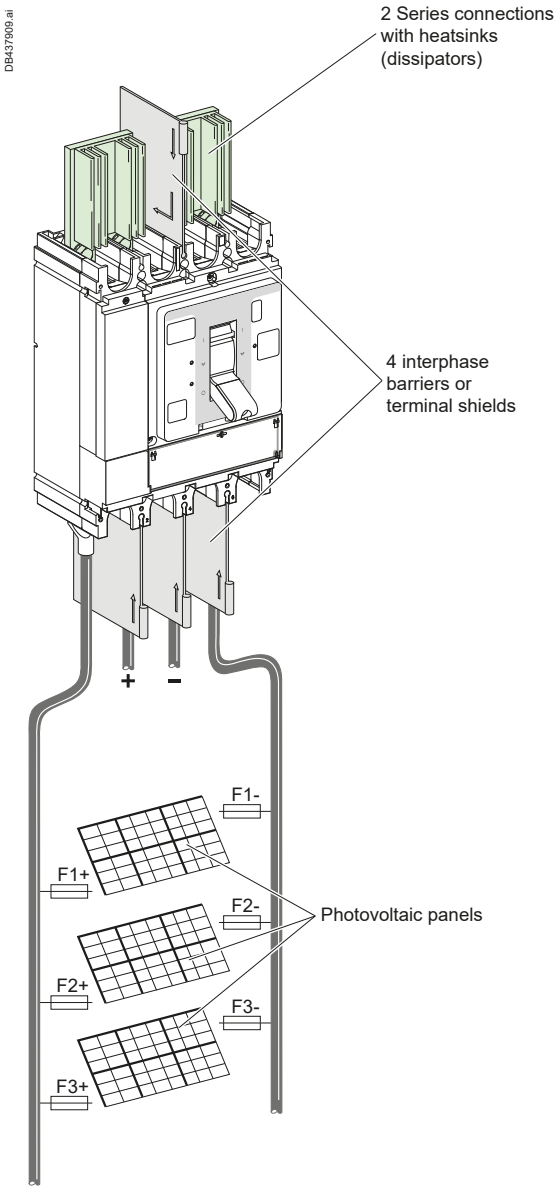


Great Flexibility in Adapting to DC EP Applications

Overview of Series Connectors for NSX DC EP

ComPacT NSX100 to NSX250 DC EP/ComPacT NSX100 to NSX250 NA DC EP

		A	B	C	D
PV	L/R ≤ 2 ms	◉	◉	◉	◉
Marine	L/R > 2 ms	-	◉	◉	-

DB438106.ai

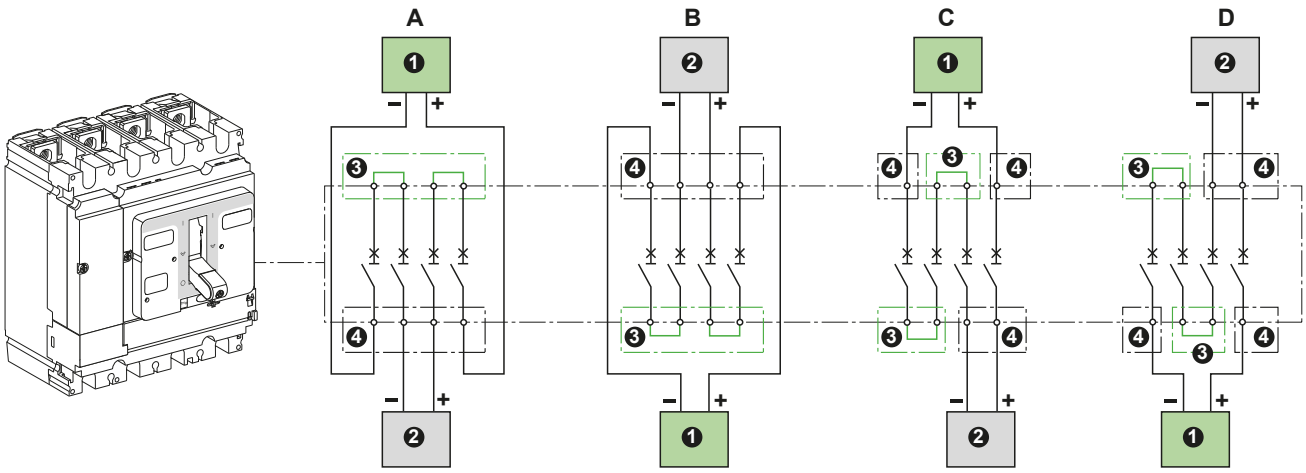


1. Source
2. Load
3. Series connections with heatsinks
4. Terminal shields

> ComPacT NSX250 TM DC EP and ComPacT NSX250 NA DC EP Detailed Guide

ComPacT NSX250 to NSX500 DC EP/ComPacT NSX320 to NSX630 NA DC EP

		A	B	C	D
PV	L/R ≤ 2 ms	◉	◉	◉	◉
Marine	L/R > 2 ms	◉	◉	◉	◉

DB438107.ai

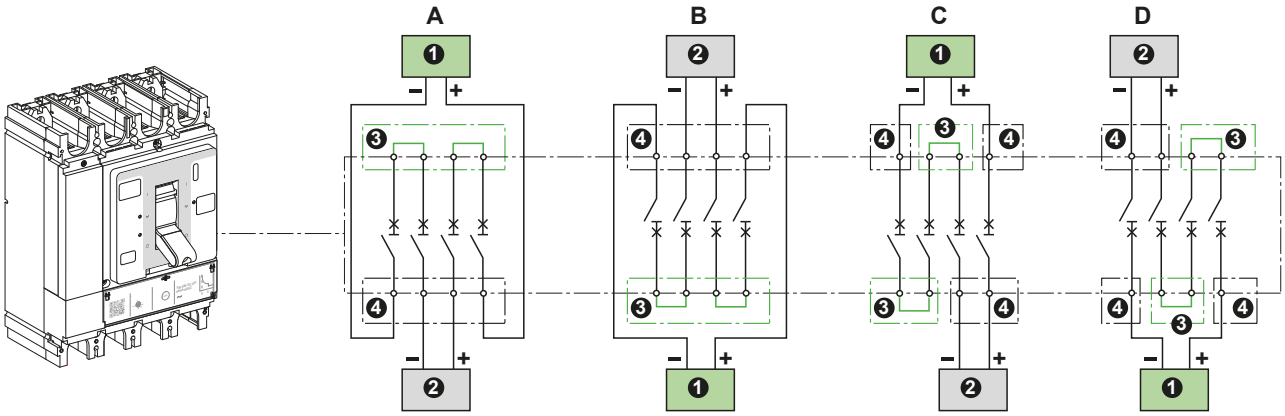

1. Source
2. Load
3. Series connections with heatsinks
4. Terminal shields


> ComPacT NSX500 TM DC EP and ComPacT NSX630 NA DC EP Detailed Guide

Connection Accessories

The exceptional performance levels of Com**PacT** INS/INV switch-disconnectors mean the poles can be parallel connected. This technique virtually doubles, triples or quadruples the current rating depending on the type of circuit breaker and thus reduces the cost of solutions.

Parallel Connection of Poles for Direct Current Applications

Examples of Parallel Connection




Parallel pole connection accessories are identical to those for series connections. The are equipped with heat sinks.

Customer connections are made directly to the connection plates after removing the heat sinks.




Specific connections are required for parallel connection of three poles.


Three-pole devices

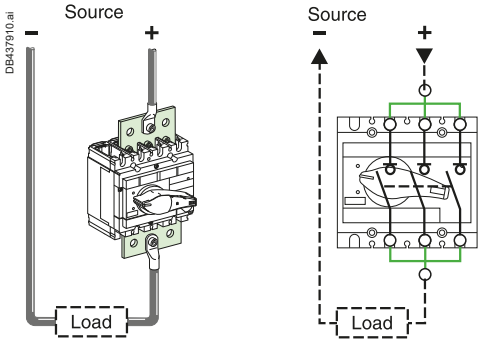

Four-pole devices (2 x 2 poles in parallel)

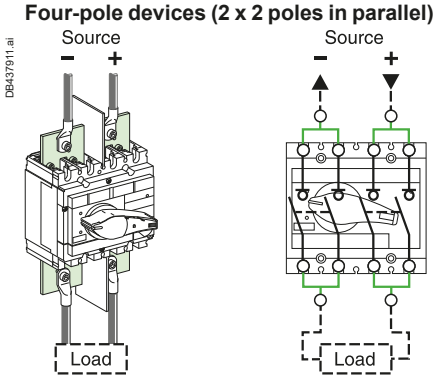

It Is Possible to Mix Series and Parallel Connections

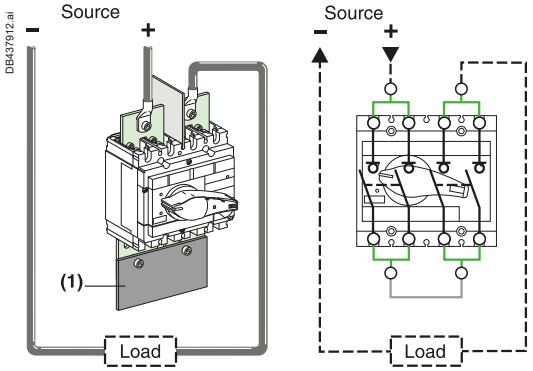

Note: Creation of the additional connection **[1]** is the responsibility of the panel builder or the installer.

Great flexibility for connections

- Indifferent connection of polarities, from left to right or right to left.
- Indifferent connection of upstream and downstream cables to top or bottom terminals.

Functions and Characteristics

Selection Guide for DC Circuit Breakers
Types of DC Distribution Systems A-4
Solutions Depending on the Distribution System and the Voltage . A-5
Examples of Circuit Breaker Selection A-8

Connection Accessories A-9

Selection Guide for DC Circuit Breakers
Examples of Circuit Breaker Selection A-10

Calculation of DC Distribution-System Characteristics
Short-Circuit Currents L/R Time Constant A-11

General Characteristics of ComPacT NSX DC, DC PV and DC EP
Operating Conditions A-12
ComPacT NSX DC and DC PV A-13

Circuit Breaker Characteristics
ComPacT NSX100 DC to NSX250 DC A-14
ComPacT NSX400 DC to NSX1200 DC A-16

Trip-Unit Characteristics
Types of Trip Units - Trip Units for ComPacT NSX DC A-18
Characteristics and Performance of ComPacT NSX Switch-Disconnectors from 100 to 250 NA A-20

Switch-Disconnectors Characteristics
ComPacT NSX400/630 NA DC A-22

Accessories and Auxiliaries
Overview of ComPacT NSX100 to 630 DC [*] Fixed Version A-24
Overview of ComPacT NSX1200 DC Fixed Version A-26
Overview of ComPacT NSX100 to 630 DC [1] Plug-in and Withdrawable Versions A-28

Electrical and Mechanical Accessories
ComPacT NSX100 to 1200 DC A-30
Connection of Fixed Devices A-32
Connection of Electrical Auxiliaries A-34
Selection of Auxiliaries for ComPacT NSX100/160/250 DC A-36
Selection of Auxiliaries for ComPacT NSX400/630/1200 DC A-38
Indication Contacts for ComPacT NSX DC A-39
Rotary Handles for ComPacT NSX DC A-40
Motor Mechanism for ComPacT NSX DC A-42
Remote Tripping for ComPacT NSX DC A-43
Locks for ComPacT NSX DC A-44
Sealing Accessories for ComPacT NSX DC A-45
Escutcheons and Protection Collars for ComPacT NSX DC A-46

A

Other Chapters
Presentation 2
Installation Recommendations B-1
Dimensions and Connection C-1
Electrical Diagrams D-1
Additional Characteristics E-1
Catalog Numbers and Order Form F-1

Functions and Characteristics

A

TransferPacT Source-Changeover Systems
Presentation A-48
Manual Source-Changeover Systems A-49

Circuit Breaker Characteristics
ComPacT NSX80 TM DC PV to NSX500 TM DC PV A-50
ComPacT NSX100 TM DC EP to NSX500 TM DC EP A-52

Switch-Disconnectors Characteristics
ComPacT NSX100 NA DC PV to NSX500 NA DC PV A-54
ComPacT NSX630b NA DC PV to NSX1600 NA DC PV A-56
ComPacT NSX100 NA DC EP to NSX630 NA DC EP A-58

Accessories and Auxiliaries
Overview of ComPacT NSX80 TM to NSX500 TM DC PV - Circuit Breakers A-60
Overview of ComPacT NSX100 NA to NSX500 NA DC PV - Switch-Disconnectors A-61

Accessories and Auxiliaries
Overview of ComPacT NSX100 TM to NSX250 TM DC EP - ComPacT NSX100 NA to NSX250 NA DC EP Circuit Breakers and Switch-Disconnectors A-62
Overview of ComPacT NSX250 TM to NSX500 TM DC EP - ComPacT NSX320 NA to NSX630 NA DC EP Circuit Breakers and Switch-Disconnectors A-63
Overview of ComPacT NSX630b NA to NSX1600 NA DC PV Switch-Disconnectors A-64

ComPacT INS DC PV A-65

Switch-Disconnector Selection
ComPacT INS40 to 160 DC A-66
ComPacT INS250-100 to 630 DC A-70
ComPacT INS630b to 2500 DC A-74
ComPacT INV100 to 630 DC A-78
ComPacT INV630b to 2500 DC A-82

Communication
Enerlin'X Digital System - Overview A-86
IFE Ethernet Interface A-88
IFM Modbus Communication Interface A-90
COM Option in ComPacT and MasterPact A-91
I/O Application Module A-92
Communications Modules, IFM and IFE for ComPacT NSX A-94
Communication Components and Connections A-95
Connection of the IFE to a Fixed or Drawout MasterPact NW A-96
Connection of the IFM to a Fixed or Drawout MasterPact NW A-97
Electrical Asset Manager Configuration Engineering Tool A-98

Other Chapters

Presentation 2
Installation Recommendations B-1
Dimensions and Connection C-1
Electrical Diagrams D-1
Additional Characteristics E-1
Catalog Numbers and Order Form F-1

Functions and Characteristics

General Characteristics of Master**Pact** NW DC, EPDC, DC PV
Operating Conditions A-100
Master**Pact** NW10 to NW40 DC A-102

Trip-Unit Characteristics
Trip Units for Master**Pact** NW DC, EPDC A-104

Switch-Disconnectors for PV Application
Master**Pact** NW HADCD-PV A-106
Master**Pact** NW HADCD-PV - Connections and Safety Clearances A-107

Master**Pact** NW EPDC-D Circuit Breakers for Marine Applications at 1100 VDC A-108

Panorama of Electrical and Mechanical Accessories
Master**Pact** NW10 to NW40 DC A-110

Connection
Overview of Solutions A-112

Electrical and Mechanical Accessories
Master**Pact** NW10 to NW40 DC A-114

A

Other Chapters
Presentation 2
Installation Recommendations B-1
Dimensions and Connection C-1
Electrical Diagrams D-1
Additional Characteristics E-1
Catalog Numbers and Order Form F-1




Selection Guide for DC Circuit Breakers

Types of DC Distribution Systems

There are three types of DC distribution systems (see the table).
The operational voltage in conjunction with one of the three systems determines the number of poles taking part in current interruption.

Selection of a circuit breaker depends essentially on the distribution-system parameters presented below which are used to determine the corresponding characteristics:

- Type of system - determines the type of product and the number of poles connected in series for each polarity
- Rated voltage - determines the number of series poles taking part in current interruption
- Nominal current - determines the rated current of the circuit breaker
- Maximum short-circuit current at the point of installation - determines the breaking capacity.

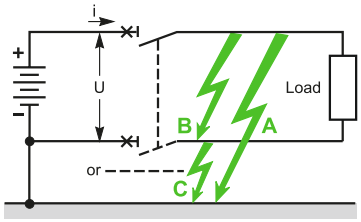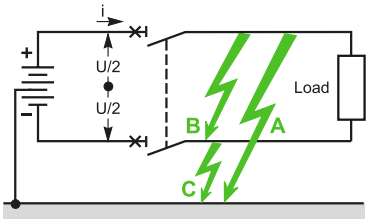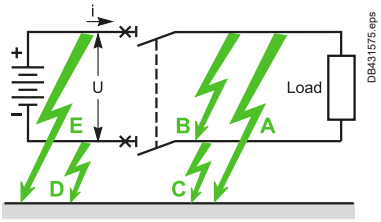Types of systems	Earthed systems		Isolated systems
	The source has one earthed polarity [1]	The source has an earthed mid-point	
Diagrams and different faults			
Fault analyzis (neglecting resistance of earth electrodes)			
Fault A	■ Maximum Isc at U ■ Only protected polarity concerned ■ All poles of protected polarity must have breaking capacity ≥ Isc max. at U	■ Maximum Isc at U/2 ■ Only positive polarity concerned ■ All poles of positive polarity must have breaking capacity ≥ Isc max. at U/2	■ No consequences ■ The fault must be indicated by an IMD (insulation-monitoring device) and cleared (standard IEC/EN 60364)
Fault B	■ Maximum Isc at U ■ If only one polarity (the positive here) is protected, all poles of protected polarity must have breaking capacity ≥ Isc max. at U ■ If both polarities are protected, to enable disconnection, all poles of the two polarities must have breaking capacity ≥ Isc max. at U	■ Maximum Isc at U ■ Both polarities are concerned ■ All poles of the two polarities must have breaking capacity ≥ Isc max. at U	■ Maximum Isc at U ■ Both polarities are concerned ■ All poles of the two polarities must have breaking capacity ≥ Isc max. at U
Fault C	No consequences	■ Same as fault A ■ All poles of the Negative polarity must have breaking capacity ≥ Isc max. at U/2	■ Same as fault A with the same actions
Double fault A and D or C and E	Double fault not possible, system trips on first fault	Double fault not possible, system trips on first fault	■ Maximum Isc at U ■ Only positive polarity (cases A and D) or negative (C and E) concerned ■ All poles of each polarity must have breaking capacity ≥ Isc max. at U
Most unfavourable cases			
	Fault A and fault B (if only one polarity is protected)	Fault B	Double fault A and D or C and E
Conclusion: selection of number of poles and breaking capacity			
Layout of protection poles			
	■ On only one polarity [1]	■ Identical for each polarity	■ Identical for each polarity
Number of series poles			
Per polarity	■ All on same polarity	■ Equal	■ Equal
Total	■ 1, 2 or 3 without disconnection ■ 2, 3 or 4 with disconnection	■ 2 or 4 [2]	■ 2 or 4 [2]
Breaking capacity			
	■ All poles of the protected polarity ≥ Isc max. at U	■ All poles of both polarities ≥ Isc max. at U ■ All poles of each polarity ≥ Isc max. at U/2	■ All poles of each polarity ≥ Isc max. at U
Disconnection of both polarities [3]			
	Possible by adding a pole to the non-protected polarity	■ Ensured	■ Ensured
Implementation			
	See the selection table opposite		





[1] Positive or negative, depending on the polarity connected to the exposed conductive parts.
[2] A 3P circuit breaker can be used if a 2P version does not exist. In this case, the central pole is not connected.
[3] Disconnection made possible by multi-pole breaking.

Selection Guide for DC Circuit Breakers

Solutions Depending on the Distribution System and the Voltage












Series Connection of Poles

Type of distribution system

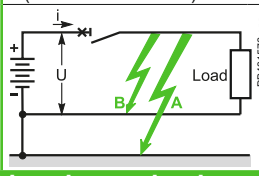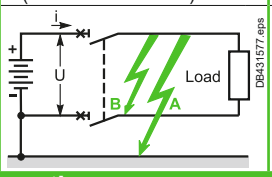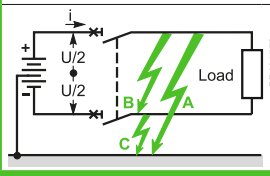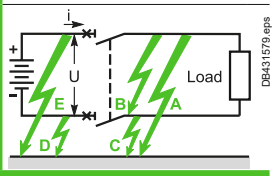Type	Earthed		Mid-point connected to earth	Isolated
Source	One polarity (negative here) connected to earth (or exposed conductive parts)			Isolated polarities
Protected polarities	1 (disconnection of 1P)	2 (disconnection of 2P)	2	2
Diagrams (and types of faults)				




Selection of circuit breaker and pole connection

ComPacT NSX DC



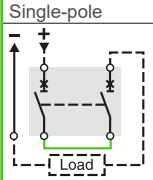
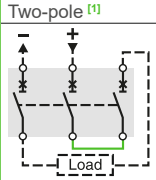

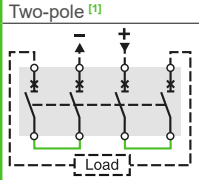
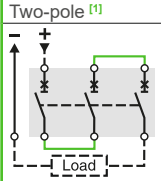
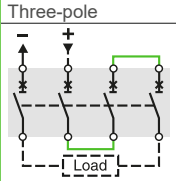
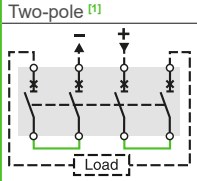
24 V ⩽ Un ⩽ 250 V	 Single-pole	 Two-pole [1]	 Two-pole [1]	 Two-pole [1]
NSX100-600 250 V < Un ⩽ 500 V	 Two-pole [1]	 Three-pole	 Two-pole [1]	 Four-pole
NSX100-500 500 V < Un ⩽ 750 V	 Three-pole	 Four-pole	 Four-pole	[2]

MasterPact NW DC

Type N

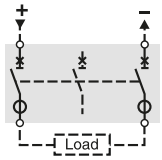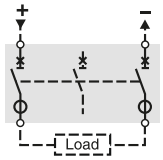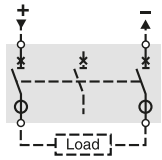24 V ⩽ Un ⩽ 500 V		 Version C	 Version C	 Version C

Type H

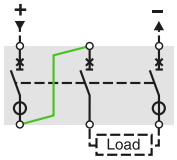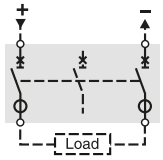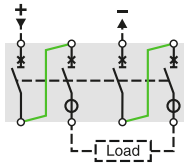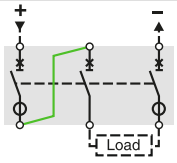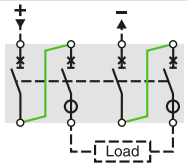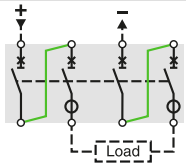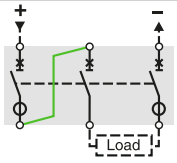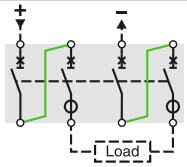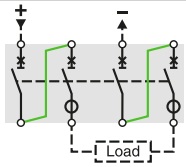24 V ⩽ Un ⩽ 500 V		 Version D	 Version C	 Version E
500 V < Un ⩽ 750 V		 Version D	 Version E	 Version E
750 V < Un ⩽ 900 V		 Version D	 Version E	 Version E

[1] A 3P circuit breaker can be used if a 2P version does not exist. In this case, the central pole is not connected.





[2] ComPacT NSX DC circuit breakers (and switch disconnectors) are designed to break the rated current or fault current at the rated operational voltage (Ue) with all poles. To break the current at voltage > 500 V, three poles in series are required. In double earth fault situations (A + D or C + E), the circuit breaker (and Switch disconnectors) must break the current at full voltage with only half of the poles. ComPacT NSX DC circuit breakers (and Switch disconnectors) are not designed for this purpose and could sustain irremediable damage if used to break the current in a double earth fault situation for voltage > 500 V.

Selection Guide for DC Circuit Breakers

Solutions Depending on the Distribution System and the Voltage







Parallel Connection of Poles

Type of distribution system



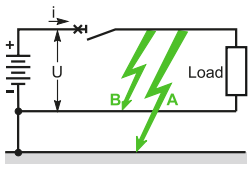
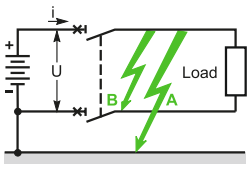
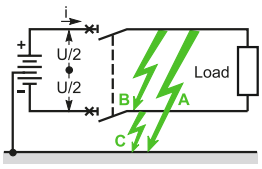
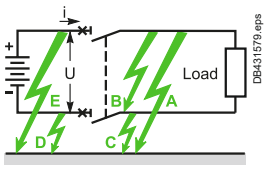
Type	Earthed			Isolated
Source	One polarity (negative here) connected to earth (or exposed conductive parts)		Mid-point connected to earth	Isolated polarities
Protected polarities	1 (disconnection of 1P)	2 (disconnection of 2P)	2	2
Diagrams (and types of faults)				

Selection of circuit breaker and pole connection

ComPacT NSX DC

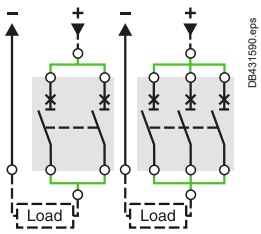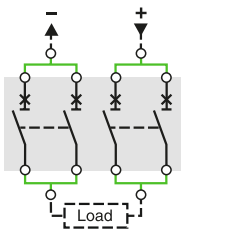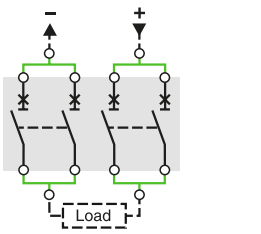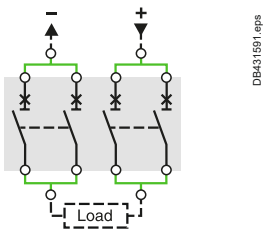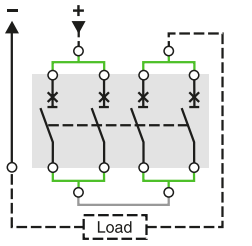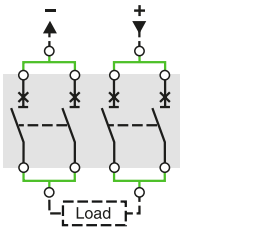Un ⩽ 250 V	 Two, three-pole, 2, 3P in parallel, four-pole, 4P in parallel	 Four-pole, 2 x 2P in parallel	 Four-pole, 2 x 2P in parallel	 Four-pole, 2 x 2P in parallel
250 V < Un ⩽ 500 V	 Four-pole, 2 x 2P in parallel, connected in series		 Four-pole, 2 x 2P in parallel	[1]

ComPacT NSX1200 DC [2]

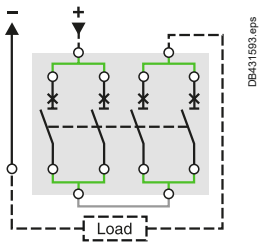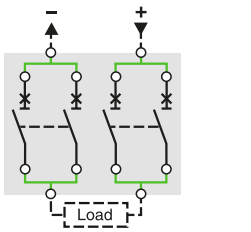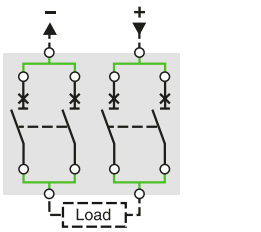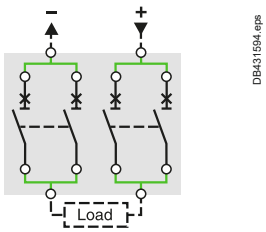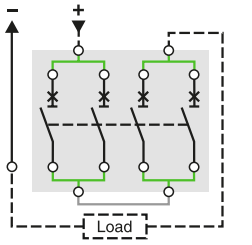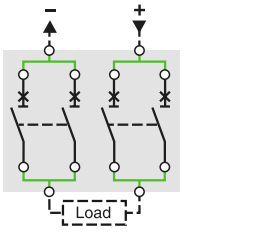Un ⩽ 300 V				
300 V < Un ⩽ 600 V				(3)

[1] ComPacT NSX DC circuit breakers (and switch disconnectors) are designed to break the rated current or fault current at the rated operational voltage (Ue) with all poles. To break the current at voltage > 250 V, two poles in series are required. In double earth fault situations (A + D or C + E), the circuit breaker (and switch disconnectors) must break the current at full voltage with only half of the poles. ComPacT NSX DC circuit breakers (and switch disconnectors) are not designed for this purpose and could sustain irremediable damage if used to break the current in a double earth fault situation for voltage > 250 V.
[2] Do not remove parallel connectors.
[3] ComPacT NSX DC circuit breakers (and switch disconnections) are designed to break the rated current or fault current at the rated operational voltage (Ue) with all poles. To break the current at voltage > 300 V, two poles in series are required. In double earth fault situations (A + D or C + E), the circuit breaker (and switch disconnectors) must break the current at full voltage with only half of the poles. ComPacT NSX DC circuit breakers (and switch disconnectors) are not designed for this purpose and could sustain irremediable damage if used to break the current in a double earth fault situation for voltage > 300 V.

Selection Guide for DC Circuit Breakers

Solutions Depending on the Distribution System and the Voltage

Comparison of Series and Parallel Connection in Terms of Performance

Series connection of poles on a DC circuit breaker is the means to:

- Divide the system voltage by the number of poles
- Use the rated current for each pole
- Use the breaking capacity of the circuit breaker for all the poles.

For example, a ComPacT NSX630, 3P DC type, with the three poles connected in series, provides:

- A maximum voltage of 750 V (250 V per pole)
- A rated current of 630 A
- A breaking capacity of 100 kA/750 V.

Consequently, a 630 A/250 V device can be used in a 750 V system.

Series connection of poles divides the voltage per pole and optimizes breaking capacity for high-voltage systems.

Parallel connection of poles, on the contrary, imposes the system voltage on each pole, but is the means to:

- Divide the current flowing through each pole by the number of poles
- Increase the rated current.

For example, the same ComPacT NSX630 DC 3P circuit breaker with three poles in parallel provides:


- A maximum voltage of 250 V (250 V per pole)
- A rated current of 1500 A (**see table page B-9**).


Consequently, a 630 A device used in a 250 V system can handle 1500 A.

Parallel connection of poles divides the current per pole and optimizes the rated current for systems that do not exceed the withstand voltage of each pole.

The maximum useable rating and the value of the magnetic setting are indicated (see pages B-7, B-8 and B-9).


Selection Guide for DC Circuit Breakers
Examples of Circuit Breaker Selection

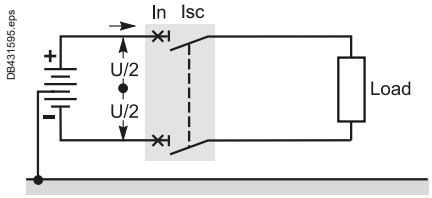

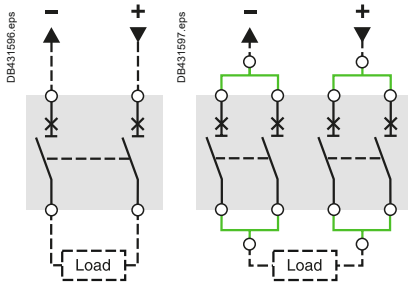


Selection 1

Selection 2: ComPacT NSX160 DC 4P 2 x 2P parallel mounted in series

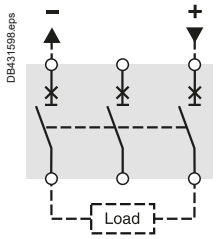


Selection 3: ComPacT NSX250 DC 3P with 2P connected

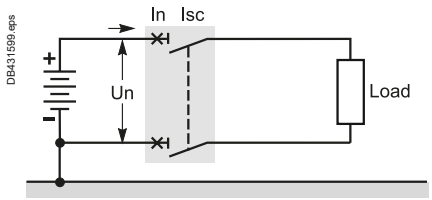



Selection 1: ComPacT NSX160F DC 1P

Selection 2

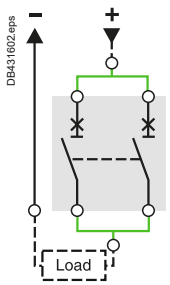

Selection 3: ComPacT NSX100N 2P DC in parallel

Selection of a ComPacT NSX DC

Example 1

- Type of system - mid-point connected to earth
- System voltage - Un = 500 V DC with time constant L/R = 5 ms
- Rated current required at point of installation In = 250 A
- Short-circuit current at the point of installation Isc = 20 kA

Selection constraints - (see page A-4)

The system with the mid-point connected to earth requires (see conclusion page A-4):

- Identical protection-pole layout for each polarity.
- An equal number of poles for each polarity, i.e. a total of two or four.
- All poles of the two polarities must have breaking capacity ⩾ Isc max. at Un, I.e. 20 kA/500 V in this case.
- All poles of the each polarity must have breaking capacity ⩾ Isc max. at Un/2, I.e. 20 kA/250 V in this case.

Selection possibilities - (see pages A-5 and A-6)

The tables indicate for 250 V < Un ⩽ 500 V and for this system:

- Poles connected in series: two-pole 2P in series ➡ **selection 1**
- Poles connected in parallel: four-pole 2 x 2P parallel connected in series ➡ **selection 2**.

Circuit breaker selection - (see pages A-14 and B-8)

- **Selection 1**: The 250 A rated current does not exist in 2P. It is possible to use a 250 A 3P DC type circuit breaker with the central pole not connected ➡ **selection 3**
- **Selection 2**:The 160 A rated current (DC version) is suitable with a 2 x 2P assembly connected in parallel because (see table page B-8):
  - ☐ The rated current of the 2 x 2P assembly connected in parallel is In = 288 A > 250 A
  - ☐ And for L/R = 5 ms:
  - Breaking capacity of all poles = 36 kA/500 V > 20 kA/500 V
  - Breaking capacity of poles of each polarity = 36 kA/250 V > 20 kA/250 V.

The options are:

- **Selection 1**: ComPacT NSX250S DC, 3P, 2 poles connected
- **Selection 3**: ComPacT NSX160 DC, 4P, 2 x 2P parallel connected in series.

Both solutions exist in fixed and withdrawable configurations.

Trip-unit selection

- ComPacT NSX250 DC 3P: The selection table (see page A-18) indicates 3 TM250DC trip units, which are interchangeable
- ComPacT NSX160 DC, 4P (2 x 2P) 160 A: The selection table (see page B-8) indicates, for the 2 x 2P parallel configuration mounted in series and for 250 A, A TM125DC trip unit with the magnetic-protection threshold set to 2500 A.

Example 2

- Type of system - one polarity earthed
- System voltage - Un = 250 V DC with time constant L/R = 5 ms
- Rated current required at point of installation In = 160 A
- Short-circuit current at the point of installation Isc = 20 kA.

Selection constraints - (see page A-4)

The system with one polarity connected to earth requires (see conclusion page A-4):

- Protection poles on the protected polarity
- All poles contribute to breaking for the polarity:
  - ☐ 1, 2 or 3P without disconnection of the two polarities
  - ☐ 2, 3 or 4P with disconnection of the two polarities
- All poles of the protected polarity must have breaking capacity ⩾ Isc max. at Un, i.e. 20 kA/250 V in this case.

Selection possibilities - (see pages A-5 and A-6)

The tables indicate for Un ⩽ 250 V and for this system:

- Poles connected in series: single-pole ➡ **selection 1** (or two-pole with disconnection ➡ **selection 2**)
- Poles connected in parallel: two-pole ➡ **selection 3**
- Other selections (parallel connection) are possible, but are of no particular interest.





Circuit breaker selection - (see pages A-14 and B-7)

- **Selection 1**: ComPacT NSX160F DC, 1P, 36 kA, available in fixed version (or **selection 2**: ComPacT NSX160F DC, 2P, 36 kA, if disconnection of the two polarities is desired)
- **Selection 3**: ComPacT NSX100N DC, 2P in parallel, 36 kA, providing a rated current of 200 A (see table page B-7), available in fixed version.








Trip-unit selection

- ComPacT NSX160N DC, 1P: The selection table (see page A-18) indicates a built-in TM160DC trip unit with the magnetic-protection threshold set to 1250 A
- ComPacT NSX100N DC, 2P in parallel: The selection table (see page B-7) indicates, for the 2P parallel configuration and for 160 A, a TM80D trip unit with the magnetic-protection threshold set to 1600 A.

Solutions Depending on the Distribution System and the Voltage



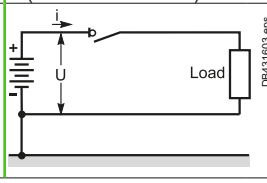
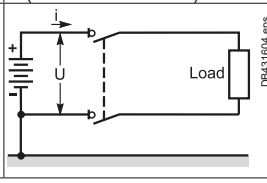
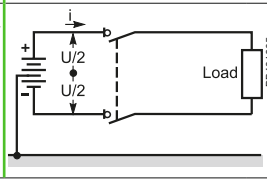
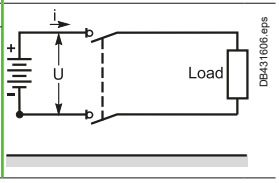
Type of distribution system				
Type	**Earthed**			**Isolated**
Source	One polarity (negative here) connected to earth (or exposed conductive parts)		Mid-point connected to earth	Isolated polarities
Protected polarities	1 (disconnection of 1P)	2 (disconnection of 2P)	2	2
Diagrams, connection method				

Series Connection of Poles

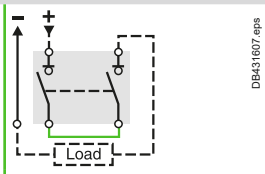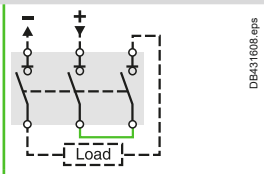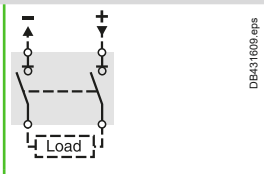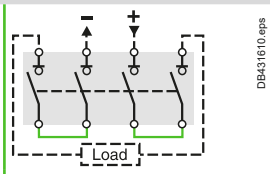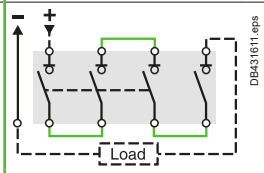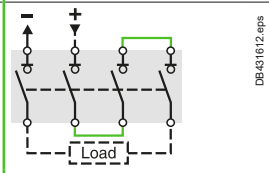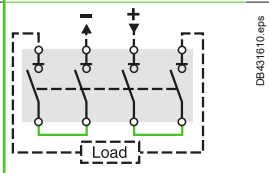
Selection of switch-disconnectors and pole connection				
ComPacT INS/INV				
24 V ⩽ Un ⩽ 125 V	 Two-pole [1]	 Three-pole	 Two-pole [1]	 Four-pole
125 V < Un ⩽ 250 V	 Four-pole	 Four-pole	 Four-pole	Not applicable


[1] A 3P switch-disconnectors can be used if a 2P version does not exist. In this case, the central pole is not connected.

Parallel Connection of Poles

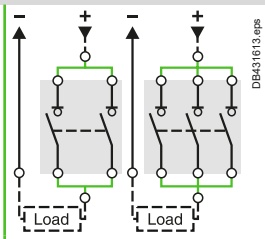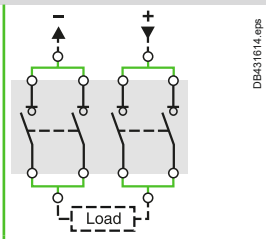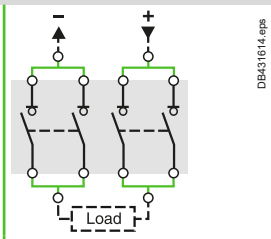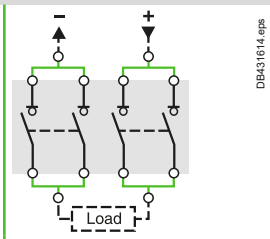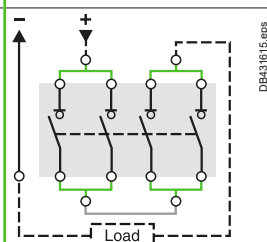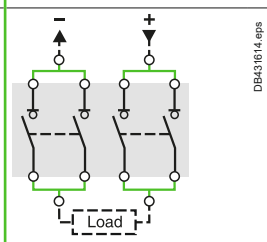
Selection of switch-disconnectors and pole connection				
ComPacT INS/INV				
Un ⩽ 63 V	 Two, three-pole, 2, 3P in parallel, four-pole, 4P in parallel	 Four-pole, 2 x 2P in parallel	 Four-pole, 2 x 2P in parallel	 Four-pole, 2 x 2P in parallel
63 V < Un ⩽ 125 V	 Four-pole, 2 x 2P in parallel, connected in series	Not applicable	 Four-pole, 2 x 2P in parallel	Not applicable


Selection Guide for DC Circuit Breakers
Examples of Circuit Breaker Selection

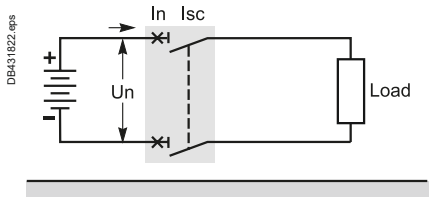

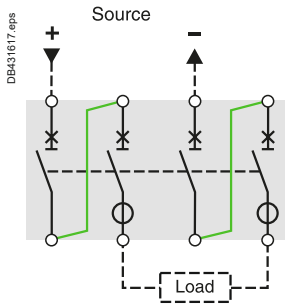

MasterPact NW20H DC version E

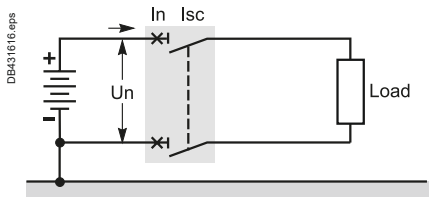

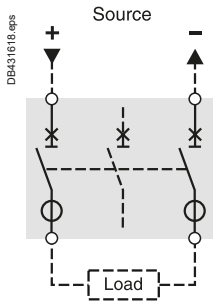

MasterPact NW10N DC version C

Selection of a MasterPact NW DC

Example 1

- Type of system - isolated polarities
- System voltage - Un = 750 V DC with time constant L/R = 30 ms
- Rated current required at point of installation In = 2000 A
- Short-circuit current at the point of installation Isc = 40 kA

Selection constraints - (see page A-4)
The system with isolated polarities requires (see conclusion page A-4):
- Identical protection for each polarity
- An equal number of poles for each polarity, i.e. a total of two or four
- All poles of each polarity must have breaking capacity ≥ Isc max. at Un, I.e. 40 kA/750 V in this case.

Selection possibilities - (see page A-5)
The table for series poles indicates for a voltage 24 V < Un ≤ 750 V and the type of system, use of a four-pole, version E circuit breaker.

Circuit breaker selection - (see page A-102)
The MasterPact NW DC characteristics table indicates more specifically with a 2000 A a NW20 DC type H circuit breaker with a breaking capacity of 50 kA/750 V (L/R = 30 ms).
The correct selection is a MasterPact NW20 DC type H version E, 2000 A, 50 kA, available in fixed and drawout versions.

Example 2

- Type of system - one polarity earthed
- System voltage - Un = 500 V DC with time constant L/R = 15 ms
- Rated current required at point of installation In = 1000 A
- Short-circuit current at the point of installation Isc = 30 kA

Selection constraints - (see page A-4)
The system with one polarity connected to earth requires (see conclusion page A-4):
- Protection poles on the protected polarity
- All poles contribute to breaking for the polarity:
  - 1, 2 or 3P without disconnection of the two polarities
  - 2, 3 or 4P with disconnection of the two polarities
- All poles of the protected polarity must have breaking capacity ∅ Isc max. at Un, i.e. 30 kA/500 V in this case.

Selection possibilities - (see page A-5)
The table for series poles indicates for a voltage 24 V < Un ≤ 500 V and the type of system, use of a three-pole, version C circuit breaker.

Circuit breaker selection - (see page A-102)
The MasterPact NW DC characteristics table indicates more specifically with a 1000 A a NW10 DC type N circuit breaker with a breaking capacity of 35 kA/500 V (L/R = 15 ms). The correct selection is a MasterPact NW10 DC type N version C, 1000 A, 35 kA, available in fixed and drawout versions.

Calculation of DC Distribution-System Characteristics

Short-Circuit Currents L/R Time Constant


Short-Circuit Currents

Calculation of the short-circuit current across the terminals of a battery

During a short-circuit, the battery discharges a current equal to:

$$Isc = \frac{Vb}{Ri}$$

- Vb = maximum discharge voltage (battery 100 % charged)
- Ri = internal resistance equivalent to all cells (a function of the capacity in ampere-hours).

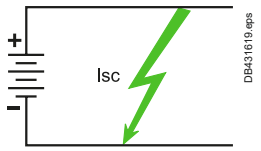

Example

- Consider a set of four 500 Ah batteries connected in parallel.
- Discharge voltage of one battery: 240 V (110 cells 2.2 V each).
- Discharge current of one battery: 300 A with a run-time of 30 minutes.
- Discharge current of all four batteries: 1200 A with a run-time of 30 minutes.
- Internal resistance 0.5 mΩ per cell, i.e. for one battery:
  Ri = 110 x 0.5 x 10^{-3} = 55 x 10^{-3} Ω.
- Short-circuit current of one battery: Isc = 240 V/55 x 10^{-3} Ω = 4.37 kA.
- Neglecting the resistance of the connections, for all four batteries discharging the short-circuit current in parallel, the total short-circuit current is four times that of one battery, i.e. Isc = 4 x 4.37 kA = 17.5 kA.

Note: If the internal resistance is not known, it is possible to use the following rough approximation: Isc = kc where c is the capacity of the battery in ampere-hours and k is a coefficient close to 10 and always less than 20.

Other typical examples

- PABXs: Isc from 5 to 25 kA at 240 V DC with L/R = 5 ms.
- Submarine: Isc from 40 to 60 kA at 400 V DC with L/R = 5 ms.

L/R Time Constant

When a short-circuit occurs across the terminals of a DC circuit, the current rises from the load current (≤ In) to the short-circuit current Isc over a period of time that depends on the value of the resistance R and inductance L of the short-circuited loop.

The equation determining the current in the loop is:

$U = Ri + L\,\Delta i/\Delta t$


The curve of I versus time is defined (neglecting In) by the equation:

$I = Isc\,(1 - \exp(t/\tau))$

where $\tau = L/R$ is the time constant for the rise to Isc.

Practically speaking, after a time $t = 3\tau$, the short-circuit is considered to be established, because the value of exp(-3) = 0.05 is negligible compared to 1 (see the curve opposite).


The lower the time constant (e.g. battery circuit), the shorter the time required for the current to rise to Isc.

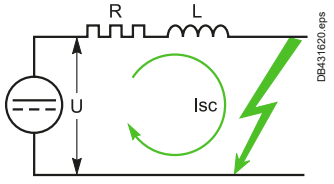

To express breaking capacity, the interrupted short-circuit current with the following time constants is used:

- L/R = 5 ms, fast short-circuit
- L/R = 15 ms, standardized value used in standard IEC 60947-2
- L/R = 30 ms, slow short-circuit.

In general, the value of the system time constant is calculated under worst-case conditions, across the terminals of the generator.

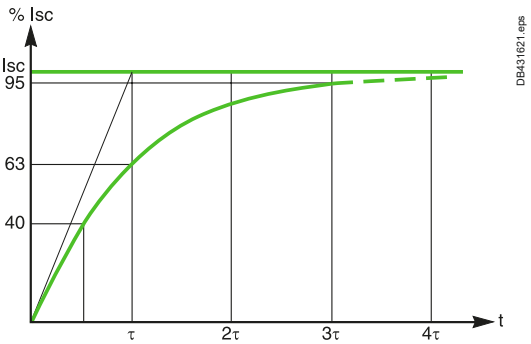


Breaking-capacity values for:

- ComPacT NSX DC (table page A-14) are the same for 5 ms and 15 ms
- MasterPact NW DC (table page A-102) are indicated for 3 values, 5 ms, 15 ms And 30 ms.

General Characteristics of ComPacT NSX DC, DC PV and DC EP


Operating Conditions

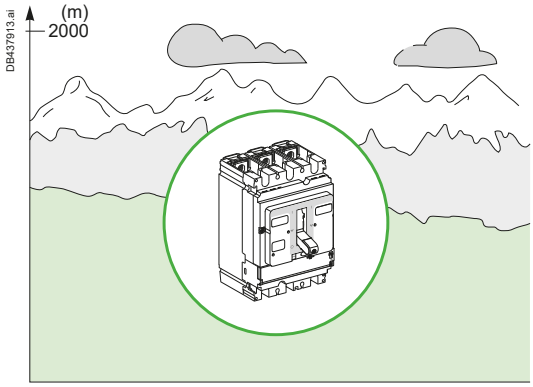

Altitude

ComPacT NSX circuit breakers are designed to operate at their rated values at altitudes under 2000 metres.
Above 2000 metres, the changes in the characteristics of the ambient air (electrical resistance, cooling capacity) result in a reduction of the characteristics below.


Altitude (m)	2000	3000	4000	5000
ComPacT NSX DC				
Impulse withstand voltage Uimp (kV)	8	7.1	6.4	5.6
Rated insulation voltage (Ui)	750	710	635	560
Maximum rated operationnal DC voltage	1 x Ue	0.88 x Ue	0.8 x Ue	0.7 x Ue
Rated current (A)	1 x In	0.96 x In	0.93 x In	0.9 x In
ComPacT NSX DC PV				
Impulse withstand voltage Uimp (kV)	8	7.1	6.4	5.6
Rated insulation voltage (Ui)	1000	900	800	700
Maximum rated operationnal DC voltage	1000	900	800	700
Rated current (A)	1 x In	0.96 x In	0.93 x In	0.9 x In
ComPacT NSX DC EP				
Impulse withstand voltage Uimp (kV)	8	7.1	6.4	5.6
Rated insulation voltage (Ui)	1600	1400	1250	1100
Maximum rated operationnal DC voltage	1500	1300	1150	1000
Rated current (A)	1 x In	0.96 x In	0.93 x In	0.9 x In

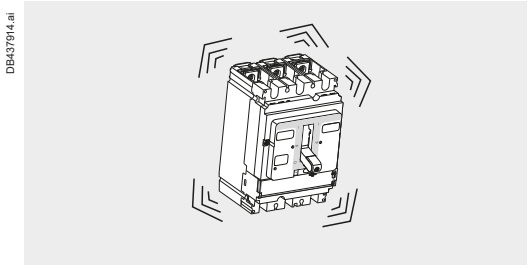

Vibrations

ComPacT NSX circuit breakers are are tested electromagnetic or mechanical vibration resistant.
Tests are carried out in compliance with standard IEC 60068-2-6 for the levels required by merchant-marine inspection organizations (Veritas, Lloyd's, etc.):
- 2 to 13.2 Hz: amplitude ±1 mm
- 13.2 to 100 Hz: constant acceleration 0.7 g.

Excessive vibration may cause tripping, breaks in connections or damage to mechanical parts.

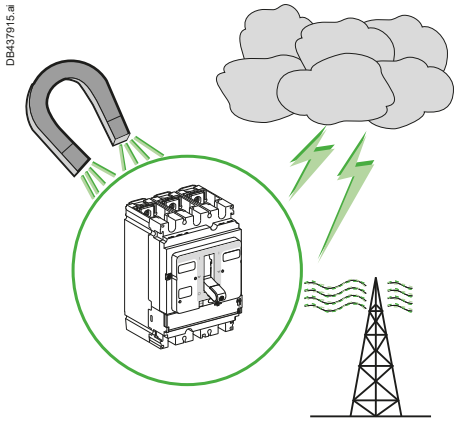

Electromagnetic Compatibility

ComPacT NSX circuit breakers are tested against:
- Overvoltages caused by devices that generate electromagnetic disturbances
- Overvoltages caused by atmospheric disturbances or by a distribution-system outage (e.g. failure of a lighting system) and devices emitting radio waves (radios, walkie-talkies, radar, etc.)
- Electrostatic discharges produced by users. The circuit breakers have successfully passed the electromagnetic-compatibility tests (EMC) defined by international standard IEC 60947-2, appendix F.

The above tests show that:
- No nuisance tripping occurs
- Tripping times are respected.

ComPacT NSX circuit breakers comply with the following electromagnetic-compatibility standards:
- IEC/EN 61000-4-2 - electrostatic immunity discharge test, part 2 (circuit breakers)
- IEC/EN 61000-4-3 - electromagnetic-field immunity test
- IEC/EN 61000-4-4 - electrical fast transient/burst immunity test
- IEC/EN 61000-4-5 - surge immunity test
- IEC/EN 61000-4-6 - immunity to conducted disturbances, induced by radiofrequency fields
- CISPR 11 - radio-frequency conducted and radiated emission tests required for CE marking:
  - EN 61000-6-2 - immunity standard for industrial environments
  - EN 50081-1-2 - emissions in commercial and industrial environments.

Ambient Temperature

Operating-Temperature Range

- ComPacT NSX circuit breakers and switches may be used between -25 °C and +70 °C.
- For temperatures higher than 40 °C (65 °C for circuit breakers used to protect motor feeders), devices must be derated as indicated in the documentation.
- Circuit breakers and switches should be put into service under the normal, ambient operating temperatures indicated above. Exceptionally, they may be put into service when the ambient temperature is between -35 °C and -25 °C.

Derating

Above 40 °C, it is necessary to take into account the derating values.

Storage-Temperature Range

ComPacT NSX circuit breakers and switches may be stored in their original packing between -50 °C and +85 °C.

General Characteristics of ComPacT NSX DC, DC PV and DC EP

ComPacT NSX DC and DC PV

Installation in Class II Switchboards

All ComPacT NSX DC circuit breakers are class II front-face devices. They may be installed through the door of class II switchboards (as per standard IEC 60664) without downgrading switchboard insulation. ComPacT NSX DC EP should be either installed in IP5x enclosure or with rotary handles or IP43 rubber toggle covers. Installation requires no special operations even when the circuit breaker is equipped with a rotary handle or a motor mechanism.

Degree of Protection


ComPacT NSX DC circuit breakers offer the following protection characteristics depending on the installation conditions:

- IP: Degree of protection (standard IEC 60529)
- IK: Protection against external mechanical imPacTs (standard EN 50102).

ComPacT NSX DC


Bare circuit breaker with terminal shields

DB437916.ai



With toggle	IP3X	IK07


DB437917.ai



With direct rotary handle, standard or VDE	IP3X	IK07


Circuit breaker installed in a switchboard

DB437918.ai

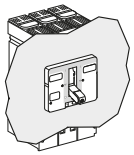


With toggle	IP40	IK07

DB437919.ai

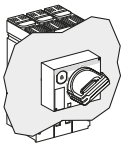


With direct rotary handle, standard or VDE	IP40	IK07
CCM	IP43	IK07
CNOMO	IP54	IK07

DB437920.ai

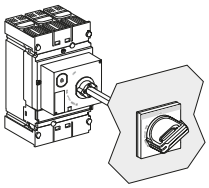

With extended rotary handle	IP55	IK08

DB431630.eps

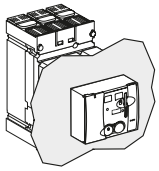

With motor mechanism	IP40	IK07

Positive Contact Indication

ComPacT NSX DC circuit breakers are suitable for isolation as defined by IEC 60947-1 and 60947-2:

- The isolation position corresponds to the O (OFF) position
- The operating handle and the indicators cannot indicate the OFF position unless the contacts are effectively open
- Padlocks may not be installed unless the contacts are open.

The isolation function is certified by tests to achieve:

- The mechanical reliability of the position-indication system
- The absence of leakage currents
- Overvoltage withstand capacity between upstream and downstream connections.

For ComPacT NSX DC, installation of a rotary handle or a motor mechanism does not alter the reliability of the position-indication system.



DB403382_Q_Image.eps



DB431631.eps

Circuit Breaker Characteristics
ComPacT NSX100 DC to NSX250 DC


C25N1TM250.eps


C16S2TM160.eps


C25F4TM250D1.eps

A

ComPacT NSX DC circuit breaker

Basic frame	Number of poles			
Electrical Characteristics As Per IEC 60947-1/ 60947-2 and EN 60947-1/60947-2				
Rated current at 40 °C	**In**	(A)		
Rated insulation voltage	**Ui**	(V)		
Rated impulse withstand voltage	**Uimp**	(kV peak)		
Rated operational voltage	**Ue**	(V DC)		
Type of circuit breaker				
Ultimate breaking capacity (L/R = 5 ms and L/R = 15 ms)	**Icu**	(kA rms)	V DC	24-125 V (1P) [1]
				250 V (1P) [1]
				500 V (2P) [1]
				750 V (3P) [1]
Service breaking capacity	**Ics**	% Icu		
Rated making capacity	**Icm**	% Icu		
Utilization category				
Breaking time		(ms)		
Suitability for isolation				
Pollution degree (as per IEC 60664-1)				
Protection against overcurrents (see trip-unit table page A-19)				
				Built-in
Trip units				Interchangeable
Protection				Overloads
				Short-circuits
Durability				
(O/C cycles)	Mechanical			
	Electrical			250 V In
				250 V In/2
				500 V In
				500 V In/2
				750 V In
				750 V In/2
Indication and Control Auxiliaries				
Auxiliary contacts				
Voltage release	MX shunt release			
	MN undervoltage release			
Installation and Connections				
Fixed				Front connection
				Rear connection
Plug-in (base)				Front connection
				Rear connection
Withdrawable (chassis)				Front connection
				Rear connection
Control	Manual	with toggle		
		with direct or extended rotary handle		
	Electrical	with remote control		
Dimensions and Weight				
Dimensions H x W x D (mm) connected in series	Fixed	(mm)		1P
				2P
				3P
				4P
Weight (kg) connected in series	Fixed	(kg)		1P
				2P
				3P
				4P

[1] Number of poles in series taking part in current interruption.
Example. The NSX100N DC circuit breaker exists in the following versions:
- 1 pole with an Icu of 50 kA, for systems ≤ 250 V
- 2 poles with an Icu of 85 kA, for systems ≤ 500 V; 1 pole can be used in a 250 V system.

Circuit Breaker Characteristics
ComPacT NSX100 DC to NSX250 DC

	NSX100 DC								NSX160 DC								NSX250 DC	
	1			2			3/4		1			2			3/4		3/4	
	100								160								250	
	750								750								750	
	8								8								8	
	250			500			750		250			500			750		750	
	F	**N**	**M**	**F**	**M**	**S**	**F**	**S**	**F**	**N**	**M**	**F**	**M**	**S**	**F**	**S**	**F**	**S**
	36	50	85	36	85	100	36	100	36	50	85	36	85	100	36	100	36	100
	36	50	85	36	85	100	36	100	36	50	85	36	85	100	36	100	36	100
	-	-	-	36	85	100	36	100	-	-	-	36	85	100	36	100	36	100
	-	-	-	-	-	-	36	100	-	-	-	-	-	-	36	100	36	100
	100 %																	
	100 %																	
	A																	
	< 10 ms																	
	◉																	
	3																	
	◉	◉	◉	◉	◉	◉	-		◉	◉	◉	◉	◉	◉	-		-	
	-	-	-	-	-	-	◉		-	-	-	-	-	-	◉		◉	
	◉	◉	◉	◉	◉	◉	◉		◉	◉	◉	◉	◉	◉	◉		◉	
	◉	◉	◉	◉	◉	◉	◉		◉	◉	◉	◉	◉	◉	◉		◉	
	10000																	
	5000																	
	10000																	
	5000																	
	10000																	
	5000																	
	10000																	
	-			◉			◉		-			◉			◉		◉	
	-			◉			◉		-			◉			◉		◉	
	-			◉			◉		-			◉			◉		◉	
	◉																	
	◉																	
	-	-	-	-	-	-	◉		-	-	-	-	-	-	◉		◉	
	-	-	-	-	-	-	◉		-	-	-	-	-	-	◉		◉	
	-	-	-	-	-	-	◉		-	-	-	-	-	-	◉		◉	
	-	-	-	-	-	-	◉		-	-	-	-	-	-	◉		◉	
	◉						◉		◉						◉			
	-						◉		-						◉			
	-						◉		-						◉			
	161 x 35 x 86			-			-		161 x 35 x 86			-			-			
	-			161 x 70 x 86			-		-			161 x 70 x 86			-			
	-			-			161 x 105 x 86		-			-			161 x 105 x 86			
	-			-			161 x 140 x 86		-			-			161 x 140 x 86			
	0.7			-			-		0.7			-			-			
	-			1.2			-		-			1.2			-			
	-			-			1.6 to 1.9		-			-			1.6 to 1.9			
	-			-			2.1 to 2.3		-			-			2.1 to 2.3			

Circuit Breaker Characteristics
ComPacT NSX400 DC to NSX1200 DC



A

ComPacT NSX DC circuit breaker

Basic frame	Number of poles			
Electrical Characteristics As Per IEC 60947-1/ 60947-2 and EN 60947-1/60947-2				
Rated current at 40 °C	**In**	(A)		
Rated insulation voltage	**Ui**	(V)		
Rated impulse withstand voltage	**Uimp**	(kV peak)		
Rated operational voltage	**Ue**	(V DC)		
Type of circuit breaker				
Ultimate breaking capacity (L/R = 5 ms and L/R = 15 ms)	**Icu**	(kA rms)	V DC	24-125 V (1P) [1]
				250 V (1P) [1]
				500 V (2P) [1]
				750 V (3P) [1]
	Icu	(kA rms)	V DC	24-300 V (1P) [1]
				300-600 V (2P) [1]
Service breaking capacity	**Ics**	% Icu		
Rated making capacity	**Icm**	% Icu		
Utilization category				
Breaking time		(ms)		
Suitability for isolation				
Pollution degree (as per IEC 60664-1)				
Protection against overcurrents (see trip-unit table page A-19)				
Trip units				Interchangeable
Protection				Overloads
				Short-circuits
Durability				
(O/C cycles)	Mechanical			
	Electrical			250 V In
				250 V In/2
				500 V In
				500 V In/2
				750 V In
				750 V In/2
				600 V In
				600 V In/2
Indication and Control Auxiliaries				
Auxiliary contacts				
Voltage release	MX shunt release			
	MN undervoltage release			
Installation and Connections				
Fixed				Front connection
				Rear connection
Plug-in (base)				Front connection
				Rear connection
Withdrawable (chassis)				Front connection
				Rear connection
Control	Manual	with toggle		
		with direct or extended rotary handle		
	Electrical	with remote control		
Dimensions and Weight				
Dimensions H x W x D (mm) connected in series	Fixed	(mm)		1P
				2P
				3P
				4P
Weight (kg) connected in series	Fixed	(kg)		1P
				2P
				3P
				4P

[1] Number of poles in series taking part in current interruption.
Example. The NSX100N DC circuit breaker exists in the following versions:
- 1 pole with an Icu of 50 kA, for systems ⩽ 250 V
- 2 poles with an Icu of 85 kA, for systems ⩽ 500 V; 1 pole can be used in a 250 V system.

Circuit Breaker Characteristics
ComPacT NSX400 DC to NSX1200 DC

	NSX400 DC						NSX630 DC				NSX1200 DC			
	3/4						3/4		3/4		2			
	250		320		400		500		600		630	800	1000	1200
	750		750		750		750		750		600	600	600	600
	8		8		8		8		8		8	8	8	8
	750		750		750		750		750		600	600	600	600
	F	S	F	S	F	S	F	S	F	S	N			
	36	100	36	100	36	100	36	100	36	100	-	-	-	-
	36	100	36	100	36	100	36	100	36	100	-	-	-	-
	36	100	36	100	36	100	36	100	36	100	-	-	-	-
	36	100	36	100	36	100	36	100	-	-	-	-	-	-
	-	-	-	-	-	-	-	-	-	-	50	50	50	50
	-	-	-	-	-	-	-	-	-	-	50	50	50	50
	100 %						100 %				25 %			
	100 %						100 %				100 %			
	A													
	10ms													
	◉													
	3													
	-													
	◉													
	◉													
	5000						5000		5000		-			
	1000						1000		1000		-			
	2000						2000		2000		-			
	1000						1000		1000		-			
	2000						2000		2000		-			
	1000						1000		1000		-			
	2000						2000		2000		-			
	-						-		-		1000			
	-						-		-		2000			
	◉													
	◉													
	◉						◉				◉	◉	◉	◉
	◉						◉				-	-	-	-
	◉						◉				-	-	-	-
	◉						◉				-	-	-	-
	◉						◉				-	-	-	-
	◉						◉				-	-	-	-
	◉						◉				◉	◉	◉	◉
	◉						◉				◉	◉	◉	◉
	◉						◉				◉	◉	◉	◉
	-													
	-										350 x 185 x 110			
	255 x 140 x 110													
	255 x 185 x 110										-			
	-													
	-										9.4			
	8										-			
	8.4										-			

Trip-Unit Characteristics

Types of Trip Units - Trip Units for ComPacT NSX DC

C25N1TM250.eps



C16S2TM160.eps



C2F4TM250D1.eps



10_C63S3TM600D.eps



C1BN2TM12HD.eps



Trip units for ComPacT NSX100 DC - NSX160 DC

Single-pole and two-pole (not interchangeable)

Type of trip unit			TM-D										
Rating		In (A) at 40 °C	16	20	25	30	40	50	63	80	100	125	160
ComPacT circuit breaker	NSX100 AC/DC		◉	◉	◉	◉	◉	◉	◉	◉	◉	-	-
	NSX160 AC/DC		-	-	-	-	-	-	-	-	-	◉	◉
Overload protection (thermal)													
Tripping threshold		Ir (A) at 40 °C	Fixed										
			16	20	25	30	40	50	63	80	100	125	160
Protection against short-circuits (magnetic)													
Pick-up		Ii (A)	Fixed										
ComPacT circuit breaker	NSX100/ 160 AC/DC	Marked AC value [1]	190	190	300	300	500	500	500	640	800	1000	1250
		True DC value	260	260	400	400	700	700	700	800	1000	1200	1250

Trip units for ComPacT NSX100 DC - NSX160 DC - NSX250 DC

Three-pole 3P-3d and four-pole 4P-4d (interchangeable trip units)

Type of trip unit			TM-D						TM-DC					
Rating (A)		In (A) at 40 °C	16	25	32	40	50	63	80	100	125	160	200	250
ComPacT circuit breaker	NSX100 DC		◉	◉	◉	◉	◉	◉	◉	◉	-	-	-	-
	NSX160 DC		-	-	-	-	-	-	-	-	◉	◉	-	-
	NSX250 DC		-	-	-	-	-	-	-	-	-	-	◉	◉
Overload protection (thermal)														
Tripping threshold (A)		Ir (at 40 °C)	Adjustable											
			0.7 to 1 x In											
Protection against short-circuits (magnetic)														
Pick-up (A)		Ii	Fixed										Adjustable	
ComPacT circuit breaker	NSX100/160/ NSX250 DC	Marked AC value [1]	190	300	400	500	500	500	-	-	-	-	-	-
		True DC value	260	400	550	700	700	700	800	800	1250	1250	5 to 10 x In	

Trip units for ComPacT NSX100 DC - NSX160 DC - NSX250 DC

Three-pole 3P-3d and four-pole 4P-4d (interchangeable trip units)

Type of trip unit			TM-G									
Rating (A)		In (A) at 40 °C	16	25	40	63	80	100	125	160	200	250
ComPacT circuit breaker	NSX100 DC		◉	◉	◉	◉	◉	◉				
	NSX160 DC		-	-	-	-	-	-	◉	◉		
	NSX250 DC		-	-	-	-	-	-	-	-	◉	◉
Overload protection (thermal)												
Tripping threshold (A)		Ir (at 40 °C)	Adjustable									
			0.7 to 1 x In									
Protection against short-circuits (magnetic)												
Pick-up (A)		Ii	Fixed									
ComPacT circuit breaker	Marked AC value [1]	NSX100 DC	63	80	80	125	200	320	-	-	-	-
		NSX160 DC	-	80	80	125	200	320	440	440	-	-
		NSX250 DC	-	-	-	-	200	320	440	-	440	520
	True DC value	NSX100 DC	80	100	100	150	250	400	530	530	530	625
		NSX160 DC	-	100	100	150	250	400	530	530	-	-
		NSX250 DC	-	-	-	-	-	-	-	-	530	625

[1] The pick-up values for single-pole and two-pole, TMD and TMG magnetic trip units up to 63 A are marked with AC values. A correction coefficient is required to obtain the DC pick-up values indicated on the next line.
The magnetic-protection pick-up values for TM-DC trip units are indicated directly in DC values.

Trip units for ComPacT NSX400DC - NSX1200DC


Three-pole, four- pole (not interchangeable)/Two-pole (not interchangeable)

Type of trip unit		TM-DC								
Rating (A)	In(A) at 40 °C	250 [2]	320	400	500	600	630	800	1000	1200
ComPacT circuit breaker	NSX400DC	◉	◉	◉	-	-	-	-	-	-
	NSX630DC	-	-	-	◉	◉	-	-	-	-
	NSX1200DC	-	-	-	-	-	◉	◉	◉	◉
Overload protection (thermal)										
Tripping threshold (A)	Ir (at 40 °C)	Adjustable 0.7 to 1 x in								
Protection against short-circuits (magnetic)										
Pick-up (A)	Ii	Adjustable 2.5 to 5 x in								

[2] TM-DC 250 Adjustable range is 2.5 to 4 x In.

A

Types of Trip Units

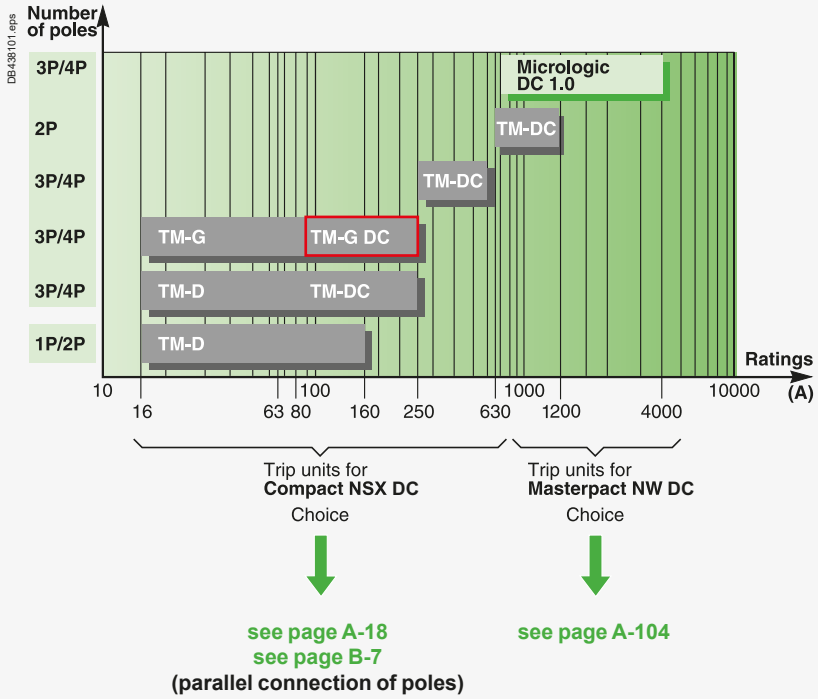


see page A-18
see page B-7
(parallel connection of poles)

see page A-104


Trip Units for ComPacT NSX DC

TM Thermal-Magnetic Trip Unit up to 1200 A

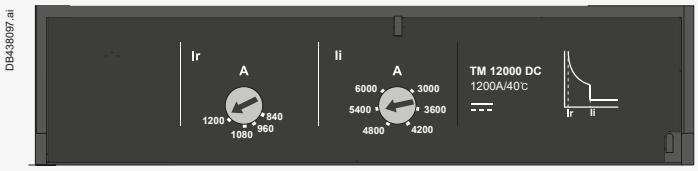

Up to 1200 A for ComPacT NSX DC, protection is provided by thermal-magnetic trip units.

- TM-D up to 160 A: Fixed thermal threshold and magnetic pick-up.
- TM-D up to 63 A: Adjustable thermal threshold and fixed magnetic pick-up.
- TM-DC from 80 to 250 A: Fixed or adjustable (for 200 and 250 A) magnetic pick-up and adjustable thermal threshold.
- TM-DC from 250 A to 1200 A adjustable magnetic pick-up and adjustable thermal threshold.
- TM-G, up to 250 A: Adjustable thermal threshold and fixed low magnetic pick-up to protect long cables.
- TM-G DC, up to 250A: Adjustable thermal threshold and fixed low magnetic pick-up to protect long cables.

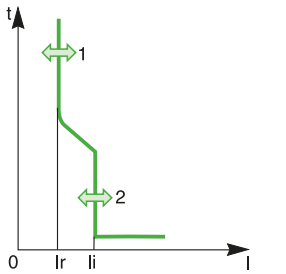

1 overload protection threshold.
2 short-circuit protection pick-up.

Switch-Disconnectors

Characteristics and Performance of ComPacT NSX Switch-Disconnectors from 100 to 250 NA

Installation standards require upstream protection. However ComPacT NSX100 to 630 NA switch-disconnectors are self-protected by their high-set magnetic release.

C254200D1S.eps



ComPacT NSX100 to 250 NA

Common characteristics

Rated voltages			
Insulation voltage (V)	**Ui**		750
Impulse withstand voltage (kV)	**Uimp**		8
Operational voltage (V)	**Ue**		750
Suitability for isolation		IEC/EN 60947-3	yes
Utilization category	DC 22 A/DC 23 A		
Pollution degree		IEC 60664-1	3

Switch-disconnectors

Electrical Characteristics As Per IEC 60947-3 and EN 60947-3

Conventional thermal current (A)	**Ith 60 °C**			
Number of poles				
Operational current (A) depending on the utilization category	**Ie**	DC	250 V (1 pole)	
			500 V (2 poles in series)	
			750 V (3 poles in series)	
Short-circuit making capacity (kA peak)	**Icm**	Min. (switch-disconnector alone)		
		Max. (protection by upstream NSX DC circuit breaker)		
Rated short-time withstand current (A rms)	**Icw**	for	1 s	
			3 s	
			20 s	
Durability (C-O cycles)	Mechanical			
	Electrical	DC	250 V (1 pole) and 500 V (2 poles in series)	In/2 In
Positive contact indication				
Pollution degree				

Protection

Add-on earth-leakage protection	By VigiPacT relay

Additional Indication and Control Auxiliaries

Indication contacts	
Voltages releases	MX shunt release
	MN undervoltage release
Current-transformer module	
Insulation monitoring module	

Remote Communication by Bus

Device-status indication	
Device remote operation	
Operation counter	

Installation/Connections

Dimensions (mm)	Fixed, front connections	2/3P
W x H x D		4P
Weight (kg)	Fixed, front connections	3P
		4P

TransferPacT Source-Changeover Systems (See Chapter on TransferPacT Source-Changeover Systems)

Manual source-changeover systems
Remote-operated or automatic source-changeover systems

[1] 2P in 3P case.
Note: For more information, please see catalog ComPacT NSX LVPED221001EN.

Switch-Disconnectors

Characteristics and Performance of ComPacT NSX Switch-Disconnectors from 100 to 250 NA

Common characteristics			
Control			
	Manual	With toggle	◉
		With direct or extended rotary handle	◉
	Electrical	With remote control	◉
Versions			
	Fixed		◉
	Withdrawable	Plug-in base	◉
		Chassis	◉

NSX100NA	NSX160NA	NSX250NA
100	**160**	**250**
2 [1], 3, 4	2 [1], 3, 4	2 [1], 3, 4
DC22A/DC23A	**DC22A/DC23A**	**DC22A/DC23A**
100	160	250
100	160	250
100	160	250
2.6	3.6	4.9
100	100	100
1800	2500	3500
1800	2500	3500
690	960	1350
50000	40000	20000
10000	10000	10000
5000	5000	5000
◉	◉	◉
3	3	3
◉		
◉		
◉		
◉		
◉		
◉		
◉		
◉		
105 x 161 x 86		
140 x 161 x 86		
1.5 to 1.8		
2.0 to 2.2		
◉		
◉		

Switch-Disconnectors Characteristics
ComPacT NSX400/630 NA DC

C63363DS.eps



ComPacT NSX630 NA DC

C63463DS.eps



ComPacT NSX630 NA DC

ComPacT NSX DC switch-disconnector

Number of poles		
Electrical Characteristics As Per IEC 60947-3		
Rated current (A) (free air + no venting)	In	40 °C
Altitude	m	2000
Rated insulation voltage (V)	Ui	
Rated impulse withstand voltage (kV)	Uimp	
Rated operational voltage (V)	Ue	DC
Type of circuit breaker		
Rated short circuit withstand current (kA rms)	Icw/Icm	t = 1 s
Rated conditionnal short-circuit current	Iq	kA
	With back-up fuse	A gG
Rated conditionnal short-circuit current	Iq with NSX DC circuit breaker	kA with MCCB
Utilization category		
Suitability for isolation		
Pollution degree		
Durability		
Endurance (C-O cycles)	Mechanical	
	Electrical (In)	750 V
Installation and connections		
Control	Manual	Toggle
		Direct or extended rotary handle
	Motor mechanism	
Connections	Fixed	Front connection
		Long rear connection
	Plug-in (on base)	Front connection
		Rear connection
	Withdrawable (on chassis)	Front connection
		Rear connection
Additional measurement, indication and control auxiliaries		
Indication contacts	OF	Auxiliary contact
	SD, SDE	Trip, fault-trip
Voltage releases	MX, MN	Shunt trip/undervoltage release
Installation		
Accessories	Crimp lugs/bare cable connector	
	Terminal extensions and spreaders	
	Escutcheons	
	Terminal shields and interphase barriers	
	Din rail adapter	
Dimensions and weight		
Dimensions (mm) H x W x D (w/o series connection)		3P
		4P
Weight (kg) (w/o series connection)		3P
		4P

Switch-Disconnectors Characteristics
ComPacT NSX400/630 NA DC


	NSX400 NA DC	NSX630 NA DC
	3/4	3/4
	400	630
	◉	◉
	750	750
	8	8
	750	750
	7.5	7.5
	10	10
	400	630
	100	100
	DC22-A	DC22-A
	◉	◉
	3	3
	5000	5000
	1000	1000
	◉	◉
	◉	◉
	◉	◉
	◉	◉
	◉	◉
	◉	◉
	◉	◉
	◉	◉
	◉	◉
	◉	◉
	◉	◉
	◉	◉
	◉	◉
	◉	◉
	◉	◉
	◉	◉
	-	-
	255 x 140 x 110	255 x 140 x 110
	255 x 185 x 110	255 x 185 x 110
	6	6
	7.8	7.8


Accessories and Auxiliaries

Overview of ComPacT NSX100 to 630 DC [*] Fixed Version


Insulation accessories

DB437930.ai

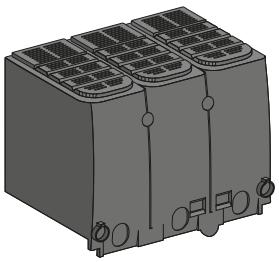

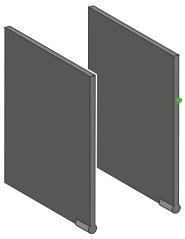


Interphase barriers

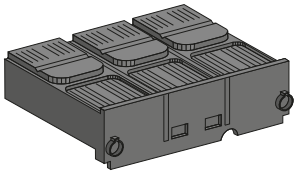


Sealable terminal shields

Electrical auxiliaries ▶ A-39



Indication contact

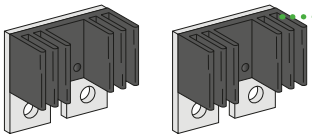


Heat sink



Voltage release

Protection and measurements

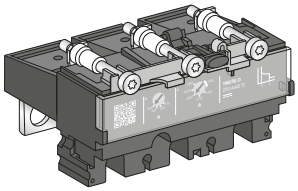


TM-D, TM-G trip unit


[*] Applicable for circuit breaker up to 600 A see page A-16.

Accessories and Auxiliaries


Overview of ComPacT NSX100 to 630 DC [*] Fixed Version

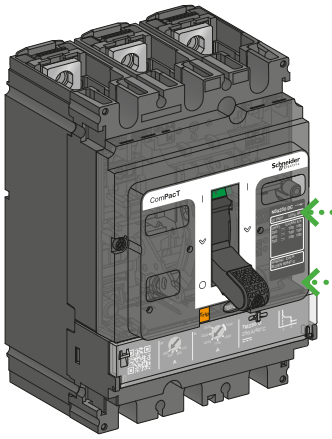


Connection ▶ A-32

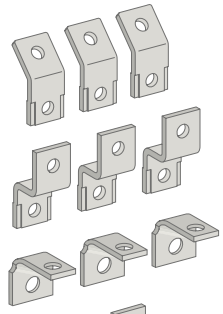


Terminal extensions

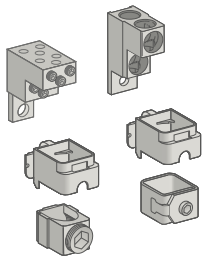

Cable connectors

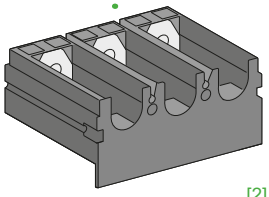


One-piece spreader [2]

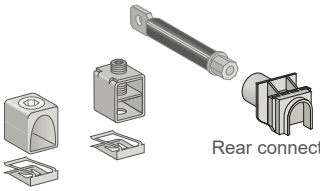

Cable connectors


Rear connectors

Communication [1]

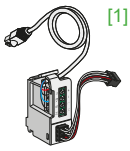


[1]

NSX cord

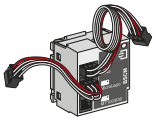

[1]


BSCM module

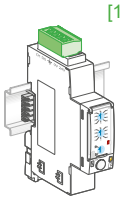


[1]

Modbus interface


Control accessories ▶ A-40

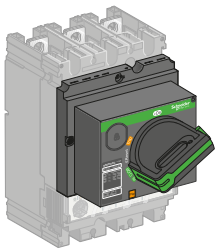

Direct rotary handle

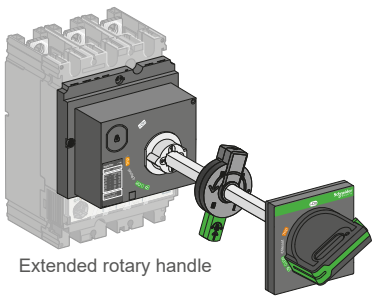

Extended rotary handle

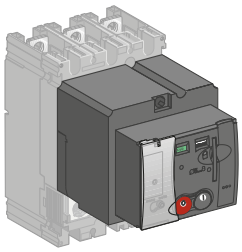


Motor mechanism

[1] See communication chapter.
[2] Only for ComPacT NSX100-250.


Accessories and Auxiliaries
Overview of ComPacT NSX1200 DC Fixed Version

Insulation accessories


DB437969.eps

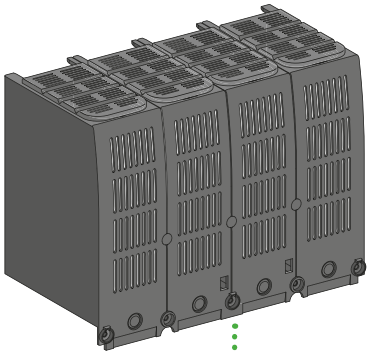

Sealable terminal shields

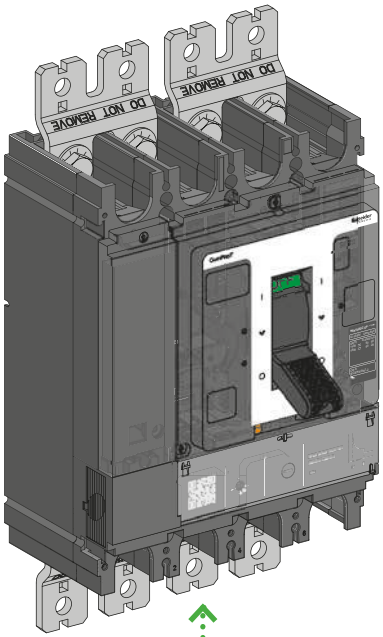


Electrical auxiliaries ▶ A-39



Indication contact




Voltage release

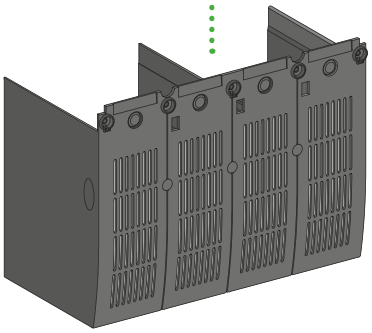

Sealable terminal shields

A

Connection ▶ A-32



Cable connectors


Communication

[1]




NSX cord

[1]

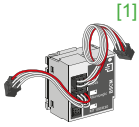


BSCM module

[1]




Modbus interface


Control accessories ▶ A-40

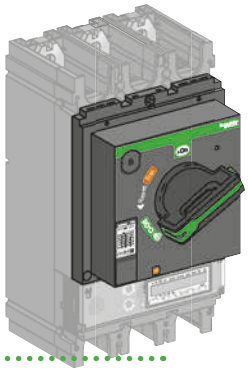

Direct rotary handle

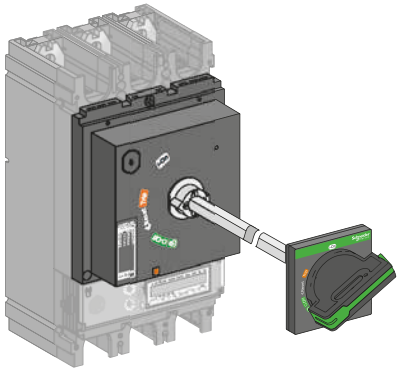

Extended rotary handle

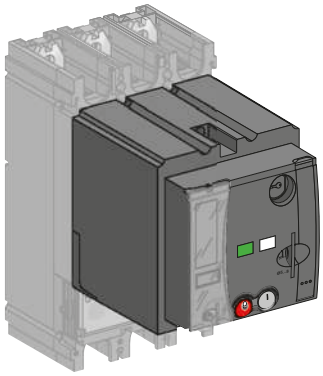

Motor mechanism


[1] See communication chapter.

Accessories and Auxiliaries


Overview of ComPacT NSX100 to 630 DC [1] Plug-in and Withdrawable Versions

Insulation accessories

DB437931.ai

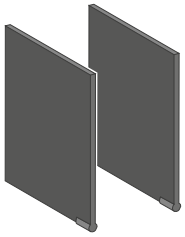


Interphase barriers

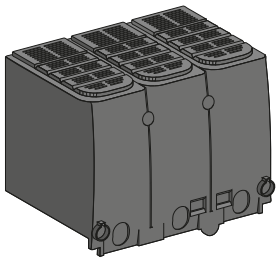


Sealable long terminal shields for plug-in base


Electrical accessories ▶ A-34

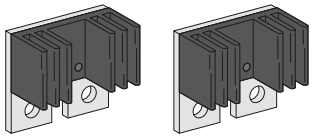

Heat sink

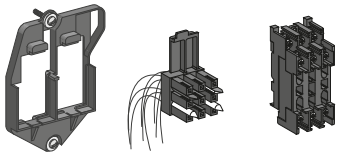


Automatic withdrawable auxiliary connector



Manual auxiliary connector

Mechanical accessories ▶ A-31

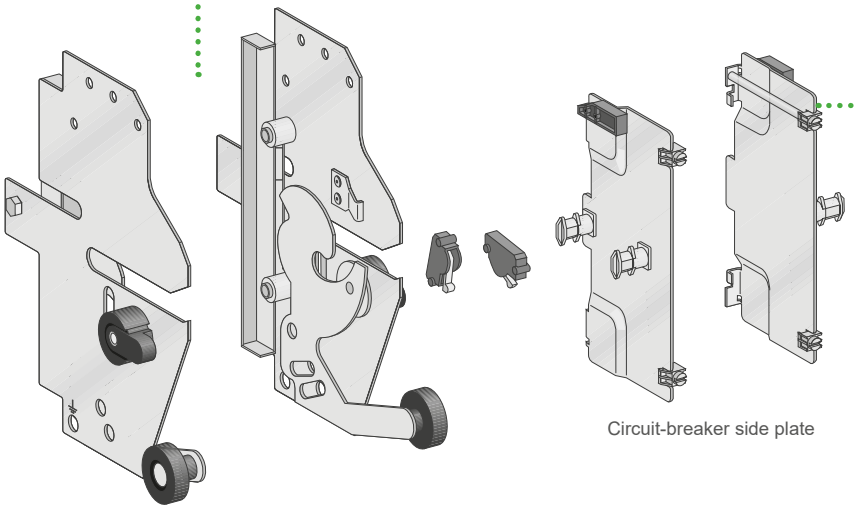

Chassis side plate

Circuit-breaker side plate


[1] Applicable for circuit breaker up to 600 A see page A-16.

Accessories and Auxiliaries

Overview of ComPacT NSX100 to 630 DC [1] Plug-in and Withdrawable Versions

A

Connection ▶ A-32

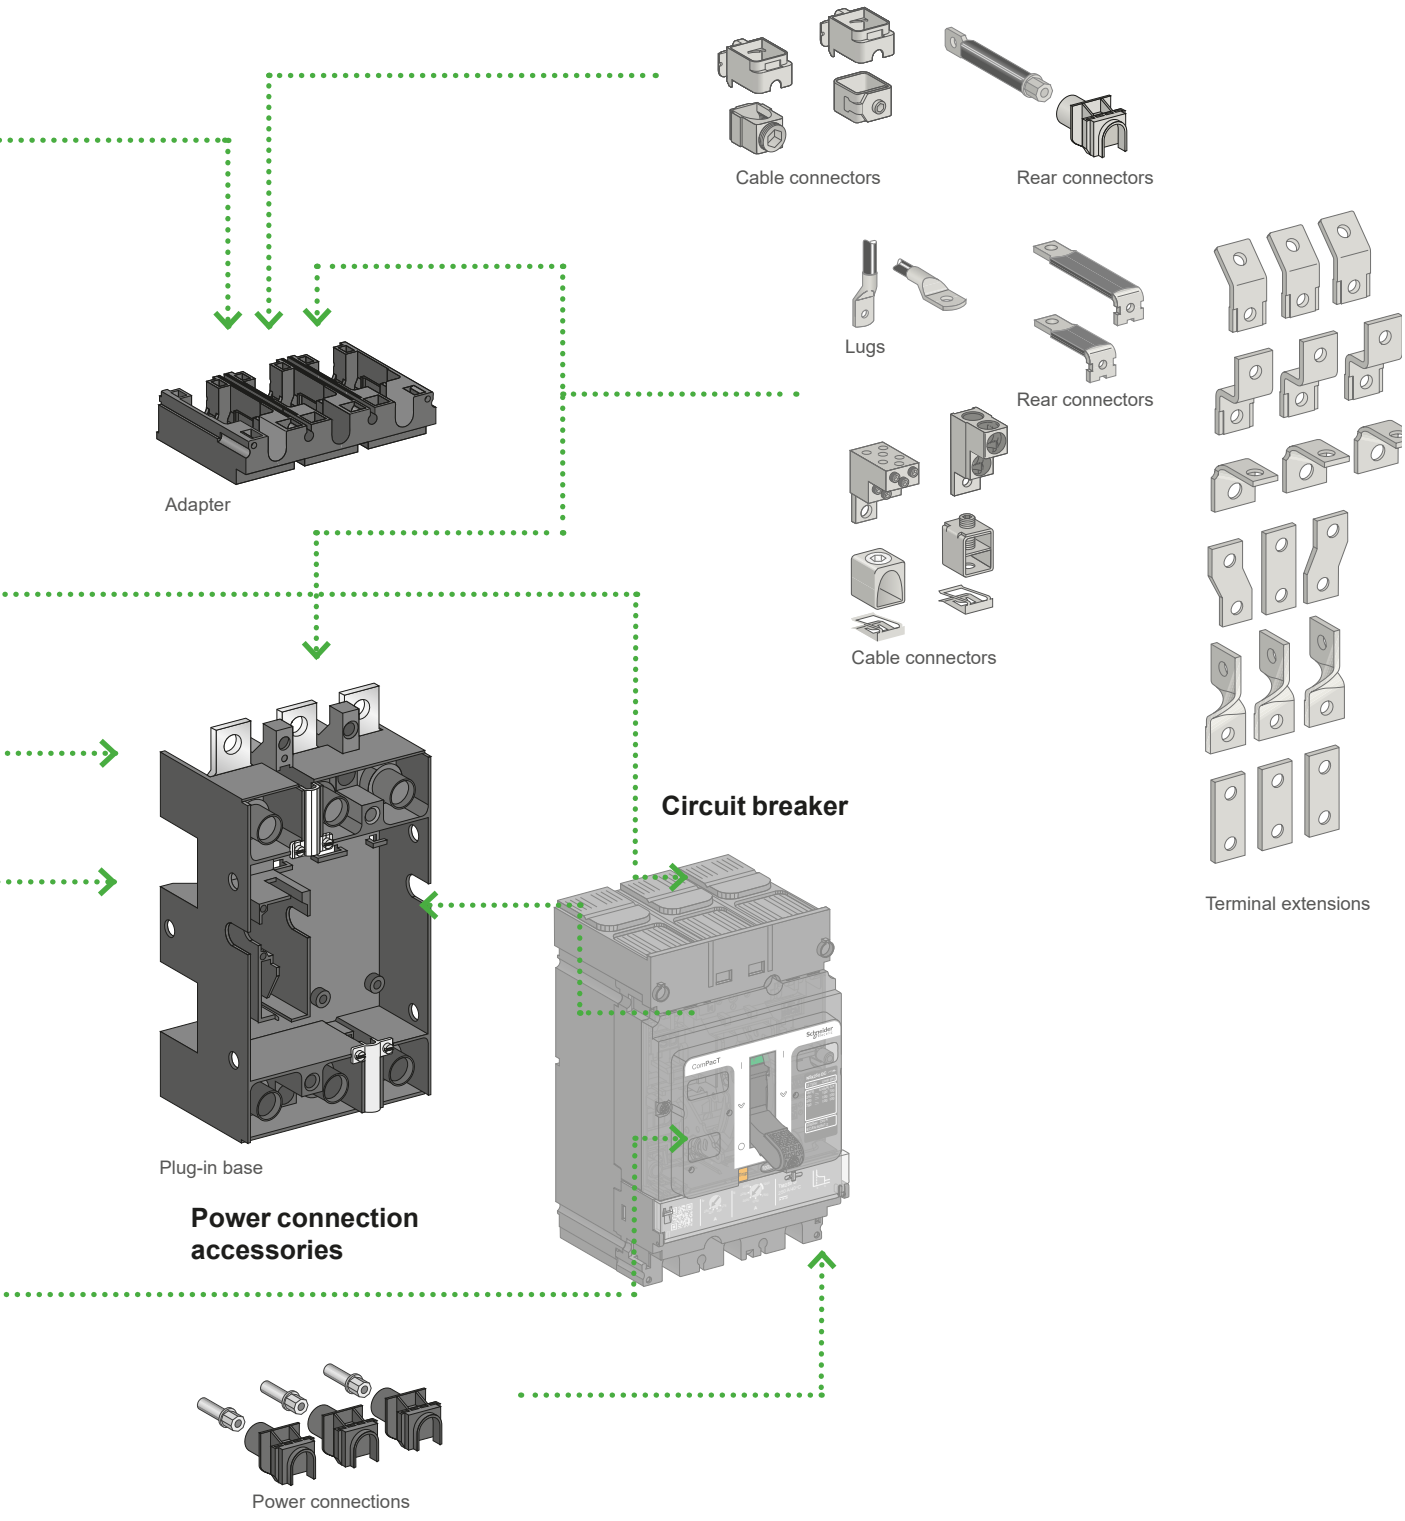

Electrical and Mechanical Accessories
ComPacT NSX100 to 1200 DC

ComPacT NSX DC circuit breakers may be installed horizontally, vertically or flat on their back, without derating performance levels.
There are three installation versions:
- Fixed
- Plug-in (on a base)
- Withdrawable (on a chassis).


For the last two, components must be added (base, chassis) to the fixed version. Many connection components are shared by the three versions.

C25F4TM250D1.eps



Fixed ComPacT NSX250 DC

DB437926.ai




Installation positions

PB104934.eps



Plug-in
ComPacT NSX250 DC

DB437927.ai




Installation positions

Fixed Circuit Breakers NSX100 to NSX1200


Fixed circuit breakers are designed for standard connection using bars or cables with lugs. Bare-cable connectors are available for connection to bare copper or aluminium cables.
For connection of large cables, a number of solutions with spreaders may be used for both cables with lugs or bare cables.

DB437921.ai

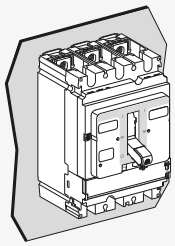


Mounting on a backplate

DB437922.ai

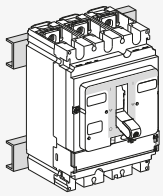


Mounting on rails

DB437923.ai

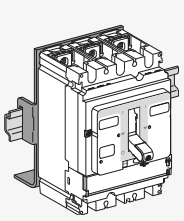


Mounting on DIN rail
(with adapter)

DB437924.ai

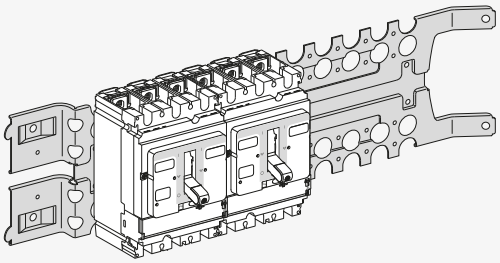

Mounting on a Prisma mounting plate

DB437925.ai

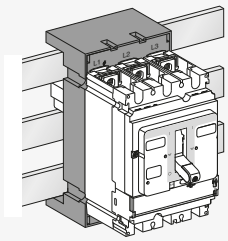

Mounting on busbars with an adapter

Plug-in Base Circuit Breakers NSX100 to NSX630 [1]

The plug-in version makes it possible to:
- Extract and/or rapidly replace the circuit breaker without having to touch the connections on the base.
- Allow for the addition of future circuits by installing bases that will be equipped with a circuit breaker at a later date.
- Isolate the power circuits when the device is mounted on or through a panel. It acts as a barrier for the connections of the plug-in base. Insulation is made complete by the mandatory short terminal shields on the device. The degrees of protection are:
  - Circuit breaker plugged in = IP4
  - Circuit breaker removed = IP2
  - Circuit breaker removed, base equipped with shutters = IP4.

Parts of a plug-in configuration


A plug-in configuration is made by adding a "plug-in kit" to a fixed device.
To avoid connecting or disconnecting the power circuits under load conditions, a safety trip causes automatic tripping if the device is ON, before engaging or withdrawing it. The safety trip, supplied with the kit, must be installed on the device. If the device is disconnected, the safety trip does not operate. The device can be operated outside the switchboard.

Accessories

Optional insulation accessories are available.
- Terminal shields to protect against direct contact.
- Interphase barriers to reinforce insulation between phases and to protect against direct contact.


Mounting

DB431642.eps

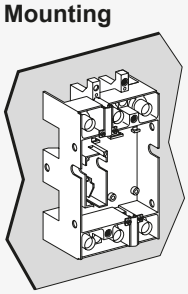


Mounting on a backplate

DB431643.eps

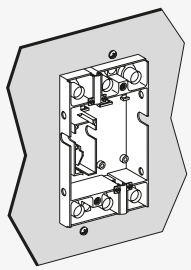

Mounting through a front panel

DB431644.eps

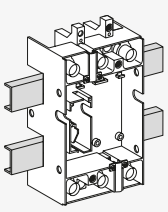

Mounting on rails

[1] Applicable for circuit breaker up to 600 A see page A-14 to A-17.

Withdrawable Circuit Breakers NSX100 to NSX630 [1]

In addition to the advantages provided by the base, installation on a chassis facilitates handling. It offers three positions, with transfer from one to the other after mechanical unlocking:

- Connected: the power circuits are connected
- Disconnected: the power circuits are disconnected, the device can be operated to check auxiliary operation
- Removed: the device is free and can be removed from the chassis.

Parts of a withdrawable configuration


A withdrawable configuration requires two side plates installed on the base and two sides plates mounted on the circuit breaker. Similar to the plug-in version, a safety trip causes automatic tripping if the device is ON, before engaging or withdrawing it, and enables device operation in the disconnected position.

Accessories

Accessories are the same as for the base, with in addition:


- Auxiliary contacts for installation on the fixed part, indicating the “connected” and “disconnected” positions
- Locking by 1 to 3 padlocks (shackle diameter 5 to 8 mm), to:
  - Prevent insertion for connection
  - Lock the circuit breaker in connected or disconnected position
- Toggle collar for circuit breakers with a toggle mounted through a front panel, intended to maintain the degree of protection whatever the position of the circuit breaker (supplied with a toggle extension)
- Telescopic shaft for extended rotary handles. The door can then be closed with the device in the connected and disconnected positions.

DB431648.eps

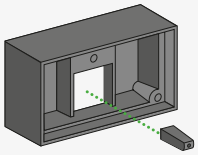

Protection collar for toggle and toggle extension to provide IP4 in the connected and disconnected positions


DB431649.eps



Telescopic shaft


Mounting

DB431650.eps

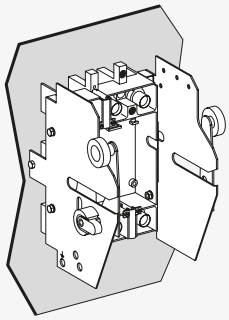


Mounting on a backplate

DB431653.eps

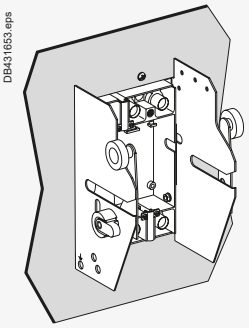

Mounting through a front panel

DB431654.eps

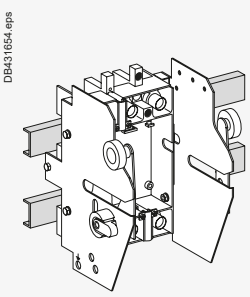

Mounting on rails

[1] Applicable for circuit breaker up to 600 A see page A-14 to A-17.

- Disconnected position - the power circuits are disconnected, but the circuit breaker is still on the chassis and may still be operated (ON, OFF, push-to-trip).
- The circuit breaker may be locked using 1 to 3 padlocks (shackle diameter 5 to 8 mm), to prevent connection.
- The auxiliaries can be tested (with manual auxiliary connector).


A

PB104935.eps




Withdrawable ComPacT NSX250 DC

DB437927.ai



Installation positions

DB437928.ai




Connected Disconnected Removed

Electrical and Mechanical Accessories
Connection of Fixed Devices


Fixed circuit breakers are designed for standard front connection using bars or cables with lugs.
Cable connectors are available for bare cables. Rear connection is also possible.

A

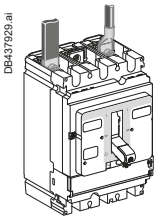





Insulated bar




Small lug for copper cables

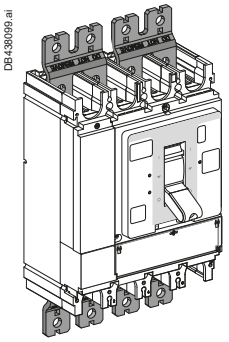





Small lug for Al cables




Straight terminal extensions




Right-angle terminal extensions




45° terminal extensions




Edgewise terminal extensions




Double-L terminal extensions




Spreaders

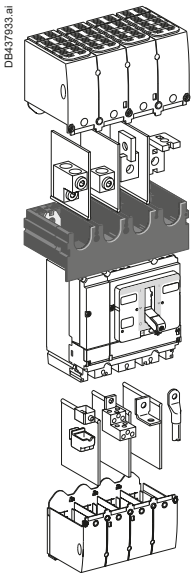

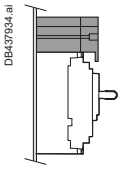

Mounting at the back of a switchboard

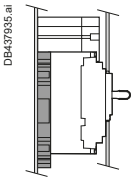

Mounting behind the front panel with a raiser

Front Connection

Bars or Cables with Lugs

Standard terminals
ComPacT NSX100 to 630 DC come with terminals comprising snap-in nuts with screws:
- ComPacT NSX100/160/250 DC: M8 nuts and screws
- ComPacT NSX400/630 DC: M10 nuts and screws.

These terminals may be used for:
- Direct connection of insulated bars or cables with lugs
- Terminal extensions offering a wide range of connection possibilities.

Interphase barriers or terminal shields are recommended. They are mandatory for certain connection accessories (in which case the interphase barriers are provided).

Bars
When the switchboard configuration has not been tested, insulated bars are mandatory.

Maximum size of bars

ComPacT NSX DC circuit breaker		100 to 250	400 to 630	1200
Without spreaders	pitch (mm)	35	45	45
	maximum bar size (mm)	20 x 2	32 x 6	2 x (32 x 6)
With spreaders	pitch (mm)	45	52.5	-
	maximum bar size (mm)	32 x 2	40 x 6	-

Crimp lugs
There are two models, for aluminium and copper cables.
It is necessary to use narrow lugs, compatible with device connections. They must be used with interphase barriers or long terminal shields. The lugs are supplied with interphase barriers and may be used for the types of cables listed below.

Cable sizes for connection using lugs

ComPacT NSX DC circuit breaker		100 to 250	400 to 630	630 to 1200
Copper cables	size (mm²)	120, 150, 185	240, 300	185, 2 x 185
	crimping	hexagonal barrels or punching		
Aluminium cables	size (mm²)	120, 150, 185	240, 300	185, 2 x 185
	crimping	hexagonal barrels		

Terminal extensions
Extensions with anti-rotation ribs can be attached to the standard terminals to provide numerous connection possibilities in little space:
- Straight terminal extensions
- Right-angle terminal extensions
- Edgewise terminal extensions
- Double-L extensions
- 45° extensions.

Spreaders
Spreaders may be used to increase the pitch:
- NSX100 to 250 DC: the 35 mm pitch can be increased to 45 mm
- NSX400/630 DC: the 45 mm pitch can be increased to 52 or 70 mm.

Bars, cable lugs or cable connectors can be attached to the ends.

One-piece spreader for NSX100 to 250 DC
Connection of large cables may require an increase in the distance between the device terminals.
The one-piece spreader is the means to:
- Increase the 35 mm pitch of the NSX100 to 250 DC circuit breaker terminals to the 45 mm pitch of a NSX400/630 DC device
- Use all the connection and insulation accessories available for the next largest frame size (lugs, connectors, spreaders, right-angle and edgewise terminal extensions, terminal shields and interphase barriers).

It may also be used for ComPacT INS switch-disconnectors.
Equipped with a single-piece spreader, ComPacT NSX DC devices can be mounted:
- At the back of a switchboard
- Behind the front panel with a raiser.

The one-piece spreader is also the means to:
- Align devices with different frame sizes in the switchboard
- Use the same mounting plate, whatever the device.

Pitch (mm) depending on the type of spreader

ComPacT NSX DC circuit breaker	100 to 250	400 to 630
Without spreaders	35	45
With spreaders	45	52.5 or 70
With one-piece spreader	45	-

Bare Cables

For bare cables (without lugs), the prefabricated bare-cable connectors may be used for both copper and aluminium cables.

1-cable connector for ComPacT NSX100 to 250 DC
The connectors snap directly on to the device terminals and are fixed by clips to right-angle and straight terminal extensions as well as spreaders.


1-cable connector for ComPacT NSX400 to 630 DC
The connectors are screwed directly to the device terminals.

2-cable connector for ComPacT NSX100 to 250 and 400/630/1200 DC
The connectors are screwed to device terminals or right-angle terminal extensions.

Distribution connectors for ComPacT NSX100 to 250 DC
These connectors are screwed directly to device terminals. Interphase barriers are supplied with distribution connectors, but may be replaced by long terminal shields. Each connector can receive six cables with cross-sectional areas ranging from 1.5 to 35 mm² each.


Maximum size of cables depending on the type of connector

ComPacT NSX DC circuit breaker		100/160	250	400	630	1200
Steel connectors	1.5 to 95 mm²	◉				
Aluminium connectors	25 to 95 mm²	◉	◉			
	120 to 185 mm²	◉	◉			
	2 cables 50 to 120 mm²	◉	◉			
	2 cables 35 to 240 mm²			◉	◉	◉
	35 to 300 mm²			◉	◉	
Distribution connectors	6 cables 35 mm²	◉	◉			

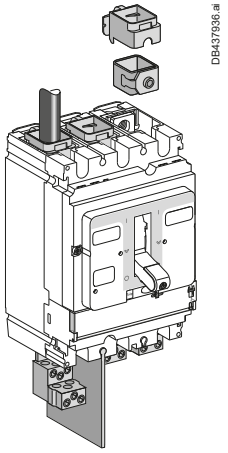



Bare cable

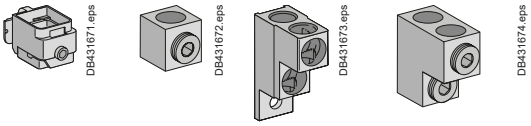


1-cable connector for NSX100 to 250 DC

1-cable connector for NSX400/ 630 DC

2-cable connector for NSX100 to 250 DC

2-cable connector for NSX400/ 630/1200 DC

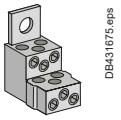

Distribution connector for NSX100 to 250 DC

Rear Connection (up to Rated Current 600 A)

Device mounting on a backplate with suitable holes enables rear connection.

Bars or Cables with Lugs

Rear connections for bars or cables with lugs are available in two lengths. Bars may be positioned flat, on edge or at 45° angles depending on how the rear connections are positioned.
The rear connections are simply fitted to the device connection terminals. All combinations of rear connection lengths and positions are possible on a given device.

Bare Cables


For the connection of bare cables, the 1-cable connectors for ComPacT NSX100 to 250 DC may be secured to the rear connections using clips.

Accessories for Series and Parallel Connection (up to Rated Current 600 A)

A limited number of accessories can be used to optimize series and parallel connection of poles.

Accessories for Series Connection


These include series connection plates, equipped with heat sinks.

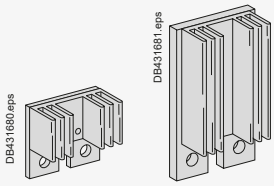

Series connection plates equipped with heat sinks

Accessories for Parallel Connection


Parallel pole connection accessories are identical to those for series connections. They are equipped with heat sinks. Customer connections are made directly to the connection plates after removing the heat sinks.

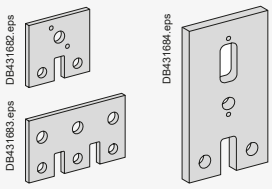

Parallel connection plates


Four positions.

Two lengths.

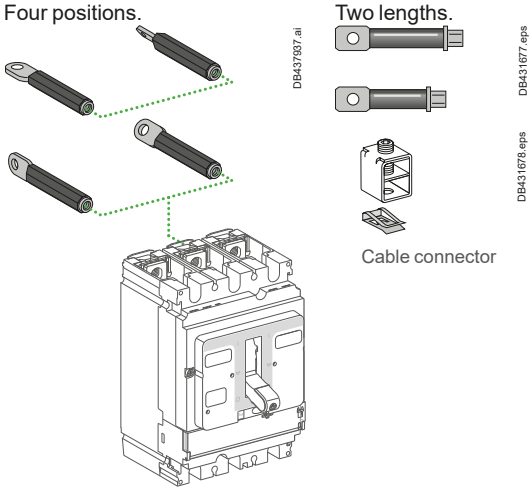


Cable connector

Rear connection

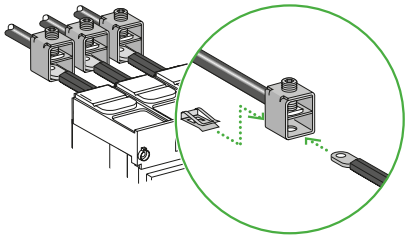


Connection of bare cables to NSX100 to 250 DC by clips

Electrical and Mechanical Accessories
Connection of Electrical Auxiliaries

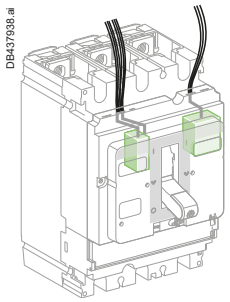

Fixed ComPacT NSX DC

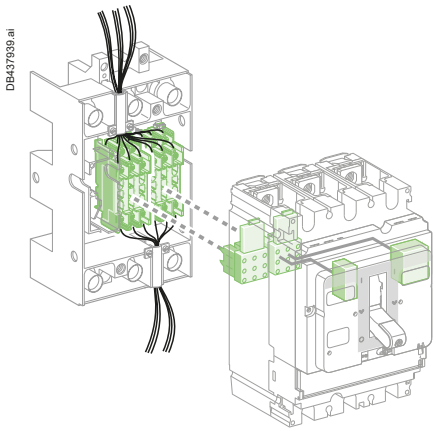

Plug-in/withdrawable
ComPacT NSX DC

Fixed ComPacT NSX100-250 DC

Auxiliary circuits exit the device through a knock-out in the front cover.

Withdrawable or Plug-in ComPacT NSX DC


Automatic Auxiliary Connectors

Auxiliary circuits exit the circuit breaker via one to three automatic auxiliary connectors (nine wires each). These are made up of:

- A moving part, connected to the circuit breaker via a support (one support per circuit breaker)
- A fixed part, mounted on the plug-in base, equipped with connectors for bare cables up to 2.5 mm².


MicroLogic trip unit options are also wired via the automatic auxiliary connectors.

Selection of automatic auxiliary connectors
Depending on the functions installed, one to three automatic auxiliary connectors are required.

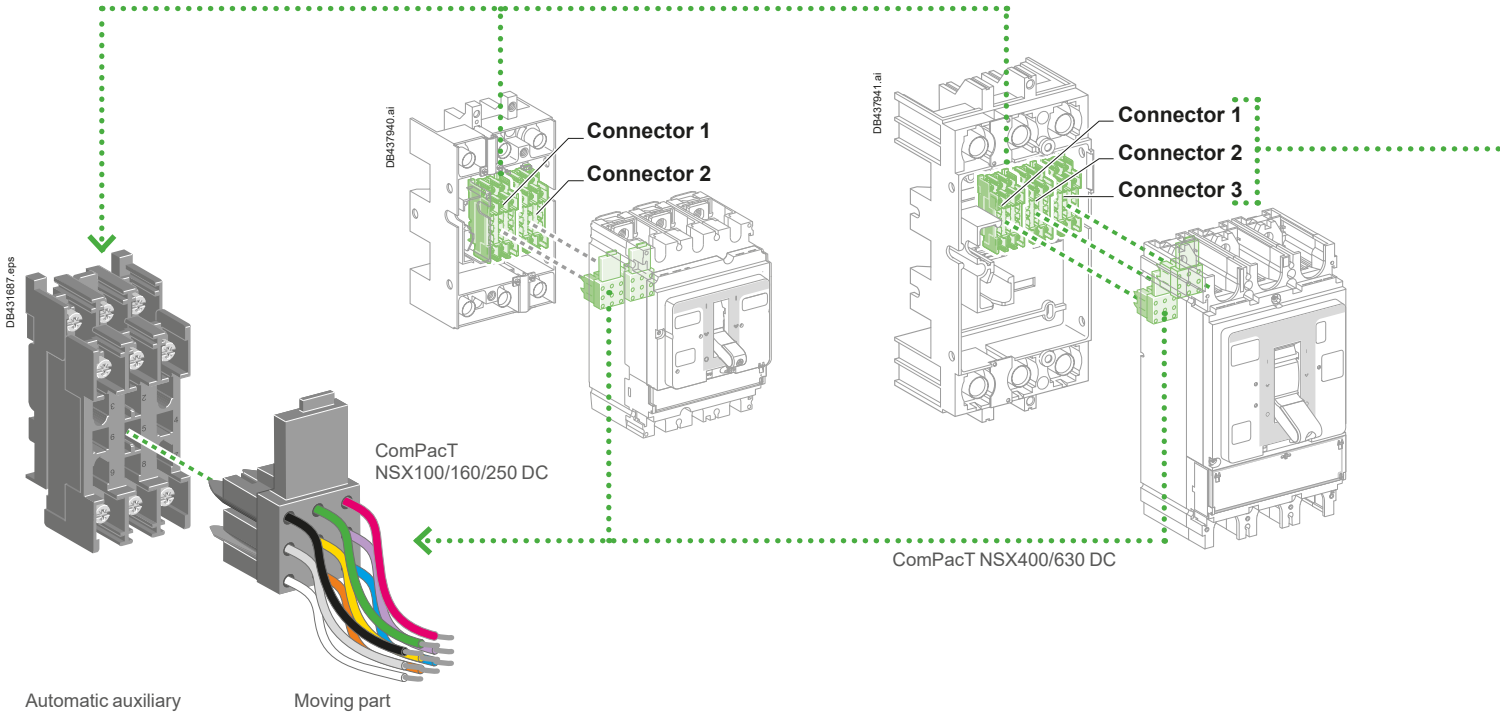

Automatic auxiliary connector: Fixed part

Moving part

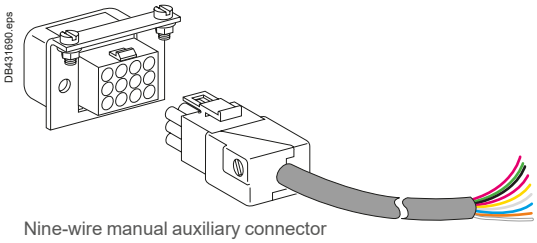


Nine-wire manual auxiliary connector


Withdrawable ComPacT NSX DC

Manual Auxiliary Connectors

As an option to the automatic auxiliary connectors, withdrawable circuit breakers may be equipped with one to three plugs with nine wires each. In "disconnected" position, the auxiliaries remain connected.
They can then be tested by operating the device.

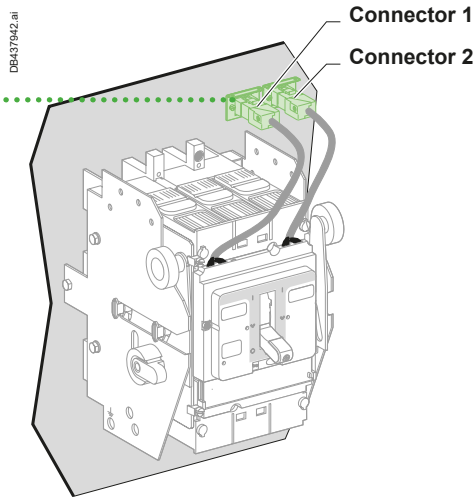

ComPacT NSX100/160/250 DC

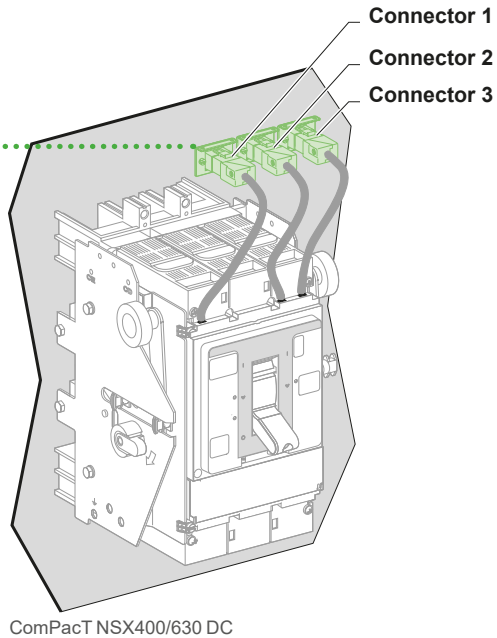

ComPacT NSX400/630 DC

Each auxiliary is equipped with a terminal block with numbered terminals for connection of wires up to:
- 1.5 mm² for auxiliary contacts and voltage releases
- 2.5 mm² for the motor mechanism module.

Circuit breaker	Connector 1	Connector 2	Connector 3
	OF1 MN/MX SD	OF2 SDE NSX cord MT 24 V DC	OF3
NSX100/160/250 DC	◉	◉	-
NSX400/630 DC	◉	◉	◉

MT: motor mechanism

Electrical and Mechanical Accessories

Selection of Auxiliaries for ComPacT NSX100/160/250 DC

PB120468.eps



Remote Tripping

MX or MN voltage releases are used to trip the circuit breaker.

MN Undervoltage Release

This release trips the circuit breaker when the control voltage drops below a tripping threshold:

- Tripping threshold between 0.35 and 0.7 times the rated voltage.
- Circuit breaker closing is possible if the voltage exceeds 0.85 times the rated voltage. For a lower value, circuit breaker closing cannot be ensured.

Circuit breaker tripping by an MN release meets the requirements of standard IEC 60947-2.

Time-Delay Unit for an MN Release

Eliminates nuisance tripping due to transient voltage dips lasting 200 ms.
It is used in conjunction with:

- A 250 V DC MN release, control voltage 220/240 V AC
- A 48 V DC MN release, control voltage 48 V AC.

MX Shunt Release

Trips the circuit breaker when the control voltage rises above 0.7 x Un.
Control signals can be of the impulse type (≥ 20 ms) or maintained.

Operation

When the circuit breaker has been tripped by an MN or MX release, it must be reset locally.
MN or MX tripping takes priority over manual closing.
In the presence of a standing trip order, closing of the contacts, even temporary, is not possible.

Mechanical Characteristics

- Endurance is equal to 50 % of the mechanical endurance of the circuit breaker.
- The releases clip in behind the front cover.
- Connection using wires up to 1.5 mm², to integrated terminal blocks.


Electrical Characteristics

- Consumption:
  - Pick-up (MX): < 30 VA
  - Seal-in (MN and MNR): < 5 VA.
- Response time: < 50 ms.


NA, TMD, TMG

Standard

DB431693.eps

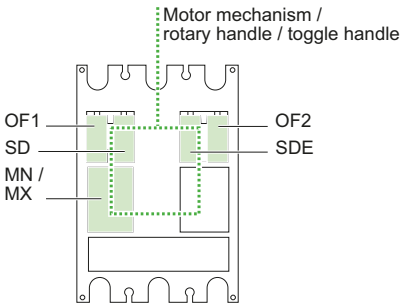

DB437944.ai

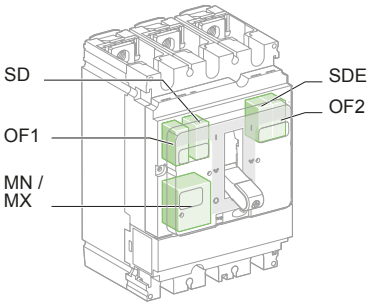

Communication

Communication requires specific auxiliaries (see page A-42).

Communication of status indications [1]

- 1 BSCM module.
- 1 NSX cord (internal terminal block) for both communication and 24 V DC supply to the BSCM.

Communication of status conditions is compatible with a toggle handle and a rotary handle.


Communication of status indications and controls

This requires, in addition to the previous auxiliaries:

- 1 IFM connected to the BSCM.

TMD, TMG

Communication of status indications [1]

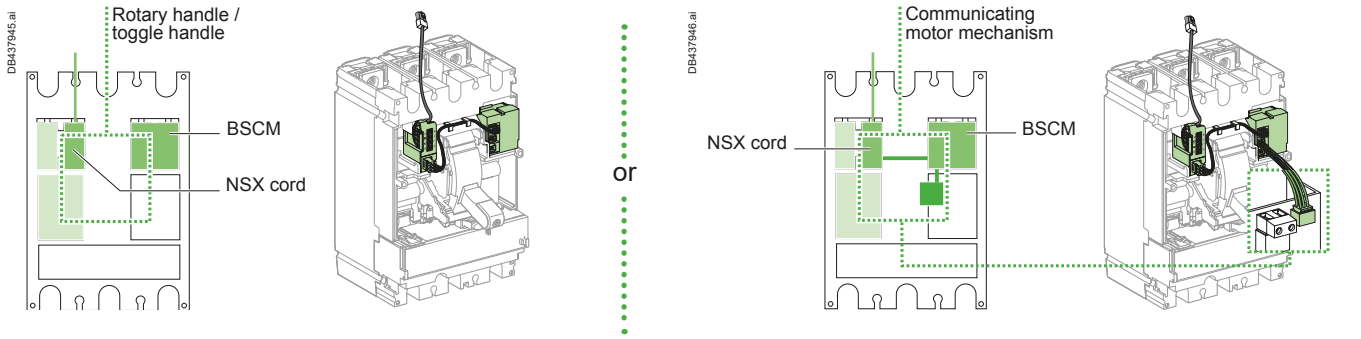

[1] ComPacT NSX100-250 DC only.

Electrical and Mechanical Accessories
Selection of Auxiliaries for ComPacT NSX400/630/1200 DC

A

Standard

All ComPacT NSX400/630/1200 DC circuit breakers and switch-disconnectors have slots for the electrical auxiliaries listed below.


5 indication contacts (see page A-39)
- 3 ON/OFF (OF1, OF2, OF3)
- 1 trip indication (SD)
- 1 fault-trip indication (SDE)


1 remote-tripping release (see page A-43)
- Either 1 MN undervoltage release
- Or 1 MX shunt release

All these auxiliaries may be installed with a motor mechanism or a rotary handle or toggle handle.


NSX400/630/1200 DC

Standard

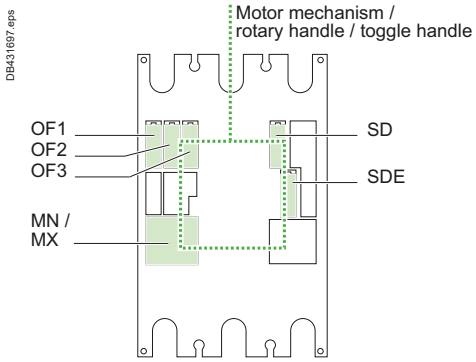


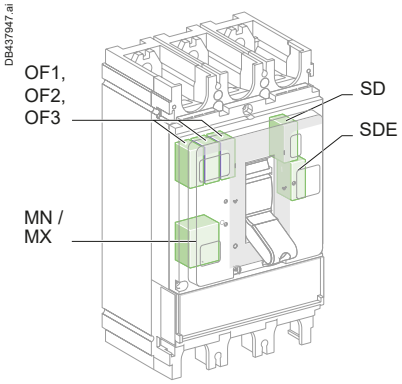

Communication of status indications

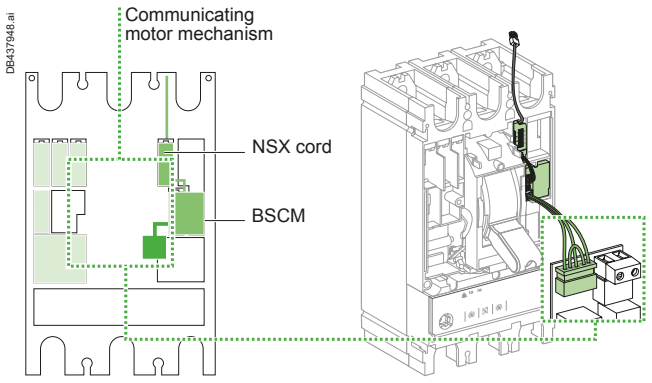

Communication of status indications and controls

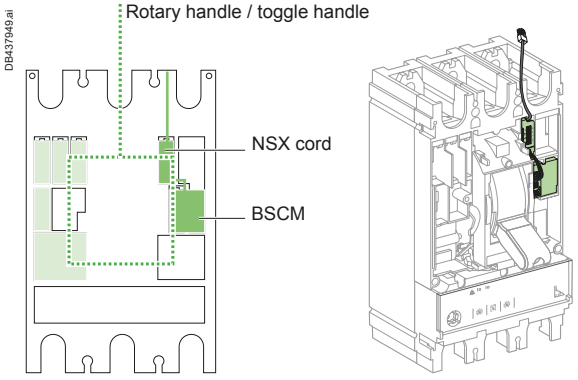

Electrical and Mechanical Accessories
Indication Contacts for ComPacT NSX DC

One contact model provides circuit breaker status indications (OF - SD - SDE).
An early-make or early-break contact, in conjunction with a rotary handle, can be used to anticipate device opening or closing.
A CE/CD contact indicates that the chassis is connected/disconnected.

These common-point changeover contacts provide remote circuit breaker status information.
They can be used for indications, electrical locking, relaying, etc.
They comply with the IEC 60947-5 international recommendation.

Functions

Breaker-status indications, during normal operation or after a fault
A single type of contact provides all the different indication functions:
- OF (ON/OFF) indicates the position of the circuit breaker contacts
- SD (trip indication) indicates that the circuit breaker has tripped due to:
  - An overload
  - A short-circuit
  - Operation of a voltage release
  - Operation of the "push to trip" button
  - Disconnection when the device is ON.

The SD contact returns to de-energized state when the circuit breaker is reset.
- SDE (fault-trip indication) indicates that the circuit breaker has tripped due to:
  - An overload
  - A short-circuit.

The SD contact returns to de-energized state when the circuit breaker is reset.

Rotary-handle position contact for early-make or early-break functions
- CAM (early-make or early-break function) contacts indicate the position of the rotary handle.


They are used in particular for advanced opening of safety trip devices (early break) or to energize a control device prior to circuit breaker closing (early make).

Chassis-position contacts
- CE/CD (connected/disconnected) contacts are microswitch-type carriage switches for withdrawable circuit breakers.



LV429454.eps

Indication contacts

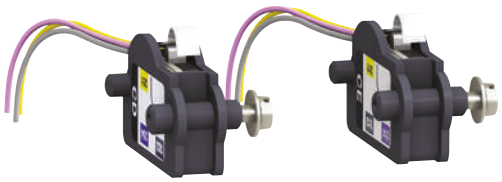
PB103706-68.eps

CE/CD carriage switches

Installation

- OF, SD, SDE functions: a single type of contact provides all these different indication functions, depending on where it is inserted in the device. The contacts clip into slots behind the front cover of the circuit breaker.

The SDE function on a ComPacT NSX100 - 250 DC equipped with a thermal-magnetic trip unit requires the SDE actuator.
- CAM function: the contact fits into the rotary-handle unit (direct or extended).
- CE/CD function: the contacts clip into the fixed part of the chassis.

Electrical Characteristics of Auxiliary Contacts

Contacts			Standard				Low level			
Types of contacts			**All**				**OF, SD, SDE**			
Rated thermal current (A)			6				5			
Minimum load			100 mA at 24 V DC				1 mA at 4 V DC			
Utilization cat. (IEC 60947-5-1)			AC12	AC15	DC12	DC14	AC12	AC15	DC12	DC14
Operational current (A)	24 V	AC/DC	6	6	6	1	5	3	5	1
	48 V	AC/DC	6	6	2.5	0.2	5	3	2.5	0.2
	110 V	AC/DC	6	5	0.6	0.05	5	2.5	0.6	0.05
	220/240 V	AC	6	4	-	-	5	2	-	-
	250 V	DC	-	-	0.3	0.03	5	-	0.3	0.03
	380/440 V	AC	6	2	-	-	5	1.5	-	-
	480 V	AC	6	1.5	-	-	5	1	-	-
	660/690 V	AC	6	0.1	-	-	-	-	-	-

Electrical and Mechanical Accessories
Rotary Handles for ComPacT NSX DC

There are two types of rotary handle:
- Direct rotary handle
- Extended rotary handle.

There are two models:
- Standard with a black handle
- Red handle and yellow front for machine-tool control.

PB104936.eps



ComPacT NSX DC with a rotary handle

PB103607-50.eps



ComPacT NSX DC with an MCC rotary handle

PB103608-50.eps



ComPacT NSX DC with a CNOMO machine-tool rotary handle

Direct Rotary Handle

Standard Handle

Degree of protection IP40, IK07.
The direct rotary handle maintains:
- Visibility of and access to trip-unit settings
- Suitability for isolation
- Indication of the three positions O (OFF), I (ON) and tripped
- Access to the "push to trip" button.

Device locking
The rotary handle facilitates circuit breaker locking.
- Padlocking:
  - Standard situation, in the OFF position, using 1 to 3 padlocks, shackle diameter 5 to 8 mm, not supplied
  - With a simple modification, in the ON and OFF positions. Locking in the ON position does not prevent free circuit breaker tripping if a fault occurs. In this case, the handle remains the ON position after the circuit breaker tripping. Unlocking is required to go to the tripped then the OFF position.
- Keylock (and padlock).

It is possible to install a Ronis or Profalux keylock (optional) on the base of the handle to obtain the same functions as with a padlock.

Early-make or early-break contacts (optional)
Early-make and/or early-break contacts may be used with the rotary handle. It is thus possible to:
- Supply an MN undervoltage release before the circuit breaker closes
- Open the contactor control circuit before the circuit breaker opens.

MCC Switchboard Control

Control of an MCC switchboard is achieved by adding a kit to the standard handle. In addition to the standard functions, the kit offers the characteristics listed below.

Higher degree of protection IP
Degree of protection IP43, IK07.
The IP is increased by a built-in gasket.

Door locking depending on device position
- The door cannot be opened if the circuit breaker is ON or in the tripped position. For exceptional situations, door locking can be temporarily disabled with a tool to open the door when the circuit breaker is closed. This operation is not possible if the handle is locked by a padlock.
- Circuit breaker closing is disabled if the door is open. This function can be deactivated.

Machine-Tool Control in Compliance with CNOMO

Control of a machine-tool is achieved by adding a kit to the standard handle. In addition to the standard functions, the kit offers the characteristics listed below.

Enhanced waterproofness and mechanical protection
- Degree of protection IP54, IK08.
- Compliance with CNOMO E03.81.501N.

Electrical and Mechanical Accessories
Rotary Handles for ComPacT NSX DC

Extended Rotary Handle

Degree of protection IP55, IK08.
The extended rotary handle makes it possible to operate circuit breakers installed at the back of switchboards, from the switchboard front.
It maintains:
- Visibility of and access to trip-unit settings
- Suitability for isolation
- Indication of the three positions O (OFF), I (ON) and tripped.

Mechanical door locking when device closed
A standard feature of the extended rotary handle is a locking function, built into the shaft, that disables door opening when the circuit breaker is in the ON or tripped positions.
Door locking can be temporarily disabled with a tool to open the door without opening the circuit breaker. This operation is not possible if the handle is locked by a padlock.

Voluntary disabling of mechanical door locking
A modification to the handle, that can be carried out on site, completely disables door locking, including when a padlock is installed on the handle. The modification is reversible.

When a number of extended rotary handles are installed on a door, this disabling function is the means to ensure door locking by a single device.

Device and door padlocking
Padlocking locks the circuit breaker handle and disables door opening:
- Standard situation, in the OFF position, using 1 to 3 padlocks, shackle diameter 5 to 8 mm, not supplied
- With a simple modification, in the ON and OFF positions. Locking in the ON position does not prevent free circuit breaker tripping if a fault occurs.

In this case, the handle remains in the ON position after the circuit breaker tripping. Unlocking is required to go to the tripped then the OFF position.
If the door controls were modified to voluntarily disable door locking, padlocking does not lock the door, but does disable handle operation of the device.

Device locking using a keylock inside the switchboard
It is possible to install a Ronis or Profalux keylock (optional) on the base of the rotary handle to lock the device in the OFF position or in either the ON or OFF positions.

Accessory for device operation with the door open
When the device is equipped with an extended rotary handle, a control accessory mounted on the shaft makes it possible to operate the device with the door open.
- The device can be padlocked in the OFF position.
- The accessory complies with UL508.

Early-make or early-break contacts (optional)
The extended rotary handle offers the same possibilities with early-make and/or early-break contacts as the standard rotary handle.

Parts of the extended rotary handles
- A unit that replaces the front cover of the circuit breaker (secured by screws).
- An assembly (handle and front plate) on the door that is always secured in the same position, whether the circuit breaker is installed vertically or horizontally.
- An extension shaft that must be adjusted to the distance. The min/max distance between the back of circuit breaker and door is:
  - 185…600 mm for ComPacT NSX100 to 250 DC
  - 209…600 mm for ComPacT NSX400/630/1200 DC.

For withdrawable devices, the extended rotary handle is also available with a telescopic shaft to compensate for device disconnection. In this case, the min/max distances are:
- 248…600 mm for ComPacT NSX100 to 250 DC
- 272...600 mm for ComPacT NSX400/630/1200 DC.

Manual Source-Changeover Systems

An additional accessory interlocks two devices with rotary handles to create a source-changeover system. Closing of one device is possible only if the second is open.
This function is compatible with direct or extended rotary handles.
Up to three padlocks can be used to lock in the OFF or ON position.



PB104939.eps

ComPacT NSX DC with an extended rotary handle installed at the back of a switchboard, with the keylock option and key



PB104940.eps



PB113418.eps

Electrical and Mechanical Accessories
Motor Mechanism for ComPacT NSX DC

PB113341.eps



ComPacT NSX250 DC with motor mechanism

When equipped with a **motor mechanism** module, ComPacT NSX DC circuit breakers feature very high mechanical endurance as well as easy and reliable operation:
- All circuit breaker indications and information remain visible and accessible, including trip-unit settings and indications
- Suitability for isolation is maintained and padlocking remains possible
- Double insulation of the front face.

A specific motor mechanism is required for operation via the communication function [1]. This **communicating motor mechanism** must be connected to the BSCM module to receive the opening and closing orders. Operation is identical to that of a standard motor mechanism.

Applications
- Local motor-driven operation, centralized operation, automatic distribution control.
- Normal/standby source changeover or switching to a replacement source For availability and energy cost optimization.
- Load shedding and reconnection.
- Synchrocoupling.

Operation
The type of operation is selected using the manual/auto mode selection switch (**7**). A transparent, lead-seal cover controls access to the switch.

Automatic

When the switch is in the "auto" position, the ON/OFF (I/O) buttons and the charging lever on the mechanism are locked.
- Circuit breaker ON and OFF controlled by two impulse-type or maintained signals.
- Automatic spring charging following voluntary tripping (by MN or MX), with standard wiring.
- Mandatory manual reset following tripping due to an electrical fault.


Manual

When the switch is in the "manual" position, the ON/OFF (I/O) buttons may be used. A microswitch linked to the manual position can remote the information.
- Circuit breaker ON and OFF controlled by 2 pushbuttons I/O.
- Recharging of stored-energy system by pumping the lever 8 times.
- Padlocking in OFF position.

Installation and Connections
All installation (fixed, plug-in/withdrawable) and connection possibilities are maintained.

Motor mechanism module connections are made behind its front cover to integrated terminals, for cables up to 2.5 mm².

DB431699.eps

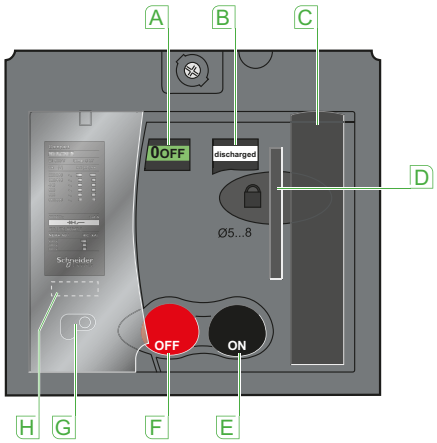

- A Position indicator (positive contact indication)
- B Spring status indicator (charged, discharged)
- C Manual spring-charging lever
- D Keylock device (optional)
  Locking device (OFF position), using 1 to 3 padlocks, shackle diameter 5 to 8 mm, not supplied
- E I (ON) pushbutton
- F O (OFF) pushbutton
- G Manual/auto mode selection switch. The position of this switch can be indicated remotely
- H Operation counter (ComPacT NSX400/630 DC)

Optional Accessories
- Keylock for locking in OFF position.
- Operations counter for the ComPacT NSX400/630 DC, indicating the number of ON/OFF cycles. Must be installed on the front of the motor mechanism module.


Characteristics

Motor mechanism			MT100 to MT630
Response time (ms)	opening		< 600
	closing		< 80
Operating frequency	cycles/minute max.		4
Control voltage (V)	DC		24/30 - 48/60 - 110/130 - 250
	AC 50/60 Hz		48 (50 Hz) - 110/130 - 220/240 - 380/440
Consumption [1]	DC (W)	opening	≤ 500
		closing	≤ 500
	AC (VA)	opening	≤ 500
		closing	≤ 500

[1] For NSX100 to 250 DC, the inrush current is 2 In for 10 ms.

Electrical Endurance

DB431700.eps

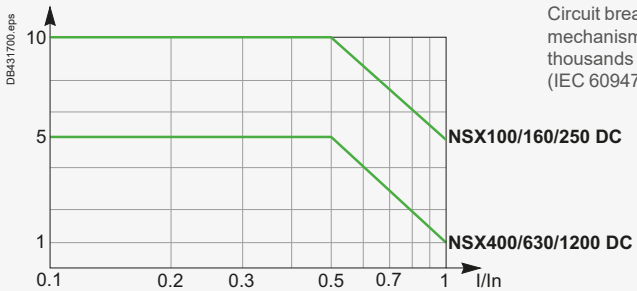

Circuit breaker + motor mechanism module, in thousands of operations (IEC 60947 2), at 440 V

[1] NSX100-250 DC only.

Electrical and Mechanical Accessories
Remote Tripping for ComPacT NSX DC

MX or MN voltage releases are used to trip the circuit breaker. They serve primarily for remote, emergency-off commands.
It is advised to test the system every six months.

MN Undervoltage Release

The MN release opens the circuit breaker when its supply voltage drops to a value below 35 % of its rated voltage Un.
Undervoltage tripping, combined with an emergency-off button, provides fail-safe tripping. The MN release is continuously supplied, i.e. if supply is interrupted:

- Either voluntarily, by the emergency-off button
- Or accidentally, through loss of power or faulty wiring, the release provokes opening of the circuit breaker.

Opening conditions

Circuit breaker tripping by an MN release meets the requirements of standard IEC 60947-2.

- Automatic opening of the circuit breaker is ensured when the continuous voltage supply to the release U ⩽ 0.35 x Un.
- If the supply voltage is between 0.35 and 0.7 Un, opening is possible, but not guaranteed. Above 0.7 Un, opening does not take place.

Closing conditions

If there is no supply to the MN release, it is impossible to close the circuit breaker, either manually or electrically. Closing is ensured when the voltage supply to the release U ⩾ 0.85 x Un. Below this threshold, closing is not ensured.

Characteristics

Power supply	V AC	50/60 Hz: 24 - 48 - 100/130 - 200/240
		50 Hz: 380/415 60 Hz: 208/277
	V DC	12 - 24 - 30 - 48 - 60 - 125 -250
Operating threshold	Opening	0.35 to 0.7 Un
	Closing	0.85 Un
Operating range		0.85 to 1.1 Un
Consumption (VA or W)		Pick-up: 10 - Hold: 5
Response time (ms)		50

Time-delay unit for an MN release

A time delay unit for the MN release eliminates the risk of nuisance tripping due to a transient voltage dip. For shorter micro-outages, a system of capacitors provides temporary supply to the MN at U > 0.7 to ensure non tripping.
The correspondence between MN releases and time-delay units is shown below.

Power supply	Corresponding MN release
Unit with fixed delay 200 ms	
48 V AC	48 V DC
220/240 V AC	250 V DC
Unit with adjustable delay ⩾ 200 ms	
48 - 60 V AC/DC	48 V DC
100 - 130 V AC/DC	125 V DC
220 - 250 V AC/DC	250 V DC

MX Shunt Release

The MX release opens the circuit breaker via an impulse-type (⩾ 20 ms) or maintained order.

Opening conditions

When the MX release is supplied, it automatically opens the circuit breaker. Opening is ensured for a voltage U ⩾ 0.7 x Un.

Characteristics

Power supply	V AC	50/60 Hz: 24 - 48 - 100/130 - 200/240
		50 Hz: 380/415 60 Hz: 208/277
	V DC	12 - 24 - 30 - 48 - 60 - 125 -250
Operating range		0.7 to 1.1 Un
Consumption (VA or W)		Pick-up: 10
Response time (ms)		50


Circuit Breaker Control by MN or MX

When the circuit breaker has been tripped by an MN or MX release, it must be reset before it can be reclosed.
MN or MX tripping takes priority over manual closing.
In the presence of a standing trip order, closing of the contacts, even temporary, is not possible.
Connection using wires up to 1.5 mm² to integrated terminal blocks.




PB120468.eps

MX or MN voltage release




DB431702.eps

Opening conditions of the MN release




DB431703.eps

Closing conditions of the MN release

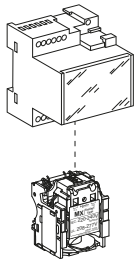


MN release with a time-delay unit

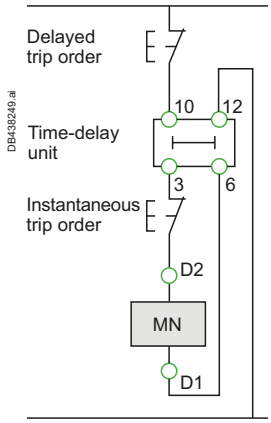

DB431705.eps
DB438249.ai

Wiring diagram for emergency-off function with MN + time-delay unit




DB431706.eps

Opening conditions of the MX release


Note: Circuit breaker opening using an MN or MX release must be reserved for safety functions. This type of tripping increases wear on the opening mechanism. Repeated use reduces the mechanical endurance of the circuit breaker by 50 %.

Electrical and Mechanical Accessories
Locks for ComPacT NSX DC

DB437950.ai

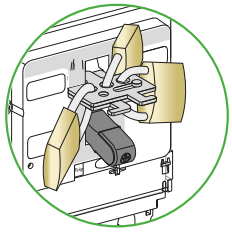

DB437951.ai

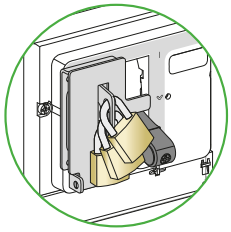


Toggle locking using padlocks and an accessory:

Removable device

Fixed device attached to the case [3]

DB437952.ai

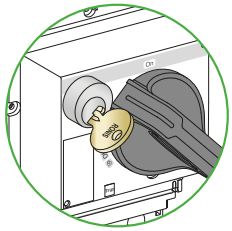


Rotary-handle locking using a keylock

Locking in the OFF position guarantees isolation as per IEC 60947-2. Padlocking systems can receive up to three padlocks with shackle diameters ranging from 5 to 8 mm (padlocks not supplied). Certain locking systems require an additional accessory.


Control device		Function	Means	Required accessories
Toggle		Lock in OFF position	Padlock	Removable device
		Lock in OFF or ON position	Padlock	Fixed device
Direct rotary handle	Standard	Lock in ■ OFF position ■ OFF or ON position [1]	Padlock	-
			Keylock	Locking device + keylock
	MCC	Lock in ■ OFF position ■ OFF or ON position [1]	Padlock	-
	CNOMO	Lock in ■ OFF position ■ OFF or ON position [1]	Padlock	-
Extended rotary handle		Lock in ■ OFF position ■ OFF or ON position [1] with door opening prevented [2]	Padlock	-
		Lock in OFF position	Padlock	UL508 control accessory
		■ OFF or ON position [1] inside the switchboard	Keylock	Locking device + keylock
Motor mechanism		Lock in OFF position remote operation disabled	Padlock	-
			Keylock	Locking device + keylock
Withdrawable circuit breaker		Lock in ■ Disconnected position	Padlock	-
			Keylock	Locking device + keylock
		■ Connected position	Keylock	Locking device + keylock

[1] Following a simple modification of the mechanism.
[2] Unless door locking has been voluntarily disabled.
[3] Only for 3-4P.

DB437953.ai

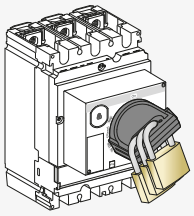


DB437954.ai

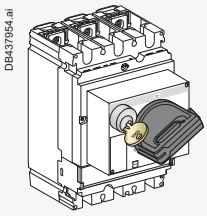


Rotary-handle locking using a padlock or a keylock

DB431712.eps

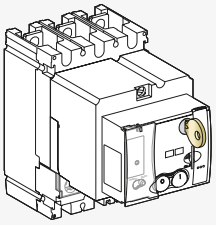


DB431713.eps

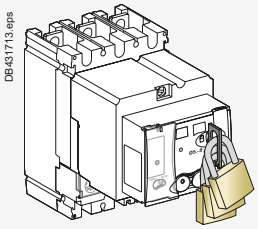


Motor mechanism locking using a padlock or a keylock

DB437955.ai

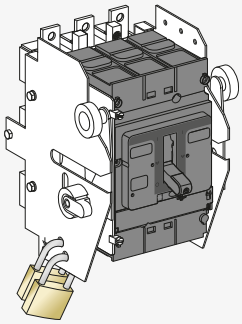

DB437956.ai

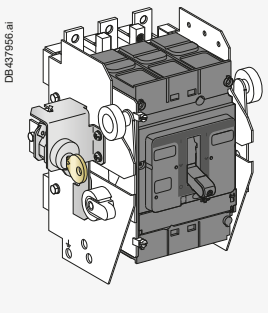


Chassis locking in the connected position

Electrical and Mechanical Accessories
Sealing Accessories for ComPacT NSX DC

Outgoing-Circuit Identification


ComPacT NSX100 to 630 DC can be equipped with label holders supplied in sets of ten (cat. no. LV429226).
They are compatible with escutcheons.

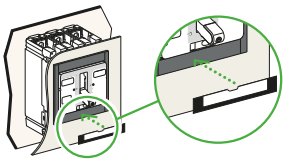

Identification accessories

Sealing Accessories











Sealing accessories are available. Each bag of accessories contains all the parts required for the types of sealing indicated below.
A bag contains:
- 6 sealing accessories
- 6 lead seals
- 0.5 m of wire
- 2 screws.

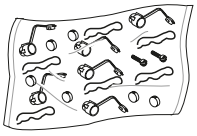

Sealing accessories

A

Types of Seals and Corresponding Functions

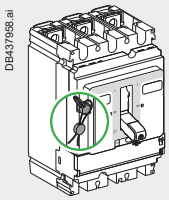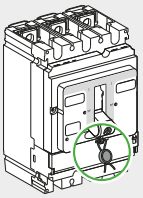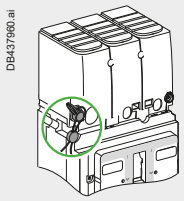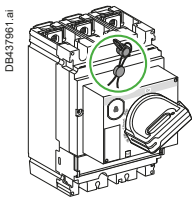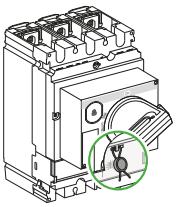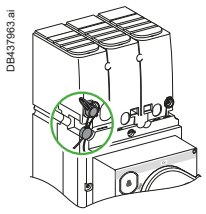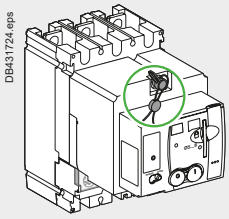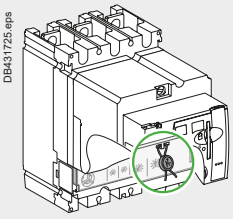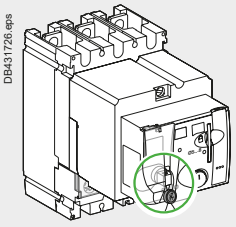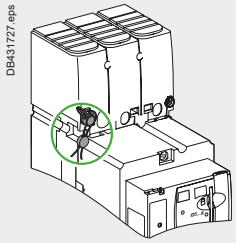Toggle control				
Rotary handle				
Motor mechanism				
Types of seals	**Front-cover fixing screw**	**Trip-unit transparent cover**	**Motor mechanism transparent cover**	**Terminal-shield fixing screw**
Protected operations	■ Front removal ■ Access to auxiliaries ■ Trip-unit removal.	■ Modification of settings ■ Access to test connector.	■ access to manual/auto mode selection switch: depending on its position, manual [1] or automatic operation is not possible. [1] In this case, local operation is not possible.	■ access to power connections (protection against direct contact).

Electrical and Mechanical Accessories

Escutcheons and Protection Collars for ComPacT NSX DC

Escutcheons are an optional feature mounted on the switchboard door. They increase the degree of protection to IP40, IK07. Protection collars maintain the degree of protection, whatever the position of the device (connected, disconnected).

A

PB104942.eps



IP30 escutcheon

PB104938.eps



IP30 escutcheon with access to the trip unit

IP30 or IP40 Escutcheons for Fixed Devices

IP30

The three types are glued to the cut-out in the front door of the switchboard:


- Escutcheon for all control types (toggle, rotary handle or motor mechanism):
  - Without access to the trip unit
  - With access to the trip unit.

IP40


The four types, with a gasket, are screwed to the door cut-out:

- Three escutcheons identical to the previous, but IP40
- A wide model for Vigi module that can be combined with the above.

DB437964.ai

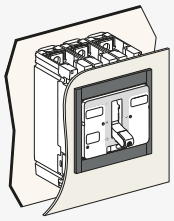

DB437965.ai

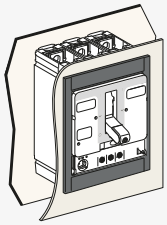

Escutcheon for toggle without and with access to the trip unit

A


IP40 Escutcheons for Withdrawable Devices

IP40 for Withdrawable Devices

The two types, with a gasket, are screwed to the door cut-out:


- For rotary handle or motor mechanism: standard IP40 escutcheon
- For toggle with extension: standard escutcheon + collar for withdrawal.

DB437966.ai

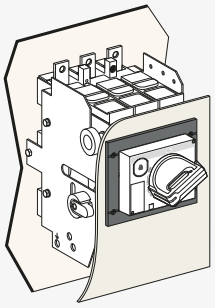


Standard escutcheon with rotary handle

DB431731.eps

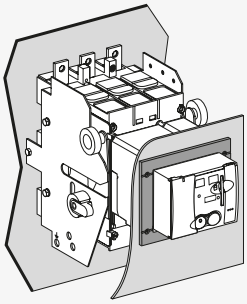

Standard escutcheon for motor mechanism

DB431732.eps

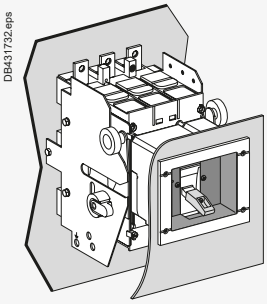

Standard escutcheon with collar for withdrawal, for toggle

IP43 Toggle Cover

Available only for devices with toggles. Fits over toggle and front cover of the device.

- Mounted on the front of the circuit breaker.
- Degree of protection IP43, IK07.

DB112218.eps



Toggle cover

Retrofit Front Covers

These replacement front covers make it possible to install NSX DC devices in existing switchboards containing NSX devices by installing the NSX-type retrofit covers on the NSX DC devices.

- NSX100 to 250 DC cover.
- NSX400/630 DC cover.

PB103777-36.eps



Escutcheon with collar for toggle

PB103775-40.eps



Toggle cover

PB103820_35.eps



NSX retrofit front cover

TransferPacT Source-Changeover Systems
Presentation

PB191613-50.eps



65587-117.eps



Some installations use two supply sources to counter the temporary loss of the main supply.
A source-changeover system is required to safely switch between the two sources.
The replacement source can be a generator set or another network.

Manual Source-Changeover System or MTSE (Manual Transfer Switching Equipment)

The simplest way to switch the load. It is controlled manually by an operator.
The time required to switch from the S1 source to S2 source is variable.

System

2 or 3 mechanically interlocked circuit breakers or 2 switch-disconnectors.

Applications

Small commercial buildings and small and medium industrial activities where the need for continuity of service is significant but not a priority.

Automatic Source-Changeover System or ATSE (Automatic Transfer Switching Equipment)

An automatic controller may be added to a remote operated source-changeover system. It is possible to automatically control source transfer according to programmed (dedicated controllers) or programmable (PLC) operating modes. These solutions ensure optimum energy management.
The time required to switch from the S1 source to S2 source is fixed.

System

2 or 3 circuit breakers linked by an electrical interlocking system. A mechanical interlocking system protects also against incorrect manual operations, with an automatic control system (dedicated controllers).

Applications

Large infrastructures, industry, critical buildings & process where the continuity of service is a priority.

> TransferPacT
(Source-changeover systems)
LVPED216028EN

Interlocking of Two or Three Toggle-Controlled Devices

Interlocking system

Two devices can be interlocked using this system. Two identical interlocking systems can be used to interlock three devices installed side by side.

Authorized positions:

- One device closed (ON), the others open (OFF)
- All devices open (OFF).

The system is locked using one or two padlocks (shackle diameter 5 to 8 mm).

This system can be expanded to more than three devices.

There are two interlocking-system models:

- One for ComPacT INS/INV
- One for ComPacT NSX100 to NSX250
- One for ComPacT NSX400 to NSX630.

Combinations of Normal and Replacement devices

All toggle-controlled fixed or plug-in ComPacT NSX100 to NSX630 circuit breakers and switch-disconnectors of the same frame size can be interlocked. The devices must be either all fixed or all plug-in versions.



PB113435.eps

Interlocking of two or three toggle-controlled devices

Interlocking of Two Devices with Rotary Handles

Interlocking system

Interlocking involves padlocking the rotary handles on two devices which may be either circuit breakers or switch-disconnectors.

Authorized positions:

- One device closed (ON), the other open (OFF)
- Both devices open (OFF).

The system is locked using up to three padlocks (shackle diameter 5 to 8 mm).

There are two interlocking-system models:

- One for ComPacT INS/INV
- One for ComPacT NSX100 to NSX250
- One for ComPacT NSX400 to NSX630.

Combinations of Normal and Replacement devices

All rotary-handle fixed or plug-in ComPacT NSX100 to NSX630 circuit breakers and switch-disconnectors of the same frame size can be interlocked. The devices must be either all fixed or all plug-in versions.



PB113418.eps

Interlocking of two devices with rotary handles

Interlocking of Two Devices on a Base Plate

Interlocking system

A base plate designed for two ComPacT NSX devices can be installed horizontally or vertically on a mounting rail. Interlocking is carried out on the base plate by a mechanism located behind the devices. In this way, access to the device controls and trip units is not blocked.


Combinations of Normal and Replacement devices

All rotary-handle and toggle-controlled ComPacT NSX100 to NSX630 circuit breakers and switch-disconnectors can be interlocked. Devices must be either all fixed or all plug-in versions, with or without earth-leakage protection or measurement modules.

An adaptation kit is required to interlock:

- Two plug-in devices
- A ComPacT NSX100 to NSX250 with an NSX400 to NSX630.

Connection to the downstream installation can be made easier using a coupling accessory (see next page).

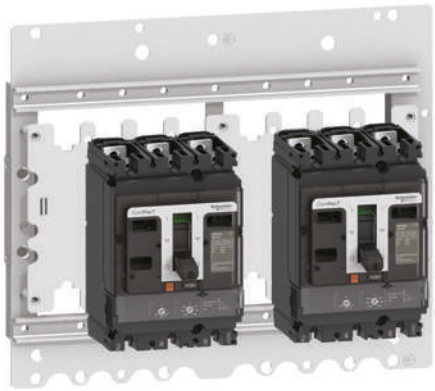

PB113417.eps

Interlocking on a base plate

Interlocking of a Number of Devices Using Keylocks (Captive Keys)

Interlocking using keylocks is very simple and makes it possible to interlock two or more devices that are physically distant or that have very different characteristics, for example medium-voltage and low-voltage devices or a ComPacT NSX100 to NSX630 switch-disconnector.

Interlocking system

Each device is equipped with an identical keylock and the key is captive on the closed (ON) device. A single key is available for all devices. It is necessary to first open (OFF position) the device with the key before the key can be withdrawn and used to close another device.

A system of wall-mounted captive key boxes makes a large number of combinations possible between many devices.

Combinations of Normal and Replacement devices

All rotary-handle ComPacT NSX100 to NSX630 circuit breakers and switch-disconnectors can be interlocked between each other or with any other device equipped with the same type of keylock.



PB113828.eps

Interlocking with keylocks

Circuit Breaker Characteristics
ComPacT NSX80 TM DC PV to NSX500 TM DC PV

PB110837_58.eps



ComPacT NSX200 TM DC PV

PB110846.eps



Connection and insulation accessories

ComPacT NSX DC PV circuit breaker			
Number of poles			
Electrical Characteristics As Per IEC 60947-2 and EN 60947-2			
Rated current (A) (free air + no venting)	In	40 °C heatsink standard-IP4X	
Altitude	m	2000	
Rated insulation voltage (V)	Ui		
Rated impulse withstand voltage (kV)	Uimp		
Rated operational voltage (V)	Ue	DC	
Type of circuit breaker			
Ultimate breaking capacity (L/R 2 ms)	Icu (kA rms)	DC	1000 V (4P series)
Service breaking capacity	Ics	% Icu	
Suitability for isolation			
Selectivity category (Utilization category)			
Pollution degree			
Durability			
Endurance (C-O cycles)	Mechanical		
	Electrical (In)	1000 V	
Protection			
Overload/short-circuit protection	Thermal magnetic		
Installation and connections			
Control	Manual	Toggle	
	Motor mechanism		
Connections	Fixed	Front connection	
		ILong rear connection	
	Pug-in (on base)	Front connection	
		Rear connection	
	Withdrawable (on chassis)	Front connection	
		Rear connection	
Additional measurement, indication and control auxiliaries			
Indication contacts	OF	Auxiliary contact	
	SD, SDE	Trip, fault-trip	
Voltage releases	MX, MN	Shunt trip/undervoltage release	
Installation			
Accessories	Crimp lugs/bare cable connector		
	Terminal extensions and spreaders		
	Escutcheons		
	Terminal shields and interphase barriers		
	Din rail adapter		
Dimensions and weight			
Dimensions (mm) W x H x D (w/o series connection)			4P
Weight (kg)	Fixed front connection		4P

[1] Double earth fault:
PV systems are either insulated from the earth or one pole is earthed through an overcurrent protection. In both set-ups, therefore, there can be a ground fault in which current leaks to the ground. If this fault is not cleared, it may spread to the healthy pole and give rise to a hazardous situation where fire could break out. Even though double insulation makes such an eventuality unlikely, it deserves full attention.
For the two following reasons the double fault situation shall be absolutely avoided: insulation monitoring devices or overcurrent protection in earthed system shall detect first fault and staff shall look after the first fault and clear it with no delay.

- The fault level could be low (e.g. two insulation faults or a low short-circuit capability of the generator in weak sunlight) and below the tripping value of overcurrent protection (circuit breaker or fuses). However, a DC arc fault does not extinguish itself, even when the current is low. It could be a serious hazard, particularly for PV modules on buildings.
- Circuit breakers and switches used in PV systems are designed to break the rated current or fault current with all poles at open-circuit maximum voltage ($U_{OC\,MAX}$). To break the current when $U_{OC\,MAX}$ is equal to 1000 V, four poles in series (two poles in series for each polarity) are required. In double earth fault situations, the circuit breaker or switches must break the current at full voltage with only two poles in series. Such switchgear is not designed for that purpose and could sustain irremediable damage if used to break the current in a double ground fault situation.

The ideal solution is to prevent double ground faults arising. Insulation monitoring devices or overcurrent protection in grounded systems detect the first fault. However, although the insulation fault monitoring system usually stops the inverter, the fault is still present. Staff must locate and clear it without delay. In large generators with sub-arrays protected by circuit breakers, it is highly advisable to disconnect each array when that first fault has been detected but not cleared within the next few hours.

Circuit Breaker Characteristics
ComPacT NSX80 TM DC PV to NSX500 TM DC PV

	NSX80 TM DC PV	NSX125 TM DC PV	NSX160 TM DC PV	NSX200 TM DC PV	NSX250 TM DC PV	NSX320 TM DC PV	NSX400 TM DC PV	NSX500 TM DC PV
	4	4	4	4	4	4	4	4
	80	125	160	200	250	320	400	500
	◉	◉	◉	◉	◉	◉	◉	◉
	1000	1000	1000	1000	1000	1000	1000	1000
	8	8	8	8	8	8	8	8
	1000	1000	1000	1000	1000	1000	1000	1000
	10 [1]	10 [1]	10 [1]	10 [1]	10 [1]	10 [1]	10 [1]	10 [1]
	50 %	50 %	50 %	50 %	100 %	100 %	100 %	100 %
	◉	◉	◉	◉	◉	◉	◉	◉
	A	A	A	A	A	A	A	A
	3	3	3	3	3	3	3	3
	10000	10000	10000	10000	5000	5000	5000	5000
	1500	1500	1000	1000	1000	1000	1000	1000
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	-	-	-	-	-	-	-	-
	-	-	-	-	-	-	-	-
	-	-	-	-	-	-	-	-
	-	-	-	-	-	-	-	-
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	-	-	-	-
	140 x 161 x 86	140 x 161 x 86	140 x 161 x 86	140 x 161 x 86	225 x 185 x 110	225 x 185 x 110	225 x 185 x 110	225 x 185 x 110
	2.8	2.8	2.8	2.8	8.1	8.1	8.1	8.1

Trip unit for ComPacT NSX DC PV non interchangeable [2]

Type of trip unit		TM 80 DC PV	TM 125 DC PV	TM 160 DC PV	TM 200 DC PV	TM 250 DC PV	TM 320 DC PV	TM400 DC PV	TM500 DC PV
Rating	In (A) at 40 °C	80	125	160	200	250	320	400	500
Overload protection (thermal)									
Tripping threshold	Ir (A) at 40 °C	Adjustable 0.7 to 1 x In							
Protection against short-circuits (magnetic)									
Pick-up	Ii (A)	Fixed 800 A	Fixed 1250 A		Adjustable 5 to 10 In				

[2] See tripping curves page E-14 and E-15.

Circuit Breaker Characteristics
ComPacT NSX100 TM DC EP to NSX500 TM DC EP

C25F4TM250D3-1_L50.eps



ComPacT NSX250 TM DC EP

C50F4TM500D3-1_L50.eps



ComPacT NSX500 TM DC EP

ComPacT NSX DC EP circuit breaker				NSX100 TM DC EP
Frame				250
Number of poles				4
Electrical Characteristics As Per IEC 60947-2 and EN 60947-2				
Rated current (A) (free air + no venting)	In	40 °C heatsink standard-IP4X 50 °C		100
Altitude	m	2000		◉
Rated insulation voltage (V)	Ui			1600
Rated impulse withstand voltage (kV)	Uimp			8
Rated operational voltage (V)	Ue	DC		1500
Type of circuit breaker				
Ultimate breaking capacity	Icu (kA rms)	DC	1100 V (4P series)	50 [1]
Service breaking capacity	Ics	% Icu		40 %
Ultimate breaking capacity	Icu (kA rms)	DC	1500 V (4P series)	20 [1]
Service breaking capacity	Ics	% Icu		100 %
Ultimate breaking capacity (L/R 2 ms)	Icu (kA rms)	DC	1100 V (4P series)	50 [1]
Service breaking capacity	Ics	% Icu		40 %
Ultimate breaking capacity (L/R 2 ms)	Icu (kA rms)	DC	1500 V (4P series)	20 [1]
Service breaking capacity	Ics	% Icu		100 %
Suitability for isolation				◉
Selectivity category (Utilization category)				A
Pollution degree				3
Durability				
Endurance (C-O cycles)	Mechanical			10000
	Electrical (In)	1500 V		4500
Protection				
Overload/short-circuit protection	Thermal magnetic			◉
Installation and connections				
Control	Manual	toggle		◉
	Motor mechanism			◉
Connections	Fixed	Front connection		◉
		Long rear connection		◉
	Plug-in (on base)	Front connection		-
		Rear connection		-
	Withdrawable (on chassis)	Front connection		-
		Rear connection		-
Additional measurement, indication and control auxiliaries				
Indication contacts	OF	Auxiliary contact		◉
	SD, SDE	Trip, fault-trip		◉
Voltage releases	MX, MN	Shunt trip/undervoltage release		◉
Installation				
Accessories	Crimp lugs/bare cable connector			◉
	Terminal extensions and spreaders			◉
	Escutcheons			◉
	Terminal shields and interphase barriers			◉
	Din rail adapter			◉
Dimensions and weight				
Dimensions (mm) W x H x D (w/o series connection)			4P	140 x 161 x 86
Weight (kg)	Fixed front connection		4P	2.8

[1] Double earth fault:
PV systems are either insulated from the earth or one pole is earthed through an overcurrent protection. In both set-ups, therefore, there can be a ground fault in which current leaks to the ground. If this fault is not cleared, it may spread to the healthy pole and give rise to a hazardous situation where fire could break out. Even though double insulation makes such an eventuality unlikely, it deserves full attention.
For the two following reasons the double fault situation shall be absolutely avoided: insulation monitoring devices or overcurrent protection in earthed system shall detect first fault and staff shall look after the first fault and clear it with no delay.
- The fault level could be low (e.g. two insulation faults or a low short-circuit capability of the generator in weak sunlight) and below the tripping value of overcurrent protection (circuit breaker or fuses). However, a DC arc fault does not extinguish itself, even when the current is low. It could be a serious hazard, particularly for PV modules on buildings.

Circuit Breaker Characteristics

ComPacT NSX100 TM DC EP to NSX500 TM DC EP

	NSX125 TM DC EP	NSX160 TM DC EP	NSX200 TM DC EP	NSX250 TM DC EP	NSX250 TM DC EP	NSX320 TM DC EP	NSX400 TM DC EP	NSX500 TM DC EP
	250	250	250	250	500	500	500	500
	4	4	4	4	4	4	4	4
	125	160	200	250	250	320	400	500
	◉	◉	◉	◉	◉	◉	◉	◉
	1600	1600	1600	1600	1600	1600	1600	1600
	8	8	8	8	8	8	8	8
	1500	1500	1500	1500	1500	1500	1500	1500
	50 [1]	50 [1]	50 [1]	50 [1]	50 [1]	50 [1]	50 [1]	50 [1]
	40 %	40 %	40 %	40 %	100 %	100 %	100 %	100 %
	20 [1]	20 [1]	20 [1]	20 [1]	50 [1]	50 [1]	50 [1]	50 [1]
	100 %	100 %	100 %	100 %	40 %	40 %	40 %	40 %
	50 [1]	50 [1]	50 [1]	50 [1]	50 [1]	50 [1]	50 [1]	50 [1]
	40 %	40 %	40 %	40 %	100 %	100 %	100 %	100 %
	20 [1]	20 [1]	20 [1]	20 [1]	50 [1]	50 [1]	50 [1]	50 [1]
	100 %	100 %	100 %	100 %	100 %	100 %	100 %	100 %
	◉	◉	◉	◉	◉	◉	◉	◉
	A	A	A	A	A	A	A	A
	3	3	3	3	3	3	3	3
	10000	10000	10000	10000	8000	8000	8000	8000
	4500	4500	4500	4500	3000	3000	3000	3000
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	-	-	-	-
	-	-	-	-	-	-	-	-
	-	-	-	-	-	-	-	-
	-	-	-	-	-	-	-	-
	-	-	-	-	-	-	-	-
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	-	-	-	-
	140 x 161 x 86	140 x 161 x 86	140 x 161 x 86	140 x 161 x 86	225 x 185 x 110	225 x 185 x 110	225 x 185 x 110	225 x 185 x 110
	2.8	2.8	2.8	2.8	8.1	8.1	8.1	8.1

■ Circuit breakers and switches used in PV systems are designed to break the rated current or fault current with all poles at open-circuit maximum voltage ($U_{OC\ MAX}$). To break the current when $U_{OC\ MAX}$ is equal to 1000 V, four poles in series (two poles in series for each polarity) are required. In double earth fault situations, the circuit breaker or switches must break the current at full voltage with only two poles in series. Such switchgear is not designed for that purpose and could sustain irremediable damage if used to break the current in a double ground fault situation.

The ideal solution is to prevent double ground faults arising. Insulation monitoring devices or overcurrent protection in grounded systems detect the first fault. However, although the insulation fault monitoring system usually stops the inverter, the fault is still present. Staff must locate and clear it without delay. In large generators with sub-arrays protected by circuit breakers, it is highly advisable to disconnect each array when that first fault has been detected but not cleared within the next few hours.

Switch-Disconnectors Characteristics
ComPacT NSX100 NA DC PV to NSX500 NA DC PV

19_C254250D3S.eps



ComPacT NSX200 NA DC PV

PB110847.eps



ComPacT NSX200 NA DC PV

ComPacT NSX DC PV switch-disconnector			
Number of poles			
Electrical Characteristics As Per IEC 60947-3			
Rated current (A) (free air + no venting)	In	40 °C	
Altitude	m	2000	
Rated insulation voltage (V)	Ui		
Rated impulse withstand voltage (kV)	Uimp		
Rated operational voltage (V)	Ue	DC	
Type of circuit breaker			
Rated short circuit withstand current (kA rms)	Icw/Icm	t = 1 s	
Rated conditionnal short-circuit current	Iq	kA	
	With back-up fuse	A gPV	
Rated conditionnal short-circuit current	Iq with circuit breaker	kA with MCCB	
Utilization category			
Suitability for isolation			
Pollution degree			
Durability			
Endurance (C-O cycles)	Mechanical		
	Electrical (In)	1000 V	
Installation and connections			
Control	Manual	Toggle	
		Direct or extended rotary handle	
	Motor mechanism		
Connections	Fixed	Front connection	
		Long rear connection	
	Plug-in (on base)	Front connection	
		Rear connection	
	Withdrawable (on chassis)	Front connection	
		Rear connection	
Additional measurement, indication and control auxiliaries			
Indication contacts	OF	Auxiliary contact	
	SD, SDE	Trip, fault-trip	
Voltage releases	MX, MN	Shunt trip/undervoltage release	
Installation			
Accessories	Crimp lugs/bare cable connector		
	Terminal extensions and spreaders		
	Escutcheons		
	Terminal shields and interphase barriers		
	Din rail adapter		
Dimensions and weight			
Dimensions (mm) W x H x D (w/o series connection)			4P
Weight (kg) (w/o series connection)			4P

[1] Double earth fault:
PV systems are either insulated from the earth or one pole is earthed through an overcurrent protection. In both set-ups, therefore, there can be a ground fault in which current leaks to the ground. If this fault is not cleared, it may spread to the healthy pole and give rise to a hazardous situation where fire could break out. Even though double insulation makes such an eventuality unlikely, it deserves full attention.
For the two following reasons the double fault situation shall be absolutely avoided: insulation monitoring devices or overcurrent protection in earthed system shall detect first fault and staff shall look after the first fault and clear it with no delay.

- The fault level could be low (e.g. two insulation faults or a low short-circuit capability of the generator in weak sunlight) and below the tripping value of overcurrent protection (circuit breaker or fuses). However, a DC arc fault does not extinguish itself, even when the current is low. It could be a serious hazard, particularly for PV modules on buildings.
- Circuit breakers and switches used in PV systems are designed to break the rated current or fault current with all poles at open-circuit maximum voltage ($U_{OC\,MAX}$). To break the current when $U_{OC\,MAX}$ is equal to 1000 V, four poles in series (two poles in series for each polarity) are required. In double earth fault situations, the circuit breaker or switches must break the current at full voltage with only two poles in series. Such switchgear is not designed for that purpose and could sustain irremediable damage if used to break the current in a double ground fault situation.

The ideal solution is to prevent double ground faults arising. Insulation monitoring devices or overcurrent protection in grounded systems detect the first fault. However, although the insulation fault monitoring system usually stops the inverter, the fault is still present. Staff must locate and clear it without delay. In large generators with sub-arrays protected by circuit breakers, it is highly advisable to disconnect each array when that first fault has been detected but not cleared within the next few hours.

Switch-Disconnectors Characteristics
ComPacT NSX100 NA DC PV to NSX500 NA DC PV

	NSX100 NA DC PV	NSX160 NA DC PV	NSX200 NA DC PV	NSX400 NA DC PV	NSX500 NA DC PV
	4	4	4	4	4
	100 heatsink - IP4X	160 heatsink - IP4X	200 heatsink - IP4X	400 heatsink - IP3X	500 heatsink - IP3X
	◉	◉	◉	◉	◉
	1000 [1]	1000 [1]	1000 [1]	1000 [1]	1000 [1]
	8	8	8	8	8
	1000	1000	1000	1000	1000
	2.5	2.5	2.5	6	6
	10	10	10	10	10
	100	160	200	400	500
	10 NSX125 TM DC PV	10 NSX160-200 TM DC PV	10 NSX200 TM DC PV	-	-
	DC22-A	DC22-A	DC22-A	DC22-A	DC22-A
	◉	◉	◉	◉	◉
	3	3	3	3	3
	10000	10000	10000	5000	5000
	1500	1000	1000	1000	1000
	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉
	-	-	-	-	-
	-	-	-	-	-
	-	-	-	-	-
	-	-	-	-	-
	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉
	■	◉	◉	◉	◉
	■	◉	◉	◉	◉
	■	◉	◉	◉	◉
	■	◉	◉	◉	◉
	■	◉	◉	-	-
	140 x 161 x 86	140 x 161 x 86	140 x 161 x 86	185 x 255 x 110	185 x 255 x 110
	2.8	2.8	2.8	8.1	8.1

Switch-Disconnectors Characteristics
ComPacT NSX630b NA DC PV to NSX1600 NA DC PV

PB112180_53.eps



ComPacT NSX1600 NA DC PV

ComPacT NSX DC PV switch-disconnector

Number of poles		
Electrical Characteristics As Per IEC 60947-3		
Rated current (A) (free air + no venting)	In	40 °C
Altitude	m	2000
Rated insulation voltage (V)	Ui	
Rated impulse withstand voltage (kV)	Uimp	
Rated operational voltage (V)	Ue	DC
Type of circuit breaker		
Rated short circuit withstand current (kA rms)	Icw/Icm	t = 1 s
Rated conditionnal short-circuit current	Iq	kA
	With back-up fuse	A gPV
Rated conditionnal short-circuit current	Iq with circuit breaker	
Utilization category		
Suitability for isolation		
Pollution degree		
Durability		
Endurance (C-O cycles)	Mechanical	
	Electrical (In)	1000 V
Installation and connections		
Control	Manual	
	Motor mechanism	
Connections	Fixed	Front connection
		Rear connection
Additional measurement, indication and control auxiliaries		
Indication contacts	OF	Auxiliary contact
Voltage releases	MX, MN	Shunt trip/undervoltage release
Installation		
Accessories	Terminal extensions	
	Escutcheons	
	Terminal shields and interphase barriers	

Dimensions and weight	
Dimensions (mm) W x H x D (w/o series connection)	4P
Weight (kg) (w/o series connection)	4P

[1] Double earth fault:
PV systems are either insulated from the earth or one pole is earthed through an overcurrent protection. In both set-ups, therefore, there can be a ground fault in which current leaks to the ground. If this fault is not cleared, it may spread to the healthy pole and give rise to a hazardous situation where fire could break out. Even though double insulation makes such an eventuality unlikely, it deserves full attention.
For the two following reasons the double fault situation shall be absolutely avoided: insulation monitoring devices or overcurrent protection in earthed system shall detect first fault and staff shall look after the first fault and clear it with no delay.

- The fault level could be low (e.g. two insulation faults or a low short-circuit capability of the generator in weak sunlight) and below the tripping value of overcurrent protection (circuit breaker or fuses). However, a DC arc fault does not extinguish itself, even when the current is low. It could be a serious hazard, particularly for PV modules on buildings.
- Circuit breakers and switches used in PV systems are designed to break the rated current or fault current with all poles at open-circuit maximum voltage ($U_{OC\,MAX}$). To break the current when $U_{OC\,MAX}$ is equal to 1000 V, four poles in series (two poles in series for each polarity) are required. In double earth fault situations, the circuit breaker or switches must break the current at full voltage with only two poles in series. Such switchgear is not designed for that purpose and could sustain irremediable damage if used to break the current in a double ground fault situation.

The ideal solution is to prevent double ground faults arising. Insulation monitoring devices or overcurrent protection in grounded systems detect the first fault. However, although the insulation fault monitoring system usually stops the inverter, the fault is still present. Staff must locate and clear it without delay. In large generators with sub-arrays protected by circuit breakers, it is highly advisable to disconnect each array when that first fault has been detected but not cleared within the next few hours.

Switch-Disconnectors Characteristics
ComPacT NSX630b NA DC PV to NSX1600 NA DC PV

	NSX630b NA DC PV	NSX800b NA DC PV	NSX1000 NA DC PV	NSX1250 NA DC PV	NSX1600 NA DC PV
	4	4	4	4	4
	630 heatsink - IP2X	800 heatsink - IP2X	1000 heatsink - IP2X	1250 heatsink - IP2X	1500 heatsink - IP0
	◉	◉	◉	◉	◉
	1000 [1]	1000 [1]	1000 [1]	1000 [1]	1000 [1]
	8	8	8	8	8
	1000	1000	1000	1000	1000
	20	20	20	20	20
	10	10	10	10	10
	N/A	N/A	N/A	N/A	N/A
	10	10	10	10	10
	DC22-A	DC22-A	DC22-A	DC22-B	DC22-B
	◉	◉	◉	◉	◉
	3	3	3	3	3
	10000	10000	10000	10000	10000
	1000	500	500	100	100
	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉
	280 x 327 x 182	280 x 327 x 182	280 x 327x 182	280 x 327 x 182	280 x 327 x 182
	18	18	18	18	18

Switch-Disconnectors Characteristics
ComPacT NSX100 NA DC EP to NSX630 NA DC EP

C254260D3S-1_L32.eps



ComPacT NSX250 NA DC EP

C634630D3S-1_L50.eps



ComPacT NSX630 NA DC EP

ComPacT NSX DC EP switch-disconnector

Frame		
Number of poles		
Electrical Characteristics As Per IEC 60947-3		
Rated current (A) (free air + no venting)	In	40 °C
		60 °C
Altitude	m	2000
Rated insulation voltage (V)	Ui	
Rated impulse withstand voltage (kV)	Uimp	
Rated operational voltage (V)	Ue	DC
Type of circuit breaker		
Rated short circuit withstand current (kA rms)	Icw/Icm	t = 1 s
Utilization category		
Suitability for isolation		
Pollution degree		
Durability		
Endurance (C-O cycles)	Mechanical	
	Electrical (In)	1500 V
Installation and connections		
Control	Manual	Toggle
		Direct or extended rotary handle
	Motor mechanism	
Connections	Fixed	Front connection
		Long rear connection
	Plug-in (on base)	Front connection
		Rear connection
	Withdrawable (on chassis)	Front connection
		Rear connection
Additional measurement, indication and control auxiliaries		
Indication contacts	OF	Auxiliary contact
	SD, SDE	Trip, faut-trip
Voltage releases	MX, MN	Shunt trip/undervoltage release
Installation		
Accessories	Crimp lugs/bare cable connector	
	Terminal extensions and spreaders	
	Escutcheons	
	Terminal shields and interphase barriers	
	Din rail adapter	

Dimensions and weight	
Dimensions (mm) W x H x D (w/o series connection)	4P
Weight (kg) (w/o series connection)	4P

[1] Double earth fault:
PV systems are either insulated from the earth or one pole is earthed through an overcurrent protection. In both set-ups, therefore, there can be a ground fault in which current leaks to the ground. If this fault is not cleared, it may spread to the healthy pole and give rise to a hazardous situation where fire could break out. Even though double insulation makes such an eventuality unlikely, it deserves full attention.
For the two following reasons the double fault situation shall be absolutely avoided: insulation monitoring devices or overcurrent protection in earthed system shall detect first fault and staff shall look after the first fault and clear it with no delay.

- The fault level could be low (e.g. two insulation faults or a low short-circuit capability of the generator in weak sunlight) and below the tripping value of overcurrent protection (circuit breaker or fuses). However, a DC arc fault does not extinguish itself, even when the current is low. It could be a serious hazard, particularly for PV modules on buildings.

Switch-Disconnectors Characteristics
ComPacT NSX100 NA DC EP to NSX630 NA DC EP

	NSX100 NA DC EP	NSX160 NA DC EP	NSX200 NA DC EP	NSX250 NA DC EP	NSX320 NA DC EP	NSX400 NA DC EP	NSX500 NA DC EP	NSX630 NA DC EP
	250	250	250	250	630	630	630	630
	4	4	4	4	4	4	4	4
	100 heatsink - IP4X	160 heatsink - IP4X	200 heatsink - IP4X	250 heatsink - IP4X	320 heatsink - IP3X	400 heatsink - IP3X	500 heatsink - IP3X	500 heatsink - IP3X
	100 IP0	160 IP0	200 IP0	250 [2] IP0	320 IP0	400 IP0	500 IP0	630 [3] IP0
	◉	◉	◉	◉	◉	◉	◉	◉
	1600 [1]	1600 [1]	1600 [1]	1600 [1]	1600 [1]	1600 [1]	1600 [1]	1600 [1]
	8	8	8	8	8	8	8	8
	1500	1500	1500	1500	1500	1500	1500	1500
	3,5	3,5	3,5	3,5	7.56	7.56	7.56	7.56
	DC-22A DC-PV2	DC-22A DC-PV2	DC-22A DC-PV2	DC-22A DC-PV2	DC-22A DC-PV2	DC-22A DC-PV2	DC-22A DC-PV2	DC-22A DC-PV2
	◉	◉	◉	◉	◉	◉	◉	◉
	3	3	3	3	3	3	3	3
	10000	10000	10000	10000	8000	8000	8000	8000
	4500	4500	4500	4500	3000	3000	3000	3000
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	-	-	-	-
	-	-	-	-	-	-	-	-
	-	-	-	-	-	-	-	-
	-	-	-	-	-	-	-	-
	-	-	-	-	-	-	-	-
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	-	-	-	-	-
	140 x 161 x 86	140 x 161 x 86	140 x 161 x 86	140 x 161 x 86	185 x 255 x 110	185 x 255 x 110	185 x 255 x 110	185 x 255 x 110
	2,8	2,8	2,8	2,8	8,1	8,1	8,1	8,1

■ Circuit breakers and switches used in PV systems are designed to break the rated current or fault current with all poles at open-circuit maximum voltage ($U_{OC\,MAX}$). To break the current when $U_{OC\,MAX}$ is equal to 1000 V, four poles in series (two poles in series for each polarity) are required. In double earth fault situations, the circuit breaker or switches must break the current at full voltage with only two poles in series.
Such switchgear is not designed for that purpose and could sustain irremediable damage if used to break the current in a double ground fault situation.

The ideal solution is to prevent double ground faults arising. Insulation monitoring devices or overcurrent protection in grounded systems detect the first fault. However, although the insulation fault monitoring system usually stops the inverter, the fault is still present. Staff must locate and clear it without delay. In large generators with sub-arrays protected by circuit breakers, it is highly advisable to disconnect each array when that first fault has been detected but not cleared within the next few hours.

[2] In=250A at 50 °C


[3] In=630A at 40 °C.

Accessories and Auxiliaries


Overview of ComPacT NSX80 TM to NSX500 TM DC PV - Circuit Breakers

DB437967.ai


A

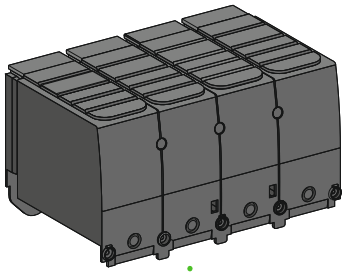

Terminal shields

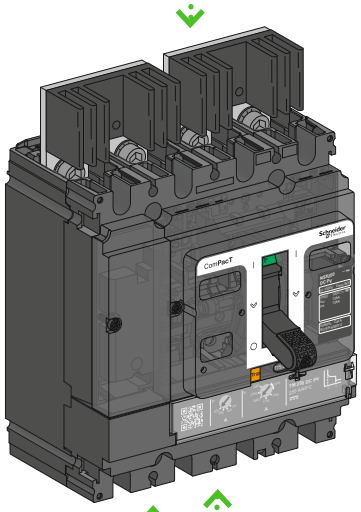

Electrical auxiliaries



Indication contact




Voltage release

Communication [1]




[2]

NSX cord

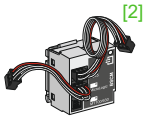


[2]

BSCM module

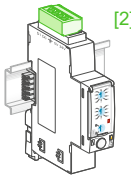


[2]


Modbus interface

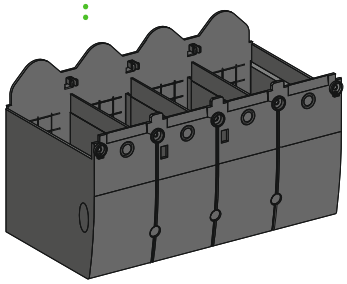


Terminal shields

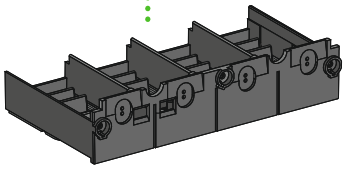

Short terminal shield

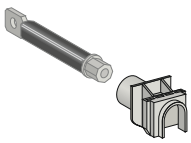

Rear connectors

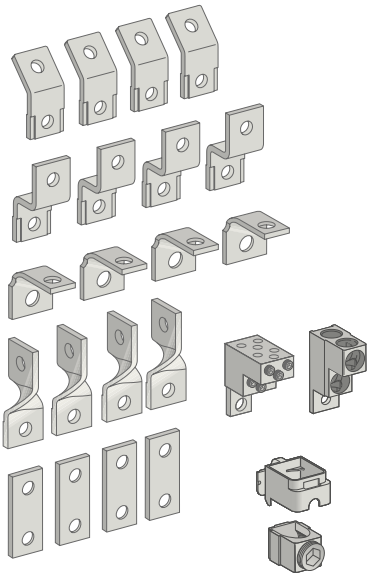

Terminal extensions

Cable connectors


[1] See communication chapter.
[2] ComPacT NSX100-250 only.

Life Is On Schneider Electric

Accessories and Auxiliaries

Overview of ComPacT NSX100 NA to NSX500 NA DC PV - Switch-Disconnectors

DB437968.eps

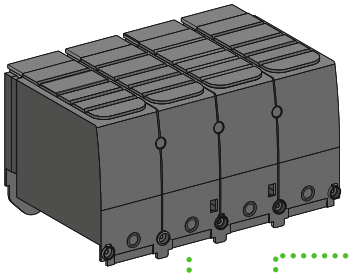


Terminal shields



Interphase barriers [2]

Electrical auxiliaries



Indication contact




Voltage release


Communication (1)




[1] NSX cord

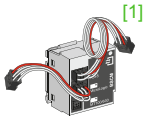


[1] BSCM module

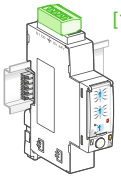


[1] Modbus interface

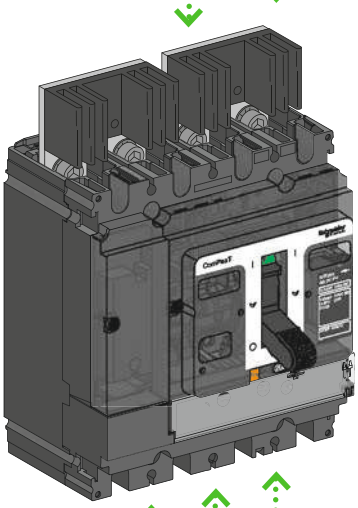


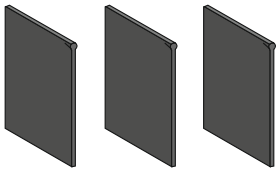


Interphase barriers [2]

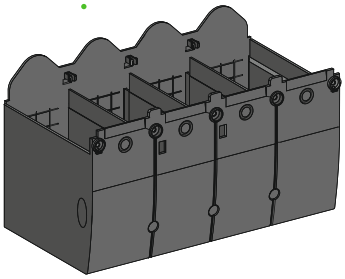


Terminal shields

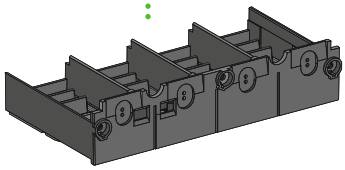

Short terminal shield

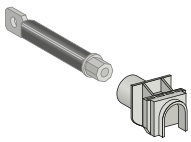

Rear connectors

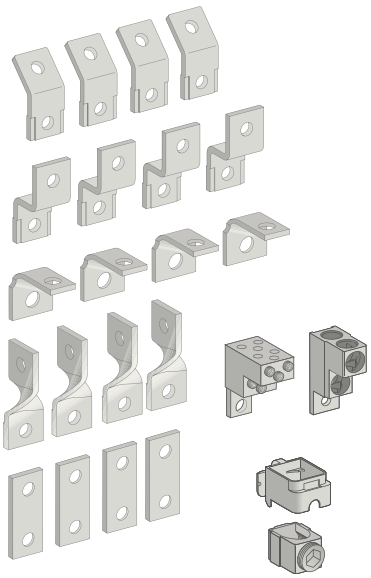

Terminal extensions


Cable connectors

[1] See communication chapter.
[2] Only for switches.

Accessories and Auxiliaries

Overview of ComPacT NSX100 TM to NSX250 TM DC EP - ComPacT NSX100 NA to NSX250 NA DC EP Circuit Breakers and Switch-Disconnectors


DB438100.ai

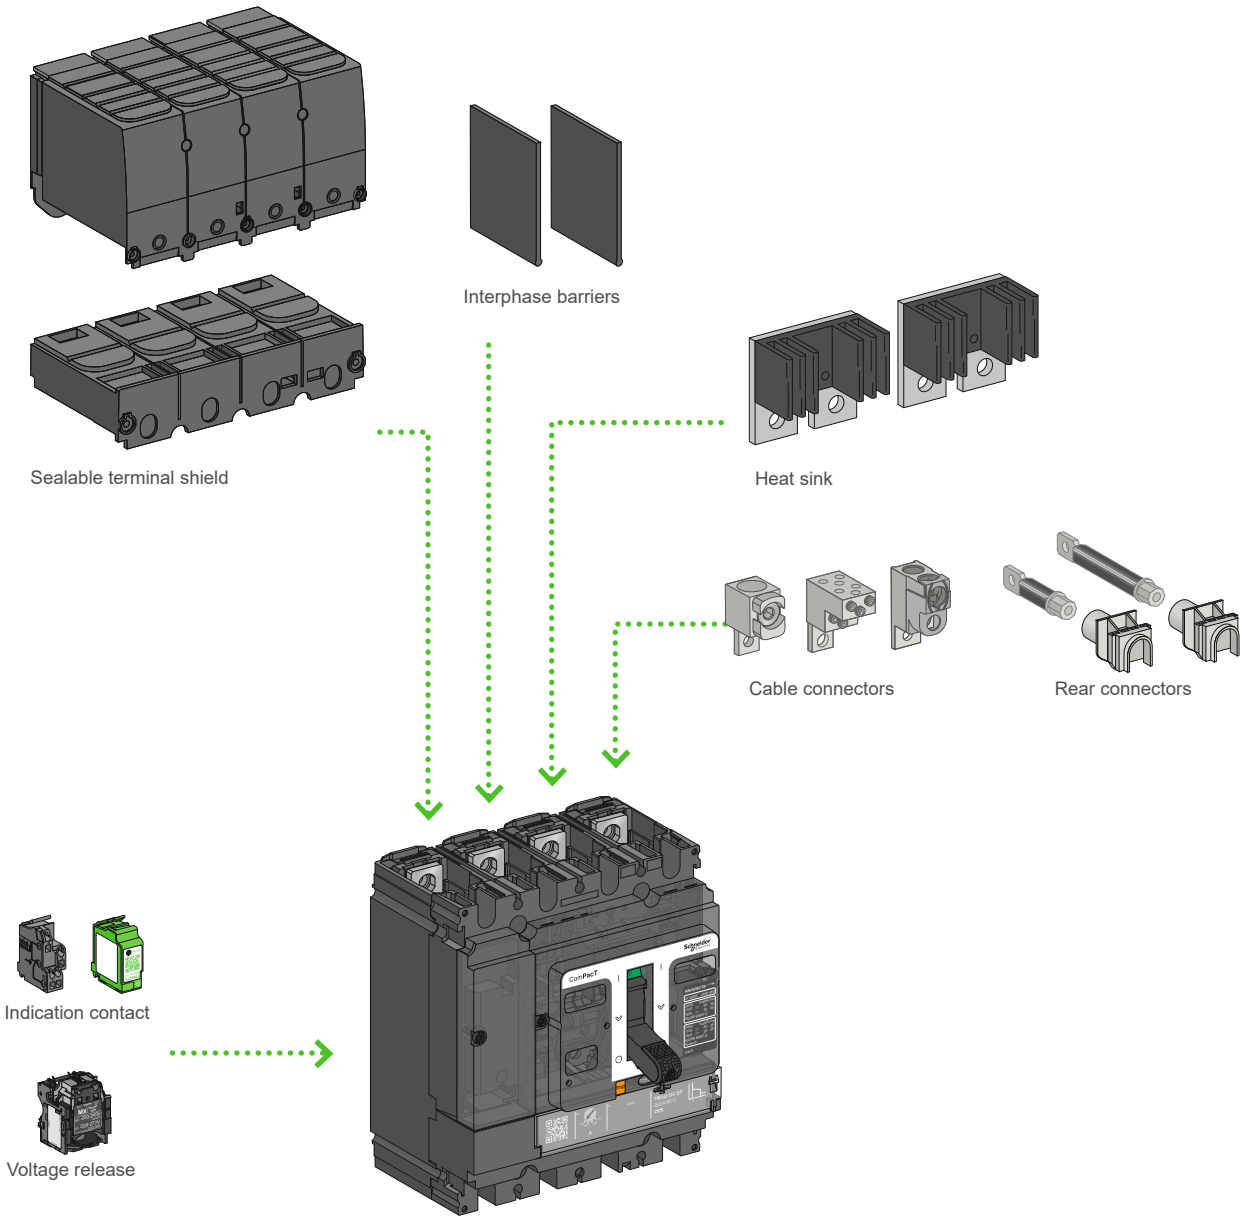

Accessories and Auxiliaries

Overview of ComPacT NSX250 TM to NSX500 TM DC EP - ComPacT NSX320 NA to NSX630 NA DC EP Circuit Breakers and Switch-Disconnectors

DB438121.ai

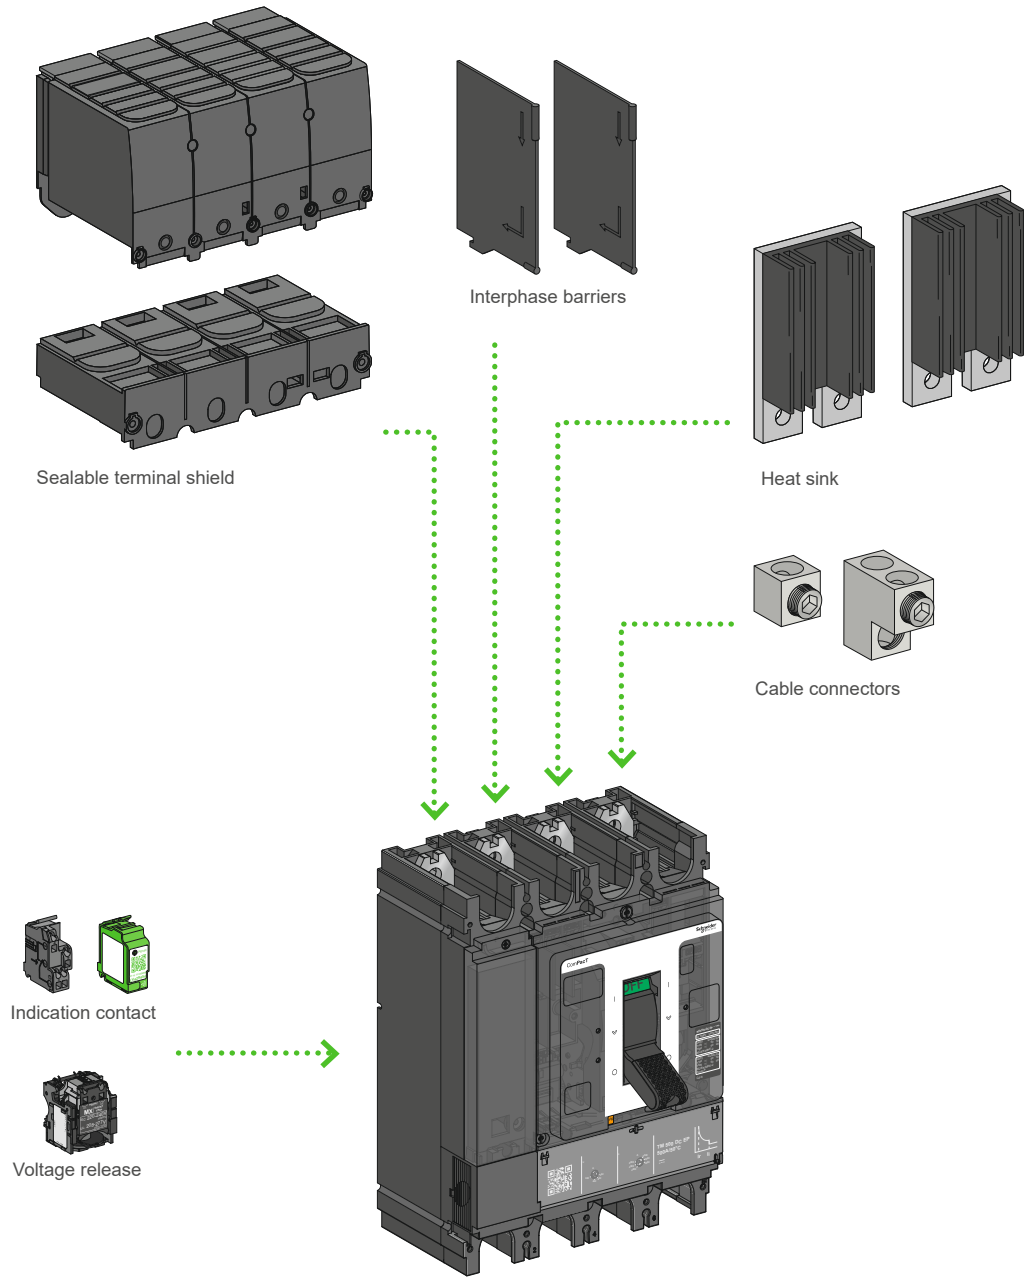


Accessories and Auxiliaries


Overview of ComPacT NSX630b NA to NSX1600 NA DC PV Switch-Disconnectors

DB431735.eps

A

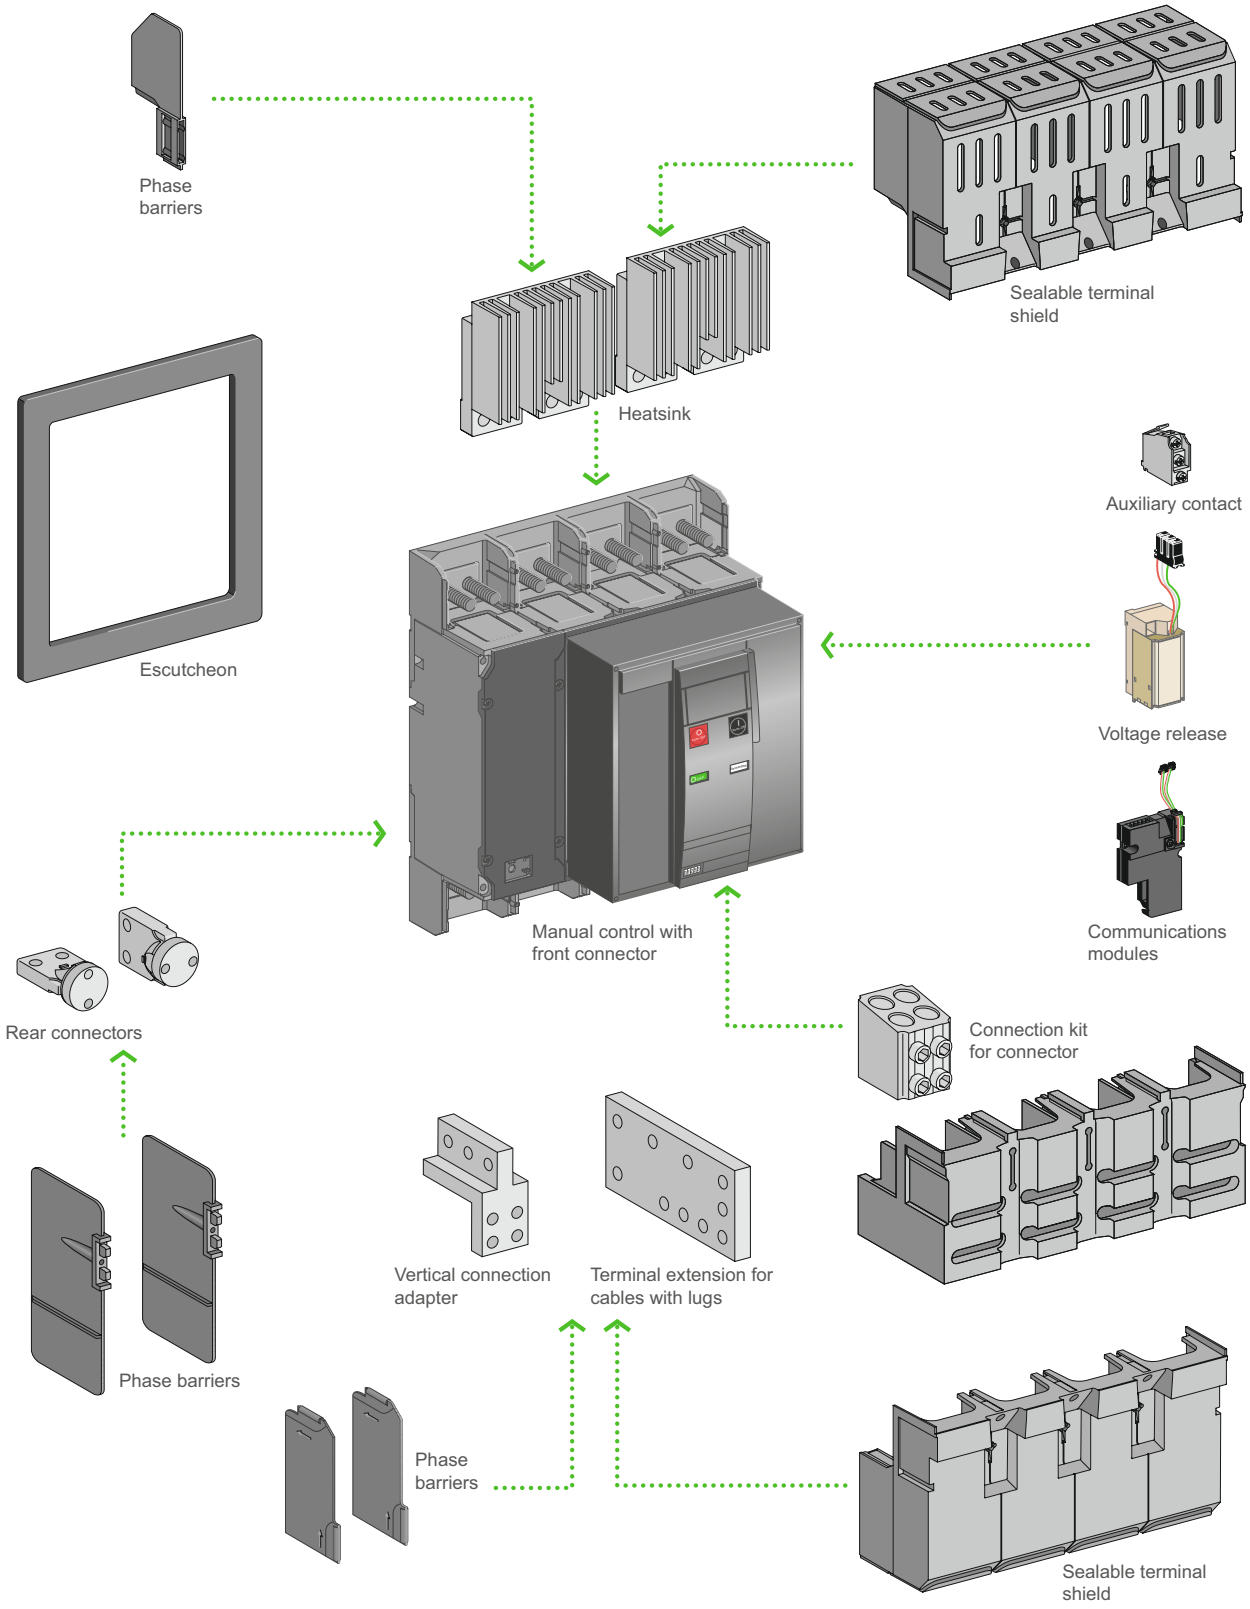

Life Is On Schneider Electric

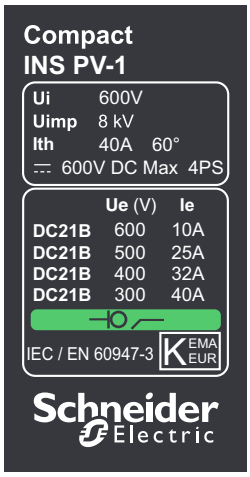



ComPacT INS PV-1

No matter the size or scale of the project, Schneider Electric, has a photovoltaic solution to fit your needs. Fast ROI, high efficiency – it's all a part of our offer as the world leader in energy management.

The INS PV-1 is a direct current switch disconnector dedicated to array isolation and control with Voc until 600 V DC.

A

ComPacT			INS80 PV
Number of poles			4 serial pole
Electrical Characteristics			
Conventional thermal current (A)	Ith		
Conventional thermal current in enclosure (A)	Ithe		
Rated insulation level (DC V)	Ui		
Impulse-withstand voltage (kV)	Uimp		
Rated operational voltage (DC V)	Ue		
Rated operational voltage DC21B (V)			
Rated operational current (A)	Ie	Electrical DC	
	DC21B	600	
	DC21B	500	
	DC21B	400	
	DC21B	300	
Rated duties		Uninterrupted duty	-
		Intermittent duty	Class 120 - 60 %
Short-circuit making capacity (kA peak)	Icm		
Short-time withstand current (A rms)	Icw		
Suitability for isolation			Yes
Durability (O-C cycles)		Mechanical	20000
		Electrical DC	
		600 V	1500
Positive contact indication			Yes
Visible break			-
Emergency-off switch disconnector			Yes
Degree of pollution			3

Switch-Disconnector Selection
ComPacT INS40 to 160 DC

PB111402_30.eps



ComPacT INS40 to 80 switch-disconnector

PB111403_30.eps



ComPacT INS40 to 80 emergency-off switch-disconnector

PB111406_42.eps



ComPacT INS100 to 160 switch-disconnector

PB111407_42.eps



ComPacT INS100 to 160 emergency-off switch-disconnector

ComPacT INS switch-disconnectors

Number of poles		
Electrical Characteristics As Defined by IEC 60947-1/60947-3 and EN 60947-1/60947-3		
Conventional thermal current (A)	**Ith**	at 60 °C
Conventional thermal current in enclosure	**Ithe**	at 60 °C
Rated insulation level (V)	**Ui**	AC 50/60 Hz
Impulse-withstand voltage (kV)	**Uimp**	
Rated operational voltage (V)	**Ue**	AC 50/60 Hz
		DC
Rated operational voltage AC20 and DC20 (V)		AC 50/60 Hz
Rated operational current (A)	**Ie**	**Electrical DC**
		125 V (2P in series)
		250 V (4P in series)
Rated duties		Uninterrupted duty
		Intermittent duty
Short-circuit making capacity (kA peak)	**Icm**	Min. (switch-disconnector alone)
Short-time withstand current (A rms)	**Icw**	1 s
		3 s
		20 s
		30 s
Suitability for isolation		
Durability (O-C cycles)		Mechanical
		Electrical DC
		250 V
Positive contact indication		
Visible break		
Emergency-off switch disconnector		
Degree of pollution		

Upstream Protection

See the “Complementary technical information” in catalog ComPacT INS/INV “LVPED213024EN”.

Switch-Disconnector Selection
ComPacT INS40 to 160 DC

	INS40		INS63		INS80		INS100		INS125		INS160	
	3-4		3-4		3-4		3-4		3-4		3-4	
	40		63		80		100		125		160	
	40		63		80		100		125		160	
	690		690		690		800		800		800	
	8		8		8		8		8		8	
	500		500		500		690		690		690	
	250		250		250		250		250		250	
	690		690		690		750		750		750	
	DC22A	DC23A	DC22A	DC23A	DC22A	DC23A	DC22A	DC23A	DC22A	DC23A	DC22A	DC23A
	40	40	63	63	80	80	100	100	125	125	160	160
	40	40	63	63	80	80	100	100	125	125	160	160
	◉		◉		◉		◉		◉		◉	
	Class 120 - 60 %		Class 120 - 60 %		Class 120 - 60 %		Class 120 - 60 %		Class 120 - 60 %		Class 120 - 60 %	
	15		15		15		20		20		20	
	3000		3000		3000		5500		5500		5500	
	1730		1730		1730		3175		3175		3175	
	670		670		670		1230		1230		1230	
	550		550		550		1000		1000		1000	
	◉		◉		◉		◉		◉		◉	
	20000		20000		20000		15000		15000		15000	
	DC22A	DC23A	DC22A	DC23A	DC22A	DC23A	DC22A	DC23A	DC22A	DC23A	DC22A	DC23A
	1500	1500	1500	1500	1500	1500	1500	1500	1500	1500	1500	1500
	◉		◉		◉		◉		◉		◉	
	-		-		-		-		-		-	
	◉		◉		◉		◉		◉		◉	
	3		3		3		3		3		3	
	-		-		-		-		-		-	

Switch-Disconnector Selection
ComPacT INS40 to 160 DC

ComPacT INS switch-disconnectors

Installation

Fixed, front connection	
Fixed, rear connection	
On symmetrical rails	
On a backplate	

Connection

By cables	To bare cable connectors
By cables with lugs	Directly to terminals
	To spreaders
	To vertical-connection adapters via cable-lug adapters
Flat-facing bars	Directly to terminals
	To spreaders
Edgewise bars	To vertical-connection adapters

Indication and Measurement Auxiliaries

Auxiliary contacts	
Current-transformer module	

Control, Locking and Interlocking

Control	Direct front rotary handle
	Extended front rotary handle
	Direct lateral rotary handle
	Extended lateral rotary handle
Locking	By keylock
	By padlocks
Interlocking	By keylock
	Mechanical
Complete source-changeover assembly	
Operating torque (Nm) (typical value for 3-4 poles with front handle)	

Installation and Connection Accessories


Bare cable connectors
Rear connectors
Terminal extensions
Spreaders
One-piece spreader
Terminal shrouds
Terminal shields
Interphase-barrier
Front panel escutcheons
Coupling accessories
Tightening torque for electrical connections (Nm)

Dimensions and Weights

Overall dimensions H x W x D (mm)	3 poles
	4 poles
Approximate weight (kg)	3 poles
	4 poles

Enclosure Dimensions for Ithe

	H x W x D (mm)

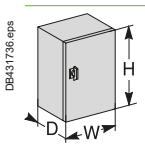

Switch-Disconnector Selection
ComPacT INS40 to 160 DC

	INS40	INS63	INS80	INS100	INS125	INS160
	◉	◉	◉	◉	◉	◉
	-	-	-	◉	◉	◉
	◉	◉	◉	-	-	-
	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉
	-	-	-	◉	◉	◉
	-	-	-	-	-	-
	-	-	-	-	-	-
	◉	◉	◉	◉	◉	◉
	-	-	-	-	-	-
	-	-	-	-	-	-
	◉	◉	◉	◉	◉	◉
	-	-	-	-	-	-
	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉
	-	-	-	-	-	-
	◉	◉	◉	◉	◉	◉
	-	-	-	-	-	-
	◉	◉	◉	◉	◉	◉
	-	-	-	-	-	-
	0.7 < Nm < 1.3	0.7 < Nm < 1.3	0.7 < Nm < 1.3	1.4 < Nm < 2	1.4 < Nm < 2	1.4 < Nm < 2
	◉	◉	◉	◉	◉	◉
	-	-	-	-	-	-
	-	-	-	-	-	-
	-	-	-	-	-	-
	-	-	-	-	-	-
	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉
	-	-	-	-	-	-
	-	-	-	-	-	-
	5	5	5	8	8	8
	85 x 90 x 62.5	85 x 90 x 62.5	85 x 90 x 62.5	100 x 135 x 62.5	100 x 135 x 62.5	100 x 135 x 62.5
	85 x 90 x 62.5	85 x 90 x 62.5	85 x 90 x 62.5	100 x 135 x 62.5	100 x 135 x 62.5	100 x 135 x 62.5
	0.5	0.5	0.5	0.8	0.8	0.8
	0.6	0.6	0.6	0.9	0.9	0.9
	190 x 115 x 55	190 x 115 x 55	190 x 115 x 55	260 x 160 x 55	260 x 160 x 55	260 x 160 x 55

Switch-Disconnector Selection
ComPacT INS250-100 to 630 DC

PB111440_52.eps



ComPacT INS250 switch-disconnector

PB111441_47.eps




ComPacT INS250 emergency-off switch-disconnector

PB111482_L49.eps



ComPacT INS630 switch-disconnector

PB111483_L49.eps

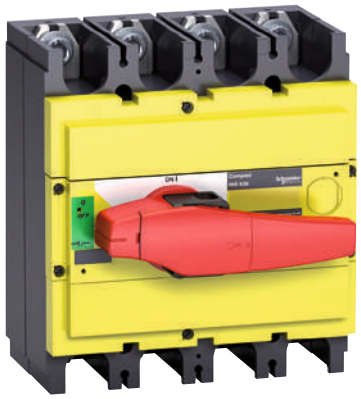

ComPacT INS630 emergency-off switch-disconnector

ComPacT INS switch-disconnectors

Number of poles		
Electrical Characteristics As Defined by IEC 60947-1/60947-3 and EN 60947-1/60947-3		
Conventional thermal current (A)	**Ith**	at 60 °C
Conventional thermal current in enclosure	**Ithe**	at 60 °C
Rated insulation level (V)	**Ui**	AC 50/60 Hz
Impulse-withstand voltage (kV)	**Uimp**	
Rated operational voltage (V)	**Ue**	AC 50/60 Hz
		DC
Rated operational voltage AC20 and DC20 (V)		AC 50/60 Hz
Rated operational current (A)	**Ie**	**Electrical DC**
		125 V (2P in series)
		250 V (4P in series)
Rated duties		Uninterrupted duty
		Intermittent duty
Short-circuit making capacity (kA peak)	**Icm**	Min. (switch-disconnector alone)
Short-time withstand current (A rms)	**Icw**	1 s
		3 s
		20 s
		30 s
Suitability for isolation		
Durability (O-C cycles)		Mechanical
		Electrical DC
		250 V
Positive contact indication		
Visible break		
Emergency-off switch disconnector		
Degree of pollution		

Upstream Protection

See the “Complementary technical information” in catalog ComPacT INS/INV “LVPED213024EN”.

[1] 550 A (DC).

Switch-Disconnector Selection
ComPacT INS250-100 to 630 DC


	INS250-100	INS250-160	INS250-200	INS250	INS320	INS400	INS500	INS630
	3-4	3-4	3-4	3-4	3-4	3-4	3-4	3-4
	100	160	200	250	320	400	500	630
	100	160	200	250	320	400	500	630 [1]
	800	800	800	800	800	800	800	800
	8	8	8	8	8	8	8	8
	690	690	690	690	690	690	690	690
	250	250	250	250	250	250	250	250
	750	750	750	750	750	750	750	750
	DC22A / DC23A	DC22A / DC23A	DC22A / DC23A	DC22A / DC23A	DC22A / DC23A	DC22A / DC23A	DC22A / DC23A	DC22A / DC23A / DC23B
	100 / 100	160 / 160	200 / 200	250 / 250	320 / 320	400 / 400	500 / 500	550 / 550 / 630
	100 / 100	160 / 160	200 / 200	250 / 250	320 / 320	400 / 400	500 / 500	550 / 550 / 630
	◉	◉	◉	◉	◉	◉	◉	◉
	Class 120 - 60 %	Class 120 - 60 %	Class 120 - 60 %	Class 120 - 60 %	Class 120 - 60 %	Class 120 - 60 %	Class 120 - 60 %	Class 120 - 60 %
	30	30	30	30	50	50	50	50
	8500	8500	8500	8500	20000	20000	20000	20000
	4900	4900	4900	4900	11500	11500	11500	11500
	2200	2200	2200	2200	4900	4900	4900	4900
	1800	1800	1800	1800	4000	4000	4000	4000
	◉	◉	◉	◉	◉	◉	◉	◉
	15000	15000	15000	15000	10000	10000	10000	10000
	DC22A / DC23A	DC22A / DC23A	DC22A / DC23A	DC22A / DC23A	DC23A / DC23B	DC23A / DC23B	DC23A / DC23B	DC23A / DC23B
	1500 / 1500	1500 / 1500	1500 / 1500	1500 / 1500	1000 / -	1000 / -	1000 / -	1000 / 200
	◉	◉	◉	◉	◉	◉	◉	◉
	-	-	-	-	-	-	-	-
	◉	◉	◉	◉	◉	◉	◉	◉
	3	3	3	3	3	3	3	3
	-	-	-	-	-	-	-	-

Switch-Disconnector Selection
ComPacT INS250-100 to 630 DC

A

ComPacT INS switch-disconnectors

Installation		
Fixed, front connection		
Fixed, rear connection		
On symmetrical rails		
On a backplate		
Connection		
By cables	To bare cable connectors	
By cables with lugs	Directly to terminals	
	To spreaders	
	To vertical-connection adapters via cable-lug adapters	
Flat-facing bars	Directly to terminals	
	To spreaders	
Edgewise bars	To vertical-connection adapters	
Indication and measurement auxiliaries		
Auxiliary contacts		
Current-transformer module		
Control, locking and interlocking		
Control	Direct front rotary handle	
	Extended front rotary handle	
	Direct lateral rotary handle	
	Extended lateral rotary handle	
Locking	By keylock	
	By padlocks	
Interlocking	By keylock	
	Mechanical	
Complete source-changeover assembly		
Operating torque (Nm) (typical value for 3-4 poles with front handle)		
Installation and Connection Accessories		
Bare cable connectors		
Rear connectors		
Terminal extensions		
Spreaders		
One-piece spreader		
Terminal shrouds		
Terminal shields		
Interphase-barrier		
Front panel escutcheons		
Coupling accessories		
Tightening torque for electrical connections (Nm)		
Dimensions and Weights		
Overall dimensions H x W x D (mm)	3 poles	
	4 poles	
Approximate weight (kg)	3 poles	
	4 poles	
Enclosure Dimensions for Ithe		
	H x W x D (mm)	

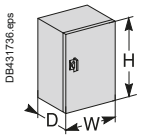

Switch-Disconnector Selection
ComPacT INS250-100 to 630 DC

	INS250-100	INS250-160	INS250-200	INS250	INS320	INS400	INS500	INS630
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	-	-	-	-	-	-	-	-
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	-	-	-	-	-	-	-	-
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	-	-	-	-	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	-	-	-	-
	◉	◉	◉	◉	-	-	-	-
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	5 < Nm < 6.2	5 < Nm < 6.2	5 < Nm < 6.2	5 < Nm < 6.2	13.5 < Nm < 16.5	13.5 < Nm < 16.5	13.5 < Nm < 16.5	13.5 < Nm < 16.5
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	-	-	-	-
	-	-	-	-	-	-	-	-
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	15	15	15	15	50	50	50	50
	136 x 140 x 96	136 x 140 x 96	136 x 140 x 96	136 x 140 x 96	205 x 185 x 130	205 x 185 x 130	205 x 185 x 130	205 x 185 x 130
	136 x 140 x 96	136 x 140 x 96	136 x 140 x 96	136 x 140 x 96	205 x 185 x 130	205 x 185 x 130	205 x 185 x 130	205 x 185 x 130
	2	2	2	2	4.6	4.6	4.6	4.6
	2.2	2.2	2.2	2.2	4.9	4.9	4.9	4.9
	400 x 300 x 200	400 x 300 x 200	400 x 300 x 200	400 x 300 x 200	600 x 400 x 200	600 x 400 x 200	600 x 400 x 200	600 x 400 x 200

Switch-Disconnector Selection
ComPacT INS630b to 2500 DC

PB111510_45.eps



ComPacT INS1600 switch-disconnector

PB111511_45.eps



ComPacT INS1600 emergency-off switch-disconnector

PB111518_72.eps



ComPacT INS2500 switch-disconnector

ComPacT INS switch-disconnectors

Number of poles		
Electrical Characteristics As Defined by IEC 60947-1/60947-3 and EN 60947-1/60947-3		
Conventional thermal current (A)	**Ith**	at 60 °C
Conventional thermal current in enclosure	**Ithe**	at 60 °C
Rated insulation level (V)	**Ui**	AC 50/60 Hz
Impulse-withstand voltage (kV)	**Uimp**	
Rated operational voltage (V)	**Ue**	AC 50/60 Hz
		DC
Rated operational voltage AC20 and DC20 (V)		AC 50/60 Hz
Rated operational current (A)	**Ie**	**Electrical DC**
		125 V (2P in series)
		250 V (4P in series)
Rated duties		Uninterrupted duty
		Intermittent duty
Short-circuit making capacity (kA peak)	**Icm**	Min. (switch-disconnector alone)
Short-time withstand current (kA rms)	**Icw**	0.5 s
		0.8 s
		1 s
		3 s
		20 s
		30 s
Suitability for isolation		
Durability (O-C cycles)		Mechanical
		Electrical DC
		125 V (2P)
		250 V (4P)
Positive contact indication		
Visible break		
Emergency-off switch disconnector		
Degree of pollution		

Upstream Protection

See the “Complementary technical information” catalog ComPacT INS/INV “LVPED213024EN”.

[1] For vertical connection busbars only. For horizontal connection busbars, see derating charts in “Installation recommendations” in catalog ComPacT INS/INV “LVPED213024EN”.

Switch-Disconnector Selection
ComPacT INS630b to 2500 DC

	INS630b	INS800	INS1000	INS1250	INS1600	INS2000	INS2500
	3-4	3-4	3-4	3-4	3-4	3-4	3-4
	630	800	1000	1250	1600 [1]	2000	2500
	630	800	1000	1250	1600 [1]	2000	2500
	1000	1000	1000	1000	1000	1000	1000
	12	12	12	12	12	12	12
	690	690	690	690	690	690	690
	250	250	250	250	250	250	250
	800	800	800	800	800	800	800
	DC21A DC22A DC23A	DC21A DC22A DC23A	DC21A DC22A DC23A	DC21A DC22A DC23A	DC21A DC22A DC23A	DC21B DC22B DC23B	DC21B DC22B DC23B
	630/2 630/2 630/2	800/2 800/2 800/2	1000/2 1000/2 1000/2	1250/2 1250/2 1250/2	1600/2 1600/2 1600/2	2000/2 2000/2 -	2500/2 2500/2 -
	630/4 630/4 630/4	800/4 800/4 800/4	1000/4 1000/4 1000/4	1250/4 1250/4 1250/4	1600/4 1600/4 1600/4	2000/4 2000/4 -	2500/4 2500/4 -
	●	●	●	●	●	●	●
	Class 120 - 60 %	Class 120 - 60 %	Class 120 - 60 %	Class 120 - 60 %	Class 120 - 60 %	Class 120 - 60 %	Class 120 - 60 %
	75	75	75	75	75	105	105
	50	50	50	50	50	50	50
	42	42	42	42	42	50	50
	35	35	35	35	35	50	50
	20	20	20	20	20	30	30
	10	10	10	10	10	13	13
	8	8	8	8	8	11	11
	●	●	●	●	●	●	●
	5000	3000	3000	3000	3000	3000	3000
	DC21A DC22A DC23A	DC21A DC22A DC23A	DC21A DC22A DC23A	DC21A DC22A DC23A	DC21A DC22A DC23B	DC21B DC22B DC23B	DC21B DC22B DC23B
	1000 1000 1000	500 500 500	500 500 500	500 500 500	500 500 500	100 100 -	100 100 -
	1000 1000 1000	500 500 500	500 500 500	500 500 500	500 500 500	100 100 -	100 100 -
	●	●	●	●	●	●	●
	-	-	-	-	-	-	-
	●	●	●	●	●	-	-
	3	3	3	3	3	3	3
	-	-	-	-	-	-	-

Switch-Disconnector Selection
ComPacT INS630b to 2500 DC

ComPacT INS switch-disconnectors

Installation

Fixed, front connection	
Fixed, rear connection	
On symmetrical rails	
On a backplate	

Connection

By cables	To bare cable connectors
By cables with lugs	Directly to terminals
	To spreaders
	To vertical-connection adapters via cable-lug adapters
Flat-facing bars	Directly to terminals
	To spreaders
Edgewise bars	To vertical-connection adapters

Indication and Measurement Auxiliaries

Auxiliary contacts	
Current-transformer module	

Control, Locking and Interlocking

Control	Direct front rotary handle
	Extended front rotary handle
	Direct lateral rotary handle
	Extended lateral rotary handle
Locking	By keylock
	By padlocks
Interlocking	By keylock
	Mechanical
Complete source-changeover assembly	
Operating torque (Nm) (typical value for 3-4 poles with front handle)	

Installation and Connection Accessories


Bare cable connectors	
Rear connectors	
Terminal extensions	
Spreaders	
One-piece spreader	
Terminal shrouds	
Terminal shields	
Interphase-barrier	
Front panel escutcheons	
Coupling accessories	
Tightening torque for electrical connections (Nm)	

Dimensions and Weights

Overall dimensions H x W x D (mm)	3 poles
	4 poles
Approximate weight (kg)	3 poles
	4 poles

Enclosure Dimensions for Ithe

	H x W x D (mm)

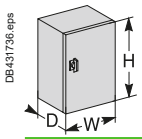

Switch-Disconnector Selection
ComPacT INS630b to 2500 DC

	INS630b	INS800	INS1000	INS1250	INS1600	INS2000	INS2500
	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉
	-	-	-	-	-	-	-
	◉	◉	◉	◉	◉	◉	◉
	-	-	-	-	-	-	-
	-	-	-	-	-	◉	◉
	-	-	-	-	-	-	-
	◉	◉	◉	◉	◉	-	-
	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	-	-
	◉	◉	◉	◉	◉	-	-
	◉	◉	◉	◉	◉	◉	◉
	-	-	-	-	-	-	-
	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉
	-	-	-	-	-	-	-
	-	-	-	-	-	-	-
	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉
	-	-	-	-	-	-	-
	-	-	-	-	-	-	-
	30	30	30	30	30	60	60
	-	-	-	-	-	-	-
	-	-	-	-	-	-	-
	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉
	-	-	-	-	-	-	-
	-	-	-	-	-	-	-
	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉
	-	-	-	-	-	-	-
	50	50	50	50	50	50	50
	300 x 340 x 146.5	300 x 340 x 146.5	300 x 340 x 146.5	300 x 340 x 146.5	300 x 340 x 146.5	440 x 347.5 x 227.5	440 x 347.5 x 227.5
	300 x 410 x 146.5	300 x 410 x 146.5	300 x 410 x 146.5	300 x 410 x 146.5	300 x 410 x 146.5	440 x 462.5 x 227.5	440 x 462.5 x 227.5
	14	14	14	14	14	35	35
	18	18	18	18	18	45	45
	-	-	-	-	-	-	-


Switch-Disconnector Selection
Com**PacT** INV100 to 630 DC

PB111442_52.eps



ComPacT INV250 switch-disconnector

PB111443_47.eps

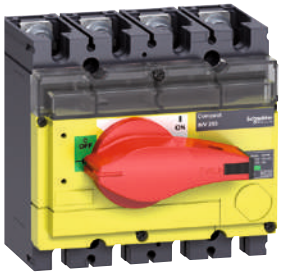


ComPacT INV250 emergency-off switch-disconnector

PB111484_L49.eps



ComPacT INV630 switch-disconnector

PB111485_L49.eps

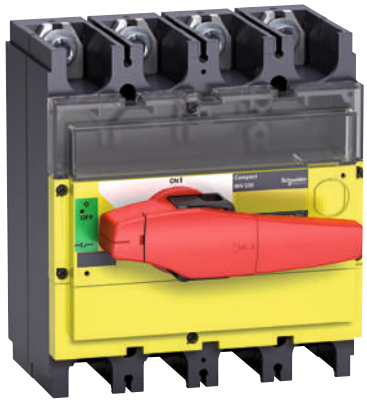

ComPacT INV630 emergency-off switch-disconnector

ComPacT INV switch-disconnectors

Number of poles		
Electrical Characteristics As Defined by IEC 60947-1/60947-3 and EN 60947-1/60947-3		
Conventional thermal current (A)	**Ith**	at 60 °C
Conventional thermal current in enclosure	**Ithe**	at 60 °C
Rated insulation level (V)	**Ui**	AC 50/60 Hz
Impulse-withstand voltage (kV)	**Uimp**	
Rated operational voltage (V)	**Ue**	AC 50/60 Hz
		DC
Rated operational voltage AC20 and DC20 (V)		AC 50/60 Hz
Rated operational current (A)	**Ie**	**Electrical DC**
		125 V (2P in series)
		250 V (4P in series)
Rated duties		Uninterrupted duty
		Intermittent duty
Short-circuit making capacity (kA peak)	**Icm**	Min. (switch-disconnector alone)
Short-time withstand current (A rms)	**Icw**	1 s
		3 s
		20 s
		30 s
Suitability for isolation		
Durability (O-C cycles)		Mechanical
		Electrical DC
		250 V
Positive contact indication		
Visible break		
Emergency-off switch disconnector		
Degree of pollution		

Upstream Protection

See the “Complementary technical information” in catalog ComPacT INS/INV “LVPED213024EN”.

[1] 550 A (DC).

Switch-Disconnector Selection
ComPacT INV100 to 630 DC

	INV100	INV160	INV200	INV250	INV320	INV400	INV500	INV630
	3-4	3-4	3-4	3-4	3-4	3-4	3-4	3-4
	100	160	200	250	320	400	500	630
	100	160	200	250	320	400	500	630 [1]
	800	800	800	800	800	800	800	800
	8	8	8	8	8	8	8	8
	690	690	690	690	690	690	690	690
	250	250	250	250	250	250	250	250
	750	750	750	750	750	750	750	750
	DC21A / DC22A / DC23B	DC21A / DC22A / DC23B	DC21A / DC22A / DC23B	DC21A / DC22A / DC23B	DC21A / DC22A / DC23A	DC21A / DC22A / DC23A	DC21A / DC22A / DC23A	DC21A / DC22A / DC23A/ DC23B
	100 / 100 / 100	160 / 160 / 160	200 / 200 / 200	250 / 250 / 250	320 / 320 / 320	400 / 400 / 400	500 / 500 / 500	550 / 550 / 550/630
	100 / 100 / 100	160 / 160 / 160	200 / 200 / 200	250 / 250 / 250	320 / 320 / 320	400 / 400 / 400	500 / 500 / 500	550 / 550 / 550/630
	◉	◉	◉	◉	◉	◉	◉	◉
	Class 120 - 60 %	Class 120 - 60 %	Class 120 - 60 %	Class 120 - 60 %	Class 120 - 60 %	Class 120 - 60 %	Class 120 - 60 %	Class 120 - 60 %
	30	30	30	30	50	50	50	50
	8500	8500	8500	8500	20000	20000	20000	20000
	4900	4900	4900	4900	11500	11500	11500	11500
	2200	2200	2200	2200	4900	4900	4900	4900
	1800	1800	1800	1800	4000	4000	4000	4000
	◉	◉	◉	◉	◉	◉	◉	◉
	15000	15000	15000	15000	10000	10000	10000	10000
	DC22A / DC23A	DC22A / DC23A	DC22A / DC23A	DC22A / DC23A	DC21A / DC22A / DC23A	DC21A / DC22A / DC23A	DC21A / DC22A / DC23A	DC21A / DC22A / DC23A/ DC23B
	1500 / 1500	1500 / 1500	1500 / 1500	1500 / 1500	1000 / 1000 / 1000	1000 / 1000 / 1000	1000 / 1000 / 1000	1000 / 1000 / 1000/200
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	3	3	3	3	3	3	3	3
	-	-	-	-	-	-	-	-

Switch-Disconnector Selection
ComPacT INV100 to 630 DC

ComPacT INV switch-disconnectors

Installation

Fixed, front connection	
Fixed, rear connection	
On symmetrical rails	
On a backplate	

Connection

By cables	To bare cable connectors
By cables with lugs	Directly to terminals
	To spreaders
	To vertical-connection adapters via cable-lug adapters
Flat-facing bars	Directly to terminals
	To spreaders
Edgewise bars	To vertical-connection adapters

Indication and Measurement Auxiliaries

Auxiliary contacts	
Current-transformer module	

Control, Locking and Interlocking

Control	Direct front rotary handle
	Extended front rotary handle
	Direct lateral rotary handle
	Extended lateral rotary handle
Locking	By keylock
	By padlocks
Interlocking	By keylock
	Mechanical
Complete source-changeover assembly	
Operating torque (Nm) (typical value for 3-4 poles with front handle)	

Installation and Connection Accessories


Bare cable connectors	
Rear connectors	
Terminal extensions	
Spreaders	
One-piece spreader	
Terminal shrouds	
Terminal shields	
Interphase-barrier	
Front panel escutcheons	
Coupling accessories	
Tightening torque for electrical connections (Nm)	

Dimensions and Weights

Overall dimensions H x W x D (mm)	3 poles
	4 poles
Approximate weight (kg)	3 poles
	4 poles

Enclosure Dimensions for Ithe

	H x W x D (mm)

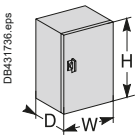

Switch-Disconnector Selection
ComPacT INV100 to 630 DC

	INV100	INV160	INV200	INV250	INV320	INV400	INV500	INV630
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	-	-	-	-	-	-	-	-
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	-	-	-	-	-	-	-	-
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	-	-	-	-	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	-	-	-	-
	◉	◉	◉	◉	-	-	-	-
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	-	-	-	-	-	-	-	-
	5 < Nm < 6.2	5 < Nm < 6.2	5 < Nm < 6.2	5 < Nm < 6.2	13.5 < Nm < 16.5	13.5 < Nm < 16.5	13.5 < Nm < 16.5	13.5 < Nm < 16.5
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	-	-	-	-	-	-	-	-
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉	◉
	15	15	15	15	50	50	50	50
	136 x 140 x 96	136 x 140 x 96	136 x 140 x 96	136 x 140 x 96	205 x 185 x 130	205 x 185 x 130	205 x 185 x 130	205 x 185 x 130
	136 x 140 x 96	136 x 140 x 96	136 x 140 x 96	136 x 140 x 96	205 x 185 x 130	205 x 185 x 130	205 x 185 x 130	205 x 185 x 130
	2	2	2	2	4.6	4.6	4.6	4.6
	2.2	2.2	2.2	2.2	4.9	4.9	4.9	4.9
	400 x 300 x 200	400 x 300 x 200	400 x 300 x 200	400 x 300 x 200	600 x 400 x 200	600 x 400 x 200	600 x 400 x 200	600 x 400 x 200


Switch-Disconnector Selection
ComPacT INV630b to 2500 DC

PB111512_45.eps



ComPacT INV1600 switch-disconnector

PB111513_45.eps

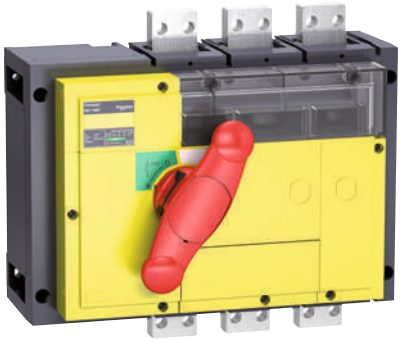

ComPacT INV1600 emergency-off switch-disconnector

PB111519_L62.eps



ComPacT INV2500 switch-disconnector

ComPacT INV switch-disconnectors		
Number of poles		
Electrical Characteristics As Defined by IEC 60947-1/60947-3 and EN 60947-1/60947-3		
Conventional thermal current (A)	**Ith**	at 60 °C
Conventional thermal current in enclosure	**Ithe**	at 60 °C
Rated insulation level (V)	**Ui**	AC 50/60 Hz
Impulse-withstand voltage (kV)	**Uimp**	
Rated operational voltage (V)	**Ue**	AC 50/60 Hz
		DC
Rated operational voltage AC20 and DC20 (V)		AC 50/60 Hz
Rated operational current (A)	**Ie**	**Electrical DC**
		125 V (2P in series)
		250 V (4P in series)
Rated duties		Uninterrupted duty
		Intermittent duty
Short-circuit making capacity (kA peak)	**Icm**	Min. (switch-disconnector alone)
Short-time withstand current (kA rms)	**Icw**	0.5 s
		0.8 s
		1 s
		3 s
		20 s
		30 s
Suitability for isolation		
Durability (O-C cycles)		Mechanical
		Electrical DC
		125 V (2P)
		250 V (4P)
Positive contact indication		
Visible break		
Emergency-off switch disconnector		
Degree of pollution		
Upstream Protection		
See the “Complementary technical information” in catalog ComPacT INS/INV “LVPED213024EN”.		

[1] For vertical connection busbars only. For horizontal connection busbars, see derating charts in “Installation recommendations” in catalog ComPacT INS/INV “LVPED213024EN”.

Switch-Disconnector Selection
ComPacT INV630b to 2500 DC

	INV630b			INV800			INV1000			INV1250			INV1600			INV2000			INV2500		
	3-4			3-4			3-4			3-4			3-4			3-4			3-4		
	630			800			1000			1250			1600 [1]			2000			2500		
	630			800			1000			1250			1600 [1]			2000			2500		
	1000			1000			1000			1000			1000			1000			1000		
	12			12			12			12			12			12			12		
	690			690			690			690			690			690			690		
	250			250			250			250			250			250			250		
	800			800			800			800			800			800			800		
	DC21A	DC22A	DC23A	DC21A	DC22A	DC23A	DC21A	DC22A	DC23A	DC21A	DC22A	DC23A	DC21A	DC22A	DC23A	DC21B	DC22B	DC23B	DC21B	DC22B	DC23B
	630/2	630/2	630/2	800/2	800/2	800/2	1000/2	1000/2	1000/2	1250/2	1250/2	1250/2	1600/2	1600/2	1600/2	2000/2	2000/2	-	2500/2	2500/2	-
	630/4	630/4	630/4	800/4	800/4	800/4	1000/4	1000/4	1000/4	1250/4	1250/4	1250/4	1600/4	1600/4	1600/4	2000/4	2000/4	-	2500/4	2500/4	-
	◉			◉			◉			◉			◉			◉			◉		
	Class 120 - 60 %			Class 120 - 60 %			Class 120 - 60 %			Class 120 - 60 %			Class 120 - 60 %			Class 120 - 60 %			Class 120 - 60 %		
	75			75			75			75			75			105			105		
	50			50			50			50			50			50			50		
	42			42			42			42			42			50			50		
	35			35			35			35			35			50			50		
	20			20			20			20			20			30			30		
	10			10			10			10			10			13			13		
	8			8			8			8			8			11			11		
	◉			◉			◉			◉			◉			◉			◉		
	5000			3000			3000			3000			3000			3000			3000		
	DC21A	DC22A	DC23A	DC21A	DC22A	DC23A	DC21A	DC22A	DC23A	DC21A	DC22A	DC23A	DC21A	DC22A	DC23B	DC21B	DC22B	DC23B	DC21B	DC22B	DC23B
	1000	1000	1000	500	500	500	500	500	500	500	500	500	500	500	500	100	100	-	100	100	-
	1000	1000	1000	500	500	500	500	500	500	500	500	500	500	500	500	100	100	-	100	100	-
	◉			◉			◉			◉			◉			◉			◉		
	◉			◉			◉			◉			◉			◉			◉		
	◉			◉			◉			◉			◉			-			-		
	3			3			3			3			3			3			3		
	-			-			-			-			-			-			-		

Switch-Disconnector Selection
ComPacT INV630b to 2500 DC

A

ComPacT INV switch-disconnectors

Installation

Fixed, front connection	
Fixed, rear connection	
On symmetrical rails	
On a backplate	

Connection

By cables	To bare cable connectors
By cables with lugs	Directly to terminals
	To spreaders
	To vertical-connection adapters via cable-lug adapters
Flat-facing bars	Directly to terminals
	To spreaders
Edgewise bars	To vertical-connection adapters

Indication and Measurement Auxiliaries

Auxiliary contacts	
Current-transformer module	

Control, Locking and Interlocking

Control	Direct front rotary handle
	Extended front rotary handle
	Direct lateral rotary handle
	Extended lateral rotary handle
Locking	By keylock
	By padlocks
Interlocking	By keylock
	Mechanical
Complete source-changeover assembly	
Operating torque (Nm) (typical value for 3-4 poles with front handle)	

Installation and Connection Accessories


Bare cable connectors	
Rear connectors	
Terminal extensions	
Spreaders	
One-piece spreader	
Terminal shrouds	
Terminal shields	
Interphase-barrier	
Front panel escutcheons	
Coupling accessories	
Tightening torque for electrical connections (Nm)	

Dimensions and Weights

Overall dimensions H x W x D (mm)	3 poles
	4 poles
Approximate weight (kg)	3 poles
	4 poles

Enclosure Dimensions for Ithe

	H x W x D (mm)

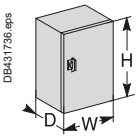

Switch-Disconnector Selection
ComPacT INV630b to 2500 DC

	INV630b	INV800	INV1000	INV1250	INV1600	INV2000	INV2500
	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉
	-	-	-	-	-	-	-
	◉	◉	◉	◉	◉	◉	◉
	-	-	-	-	-	-	-
	-	-	-	-	-	◉	◉
	-	-	-	-	-	-	-
	◉	◉	◉	◉	◉	-	-
	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	-	-
	◉	◉	◉	◉	◉	-	-
	◉	◉	◉	◉	◉	◉	◉
	-	-	-	-	-	-	-
	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉
	-	-	-	-	-	-	-
	-	-	-	-	-	-	-
	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉
	-	-	-	-	-	-	-
	-	-	-	-	-	-	-
	30	30	30	30	30	60	60
	-	-	-	-	-	-	-
	-	-	-	-	-	-	-
	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉
	-	-	-	-	-	-	-
	-	-	-	-	-	-	-
	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉	◉
	-	-	-	-	-	-	-
	50	50	50	50	50	50	50
	300 x 340 x 146.5	300 x 340 x 146.5	300 x 340 x 146.5	300 x 340 x 146.5	300 x 340 x 146.5	440 x 347.5 x 227.5	440 x 347.5 x 227.5
	300 x 410 x 146.5	300 x 410 x 146.5	300 x 410 x 146.5	300 x 410 x 146.5	300 x 410 x 146.5	440 x 462.5 x 227.5	440 x 462.5 x 227.5
	14	14	14	14	14	35	35
	18	18	18	18	18	45	45
	-	-	-	-	-	-	-

Communication


Enerlin'X Digital System - Overview

Enerlin'X communication system provides access to status, electrical values and devices control using Ethernet and Modbus SL communication protocols.

Ethernet has become the universal link between switchboards, computers and communication devices inside the building. The large amount of information which can be transferred makes the connection of Enerlin'X digital system to hosted web services of Schneider Electric a reality. More advantages are offered to integrators thanks to configuration web pages available remotely or on the local Ethernet network.

Modbus SL is the most widely used communication protocol in industrial networks. It operates in master-slave mode. The devices (slaves) communicate one after the other with a gateway (master).

A

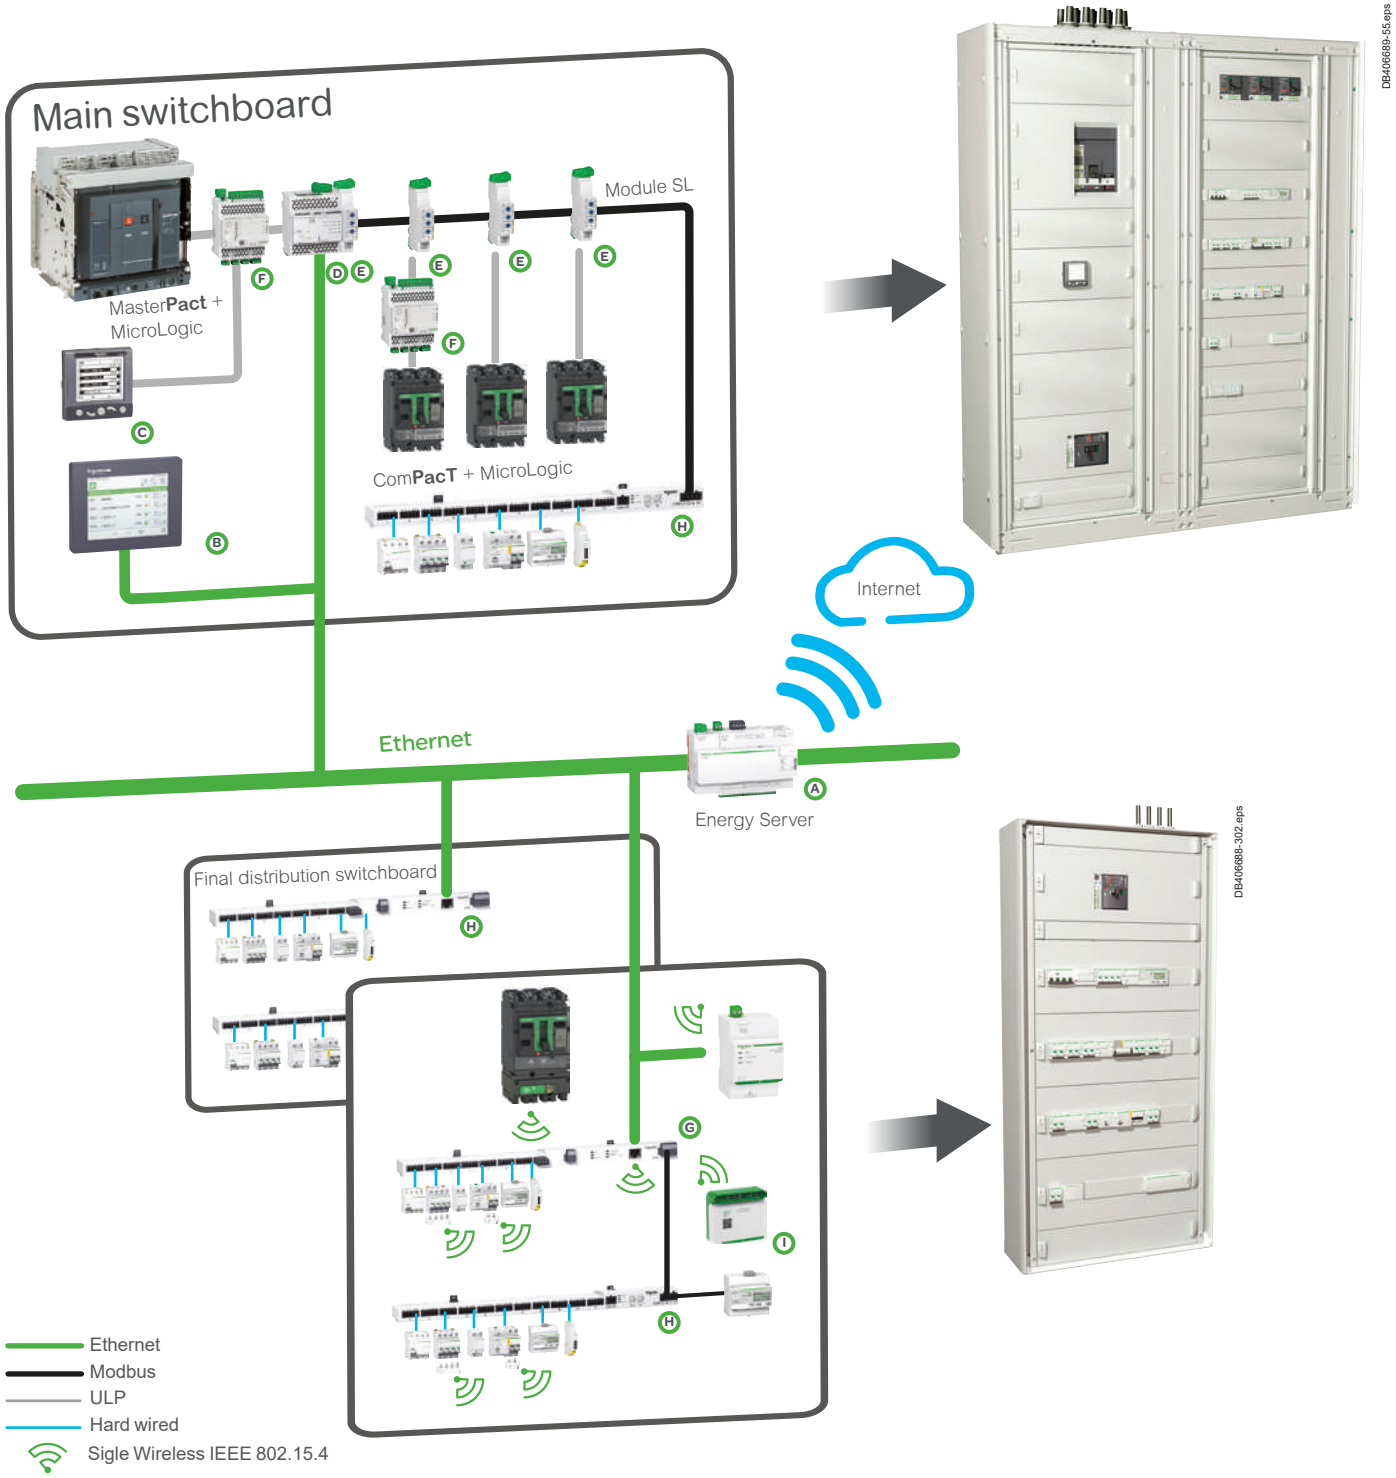

A

Enerlin'X digital devices and displays

		Name	Function	Port (to device)	Port (to server)	Inputs	Outputs	Cial. Ref.
A		Com'X 210	Energy data logger + Ethernet Gateway	Ethernet Modbus Smartlink SI B, Zigbee (to wireless meters)	Ethernet cable + WiFi	64 devices: 6 binary 2 analog 32 Modbus devices + other Ethernet devices (Modbus TCP)	-	**EBX210**
		Com'X 510 24 V DC + PoE	Energy server + Ethernet Gateway				-	**EBX510**
B		FDM128	Ethernet LCD color touch screen	-	Ethernet		-	**LV434128**
C		FDM121	LCD display for circuit breaker	ULP	-	1 circuit breaker	-	**TRV00121**
D		IFE Switchboard server	Switchboard server	Modbus Smartlink SI B & ULP	Ethernet	20 circuit breakers	-	**LV434002**
		IFE interface	Ethernet interface for circuit breakers	ULP	Ethernet	1 circuit breaker	-	**LV434001**
E		IFM	Modbus interface for circuit breaker	ULP	Modbus Smartlink SI B	1 circuit breaker	-	**LV434000**
F		I/O	Input/Output application module for circuit breaker	ULP	ULP	6 binary 1 analog (PT100 sensor)	3	**LV434063**
G		Smartlink SI B Ethernet wireless	Ethernet server for I/O and Modbus Smartlink SI B devices	Modbus Smartlink SI B & Wireless to PowerTag	Ethernet	14 binary 2 analog	7	**A9XMZA08**
H		Smartlink Modbus Smartlink SI B	Modbus interface with Input/Output functions	-	Modbus Smartlink SI B	22 binary	11	**A9XMSB11**
I		HeatTag	Detection of overheating cables	-	-	-	-	**SMT10020**

> EcoStruxure Power Connected Products Catalog

LVCATENLX_EN

Ethernet Gateway or Interface: routes an internal traffic (ULP or other protocole) to the Internet, the outgoing messages are coded with Modbus TCPIP protocol.

Server (Switchboard, Energy): routes the internal traffic to the Internet. Other complementary functions such as data logging and storage. Provides devices status and energy trends on internal web pages...

PowerLogic™ HeatTag: HeatTag is a smart sensor for early detection of overheating wire connections or overheating cables. HeatTag helps prevent electrical switchboards from being damaged, by analyzing gas and particles in the air and sending alerts before any smoke or insulator browning.

Note: For more information, see Configuration & commissioning guide of connected devices & software - New buildings

Communication
IFE Ethernet Interface

PB115852.eps



IFE interface, ref.: LV434001

PB119224.eps



IFE interface + gateway, ref.: LV434002

IFE Interface, IFE Interface + Gateway Description

Introduction
The IFE interface and the IFE switchboard server enable LV circuit breakers to be connected to an Ethernet network. The IFE switchboard server incorporates a Modbus gateway. The IFE interface and IFE switchboard server are both equipped with two ULP ports and two Ethernet ports. The IFE switchboard server is equipped with a Modbus RS 485 serial connection. The following circuit breakers can be connected to IFE interface and to IFE switchboard server: Fixed type MasterPact NT/NW, ComPacT NSX or PowerPacT.

IFE Interface: Ref. LV434001
Provides an Ethernet access to a single LV circuit breaker. The circuit breaker is connected to the IFE interface via its ULP port and a prefabricated ULP cord.

IFE Switchboard Server, Ref.: LV434002
Provides an Ethernet access to one or several LV circuit breakers. It allows to interface to Ethernet:
- One single circuit breaker connected to the IFE interface via its ULP port and a prefabricated ULP cord,
- Up to 12 ComPacT NSX connected through the Modbus serial line interface.

Each ComPacT NSX is connected to Modbus by means of a dedicated IFM interface module performing the ULP/Modbus conversion.
The connection between each ComPacT NSX and its associated IFM interface is realized by a prefabricated ULP cord connected to ULP ports.

IFE Interface, IFE Switchboard Server
Provides an Ethernet access to one or several LV circuit breakers.
Functions
- Interface - one circuit breaker is connected to the IFE interface via its ULP port.
- Gateway: several circuit breakers on a Modbus network are connected via the IFE interface + gateway master Modbus port.

IFE Interface, IFE Interface + Gateway Features
- Dual 10/100 Mbps Ethernet port for simple daisy chain connection
- Device profile web service for discovery of the IFE interface, IFE interface + gateway on the LAN
- ULP compliant for localization of the IFE interface in the switchboard
- Ethernet interface for ComPacT, MasterPact and PowerPacT circuit breakers
- Gateway for Modbus-SL connected devices (IFE interface + gateway only)
- Embedded set-up web pages
- Embedded monitoring web pages
- Embedded control web pages
- Built-in e-mail alarm notification
- RBAC (Role Base Access Control) for the embedded control web pages
- RSTP (Rapid Scanning Tree Protocol) is a solution to implement redundant Ethernet networks
- Internal real-time clock with battery back-up
- RBAC (Role Base Access Control) for the embedded control web pages
- RSTP (Rapid Scanning Tree Protocol) is a solution to implement redundant
- Ethernet networks

Mounting
The IFE interface and the IFE switchboard server are DIN rail mounting devices. A stacking accessory enables the user to connect several IFMs (ULP to Modbus serial line interfaces) to an IFE switchboard server without additional wiring.

24 V DC Power Supply
The IFE interface and the IFE switchboard server must be supplied either with a 24 V DC AD or with a 24 V DC ABL8 RPS power supply. The IFMs stacked to an IFE switchboard server are supplied by the IFE, thus it is not necessary to supply them separately.
Note: The connection of the +/- of the power supply on +/- terminals of the IFE device must be strictly respected. Crossing the polarities may damage the device.

IFE Interface, IFE Switchboard Server Firmware Update
The firmware can be updated using the EcoStruxure Power Commission software.

Required Circuit Breaker Communication Modules
The connection to IFE interface or to IFE switchboard server requires ULP communication ports.
- MasterPact NT/NW (Fixed or drawout): BCM ULP communication module.
- Drawout MasterPact NT/NW: BCM ULP and its respective I/O (Input/Output) application module.

All connection configurations for MasterPact NT/NW require the breaker ULP cord. The insulated NSX cord is mandatory for system voltages greater than 480 V AC. When the second ULP RJ45 connector is not used, it must be closed with an ULP terminator (TRV00880).

Characteristic		Value
Type of interface module		Modbus RTU, RS485 serial connection Modbus TCP/IP Ethernet
Transmission	Modbus RS485	Transfer rate: 9,600...19,200 Baud Medium Double shielded twisted pair Impedance 120 Ω
	Ethernet	Transfer rate: 10/100 Mbps Medium STP, Cat5e, straight cable
Structure	Type	Modbus, Ethernet
	Method	Master/Slave
Device type	Modbus	Master
	Ethernet	Server
Turnaround time	Modbus	10 ms
	Ethernet	1 ms
Maximum length of cable	Modbus	1000 m
	Ethernet	100 m
Type of bus connector	Modbus	4-pin connector
	Ethernet	RJ45 (Shielded)

General characteristics		
Environmental characteristics		
Conforming to standards		IEC 60950, IEC 60947-6-2, UL 508, UL 60950, IACS E10
Certification		c UL us, CE, EAC, FCC marking
Ambient temperature	storage	-40 to +85 °C
	operation	-25 to +70 °C
Relative humidity		5 - 85 %
Level of pollution		Level 3
Protective treatment		ULV0 conforming to IEC/EN 60068-2-30
Mechanical characteristics		
Shock resistance		Conforming to IEC/EN 60068-2-27 15 g/11 ms, 1/2 sinusoidal
Resistance to sinusoidal vibrations		Conforming to IEC/EN 60068-2-6 5 Hz < f < 8.4 Hz
Electrical characteristics		
Consumption		150 mA at 24 V DC
Resistance to electrostatic discharge		IEC/EN 61000-4-2: ■ 8 kV air discharge ■ 6 kV contact discharge
Immunity to radiated fields		IEC/EN 61000-4-3: 10 V/m
Immunity to fast transient perturbations		IEC/EN 61000-4-4: 2 kV
Immunity to surges		IEC/EN 61000-4-5: 2 kV common mode
Immunity to conducted radio frequency field		IEC/EN 61000-4-6: 10 V
Physical characteristics		
Dimensions		72 x 105 x 71 mm
Mounting		DIN rail
Weight		182.5 g (0.41 lb)
Degree of protection of the installed I/O		■ On the front panel (wall mounted enclosure): IP4x ■ Connectors: IP2x ■ Other parts: IP3x
Connections		Screw type terminal blocks

IFE Web Page Description


Monitoring web page:
- Real time data
- Device logging.

Control web page:
- Single device control.


Diagnostics web page:
- Statistics
- Device information
- IMU information
- Read device registers
- Communication check.

Maintenance web page:
- Circuit breaker health status
- Maintenance log
- Maintenance counters.


- **Setup web page:**
- Device localization/name
- Ethernet configuration (dual port)
- IP configuration
- Modbus TCP/IP filtering
- Date and time
- E-mail server configuration
- Alarms to be e-mailed
- Device logging
- Device log export
- SNMP parameters
- Preferences
- Advanced services control
- User accounts
- Web page access.

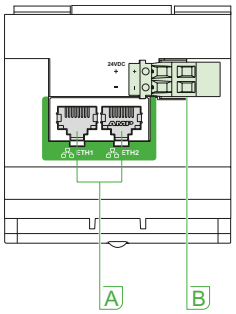

DB419230.eps

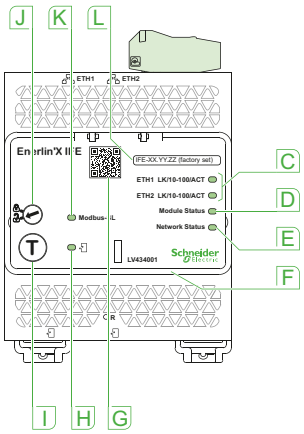

DB425732.eps

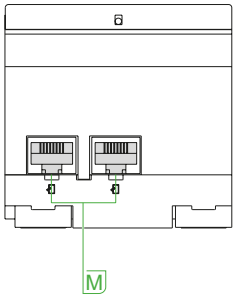

DB425733.eps

A

A Ethernet 1 and Ethernet 2 communication port
B 24 V DC power supply terminal block
C Ethernet communication LEDs:
yellow: 10 Mb
green: 100 Mb
D Module status LED:
steady off: no power
steady green: device operational
steady red: major fault
flashing green: standby
flashing red: minor fault
flashing green/red: self-test
E Network status LED:
steady off: no power/no valid IP address
steady green: connected, valid IP address
steady orange: default IP address
steady red: duplicated IP address
flashing green/red: self-test
F Sealable transparent cover
G QR code to product information
H ULP status LED
I Test button (accessible with cover closed)
J Locking pad
K Modbus traffic status LED (LV434002 only)
L Device name label
M ULP ports


Communication
IFM Modbus Communication Interface

PB119111_17.eps



IFM Modbus communication interface
Ref.: LV434000

DB425689.eps

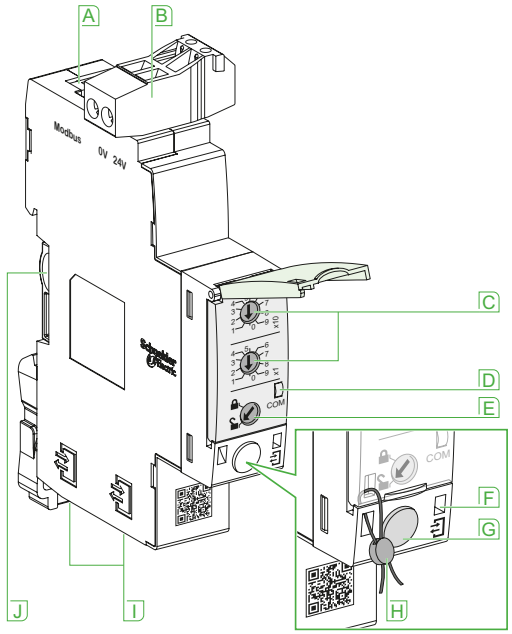

- A Modbus screw clamp connector
- B Modbus address switches
- C Modbus traffic LED
- D Modbus locking pad
- E ULP activity LED
- F Test button
- G Mechanical lock
- H ULP RJ45 connectors
- I Stacking accessory connection

Function

IFM - Modbus communication interface - is required for connecting MasterPact MTZ, NT/NW or ComPacT NS and NSX to Modbus network whenever the circuit breaker has an ULP port (Universal Logic Plug). The port is available on BCM ULP for MasterPact range and BSCM module for ComPacT range.

Note: IFM is defined as an IMU (Intelligent Modular Unit) within the ULP connection System documentation.

Once connected to IFM, the circuit breaker is considered as a slave by the Modbus master. Its electrical values, alarm status, open/close signals car be monitored or controlled by a Programmable Logic Controller or any other system.

Characteristics

ULP port

2 RJ45 sockets, internal parallel wiring.
- Connection of a single circuit breaker.
- An ULP line terminator must be connected to the second RJ45 ULP socket.

The RJ45 sockets deliver a 24 V DC supply fed from the Modbus socket.
Built-in test function, for checking the correct connection to the circuit breaker.

Modbus slave port

- Modbus Serial RJ45 port - RJ45 connector provides fast and reliable wiring.
- Lateral socket, for DIN rail stackable connector.
- Both top and lateral sockets are internally parallel wired.
- Multiple IFM can be stacked, thus sharing a common power supply and Modbus line without individual wiring.
- On the front face:
  - Modbus address setting (1 to 99): 2 coded rotary switches
  - Modbus locking pad: enables or disable the circuit breaker remote control and modification of IFM parameters.
- Self adjusting communication format (Baud rate, parity).

24 V DC power supply


- Screw clamp terminal block
- High electrical insulation between Modbus and 24 V DC connectors
- Separated lines provides improved communication robustness.

Technical Characteristics

General characteristics	
Environmental Characteristics	
Conforming to standards	IEC 61010, IEC 60950, UL 61010, UL 60950, CISPRR 22, 24, 11, IACS E10
Certification	c UL us, CE, EAC, FCC marking
Ambient temperature	-20 to +70 °C
Relative humidity	5 - 85 %
Level of pollution	Level 3
Protective treatement	ULV0 conforming to IEC/EN 60068-2-30
Mechanical characteristics	
Shock resistance	Conforming to IEC/EN 60068-2-27 15 g/11 ms, 1/2 sinusoidal
Resistance to sinusoidal vibrations	Conforming to IEC/EN 60068-2-6 5 Hz < f < 8.4 Hz
Electrical characteristics	
Consumption	30 mA at 24 V DC
Resistance to electrostatic discharge	IEC/EN 61000-4-2: 8 kV AD
Immunity to radiated fields	IEC/EN 61000-4-3: 10 V/m
Immunity to surges	IEC/EN 61000-4-5: class 2
Physical characteristics	
Dimensions	109 x 73 x 18 mm
Mounting	DIN rail
Weight	120 g
Degree of protection of the installed module	■ IP20 for connectors ■ IP30 for other areas
Connections	■ RJ45 for ULP and Modbus SL ■ Screw type terminals for Power


Simplified IFM Installation

Staking IFM

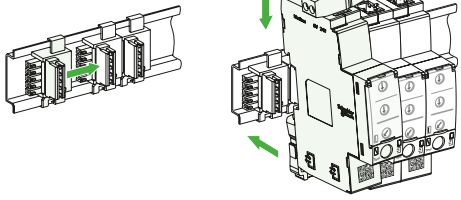

Stacking accessories — Up to 12 stacked IFM

Stacking an IFE interface + gateway with IFM

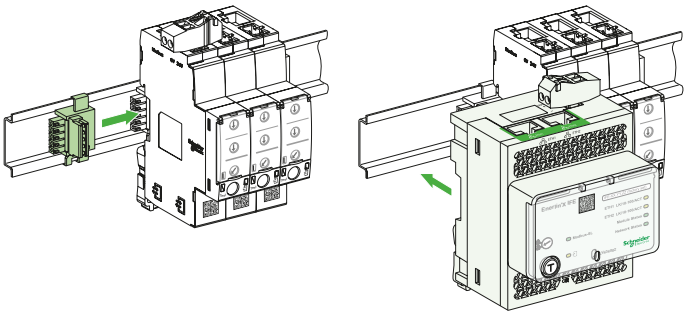

All the Master**Pact** devices can be fitted with the communication function thanks to the COM option.
Master**Pact** uses the Ethernet or Modbus communications protocol for full compatibility with the supervision management systems.
Eco COM is limited to the transmission of metering data. It is not used to communicate status and controls.

For fixed and Drawout devices, the common communication option is made up of:

- A BCM ULP module, installed behind the MicroLogic control unit and supplied with its set of sensors (OF, SDE, PF and CH micro switches) its kit for connection to XF and MX1 communicating voltage releases and its COM terminal block (inputs E1 to E6). This module is independent of the control unit. It receives and transmits information on the communication network. An infra-red link transmits data between the control unit and the communication module.
  Consumption: 30 mA, 24 V.
- IFM, this module required for connection to the network, contains the Modbus address (1 to 99) declared by the user via the two dials in front. It automatically adapts (baud rate, parity) to the Modbus network in which it is installed.

Or

- IFE, the Ethernet interface for LV circuit breaker enables an intelligent modular unit (IMU), for example a MasterPact NT/NW or ComPacT NSX circuit breaker to be connected to an Ethernet network. Each circuit breaker has its own IFE and a corresponding IP address.


For drawout device the Cradle Management option must be added:
I/O (Input/Output) application module for LV breaker, the I/O application module is delivered with withdrawable devices ordered with the COM option, for cradle management. It must be installed on a DIN rail near the device. It must be connected to the ULP system and to the position contacts (CD, CT, CE) that transmit the position of the device in the cradle.

For communicating remote control, option with XF and MX1 communicating voltage releases must be added:
The XF and MX1 communicating voltage releases are equipped for connection to the "device" communication module.
The remote-tripping function (MX2 or MN) are independent of the communication option. They are not equipped for connection to the "device" communication module.



PB106674-20.eps

BCM ULP

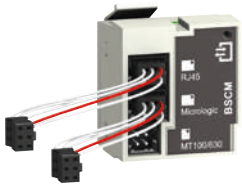

PB103786.eps

BSCM module

BSCM Module

Functions
The optional BSCM Breaker Status & Control Module is used to acquire device status indications and control the communicating remote-control function.
It includes a memory used to manage the maintenance indicators.

Status indications
Indication of device status:
O/F, SD and SDE.

Maintenance indicators
The BSCM module manages the following indicators:

- Mechanical operation counter
- Electrical operation counter
- History of status indications.

It is possible to assign an alarm to the operation counters.

Controls
The module can be used to carry out communicating remote control operations: (open, close and reset) in different modes (manual, auto).

Mounting
The BSCM module can be installed on all ComPacT NSX circuit breakers and switch-disconnectors. It simply clips into the auxiliary contact slots. It occupies the slots of one O/F contact and one SDE contact. The BSCM is supplied with 24 V DC power automatically via the NSX cord when the communication system is installed.

Communication
I/O Application Module

PB119234_1.eps



I/O application module

I/O Application Module Description

Description

The I/O input/output application module for LV breaker is one of the components of ULP architecture. Built in functionalities and applications enhance control and monitoring needs.
ULP system architecture including I/O modules can be built without any restrictions using a wide range of circuit breakers:

- MasterPact MTZ1/MTZ2/MTZ3/NT/NW
- ComPacT NS1600b-3200
- ComPacT NS630b-1600
- ComPacT NSX100-630 A.

The I/O application module is compliant with the ULP system specifications.
Two I/O application modules can be connected in the same ULP architecture.

I/O input/output interface for LV breaker resources

The I/O application module resources are the following:


- 6 digital inputs that are self powered for either NO and NC dry contact or pulse counter
- 3 digital outputs that are bistable relay (5 A maximum)
- 1 analog input for Pt100 temperature sensor.

Pre-defined applications


Pre-defined applications improve the IMU approach (Intelligent Modular Unit) in a simple way.
A 9-position rotary switch on the front of the I/O module allows to select the pre-defined applications. Each position is assigned to a pre-defined application except position 9 which allows the user to define a specific application by means of the customer engineering tool. The switch is set in factory to the pre-defined application 1.

For each application the input/output assignment and the wiring diagram are pre-defined. No additional setting with the customer engineering tool is required.
The I/O and other resources not assigned to the pre-defined applications are free for user specific applications.


DB419578.eps

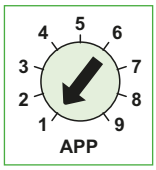

DB419579.eps

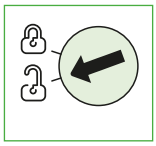

DB419580.eps

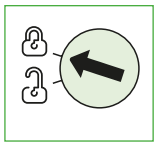

User applications

The user applications with the corresponding resources are defined by means of EcoStruxure Power Commission engineering tool. They use the resources not assigned to the predefined applications. User applications may be required for:

- Protection improvement
- Circuit breaker control
- Motor control
- Energy management
- Monitoring.

24 V DC power supply

The I/O module must be supplied either with a 24 V DC AD or with a 24 V DC ABL8 RPS power supply.

Note: The connection of the +/- of the power supply on +/- terminals of the I/O module must be strictly respected. Crossing the polarities may damage the device.

Mounting

The I/O is a DIN rail mounting device.

Setting Locking Pad

The setting locking pad on the front panel of the I/O enables the setting of the I/O by EcoStruxure Power Commission engineering tool.

A

General characteristics

Environmental characteristics

Conforming to standards		IEC 60950, IEC 60947-6-2, UL 508, UL 60950, IACS E10
Certification		c UL us, CE, EAC, FCC marking
Ambient temperature	storage	-40 to +85 °C
	operation	-25 to +70 °C
Relative humidity		5 - 85 %
Level of pollution		Level 3
Protective treatment		ULV0 conforming to IEC/EN 60068-2-30

Mechanical characteristics

Shock resistance	Conforming to IEC/EN 60068-2-27 15 g/11 ms, 1/2 sinusoidal
Resistance to sinusoidal vibrations	Conforming to IEC/EN 60068-2-6 5 Hz < f < 8.4 Hz

Electrical characteristics

Consumption	165 mA at 24 V DC
Resistance to electrostatic discharge	IEC/EN 61000-4-2: ■ 8 kV air discharge ■ 6 kV contact discharge
Immunity to radiated fields	IEC/EN 61000-4-3: 10 V/m
Immunity to fast transient perturbations	IEC/EN 61000-4-4: 2 kV
Immunity to surges	IEC/EN 61000-4-5: 2 kV common mode
Immunity to conducted radio frequency field	IEC/EN 61000-4-6: 10 V

Physical characteristics

Dimensions	71.7 x 116 x 70.6 mm
Mounting	DIN rail
Weight	229.5 g (0.51 lb)
Degree of protection of the installed I/O application module	On the front panel (wall mounted enclosure): IP4x I/O parts: IP3x Connectors: IP2x
Connections	Screw type terminal blocks

Digital inputs

Digital input type	Self powered digital input with current limitations as per IEC 61131-2 type 2 standards (7 mA)
Input limit values at state 1 (close)	19.8 - 25.2 V DC, 6.1 - 8.8 mA
Input limit values at state 0 (open)	0 - 19.8 V DC, 0 mA
Maximum cable length	10 m

Note: For a length greater than 10 m and up to 300 m, it is mandatory to use a shielded twisted cable. The shield cable is connected to the I/O functional ground of the I/O application module.


Digital outputs

Digital output type	Bistable relay
Rated voltage	250 V AC maximum [1]/30 V DC
Rated carry current	5 A
Contact resistance	30 mΩ
Maximum operating frequency	18000 operations/hr (Mechanical) 1800 operations/hr (Electrical)
Digital output relay protection by an external fuse	External fuse of 5 A or less
Maximum cable length	10 m


Analog inputs

I/O application module analog input can be connected to a Pt100 temperature sensor.


Range	-30 to 200 °C	-22 to 392 °F
Accuracy	±2 °C from -30 to 20 °C ±1 °C from 20 to 140 °C ±2 °C from 140 to 200 °C	±3.6 °F from -22 to 68 °F ±1.8 °F from 68 to 284 °F ±3.6 °F from 284 to 392 °F
Refresh interval	5 s	5 s

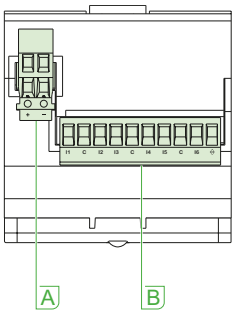

DB419233.eps

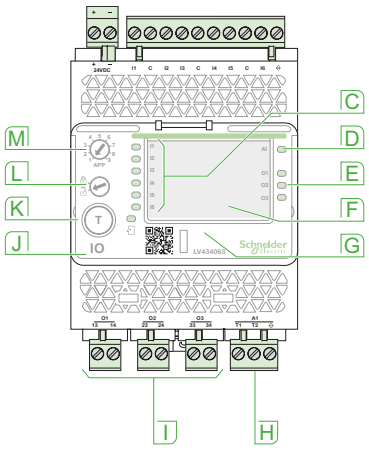

DB432536.eps

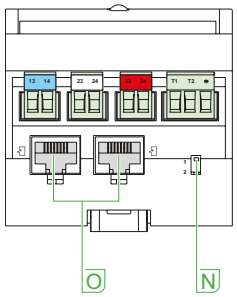

DB419235.eps

A 24 V DC power supply terminal block
B Digital input terminal block: 6 inputs, 3 commons and 1 shield
C 6 input status LEDs
D Analog input status LED
E 3 output status LEDs
F I/O application module identification labels
G Sealable transparent cover
H Analog input terminal block
I Digital output terminal blocks
J ULP status LED
K Test/reset button (accessible with cover closed)
L Setting locking pad
M Application rotary switch: 1 to 9
N Switch for I/O addressing (I/O 1 or I/O 2)
O ULP connectors

[1] 250 V AC OVC 2 according IEC/EN 60947-2 . For OVC 3 and 4 surge arresters are required on the polarizing voltage of the output contacts.

Communication

Communications Modules, IFM and IFE for Com**PacT** NSX

All Com**PacT** NSX devices can be equipped with the communication function via a prewired connection system and a Modbus or Ethernet network interface.
The interface can be connected directly or via the FDM121 switchboard display unit. Four functional levels can be combined to adapt to all supervision requirements.

Four Functional Levels

The ComPacT NSX can be integrated in a Modbus or Ethernet communication environment. Four functional levels can be used separately or combined.

Communication of status indications
This level is compatible with all ComPacT NSX circuit breakers, whatever the trip unit, and with all switch-disconnectors. Using the BSCM module, the following information is accessible:
- ON/OFF position (O/F)
- Trip indication (SD)
- Fault-trip indication (SDE).

Communication of commands
Also available on all circuit breakers and switch-disconnectors, this level (communicating remote control) can be used to:
- Open
- Close
- Reset.

Modbus principle
The Modbus RS 485 (RTU protocol) system is an open bus on which communicating Modbus devices (ComPacT NS with Modbus COM, Power Meter PM700, PM800, Sepam, Vigilohm, ComPacT NSX, etc.) are installed. All types of PLCs and microcomputers may be connected to the bus.

Addresses
The Modbus communication parameters (address, baud rate, parity) are entered using the Electrical Asset Manager or RSU (Remote Setting Utility).

Number of devices
The maximum number of devices that may be connected to the Modbus bus depends on the type of device (ComPacT with Modbus COM, PM700, PM800, Sepam, Vigilohm, ComPacT NSX, etc.), the baud rate (19200 is recommended), the volume of data exchanged and the desired response time. The RS 485 physical layer offers up to 32 connection points on the bus (1 master, 31 slaves).
A fixed device requires only one connection point (communication module on the device). A drawout device uses two connection points (communication modules on the device and on the chassis).
The number must never exceed 31 fixed devices or 15 drawout devices.

Length of bus
The maximum recommended length for the Modbus bus is 1200 meters.

Bus power source
A 24 V DC power supply is required (less than 20 % ripple, insulation class II).

Ethernet Principle

Ethernet is a data link and physical layer protocol defined by IEEE 802 10 and 100 Mbps specifications that connects computer or other Ethernet devices. Ethernet is an asynchronous Carrier Sense Multiple Access with Collision detection (referred as CSMA/CD) protocol. Carrier Sense means that the hosts can detect whether the medium (coaxial cable) is idle or busy. Multiple Access means that multiple hosts can be connected to the common medium. Collision Detection means a host detects whether its transmission has collided with the transmission of another host (or hosts). IFE Ethernet interface can be connected to a PC or a laptop over Ethernet. The maximum length of Ethernet cable is 100 meters. IFE Ethernet interface + gateway provides a Modbus TCP/IP gateway over Ethernet to enable Modbus TCP communication from a Modbus TCP master to any Modbus slave devices connected to it. The maximum active Modbus TCP client connection is twelve.
IFE Ethernet interface has an embedded web server (web page).
The Modbus RS 485 (RTU protocol) system is an open bus on which communicating Modbus devices (ComPacT NS with Modbus COM, Power Meter PM700, PM800, Sepam, Vigilohm, ComPacT NSX, etc.) are installed. All types of PLCs and microcomputers may be connected to the bus.


A

Connections

- ■ ComPacT NSX is connected to the I/O application module or FDM121 display unit via the internal terminal block for the NSX cord equipped with an RJ45 connector:
- □ Cord available in three lengths: 0.35 m, 1.3 m and 3 m
- □ Insulated 1.3 m version for installations > 480 V AC
- □ Lengths up to 10 m possible using extensions.
- ■ The FDM121 display unit and the I/O application module are connected to:
- □ The IFM Modbus interface by a communication cable with RJ45 connectors on both ends


  or
- □ The IFE Ethernet interface module by a communication cable with RJ45 connectors on both ends.

DB431742.eps

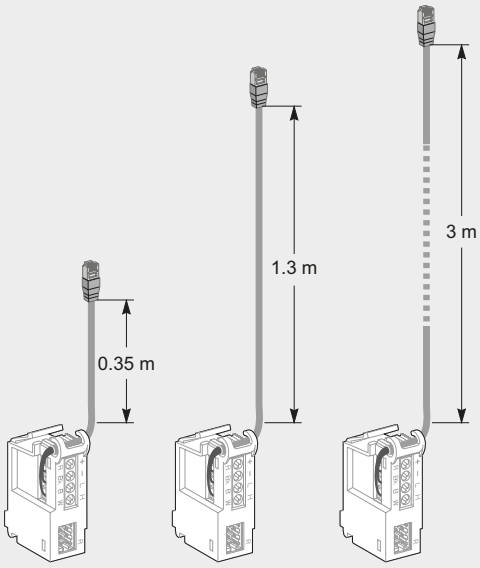


Communication Components and Connections, IFM

DB437970.ai

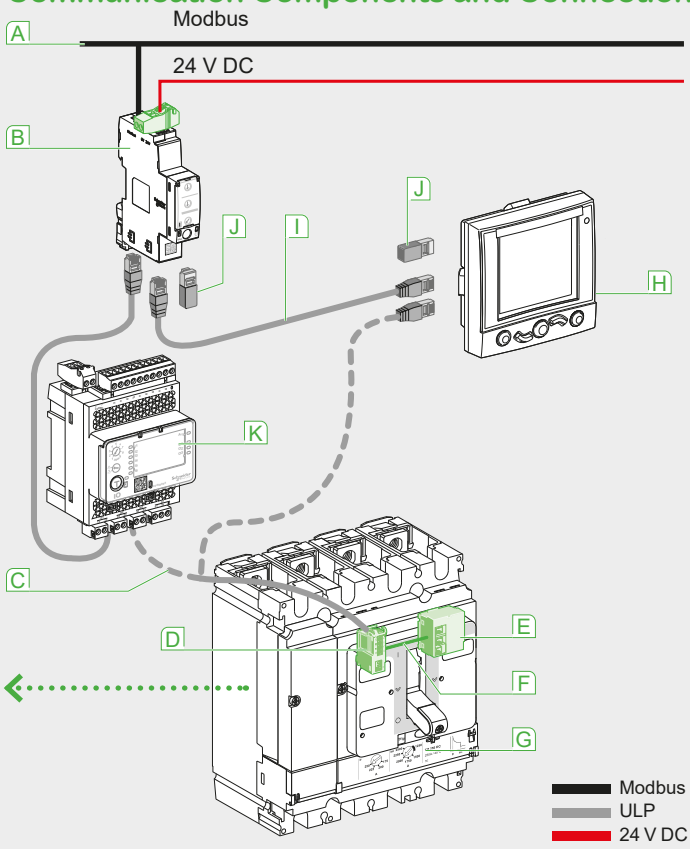

Communication Components and Connections, IFE

DB437971.ai

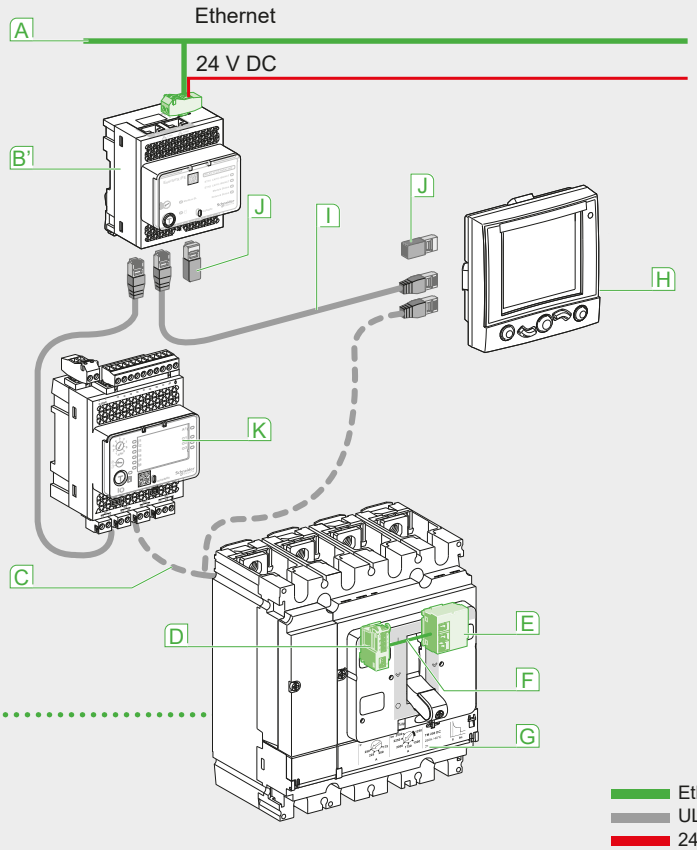


- A Modbus network
- B IFM Modbus interface
- B' IFE Ethernet interface module
- C NSX cord
- D Internal terminal block for communication via NSX cord
- E BSCM module
- F Prefabricated wiring
- G TMD trip unit
- H FDM121 display
- I RJ45 cable
- J Line terminator (on unused connector if applicable)
- K I/O application module

Communication


Connection of the IFE to a Fixed or Drawout Master**Pact** NW

Connect the IFE to a fixed electrically operated MasterPact NW or circuit breaker using the breaker ULP cord

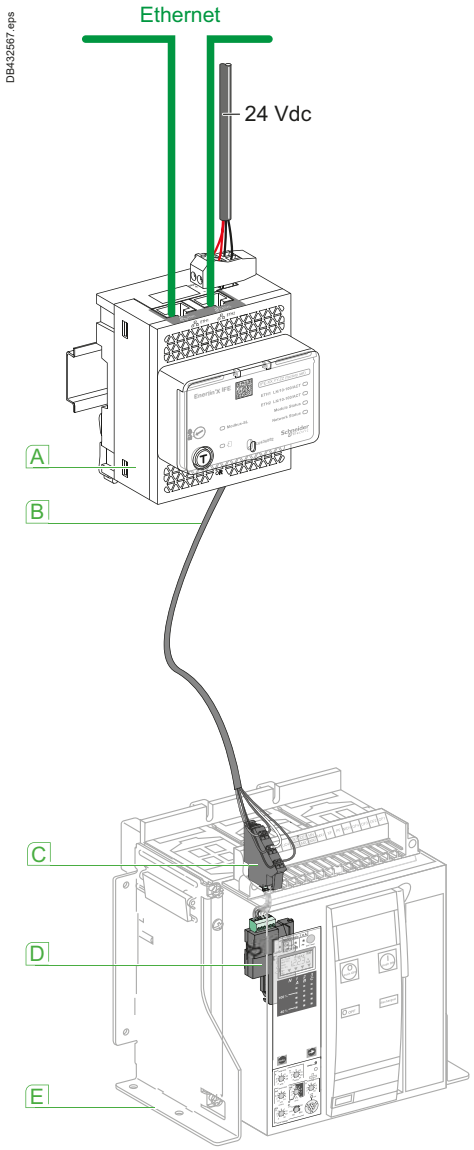

A IFE Ethernet interface for LV circuit breaker
B Breaker ULP cord
C Fixed COM terminal block
D BCM ULP communication module
E Fixed electrically operated circuit breaker

Connect the IFE to a drawout MasterPact NW or circuit breaker using the breaker ULP cord

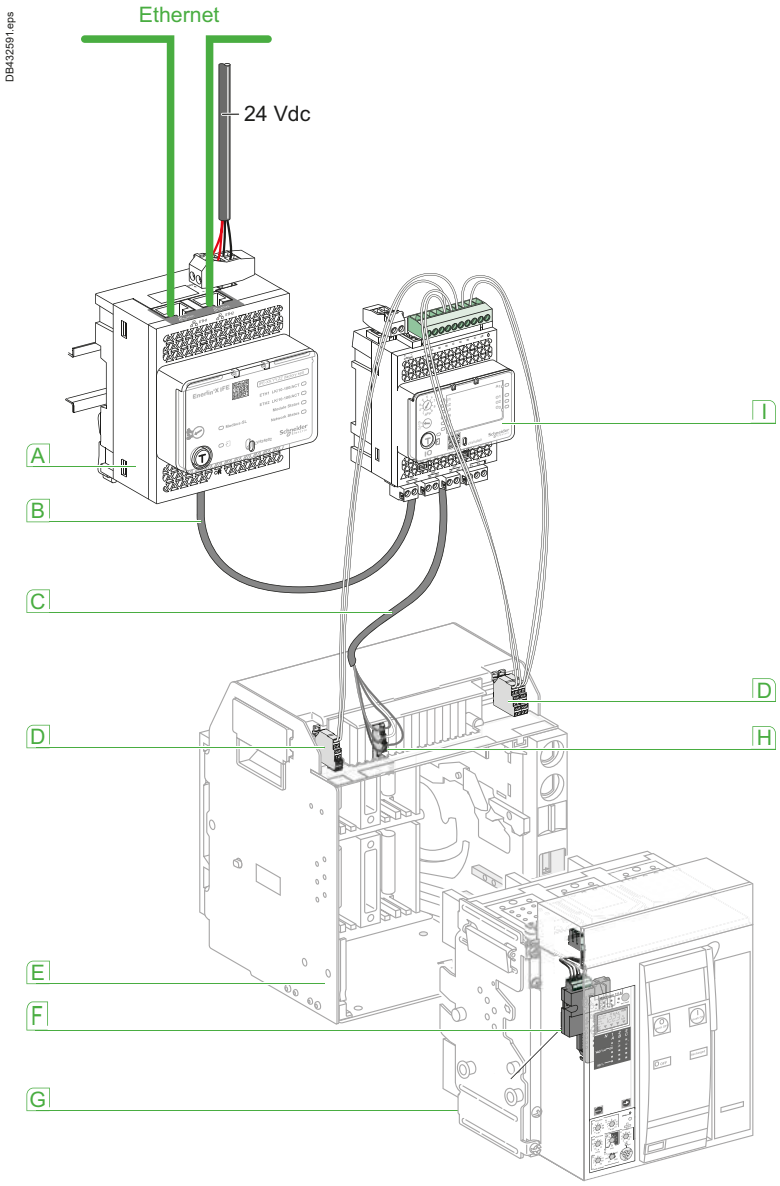


A IFE Ethernet interface for LV circuit breaker
B ULP cable
C Breaker ULP cord
D Drawout device position contacts
E Circuit breaker cradle
F BCM ULP communication module
G Drawout circuit breaker
H Drawout COM terminal block
I I/O (Input/Output) application module for LV circuit breaker

Communication


Connection of the IFM to a Fixed or Drawout MasterPact NW

Connect the IFM to a fixed electrically operated MasterPact NW or circuit breaker using the breaker ULP cord

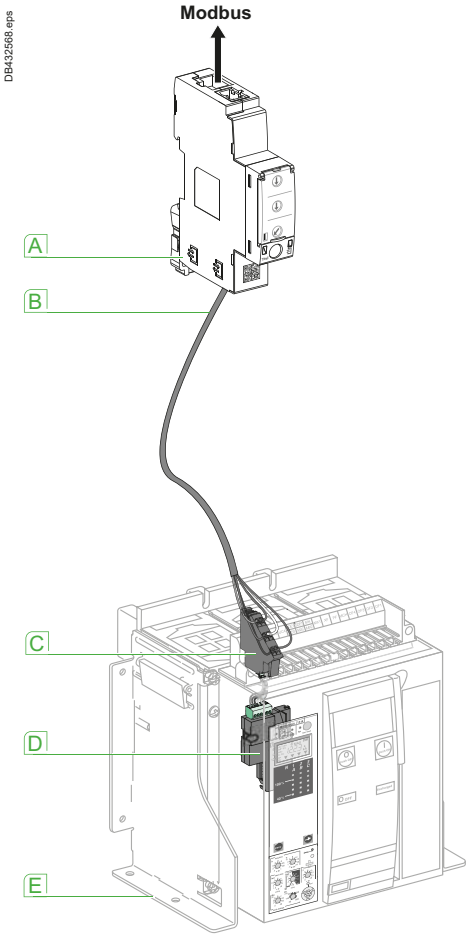

A IFM Ethernet interface for LV circuit breaker
B Breaker ULP cord
C Fixed COM terminal block
D BCM ULP communication module
E Fixed electrically operated circuit breaker

Connect the IFM to a drawout MasterPact NW or circuit breaker using the breaker ULP cord

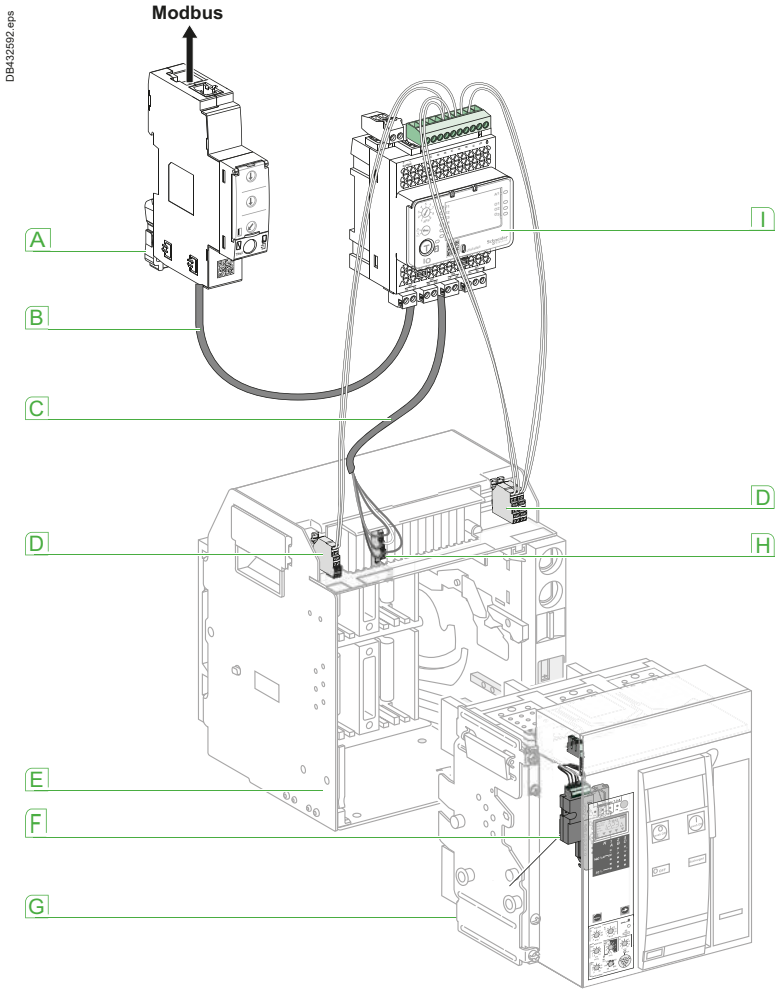


A IFM Ethernet interface for LV circuit breaker
B ULP cable
C Breaker ULP cord
D Drawout device position contacts
E Circuit breaker cradle
F BCM ULP communication module
G Drawout circuit breaker
H Drawout COM terminal block
I I/O (Input/Output) application module for LV circuit breaker


Communication

Electrical Asset Manager Configuration Engineering Tool


Capture1b.eps

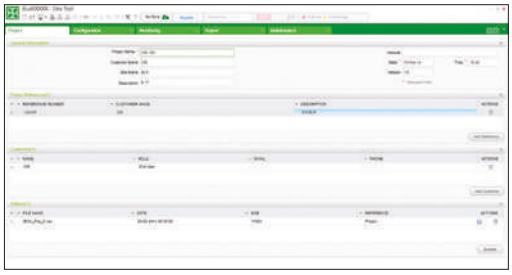


Capture2b.eps

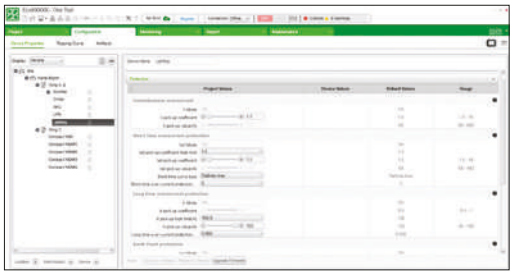

Capture3b.eps

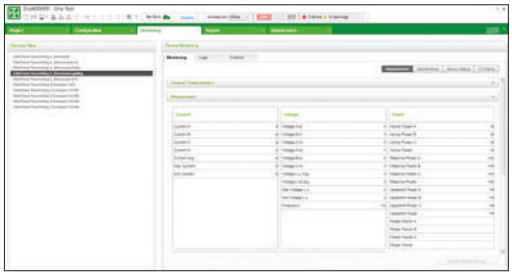

Capture4b.eps

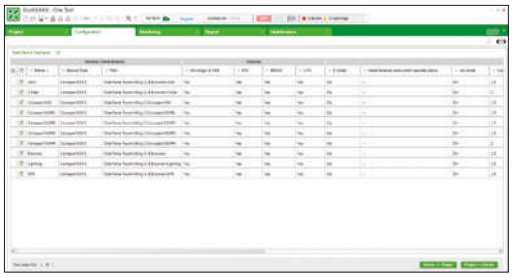

Introduction

Electrical Asset Manager is a software application that helps the user to manage a project as part of designing, testing, site commissioning, and maintenance of the project life cycle.
It enables the user to prepare the settings of the devices offline (without connecting to the device) and configure them when connected with the devices.
It also provides several other value added features for the user to manage the project such as: repository in cloud, attach artifacts to each device or at the project level, organize devices in switchboard wise, manage a hierarchical structure of the installation.

Compatible Devices (Configuration and Device Management)

Electrical Asset Manager is compatible with the following devices:

- ComPacT NSX100-630 (IEC)
- PowerPacTTM (UL) circuit breaker
- ComPacT NS630b-3200 (IEC)
- MasterPact NT/NW (IEC and UL) circuit breaker
- Acti**9** Smartlink.
- Compatible devices (Device Management in the project)
- Switch disconnectors (ComPacT NSX, MasterPact & PowerPacT Family)
- Third party devices.

References:
Electrical Asset Manager software package can be downloaded from our website www.schneider-electric.com.

Features

Electrical Asset Manager supersedes the Schneider Electric customer engineering tools such as Remote setting Utility (RSU) and Remote Control Utility (RCU) with additional features.

Electrical Asset Manager supports the connection of Schneider Electric communicable devices to:

- Create projects by device discovery, selection of devices, and import Bill of Material (BOM)
- Monitor the status of protection and IO status
- Read information (alarms, measurements, parameters)
- Check protection selectivity between two devices
- Upload and download of configuration or settings in batch mode to multiple devices.
- Carry out commands and tests
- Generate and print device settings report and communication test report
- Manage multiple devices with electrical and communication hierarchy model
- Manage artifacts (project documents)
- Check consistency in settings between devices on a communication network
- Compare configuration settings between PC and device (online)
- Download latest firmware.

Electrical Asset Manager enables the user to avail the advanced features of the software once the project is saved in Schneider Electric cloud.

Functions

Offline Mode
A project can be built in offline mode through 2 different ways:
- Through BOM file import
- Through Device Selection.


Additionally, the user can open an existing project and modify the settings offline. The user can do the selectivity curve check and firmware compatibility check for devices in the project.


Online Mode
A project can be built in online mode through device discovery also other than the methods possible through offline method.
Once the project is built, the following functions can be performed in addition to the functions available in offline mode:
- Compare the device parameters with project parameters
- Load parameters from project to the device and vice versa
- Firmware downloads to the device
- Monitor the measurement, maintenance, device status and I/O status
- Control functions.


User Interface
Electrical Asset Manager software provides fast direct access to the project and the devices in the project through different tabs.
- Project: to provide the project information including customer details, project references and to add project artifacts (documents related to the project).
- Configuration: to build up the tree structure of the project architecture ; to have a table view of the devices added in the project ; to set the parameters of the devices ; to transfer the device settings ; to view the tripping curves; to attach device artifacts and to download the latest firmware, to do the communication test for all the devices and generate the test report.
- Monitoring: this allows the user to monitor the real time values of different devices through different sub tabs namely Monitoring, Logs and Control.
- Reports: report tab allows you to generate and print a report of the project settings from the report tab. The user details and project characteristics are automatically filled with the details entered in the Project page.



Capture5b.eps

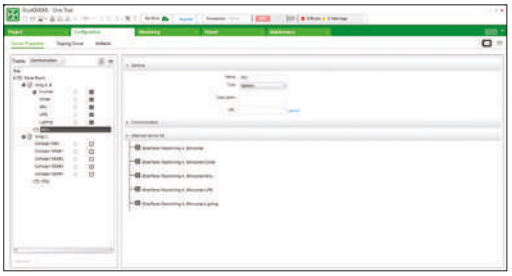
Capture6b.eps

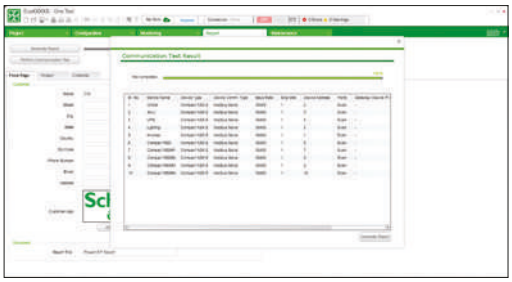
Capture7b.eps

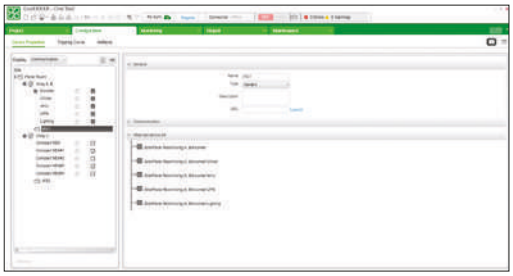

Capture8b.eps

General Characteristics of MasterPact NW DC, EPDC, DC PV

Operating Conditions

MasterPact circuit breakers have been tested for operation in industrial atmospheres. It is recommended that the equipment be cooled or heated to the proper operating temperature and kept free of excessive vibration and dust.

DB431749.eps

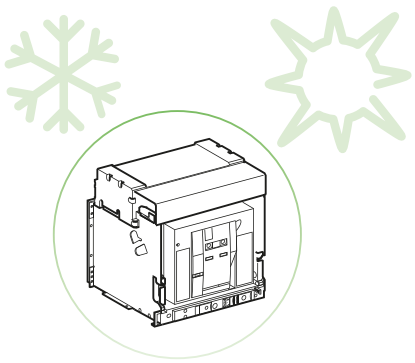


Ambient Temperature

MasterPact devices can operate under the following temperature conditions:
- The electrical and mechanical characteristics are stipulated for an ambient temperature of -25 °C to +70 °C
- Circuit breaker closing is ensure down to -35 °C by manual operation (push button).

Storage conditions are as follows:
- -40 to +85 °C for a MasterPact device without its control unit
- -25 °C to +85 °C for the control unit.

DB431750.eps

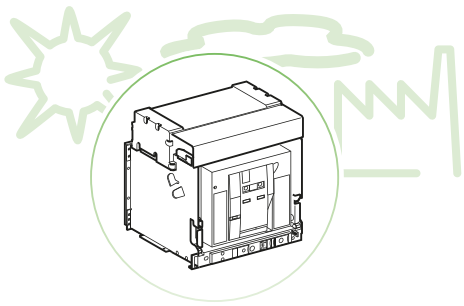


Severe Atmospheric Conditions

MasterPact devices have successfully passed the tests defined by the following standards for severe atmospheric conditions:
- IEC 60068-2-1: dry cold at -40 °C
- IEC 60068-2-2: dry heat at +85 °C
- IEC 60068-2-30: damp heat (temperature +55 °C, relative humidity 95 %)
- IEC 60068-2-52 level 2: salt mist.

MasterPact devices can operate in the industrial environments defined by standard IEC 60947 (pollution degree up to 3).
It is nonetheless advised to check that the devices are installed in suitably cooled switchboards without excessive dust.

DB431751.eps

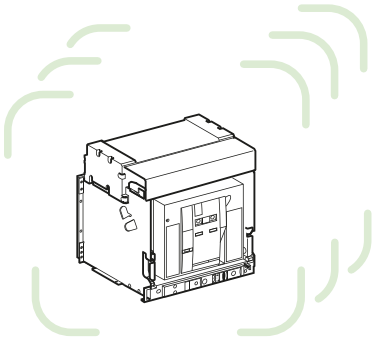

Vibrations

MasterPact devices have successfully passed testing in compliance with IEC 60068-2-6 for the following vibration levels:
- 2 to 13.2 Hz: amplitude ±1 mm
- 13.2 to 100 Hz: constant acceleration 0.7 g.

Vibration testing to these levels is required by merchant marine inspection organizations (Veritas, Lloyd's, etc). Some applications have vibration profiles outside of this standard and require special attention during application design, installation, and use. Excessive vibration may cause unexpected tripping, damage to connections or to other mechanical parts. Please refer to the MasterPact maintenance guide (causes of accelerated ageing/operating conditions/vibrations) for additional information.
Examples of applications with high vibration profiles could include:
- Wind turbines
- Power frequency converters that are installed in the same switchboard or close proximity to the MasterPact circuit breaker
- Emergency generators
- High vibration marine applications such as thrusters, anchor positioning systems, etc.

General Characteristics of MasterPact NW DC, EPDC, DC PV


MasterPact NW DC, EPDC, DC PV

Altitude

At altitudes higher than 2000 metres, the modifications in the ambient air (electrical resistance, cooling capacity) lower the following characteristics as follows:

Altitude (m)		2000	3000	4000	5000
NW DC					
Impulse withstand voltage Uimp (kV)		12	10.6	9.5	8.4
Rated insulation voltage (Ui)		1000	900	800	700
Maximum rated operationnal voltage 50/60 Hz Ue (V)	NW DC ≤500 V	500	450	390	350
	NW DC 500-900 V	900	800	700	630
Rated current (A) at 40 °C		1 x In	0.98 x In	0.96 x In	0.94 x In
NW DC PV					
Impulse withstand voltage Uimp (kV)		12	10.6	9.5	8.4
Rated insulation voltage (Ui)		1000	1000	950	850
Maximum rated operationnal DC voltage		1000	1000	950	850
Rated current (A) at 40 °C		1 x In	0.98 x In	0.96 x In	0.94 x In

Intermediate values may be obtained by interpolation.

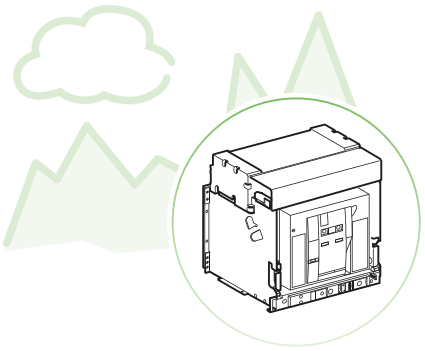


Electromagnetic Disturbances

MasterPact NW DC devices are protected against:
- Overvoltages caused by devices that generate electromagnetic disturbances
- Overvoltages caused by atmospheric disturbances or by a distribution-system outage (e.g. failure of a lighting system)
- Devices emitting radio waves (radios, walkie-talkies, radar, etc.)
- Electrostatic discharges produced by users.

MasterPact NW DC devices have successfully passed the electromagnetic-compatibility tests (EMC) defined by the following international standards:
- IEC 60947-2, appendix F
- IEC 60947-2, appendix B (trip units with earth-leakage function).

The above tests ensure that:
- No nuisance tripping occurs
- Tripping times are respected.

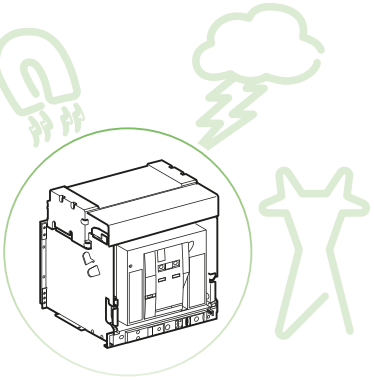


Degree of Protection

MasterPact NW DC circuit breakers offer the following protection characteristics depending on the installation conditions:
- IP: degree of protection (standard IEC 60529)
- IK: protection against external mechanical imPacTs (standard EN 50102).

MasterPact NW DC

Circuit breaker installed in a switchboard

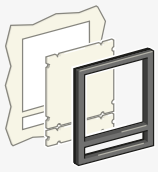

Bare circuit breaker	IP30	
Escutcheon (CDP) for fixed and drawout versions, with blanking plate	IP40	IK07



Transparent cover (CCP) for escutcheon for drawout version	IP54	IK10

General Characteristics of MasterPact NW DC, EPDC, DC PV

MasterPact NW10 to NW40 DC

PB104917.eps



NW10 DC 3P

PB105024_42.eps



NW10 DC 4P

A

MasterPact NW DC Circuit Breaker					
Poles coupling version					C or D (3 poles)
					E (4 poles)
Electrical Characteristics As Per IEC 60947-1/ 60947-2 and EN 60947-1/60947-2					
Rated current at 40 °C/50 °C [1]		**In**	(A)		
Rated insulation voltage		**Ui**	(V)		
Rated impulse withstand voltage		**Uimp**	(kV peak)		
Rated operational voltage		**Ue**	(V DC)		
Type of circuit breaker					
Ultimate breaking capacity	L/R = 5 ms	**Icu**	(kA)	V DC	500
					750
					900
	L/R = 15 ms	**Icu**			500
					750
					900
	L/R = 30 ms	**Icu**			500
					750
					900
Service breaking capacity		**Ics**	% Icu		
Rated making capacity		**Icm**	% Icu		
Short-time withstand current		**Icw**	1 s		
Utilization category					
Breaking time			(ms)		
Making time			(ms)		
Suitability for isolation					
Pollution degree (as per IEC 60664-1)					
Protection against overcurrents (see trip-unit table page D-12)					
Trip units					Built-in
Protection					Overloads
					Short-circuits
Durability					
(O/C cycles)	Mechanical	With maintenance			
		Without maintenance			
	Electrical	Without maintenance			500 V DC
					900 V DC
Indication and control auxiliaries					
Auxiliary contacts					
Voltage release		MX shunt release			
		MN undervoltage release			
Switch-Disconnector As Per IEC 60947-3 and EN 60947-3					
Type of switch-disconnector					
Rated making capacity		**Icm**	(kA)		
Rated short-time withstand current		**Icw**	(kA)		1 s
Unprotected Circuit Breaker (500 V DC Only)					
Tripping by Shunt Trip As Per IEC 60947-2					
Type of unprotected circuit breaker					
Ultimate breaking capacity	L/R = 6.5 ms	**Icu**	(kA)		500 V DC
Short-time withstand current		**Icw**	(kA)	1 s	
Ultimate breaking capacity	L/R = 15 ms	**Icu**	(kA)		500 V DC
Short-time withstand current		**Icw**	(kA)	1 s	
Service breaking capacity		**Ics**	% Icu		
Overload and short-circuit protection					
External protection relay: short-circuit protection, maximum delay: 500 ms					
Installation and Connections					
Connection	Drawout	3P	RC		Horizontal
		4P			Vertical
	Fixed	3P	RC		Horizontal
		4P			Vertical
Dimensions and Weight					
Dimensions H x W x D (mm) connected in series	Drawout	3P			
		4P			
	Fixed	3P			
		4P			
Weight (kg) connected in series (approximate values)	Drawout	3P			
		4P			
	Fixed	3P			
		4P			

[1] 50 °C - see the derating table for the NW40 DC.

General Characteristics of MasterPact NW DC, EPDC, DC PV

MasterPact NW10 to NW40 DC

	NW10 DC		NW20 DC		NW40 DC	
	◉		◉		◉	
	◉		◉		◉	
	1000		2000		4000	
	1000		1000		1000	
	12		12		12	
	500/900		500/900		500/900	
	N	**H**	**N**	**H**	**N**	**H**
	85	100	85	100	85	100
	-	85	-	85	-	85
	-	85	-	85	-	85
	35	85	35	85	35	85
	-	50	-	50	-	50
	-	35	-	35	-	35
	25	50	25	50	25	50
	-	50	-	50	-	50
	-	25	-	25	-	25
	100 %					
	100 %					
	50	85	50	85	50	85
	B					
	30 to 75					
	< 70					
	◉	◉	◉	◉	◉	◉
	3					
	◉	◉	◉	◉	◉	◉
	-	-	-	-	-	-
	◉	◉	◉	◉	◉	◉
	20000					
	10000					
	8500		5000		2000	
	-	2000	-	2000	-	1000
	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	◉	◉

		HA		HA		HA
	-	85	-	85	-	85
	-	85	-	85	-	85

	NW10 HADC-C 500V DC	NW20 HADC-C 500V DC	NW40 HADC-C 500V DC
	85	85	85
	85	85	85
	65	65	65
	65	65	65
	100 %		
	-	-	-

	◉	◉	◉	◉	-	-
	◉	◉	◉	◉	◉	◉
	◉	◉	◉	◉	-	-
	◉	◉	◉	◉	◉	◉

	439 x 441 x 494	439 x 441 x 594
	439 x 556 x 494	439 x 556 x 594
	352 x 422 x 427	352 x 422 x 527
	352 x 537 x 427	352 x 537 x 527
	90 to 116	
	125 to 146	
	60 to 86	
	85 to 106	

Trip-Unit Characteristics
Trip Units for Master**Pact** NW DC, EPDC


All Master**Pact** NW DC devices are equipped with a MicroLogic 1.0 DC control unit.

A

PB101139-32R.eps



DB431754.eps

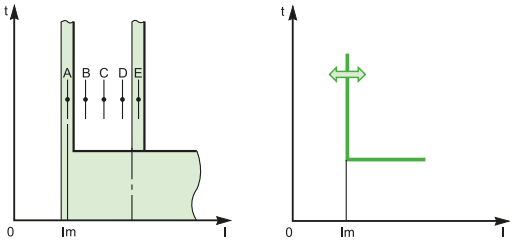

Magnetic pick-up value

Protection Using the MicroLogic 1.0 DC Control Unit

MasterPact NW DC circuit breakers use MicroLogic 1.0 DC control units.
These interchangeable units with instantaneous thresholds, operating with electromagnetic sensors, can be adjusted on site.
The circuit breakers can be used with the three versions of sensors, defined by their setting range.


Type of sensor	1250/2500 A	2500/5400 A	5000/11000 A
MasterPact NW10 DC	◉	◉	◉
MasterPact NW20 DC	-	◉	◉
MasterPact NW40 DC	-	-	◉

Adjustments

Settings for MasterPact NW DC circuit breakers may be accessed from the front, with the switchboard door open.

- Settings are made for the input (+ pole) and the output (- pole).
- The setting range comprises eleven positions, plus five preferential settings marked **A**, **B**, **C**, **D** and **E**.
- The setting values for the two corresponding sensors must be identical.

DB431755.eps

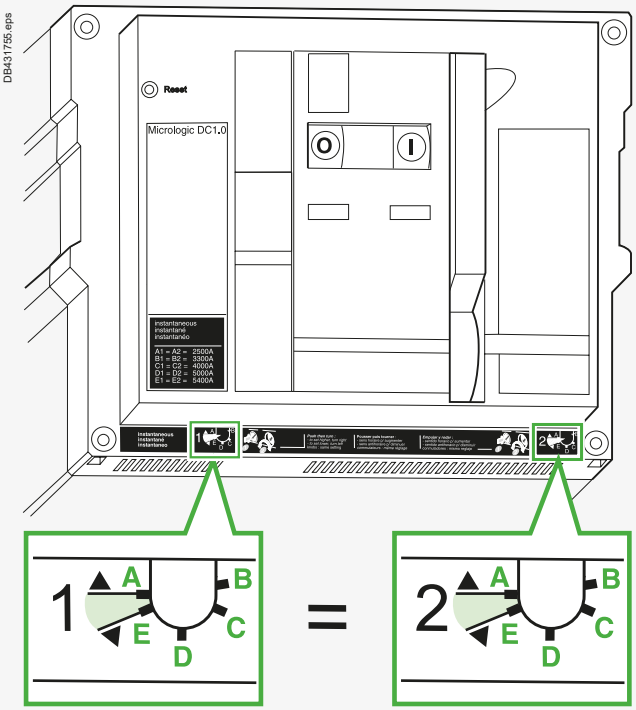


Two identical settings

Setting Values for Magnetic Pick-up Ii


Settings Marked A, B, C, D and E

Sensor versions	Minimum Settings A1 and A2	Settings B1 and B2	Settings C1 and C2	Settings D1 and D2	Maximum Settings E1 and E2
1250/2500	1250 A	1500 A	1600 A	2000 A	2500 A
2500/5400	2500 A	3300 A	4000 A	5000 A	5400 A
5000/11000	5000 A	8000 A	10000 A	11000 A	11000 A
Tolerances	±8 %	±10 %	±10 %	±10 %	±10 %

DB431756.eps

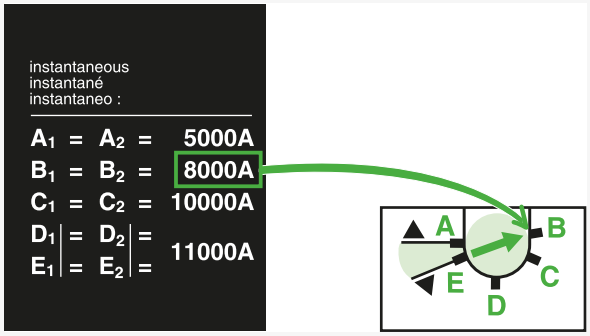


DB104542.eps

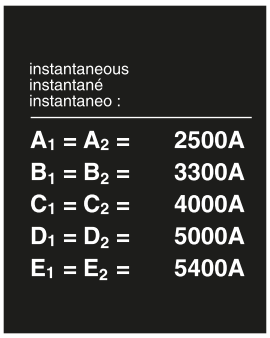

Intermediate Settings

It is possible to set eleven other (unmarked) intermediate values.

DB431757.eps

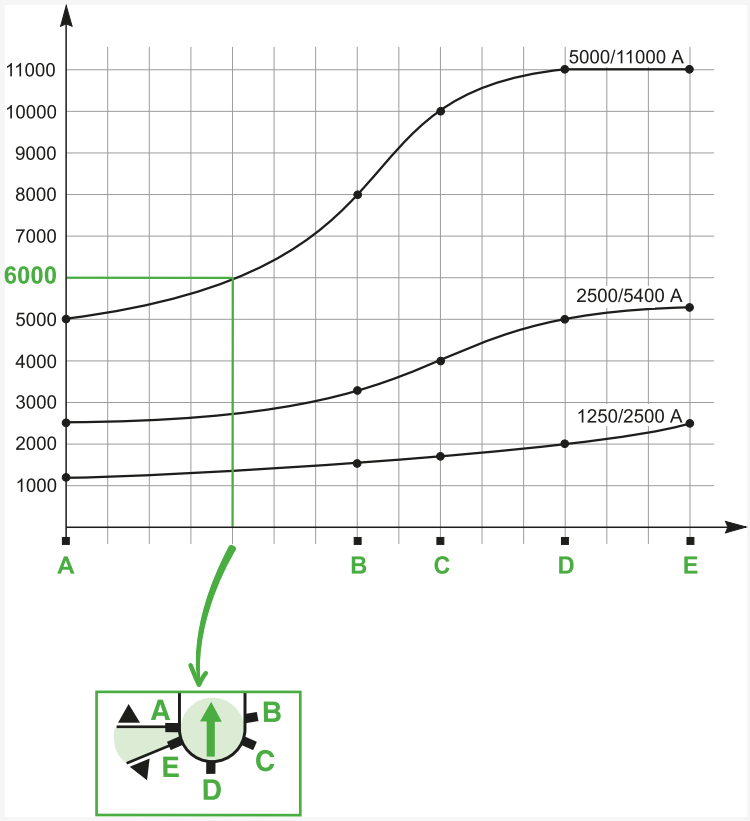


Switch-Disconnectors for PV Application
Master**Pact** NW HADCD-PV

PB113343_32.eps




MasterPact NW20
HADCD-PV

DB416572.eps

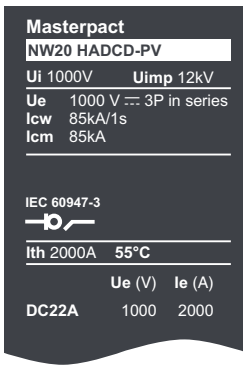

MasterPact NW20
HADCD-PV rating plate

DB416460.eps

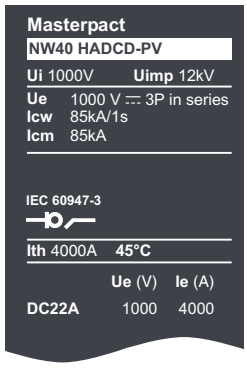


MasterPact NW40
HADCD-PV rating plate

MasterPact NW HADCD-PV Switch-Disconnectors for PV Application				NW20 HADCD-PV	NW40 HADCD-PV
Poles coupling version		D (3 poles)		◉	◉
Electrical Characteristics As Per IEC 60947-1/60947-3 and EN 60947-1/60947-3					
Rated current at 40/45 °C	In	(A)		2000	4000
Rated insulation voltage	Ui	(V)		1000	1000
Rated impulse withstand voltage	Uimp	(kV peak)		12	12
Rated operational voltage	Ue	(V DC)		1000 [1]	1000 [1]
Switch-disconnector as per IEC 60947-3 and EN 60947-3					
Rated making capacity	Icm	(kA)		85	85
Rated short-time withstand current	Icw	(kA/1 s)		85	85
Utilization category				DC-22A	DC-22A
Durability					
(O/C cycles)	Mechanical	with maintenance		20000	20000
		without maintenance		10000	10000
	Electrical	without maintenance	1000 V DC L/R = 2 ms	2000	1000
Installation and connections					
Connection	Fixed	rear connections	Vertical	◉	◉
			Horizontal	◉	-
	Drawout	rear connections	Vertical	◉	◉
			Horizontal	◉	-
Dimensions and weight					
Dimensions H x W x D (mm) with the series connection	Fixed	3P		352 x 422 x 427	352 x 422 x 527
	Drawout	3P		439 x 441 x 494	439 x 441 x 594
Weight (kg)	Fixed	3P		60 to 86	
with the series connection (approximate values)	Drawout	3P		90 to 116	

All the accessories of the standard NW HADC switch-disconnectors can be used.

[1] NW HADCD-PV switch-disconnectors for PV applications are designed and qualified to break the rated or the fault current under 1000 V DC with all the 3 poles in series and this is a mandatory condition whatever the type of fault. This comes to say that the PV systems using these switch-disconnectors must be isolated systems from the earth and that the double fault situation (A and D or C and E on the diagram below) must be absolutely avoided: insulation monitoring devices shall detect the first fault and the staff shall look for this first fault and clear it with no delay. These switch-disconnectors cannot be used in grounded systems as in this situation they may be expected to break the current under the full voltage (1000 V DC) with only 1 pole or 2 poles in series. These devices are not designed for that purpose and could sustain irremediable damage if used to break in these conditions.

DB431758.eps

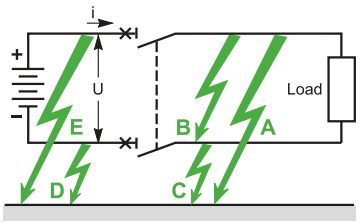


Isolated system

Switch-Disconnectors for PV Application
MasterPact NW HADCD-PV - Connections and Safety Clearances

Fixed Version, Vertical Rear Connections


NW20 HADCD-PV

DB402264_55.eps

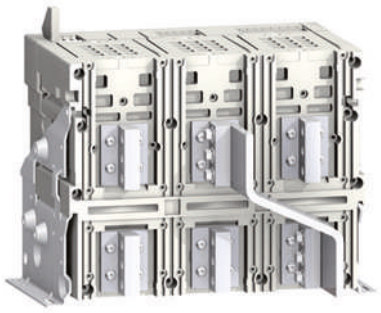


NW40 HADCD-PV

DB402268_55.eps

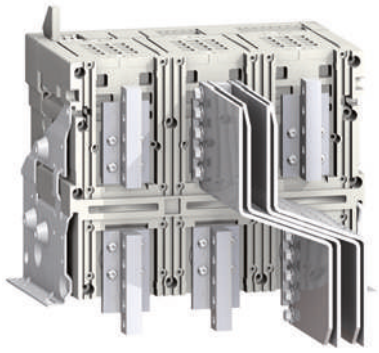


Safety clearances

DB431759.eps

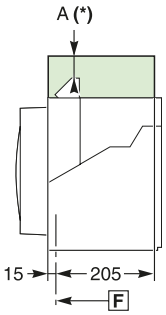

DB431760.eps

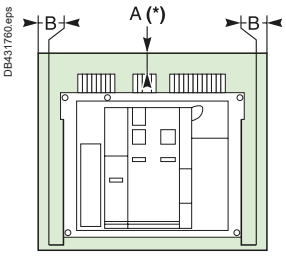

	Insulated parts	Metal parts	Energized parts
A	0	0	100
B	0	0	60

F Datum
A(*) An overhead clearance of 110 mm is required to remove the arc chutes. An overhead clearance of 20 mm is required to remove the terminal block.

Drawout Version, Vertical Rear Connections


NW20 HADCD-PV

DB402291_55.eps




NW40 HADCD-PV

DB402311_55.eps

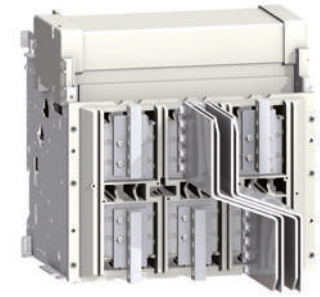


Safety clearances

DB431761.eps

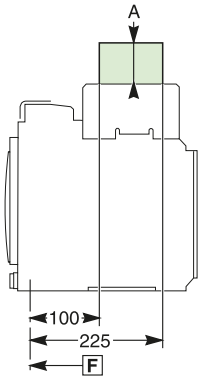

DB431762.eps

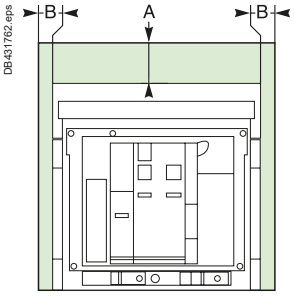

	Insulated parts	Metal parts	Energized parts
A	0	0	0
B	0	0	60

F Datum


MasterPact NW EPDC-D Circuit Breakers for Marine Applications at 1100 VDC

A

MasterPact NW EPDC-D General Characteristics

MasterPact NW EPDC-D Circuit Breaker					NW10 EPDC-D	NW20 EPDC-D	NW40 EPDC-D
Poles coupling version			D (3 poles in series)		◉	◉	◉
Electrical Characteristics As Per IEC 60947-1/60947-2 and EN 60947-1/60947-2							
Rated current at 40°/45°C		**In**	(A)		1000	2000	4000
Rated insulation voltage		**Ui**	(V)		1250	1250	1250
Rated impulse withstand voltage		**Uimp**	(kV peak)		12	12	12
Rated operational voltage		**Ue**	(VDC)		1100 [1]	1100 [1]	1100 [1]
Circuit breaker as per IEC 60947-2 and EN 60947-2							
Ultimate breaking capacity	L/R = 15 ms	**Icu**	(kA)		65	65	65
Service breaking capacity		**Ics**	%Icu		100%	100%	100%
Rated making capacity		**Icm**	%Icu		100%	100%	100%
Rated short-time withstand current (kA rms)		**Icw**	(kA/1s)		65	65	65
Selectivity category					A	A	A
Breaking time			(ms)		30 to 75	30 to 75	30 to 75
Making time			(ms)		<70	<70	<70
Suitability for isolation					◉	◉	◉
Pollution degree (as per IEC 60664-1)					3	3	3
Protection against overcurrents (see trip-unit table next page)							
Trip units	Built-in				◉	◉	◉
Protection	Overloads				-	-	-
	Short-circuits				◉	◉	◉
Durability							
(O/C cycles)	Mechanical	With maintenance			20000	20000	20000
		Without maintenance			10000	10000	10000
	Electrical	Without maintenance		1100 VDC	1000	1000	1000
Indication and control auxiliaries							
Auxiliary contacts					◉	◉	◉
Voltage release		MX shunt release			◉	◉	◉
		MN undervoltage release			◉	◉	◉
Installation and Connections							
Connection	Drawout	Rear connections	Horizontal		◉	◉	-
			Vertical		◉	◉	◉
Dimensions and Weight							
Dimensions H x W x D (mm) with the series connection	Drawout	3P			439 x 441 x 494	439 x 441 x 494	439 x 441 x 594
Weight (kg) with the series connection (approximate values)	Drawout	3P			90 to 116		

DB436631.ai

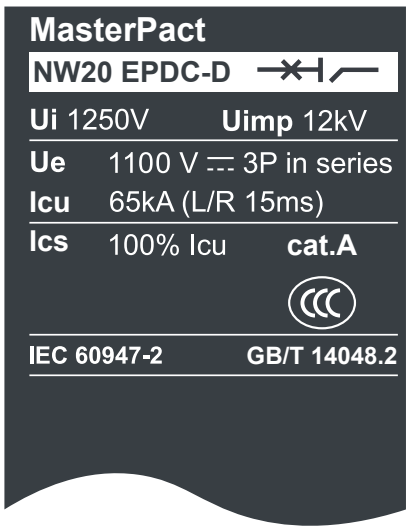


All the accessories of the standard NW HDC circuit breakers can be used.
NW EPDC-D circuit breakers were not designed for and cannot be used in PV application.

[1] NW EPDC-D circuit breakers are designed and qualified to break the rated or the fault current under 1100V DC with all the 3 poles in series, and having the 3 poles in series when breaking is a mandatory condition whatever the type of fault.
This implies 2 mandatory conditions:
- the systems using these circuit breakers must be isolated from the earth.
- avoid the double fault situation (A and D or C and E on the diagram above). For this, insulation monitoring devices must detect the first fault, and the staff must locate it and clear it with no delay.

These circuit breakers cannot be used in grounded systems as, in this situation, they may be expected to break the current under the full voltage (1100 V DC) with only 1 pole or 2 poles in series. These devices are not designed for that purpose and could sustain irremediable damage if used to break in these conditions.

DB431575.eps

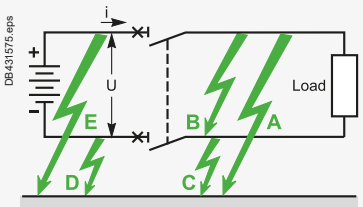



Isolated system


MasterPact NW EPDC-D Circuit Breakers for Marine Applications at 1100 VDC

Connections, Dimensions and Safety Clearances


Horizontal rear connection (NW10/20 EPDC-D)

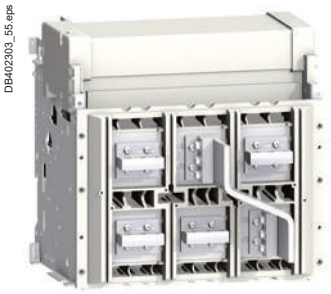


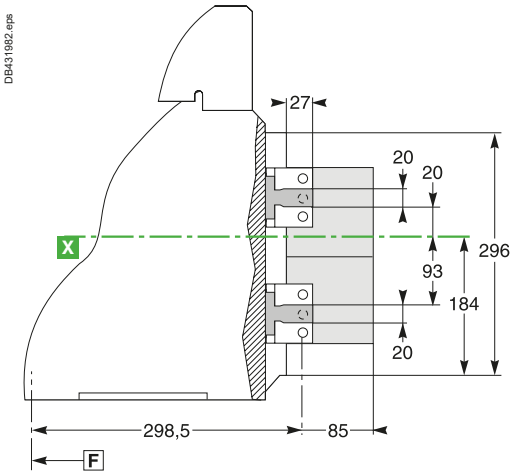


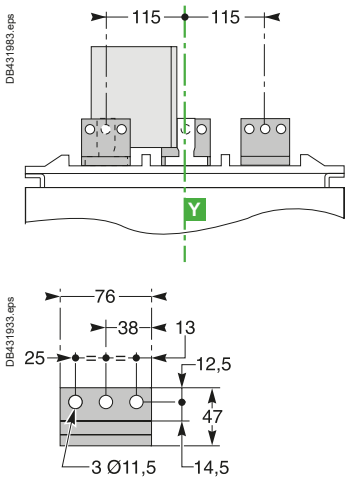

Vertical rear connection (NW10/20 EPDC-D)

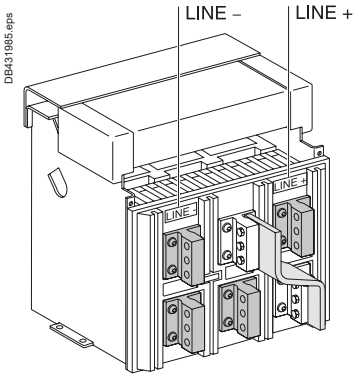


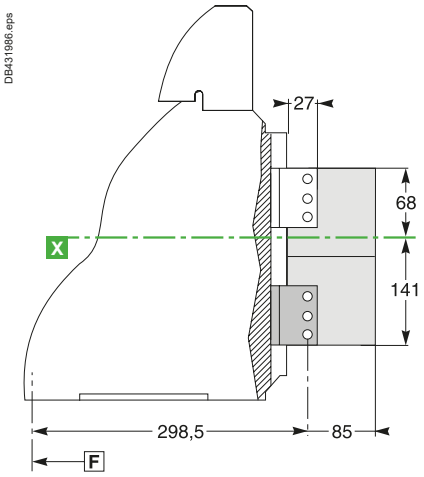


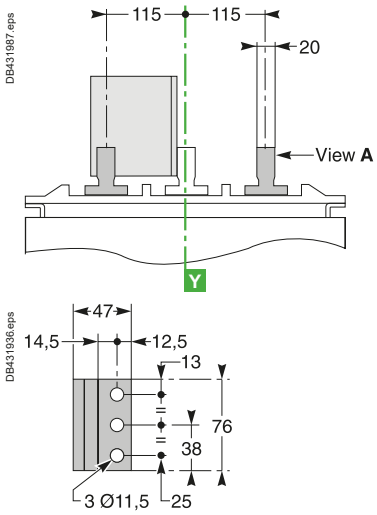


View A detail

Vertical rear connection (NW40 EPDC-D)

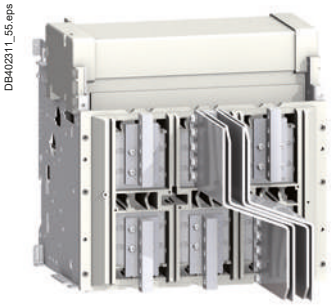

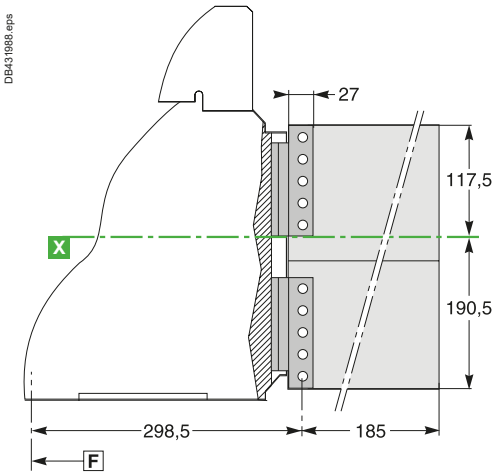

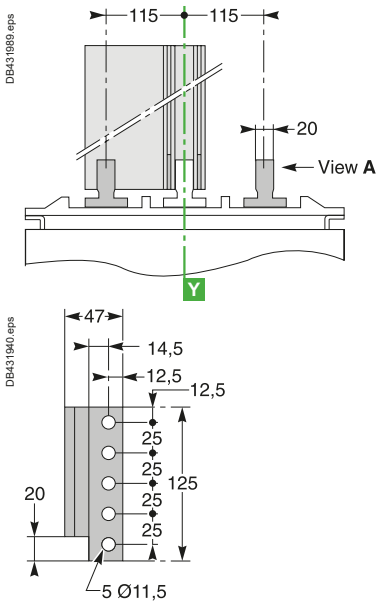


View A detail

Note: Recommended connection screws: M10 class 8.8.
Tightening torque: 50 Nm with contact washer.

Panorama of Electrical and Mechanical Accessories
Master**Pact** NW10 to NW40 DC


All Master**Pact** NW DC devices exist in Circuit breaker (equipped with MicroLogic DC 1.0 control unit) and switch-disconnector versions. All auxiliaries are common from 1000 to 4000 A.

DB431765.eps

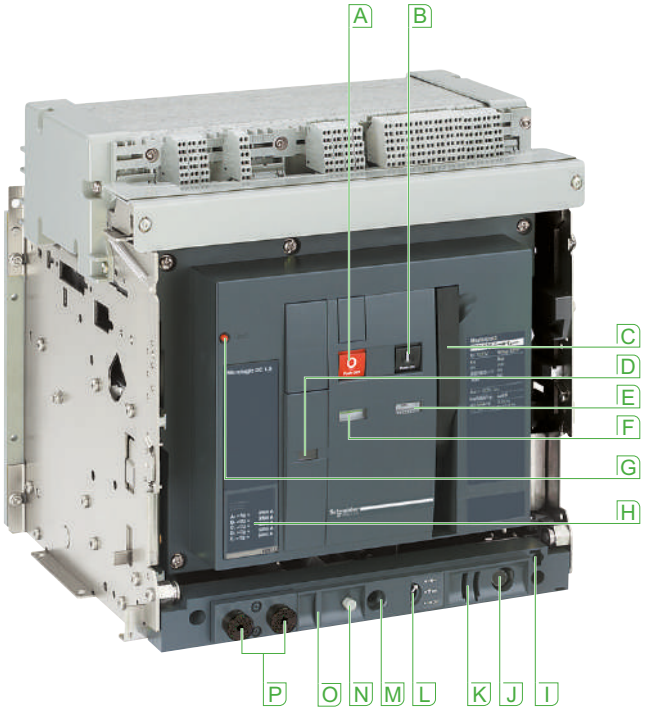


- A OFF pushbutton
- B ON pushbutton
- C Closing mechanism charging handle
- D Operation counter
- E Operating mechanism charged and "ready to close" indication:
  - Spring charged
  - Spring discharged

DB104522.eps

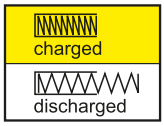


- F Main contact position indication:
  - ON
  - OFF

DB431763.eps

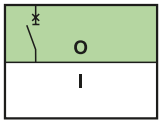


- G Fault trip indication and reset button
- H MicroLogic 1.0 DC control unit
- I Racking interlock
- J Racking-handle storage
- K Shutter position indication and locking
- L "Connected/test/disconnected"position indication
- M Racking-handle port
- N Reset pushbutton
- O Padlock locking
- P Keylock locking

PB104432-48R.eps

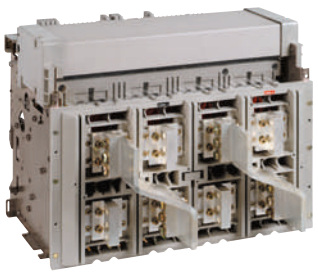

Vertical rear connection

DB431764.eps



Circuit Breakers and Switch-Disconnectors

MasterPact NW DC exists in fixed and withdrawable versions:
- Circuit breaker equipped with MicroLogic 1.0 DC control unit
- Switch-disconnector without the control unit.

Common Auxiliaries from 1000 to 4000 A

All accessories are:
- Accessible from the front in a compartment isolated from the power circuits
- Secured by a single screw
- No adjustments
- Adaptable on site.

Communication

Circuit breaker or switch-disconnector integration in a supervision system requires the COM option.
MasterPact uses the Modbus communication protocol compatible with ION-E electrical engineering expert system software.
An external gateway is available for communication with other networks (Profibus, Ethernet, etc.).

Connections

- Rear vertical connection in standard.
- Possibility of conversion to horizontal connection by turning the connectors On the site by the customer (except for the NW40).
- Prefabricated series connections.
- Safety shutters, shutter locking blocks.
- Optional accessories:
  - Interphase barriers
  - Shutter position indication and locking.

Panorama of Electrical and Mechanical Accessories

Master**Pact** NW10 to NW40 DC


Locking

- Pushbutton locking by padlockable transparent cover.
- OFF-position locking by padlock or keylock.
- Chassis locking:
  - In disconnected position by keylock
  - In connected, disconnected and test positions.
- Door interlock (inhibits door opening with breaker in connected position).
- Racking interlock (inhibits racking with door open).
- Racking interlock between crank and OFF pushbutton.
- Automatic spring discharge before breaker removal.
- Mismatch protection.






Locking in disconnected position by keylock or padlock

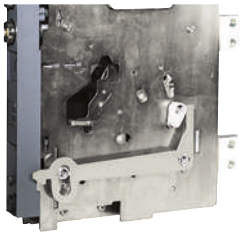

Door interlock (inhibits door opening with breaker in connected position)

Indication Contacts


- Standard or low-level contacts:
  - ON/OFF indication (OF)
  - “fault-trip” indication (SDE)
  - Carriage switches for connected (CE), disconnected (CD) and test (CT) positions.

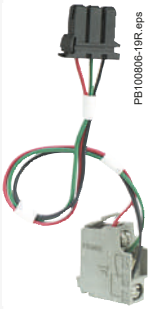


OF contact (microswitch)



OF contact (rotary)

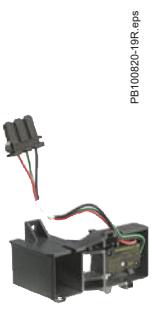

SDE contact

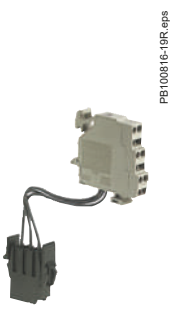

Combined contact (connected/closed)

Remote Operation

- Remote ON/OFF:
  - Gear motor
  - XF closing or MX opening voltage releases
  - PF ready-to-close contact
  - Options:
  - RAR automatic or Res electrical remote reset
  - BPFE electrical closing pushbutton.
- Remote tripping function:
  - MN voltage release:
  - standard
  - adjustable or non-adjustable delay
  - Or 2nd MX voltage release.



Remote ON/OFF



Gear motor



Voltage releases (MX and XF)




PF ready-to-close contact

Accessories

- Auxiliary terminal shield.
- Operation counter.
- Escutcheon.
- Transparent cover for escutcheon.
- Escutcheon blanking plate.



Operation counter

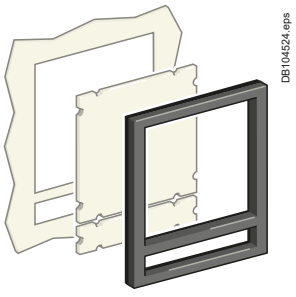

Escutcheon with blanking plate



Transparent cover

Note: For safety clearances and door cutout see page C-37.

Connection
Overview of Solutions

Two types of connection are available: vertical connection is standard however the connectors can be rotated for on-site conversion to horizontal connection (except for NW40).


A

Rear Connection Fixed Device

MasterPact NW DC

Vertical rear connection

PB105026.eps

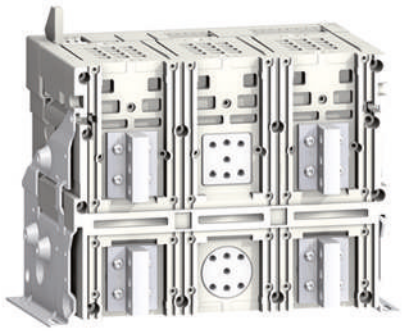

Horizontal rear connection

PB105025.eps




A

Rear Connection Withdrawable Device


MasterPact NW DC

Horizontal rear connection

DB402291_59.eps

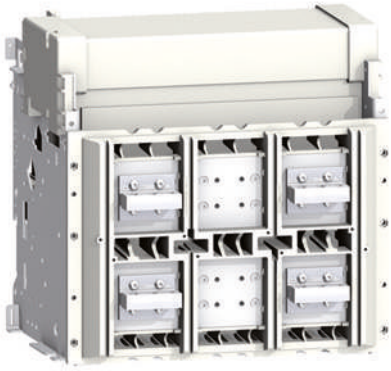


DB402303_59.eps

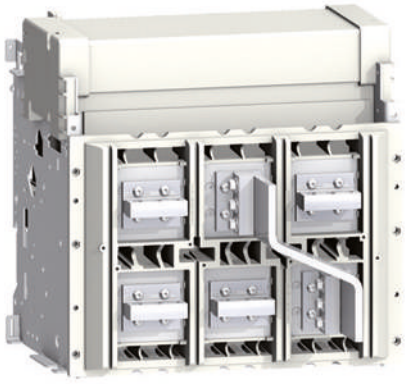


Vertical rear connection

PB104920_59.eps

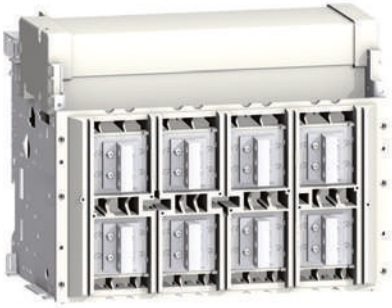


DB402323_59.eps

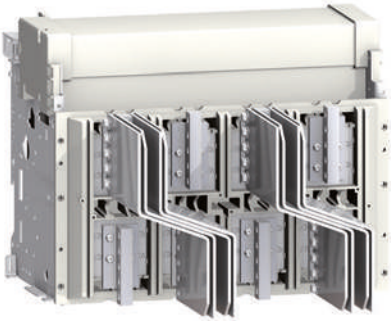

Electrical and Mechanical Accessories
Master**Pact** NW10 to NW40 DC

Locking on the Device

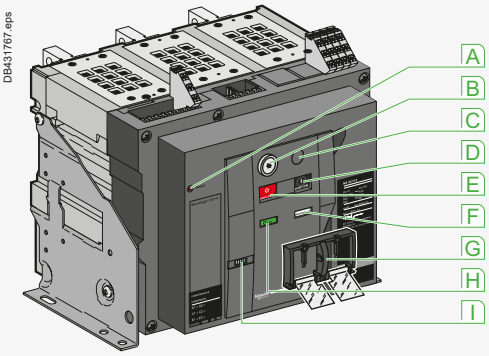

A Fault trip indication and reset button
B OFF position locking
C Electrical closing pushbutton
D ON pushbutton
E OFF pushbuton
F Operating mechanism charged and “ready to close” indication
G Pushbutton locking
H Main contact position indication
I Operation counter



Access to pushbuttons protected by transparent cover



Pushbutton locking using a padlock



OFF position locking using a padlock



OFF position locking using a keylock

Pushbutton Locking VBP

The transparent cover blocks access to the pushbuttons used to open and close the device.
It is possible to independently lock the opening button and the closing button.
The locking device is often combined with a remote operating mechanism.
The pushbuttons may be locked using either:
- Three padlocks (not supplied)
- Lead seal
- Two screws.

Device Locking in the OFF Position
VCPO - by Padlocks - VSPO - by Keylocks

The circuit breaker is locked in the OFF position by physically maintaining the opening pushbutton pressed down:
- Using padlocks (one to three padlocks, not supplied)
- Using keylocks (one or two different keylocks, supplied).

Keys may be removed only when locking is effective (Profalux or Ronis type locks).
The keylocks are available in any of the following configurations:
- One keylock
- One keylock mounted on the device + one identical keylock supplied separately for interlocking with another device
- Two different key locks for double locking.


Profalux and Ronis keylocks are compatible with each other.
A locking kit (without locks) is available for installation of one or two keylocks (Ronis, Profalux, Kirk or Castell).

Accessory-compatibility
3 padlocks and/or 2 keylocks.

Cable-Type Door Interlock IPA

This option prevents door opening when the circuit breaker is closed and prevents circuit breaker closing when the door is open.
For this, a special plate associated with a lock and a cable is mounted on the right side of the circuit breaker.
With this interlock installed, the source changeover function cannot be implemented.
This option is identical for fixed or drawout versions.

Locking on the Chassis

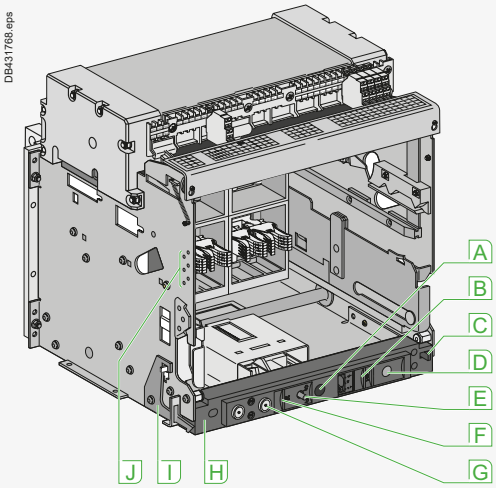

- A Racking-handle port
- B "Connected/test/ disconnected" position indication
- C Racking interlock
- D Racking-handle storage
- E Reset pushbutton
- F Padlock locking
- G Keylock locking
- H Chassis front plate (accessible with cubicle door closed)
- I "Disconnected" position door interlock
- J Mismatch protection

"Disconnected" Position Locking By Padlocks (Standard) or Keylocks (VSPD Option)

The circuit breaker can be locked in its disconnected position by using the locks on the chassis. This feature is accessible via the cut out door closed.

Two options are available:

- Using padlocks (standard), up to three padlocks (not supplied)
- Using keylocks (optional), one or two different keylocks are available.

Profalux and Ronis keylocks are available in different options:

- One keylock
- Two different keylocks for double locking
- One (or two) keylocks mounted on the chassis + one (or two) identical keylocks supplied separately for interlocking with another device.

A locking kit (without locks) is available for installation of one or two keylocks (Ronis, Profalux, Kirk or Castell).

Connected", "Disconnected" and "Test" Position Locking

The "connected", "disconnected" and "test" positions are shown by an indicator and are mechanically indexed. The exact position is obtained when the racking handle blocks. A release button is used to free it.

As standard, the circuit breaker can be locked only in "disconnected" position by padlocks or by keylocks. On request, the locking system may be modified to lock the circuit breaker in any of the three positions "connected", "disconnected" or "test".

Door Interlock Catch VPEC

Mounted on the right or left-hand side of the chassis, this device inhibits opening of the cubicle door when the circuit breaker is in "connected" or "test" position. It the breaker is put in the "connected" position with the door open, the door may be closed without having to disconnect the circuit breaker.

Racking Interlock VPOC

This device prevents insertion of the racking handle when the cubicle door is open.

Cable-Type Door Interlock IPA

This option is identical for fixed and drawout versions.

Racking Interlock between Crank and OFF Pushbutton IBPO for NW DC

This option makes it necessary to press the OFF pushbutton in order to insert the racking handle and holds the device open until the handle is removed.

Automatic Spring Discharge Before Breaker Removal DAE for NW DC


This option discharges the springs before the breaker is removed from the chassis.

Mismatch Protection VDC

Mismatch protection ensures that a circuit breaker is installed only in a chassis with compatible characteristics. It is made up of two parts (one on the chassis and one on the circuit breaker) offering twenty different combinations that the user may select.



Racking interlock

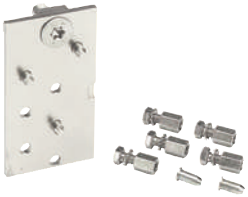


Mismatch protection

Electrical and Mechanical Accessories
Master**Pact** NW10 to NW40 DC

Indication contacts are available:
- in the standard version for relay applications
- in a low-level version for control of PLCs and electronic circuits.

A

PB100806-32R.eps

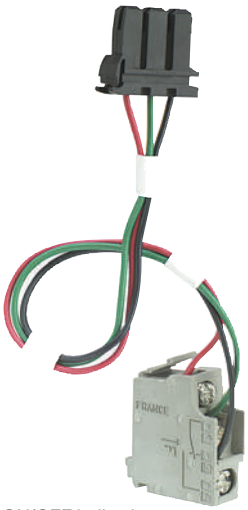


ON/OFF indication contacts OF (microswitch type)

PB100807-20R.eps



ON/OFF indication contacts OF (rotary type)

PB100820-32R.eps

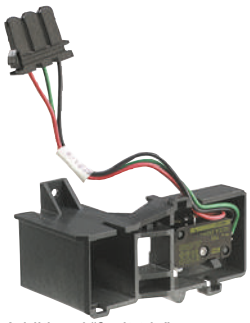

Additional “fault-trip” indication contacts SDE

PB100816-32R.eps



Combined contacts

Indication Contacts

ON/OFF Indication Contacts OF

Rotary type changeover contacts directly driven by the mechanism. These contacts trip when the minimum isolation distance between the main Circuit breaker contacts is reached.

OF				
Supplied as standard				4
Maximum number				12
Breaking capacity (A) p.f.: 0.3 AC12/DC12	Standard			minimum load: 100 mA/24 V
		V AC	240/380	10/6 [1]
			480	10/6 [1]
			690	6
		V DC	24/48	10/6 [1]
			125	10/6 [1]
			250	3
	Low-level			minimum load: 2 mA/15 V
		V AC	24/48	6
			240	6
			380	3
		V DC	24/48	6
			125	6
			250	3

[1] Standard contacts: 10 A; optional contacts: 6 A.

“Fault-Trip” Indication Contacts SDE

Circuit breaker tripping due to a fault is signalled by:
- A red mechanical fault indicator (reset)
- One changeover contact SDE.

Following tripping, the mechanical indicator must be reset before the circuit breaker may be closed. One SDE is supplied as standard. An optimal SDE may be added. This latter is incompatible with the electrical reset after fault-trip option (Res).

SDE				
Supplied as standard				1
Maximum number				2
Breaking capacity (A) p.f.: 0.3 AC12/DC12	Standard			minimum load: 100 mA/24 V
		V AC	240/380	6
			480	2
		V DC	24/48	3
			125	0.3
			250	0.15
	Low-level			minimum load: 2 mA/15 V
		V AC	24/48	3
			240	3
			380	3
		V DC	24/48	3
			125	0.3
			250	0.15

Combined “Connected/Closed” Contacts EF

The contact combines the “device connected” and the “device closed” information to produce the “circuit closed” information. Supplied as an option for MasterPact NW DC, it is mounted in place of the connector of an additional OF contact.

EF				
Maximum number				8
Breaking capacity (A) p.f.: 0.3 AC12/DC12	Standard			minimum load: 100 mA/24 V
		V AC	240/380	6
			480	6
			690	6
		V DC	24/48	2.5
			125	0.8
			250	0.3
	Low-level			minimum load: 2 mA/15 V
		V AC	24/48	5
			240	5
			380	5
		V DC	24/48	2.5
			125	0.8
			250	0.3

“Connected”, “Disconnected” and “Test” Position Carriage Switches

Three series of optional auxiliary contacts are available for the chassis:

- Changeover contacts to indicate the “connected” position CE
- Changeover contacts to indicate the “disconnected” position CD. This position is indicated when the required clearance for isolation of the power and auxiliary circuits is reached.
- Changeover contacts to indicate the “test” position CT. In this position, the power circuits are disconnected and the auxiliary circuits are connected.

Additional actuators

A set of additional actuators may be installed on the chassis to change the functions of the carriage switches.

Contacts				CE	CD	CT
Maximum number	Standard with additional actuators			3 9 6 6 3	3 0 3 0 6	3 0 0 3 0
Breaking capacity (A) p.f.: 0.3 AC12/DC12	Standard			minimum load: 100 mA/24 V		
		V AC	240	8		
			380	8		
			480	8		
			690	6		
		V DC	24/48	2.5		
			125	0.8		
			250	0.3		
	Low-level			minimum load: 2 mA/15 V		
		V AC	24/48	5		
			240	5		
			380	5		
		V DC	24/48	2.5		
			125	0.8		
			250	0.3		



CE, CD and CT “connected/disconnected/test” position carriage switches


PB100817-32R.eps

A

Electrical and Mechanical Accessories
Master**Pact** NW10 to NW40 DC

Two solutions are available for remote operation of Master**Pact** devices:
- a point-to-point solution
- a bus solution with the COM communication option.

A

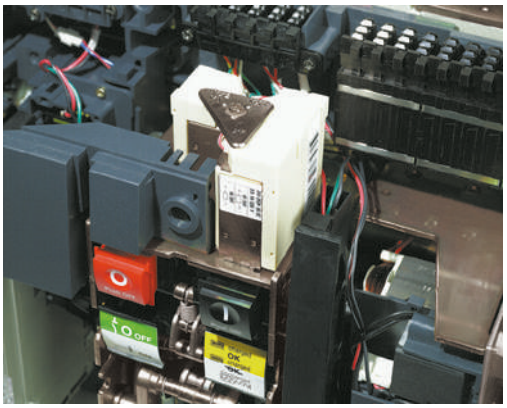
PB104349A-08R.eps

Note:
An opening order always takes priority over a closing order. If opening and closing orders occur simultaneously, the mechanism discharges without any movement of the main contacts. The circuit breaker remains in the open position (OFF).
In the event of maintained opening and closing orders, the standard mechanism provides an anti-pumping function by blocking the main contacts in open position.
Anti-pumping function. After fault tripping or intentional opening using the manual or electrical controls, the closing order must first be discontinued, then reactivated to close the circuit breaker.
When the automatic reset after fault trip (RAR) option is installed, to avoid pumping following a fault trip, the automatic control system must take into account the information supplied by the circuit breaker before issuing a new closing order or blocking the circuit breaker in the open position. (information on type of fault: overload, short time delay, earth-leakage fault, fault vigi or short-circuit, etc.)

Note:
MX communicating releases are of the impulse type only and cannot be used to lock a circuit breaker in OFF position. For locking in OFF position, use the remote tripping function (2nd MX or MN).

When Mx or XF communicating releases are used, the third wire (C3, A3) must be connected even if the communication module is not installed. When the control voltage (C3-C1 or A3-A1) is applied to the MX or XF releases, it is necessary to wait 1.5 seconds before issuing an order. consequently, it is advised to use standrad MX or XF releases for applications such as source-changeover systems.

Remote Operation: Remote ON/OFF


The remote ON/OFF function is used to remotely open and close the circuit breaker.
It is made up of:
- An electric motor MCH equipped with a “springs charged” limit switch contact CH
- Two voltage releases:
  - A closing release XF
  - An opening release MX.

Optionally, other functions may be added:
- A “ready to close” contact PF
- An electrical closing pushbutton BPFE
- Remote RES following a fault.

A remote-operation function is generally combined with:
- Device ON/OFF indication OF
- “fault-trip” indication SDE.


Wiring diagram of a point-to-point remote ON/OFF function

DB431769.eps

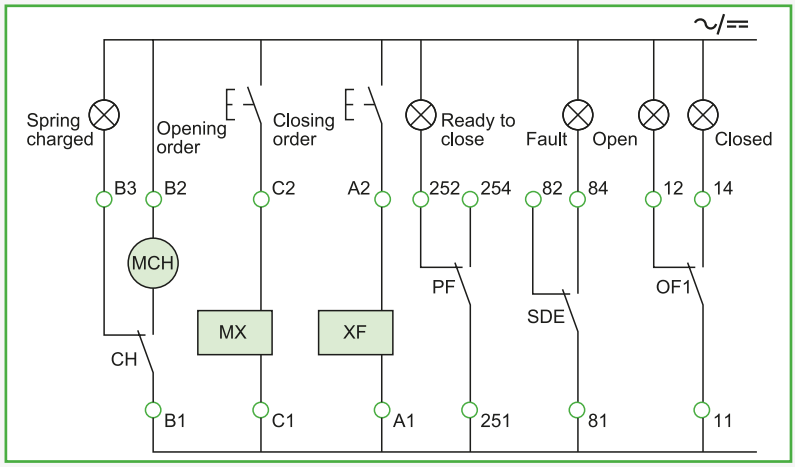

Wiring diagram of a bus-type remote ON/OFF function

DB431770.eps

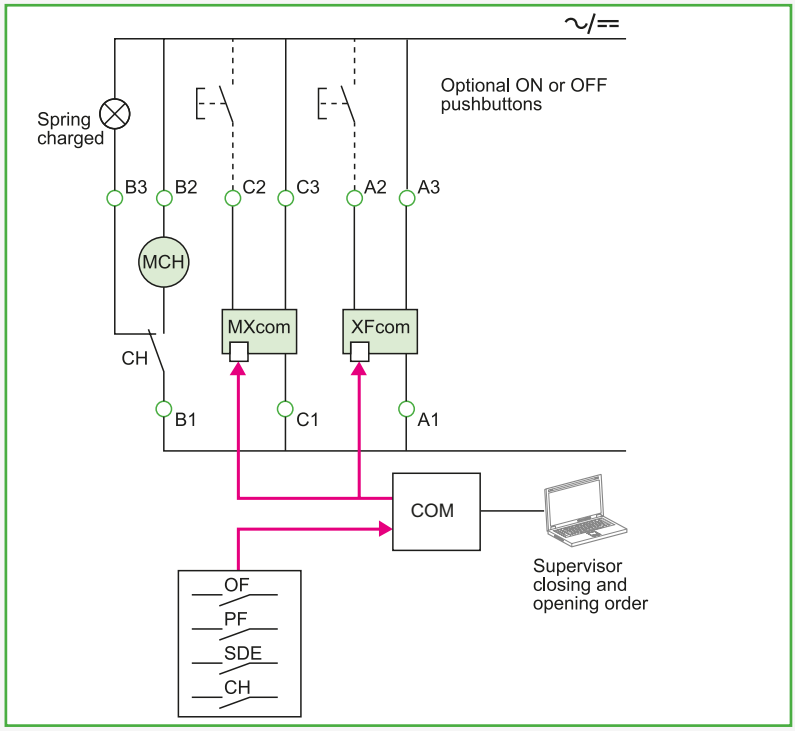

Electric Motor MCH

The electric motor automatically charges and recharges the spring mechanism when the circuit breaker is closed. Instantaneous reclosing of the breaker is thus possible following opening. The spring-mechanism charging handle is used only as a backup if auxiliary power is absent.
The electric motor (MCH) is equipped as standard with a limit switch contact (CH) that signals the “charged” position of the mechanism (springs charged).

Characteristics		
Power supply	V AC 50/60 Hz	48/60 - 100/130 - 200/240 - 277 - 380/415 - 400/440 - 480
	V DC	24/30 - 48/60 - 100/125 - 200/250
Operating threshold		0.85 to 1.1 Un
Consumption (VA or W)		180
Motor overcurrent		2 to 3 In for 0.1 s
Charging time		maximum 4 seconds
Operating frequency		maximum 3 cycles per minute
CH contact		10 A at 240 V



PB100808-32R.eps


Electric motor MCH for MasterPact NW DC

Voltage Releases XF and MX

Their supply can be maintained or automatically disconnected.

Closing release XF
The XF release remotely closes the circuit breaker if the spring mechanism is charged.

Opening release MX
The MX release instantaneously opens the circuit breaker when energized, the minimum duration of the pulse operating order must be 200 ms. The MX release locks the circuit breaker in OFF position if the order is maintained (except for MX “communicating” releases).
Note: Whether the operating order is maintened or automatically disconnected (pulse-type), XF or MX “communicating” releases (“bus” solution with “COM” communication option) always have an impulse-type action (see diagram).

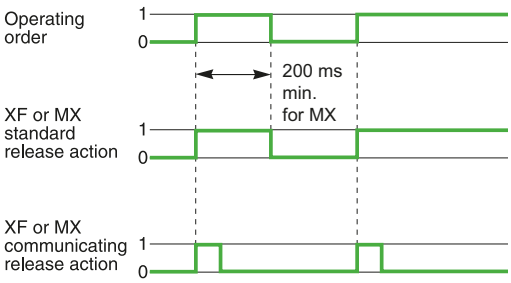

DB431945.eps

Characteristics		XF	MX
Power supply	V AC 50/60 Hz	24 - 48 - 100/130 - 200/250 - 277 - 380/480	
	V DC	12 - 24/30 - 48/60 - 100/130 - 200/250	
Operating threshold		0.85 to 1.1 Un	0.7 to 1.1 Un
Consumption (VA or W)		pick-up: 200 (during 200 ms) hold: 4.5	pick-up: 200 (during 200 ms) hold: 4.5
Circuit breaker response time at Un		70 ms ±10 (NW DC ≤ 4000 A) 80 ms ±10 (NW DC > 4000 A)	50 ms ±10 (NW DC)

“Ready to Close” Contact PF

The “ready to close” position of the circuit breaker is indicated by a mechanical indicator and a PF changeover contact. This signal indicates that all the following are valid:
- The circuit breaker is in the OFF position
- The spring mechanism is charged
- A maintained opening order is not present:
  - MX energized
  - Fault trip
  - Remote tripping second MX or MN
  - Device not completely racked in
  - Device locked in OFF position
  - Device interlocked with a second device.



PB100809-16R.eps

XF and MX voltage releases

Characteristics				
Supplied as standard				-
Maximum number				1
Breaking capacity p.f.: 0.3 AC12/DC12	Standard			minimum load: 100 mA/24 V
		V AC	240/380	5
			480	5
			690	3
		V DC	24/48	3
			125	0.3
			250	0.15
	Low-level			minimum load: 2 mA/15 V
		V AC	24/48	3
			240	3
			380	3
		V DC	24/48	3
			125	0.3
			250	0.15



PB100818-16R.eps


“Ready to close” contacts PF

Electrical and Mechanical Accessories
Master**Pact** NW10 to NW40 DC

Electrical Closing Pushbutton BPFE

Located on the front panel, this pushbutton carries out electrical closing of the circuit breaker. It is generally associated with the transparent cover that avoids access to the closing pushbutton.
Electrical closing via the BPFE pushbutton takes into account all the safety functions that are part of the control/monitoring system of the installation.
The BPFE connects to the closing release XF in place of the COM module.
The COM module is incompatible with this option.
Different types of voltage exist and the XF electromagnet is compulsary if the BPFE option is selected.


DB431772.eps

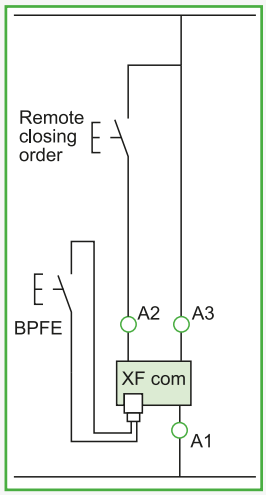

Remote Reset After Fault Trip

Electrical reset after fault trip RES
Following tripping, this function resets the “fault trip” indication contacts SDE and the mechanical indicator and enables circuit breaker closing.
Power supply: 110/130 V AC and 200/240 V AC.
The use of XF closing release is compulsory with this option.

DB431773.eps

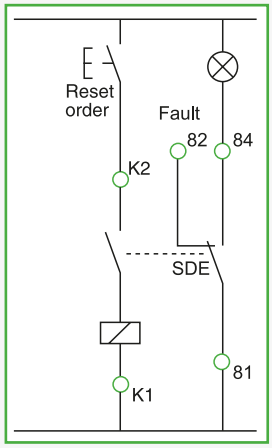


Automatic reset after fault trip RAR
Following tripping, a reset of the mechanical indicator (reset button) is no longer required to enable Circuit breaker closing. The mechanical (reset button) and electrical SDE indications remain in fault position until the reset button is pressed.
The use of XF closing release is compulsory with this option.


Remote Operation: Remote Tripping

This function opens the circuit breaker via an electrical order. It is made up of:
- A shunt release second MX
- Or an undervoltage release MN
- Or a delayed undervoltage release MNR: (MN + delay unit).

These releases (2nd MX or MN) cannot be operated by the communication bus. The delay unit, installed outside the circuit breaker, may be disabled by an emergency OFF button to obtain instantaneous opening of the circuit breaker.

Wiring diagram for the remote-tripping function

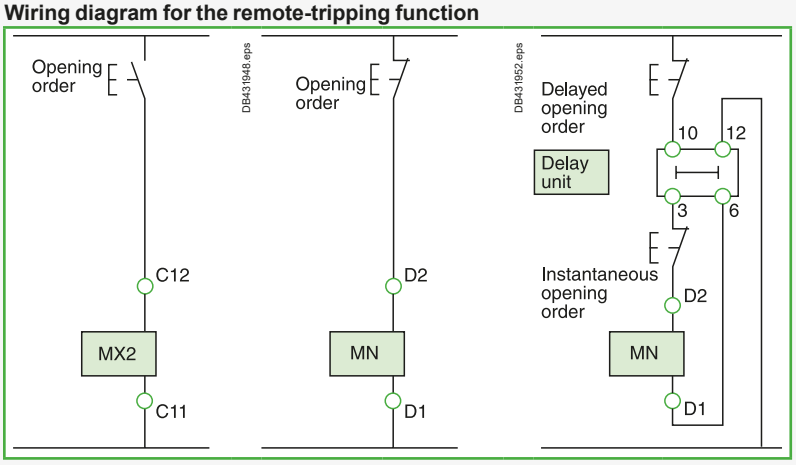

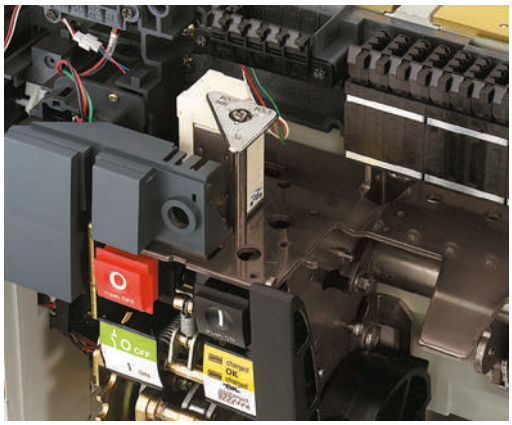

A

Voltage Releases Second MX

When energized, the MX voltage release instantaneously opens the circuit breaker. A continuous supply of power to the second MX locks the circuit breaker in the OFF position.

Characteristics			
Power supply	V AC 50/60 Hz	24 - 48 - 100/130 - 200/250 - 277 - 380/480	
	V DC	24/30 - 48/60 - 100/130 - 200/250	
Operating threshold		0.7 to 1.1 Un	
Permanent locking function		0.85 to 1.1 Un	
Consumption (VA or W)		pick-up: 200 (during 80 ms)	hold: 4.5
Circuit breaker response time at Un		50 ms ±10	



MX or MN voltage release

Instantaneous Voltage Releases MN

The MN release instantaneously opens the circuit breaker when its supply voltage drops to a value between 35 % and 70 % of its rated voltage. If there is no supply on the release, it is impossible to close the circuit breaker, either manually or electrically. Any attempt to close the circuit breaker has no effect on the main contacts. Circuit breaker closing is enabled again when the supply voltage of the release returns to 85 % of its rated value.

Characteristics			
Power supply	V AC 50/60 Hz	24 - 48 - 100/130 - 200/250 - 380/480	
	V DC	12 - 24/30 - 48/60 - 100/130 - 200/250	
Operating threshold	opening	0.35 to 0.7 Un	
	closing	0.85 Un	
Consumption (VA or W)		pick-up: 200 (during 200 ms)	hold: 4.5
MN consumption with delay unit		pick-up: 200 (during 200 ms)	hold: 4.5
Circuit breaker response time at Un		90 ms ±5	


MN Delay Units

To eliminate Circuit breaker nuisance tripping during short voltage dips, operation of the MN release can be delayed. This function is achieved by adding an external delay unit in the MN voltage-release circuit. Two versions are available, adjustable and non-adjustable.

Characteristics			
Power supply	non-adjustable	100/130 - 200/250	
VAC 50-60 Hz/DC	adjustable	48/60 - 100/130 - 200/250 - 380/480	
Operating threshold	opening	0.35 to 0.7 Un	
	closing	0.85 Un	
Consumption of delay unit alone (VA or W)		pick-up: 200 (during 200 ms)	hold: 4.5
Circuit breaker response time at Un	non-adjustable	0.25 s	
	adjustable	0.5 s - 0.9 s - 1.5 s - 3 s	

Electrical and Mechanical Accessories
MasterPact NW10 to NW40 DC

DB124953.eps

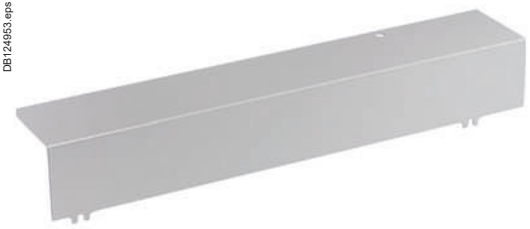


Shields, Blanking Plates, Counters

Auxiliary Terminal Shield CB

Optional equipment mounted on the chassis, the shield avoids access to the terminal block of the electrical auxiliaries.


PB104382-32R.eps

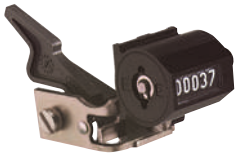

Operation Counter CDM

The operation counter sums the number of operating cycles and is visible on the front panel. It is compatible with manual and electrical control functions.

DB431775.eps

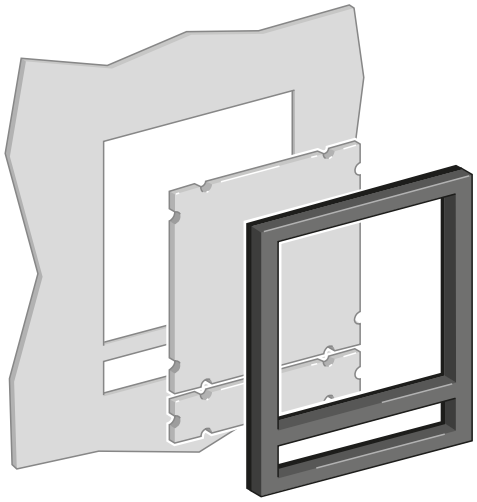

Escutcheon CDP with blanking plate

Escutcheon CDP

Optional equipment mounted on the door of the cubicle, the escutcheon increases the degree of protection to IP 40 (circuit breaker installed free standing: IP30) .
It is available in fixed and drawout versions.

Blanking Plate OP for Escutcheon

Used with the escutcheon, this option closes off the door cut-out of a cubicle not yet equipped with a device. It may be used with the escutcheon for both fixed and drawout devices.

Transparent Cover CCP for Escutcheon


Optional equipment mounted on the escutcheon, the cover is hinged and secured by a screw. It increases the degree of protection to IP 54, IK10. It adapts to drawout devices.

PB100776-42R.eps



Transparent cover CCP for escutcheon

DB414776.eps

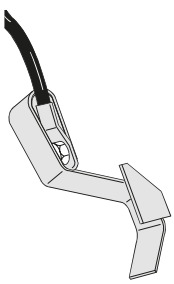

Grounding kit KMT

Grounding Kit KMT

This option allows the grounding of the breaker mechanism while the front cover is removed. The grounding is made via the chassis for the drawout version and via the fixation side plate for the fixed version.

Installation Recommendations

ComPacT NSX100 to NSX1200 DC
Installation in Switchboards B-2
Power Connections B-3
Safety Clearances, Minimum Distances and Insulation of Live Parts B-5
Temperature Derating B-6
Characteristics of Circuit Breakers with Parallel Connection of Poles B-7

ComPacT NSX DC PV
Safety Clearances and Minimum Distances B-10

ComPacT NSX NA DC PV B-11
Safety Clearances and Minimum Distances B-11
Temperature Derating B-12
Temperature Derating - Power Dissipation/Resistance B-13

ComPacT NSX DC EP
Safety Clearances and Minimum Distances B-14
Temperature Derating B-16

MasterPact NW10 to NW40 DC, EPDC, DC PV
Installation in Switchboard B-18
Door Interlock B-19
Cable-Type Door Interlock - Connection of MN, MX and XF Voltage Releases B-20
Power Connection B-21
Busbar Sizing B-24
Temperature Derating - Power Dissipation B-25

B

Other Chapters
Presentation 2
Functions and Characteristics A-1
Dimensions and Connection C-1
Electrical Diagrams D-1
Additional Characteristics E-1
Catalog Numbers and Order Form F-1

ComPacT NSX100 to NSX1200 DC
Installation in Switchboards

Possible Mounting Positions

For Fixed or Withdrawable Circuit Breakers

Fig. A

DB437972.ai

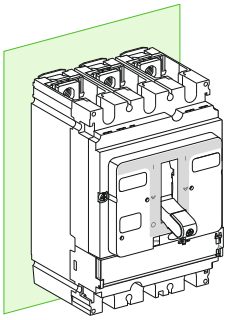


Fig. B

DB437973.ai

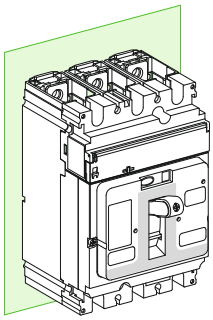


Fig. C

DB437974.ai

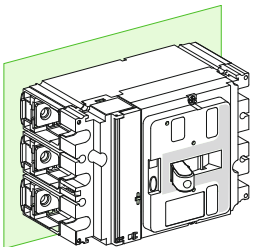


Fig. D

DB437975.ai


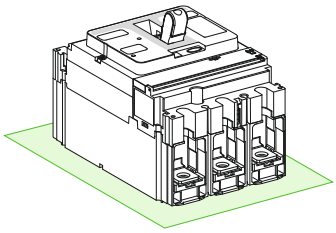


Fig. E

DB437976.ai

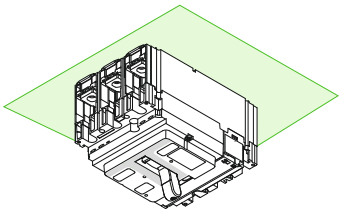


Possible Supports

For Fixed or Withdrawable Circuit Breakers


On a plain mounting plate

DB437977.ai

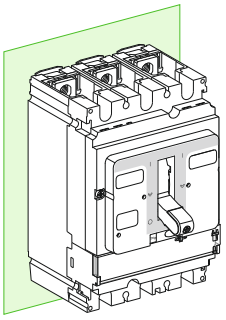


On a slotted mounting plate

DB437978.ai

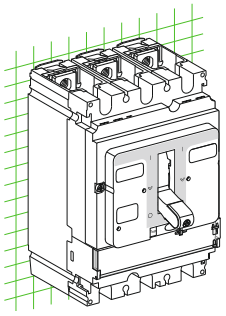

On rails

DB437979.ai

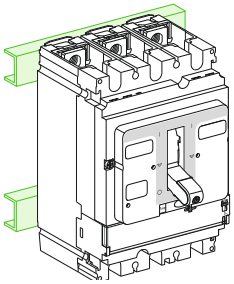

Electrodynamic Forces on the Conductors

The circuit breakers can be connected with copper, tinned copper or tinned aluminum conductors (rigid or flexible bars, cables).
In the event of a short-circuit, electrodynamic forces will be exerted on the conductors.
They must therefore be correctly sized and maintained in place using supports.
Electrical connection points on all types of devices (contactors, circuit breakers, etc.) should not be used for mechanical support.

Ties for Flexible Bars and Cables


The table below indicates the maximum distance between ties depending on the prospective short-circuit current.
The maximum distance between ties attached to the switchboard frame is 400 mm.

Type of tie	Maximum distance between ties (mm)	Short-circuit current (kA rms)
"PANDUIT" type ties Width: 4.5 mm Max. load: 22 kg White	200 100 50	10 14 19
"SAREL" type ties Width: 9 mm Max. load: 90 kg Black Double ties	350 200 100 70 50	21 27 36 45 100

Note: For 50 mm² cables, use the 9 mm wide ties.


Weights


Type		Circuit breaker	Plug-in base	Chassis	Motor mechanism
NSX100N/H DC	1P/1D	0.5	-	-	-
	2P/2D	1.45	-	-	-
NSX100 DC	3P/3D	1.79	0.8	2.2	1.2
	4P/4D	2.57	1.05	2.2	1.2
NSX160N/H DC	1P/1D	0.5	-	-	-
	2P/2D	1.45	-	-	-
NSX160N DC	3P/3D	1.85	0.8	2.2	1.2
	4P/4D	2.58	1.05	2.2	1.2
NSX250 DC	3P/3D	2.2	0.8	2.2	1.2
	4P/4D	2.78	1.05	2.2	1.2
NSX400/630 DC	3P/3D	6.19	2.4	2.2	2.8
	4P/4D	8.13	2.8	2.2	2.8
NSX1200 DC	2P/2D	8.9	-	-	2.8

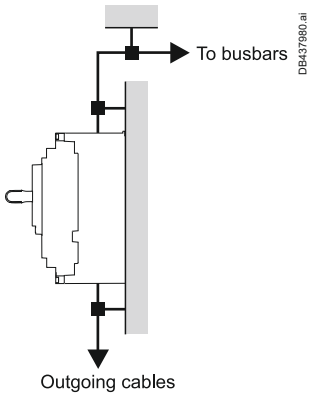


B


ComPacT NSX100 to NSX1200 DC
Power Connections

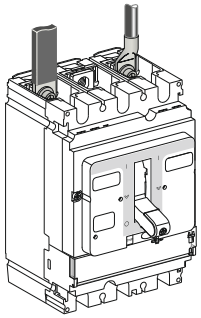

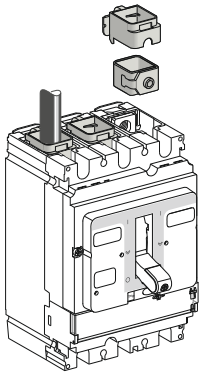

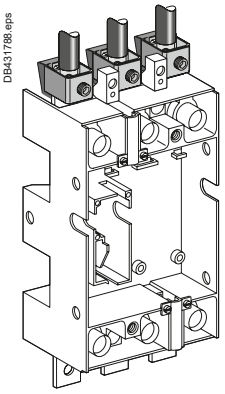

Connection of Insulated Bars or Cables with Lugs

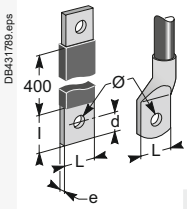


		NSX100/160/250 DC	NSX400/630/1200 DC
Bars	L (mm)	⩽ 25	⩽ 32
	l (mm)	d + 10	d + 15
	d (mm)	⩽ 10	⩽ 15
	e (mm)	⩽ 6	3 ⩽ e ⩽ 10
	Ø (mm)	8.5	10.5
Lugs	L (mm)	⩽ 25	⩽ 32
	Ø (mm)	8.5	10.5
Tightening torque (Nm) [1]		15	50
Tightening torque (Nm) [2]		5	20


[1] Tightening torque for lugs or bars on the circuit breaker.
[2] Tightening torque for rear connections or terminal extensions on plug-in base.

Connection of Bare Cables


NSX100 to 250 DC



Cable connector



Distribution connector




	Cable connector	Steel ⩽ 160 A	Aluminium ⩽ 250 A		
L (mm)		20	20		
S (mm²) Cu/Al		1.5... 95 [1]	10... 16	25... 35	50...185 150 max. flexible
Tightening torque (Nm)		12	15	20	26
6-cable distribution connector (copper or aluminium)					
L (mm)		15 or 30			
S (mm²) Cu/Al		1.5... 6 [1]	8... 35		
Tightening torque (Nm)		4	6		

[1] For flexible cables from 1.5 to 4 mm², connection with crimped or self-crimping ferrule.


NSX400 to 630 DC



Cable connector




Distribution connector



	Cable connector	2-cable connector
L (mm)	20	30 or 60
S (mm²) Cu/Al	35 to 300 rigid 240 max. flexible	2 x 85 to 2 x 240 rigid 240 max. flexible
Tightening torque (Nm)	31	31

NSX1200 DC

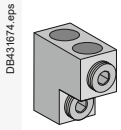

	2-cable connector
L (mm)	30 or 60
S (mm²) Cu/Al	2 x 85 to 2 x 240 rigid 240 max. flexible
Tightening torque (Nm)	31


ComPacT NSX100 to NSX1200 DC
Safety Clearances, Minimum Distances and Insulation of Live Parts

When installing a ComPacT NSX100 to 1200 DC circuit breaker, minimum distances (safety clearances) must be maintained between the device and panels, bars and other protection devices installed nearby. These distances, which depend on the ultimate breaking capacity, are defined by tests carried out in accordance with standard IEC 60947-2.
If installation conformity is not checked by type tests, it is also necessary to:
- Use insulated bars for circuit breaker connections
- Block off the busbars using insulating screens.


Terminal shields, interphase barriers and the insulation kit are recommended and may be mandatory depending on the utilization voltage and the type of installation (fixed, withdrawable).

Dimensions (mm)		Insulation, insulated bars or painted sheet metal			Sheetmetal					
ComPacT circuit breaker		C1	D1	D2	C2	D1	D2	A1 [2]	A2 [3]	B
NSX100-250 DC	U ⩽ 250 V	0	30	30	5	35	35	0	10	0
	U ⩽ 500 V	0	30	30	10 [1]	35	35	0	20	0
	U ⩽ 750 V	0	30 [4]	30 [4]	20 [4]	35 [4]	35 [4]	0	-	0
NSX400-630 DC	U ⩽ 250 V	0	30	30	5	60	60	0	10	0
	U ⩽ 500 V	0	30	30	10 [1]	60	60	0	20	0
	U ⩽ 750 V	0	30 [4]	30 [4]	20 [4]	100 [4]	100 [4]	0	-	0
NSX1200 DC [5]	U ⩽ 300 V	0	30	30	10	60	60	0	-	0
	U ⩽ 600 V	0	30	30	20	100	100	0	-	0


[1] Distance must be doubled with interphase barriers.
[2] For ComPacT NSX DC with long or short terminal shields.
[3] For ComPacT NSX DC without terminal shields.
[4] For voltage > 500 V, terminal shields are mandatory. The length of terminal shields (long or short terminal shields) should be considered.
[5] For ComPacT NSX1200 DC, terminal shields are required and are supplied with the circuit breaker.

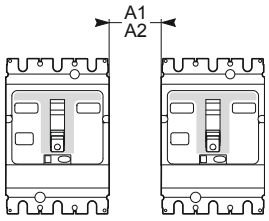


Minimal distance between two adjacent circuit breakers

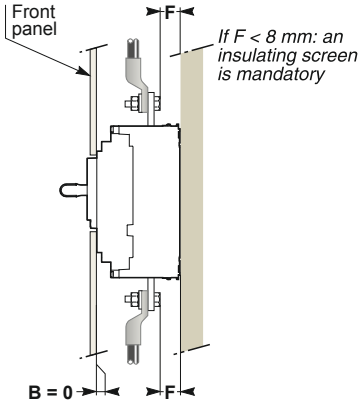

Minimal distance between the circuit breaker and front or rear panels






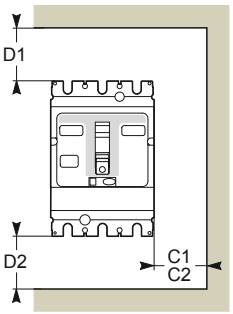


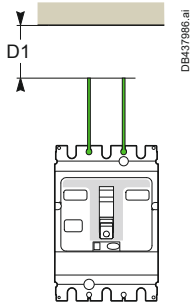

Devices with long or short terminal shields

Minimal distance between the circuit breaker and top, bottom or side panels

Terminal Shield Configuration

NSX400/630/1200, NSX400/630 NA						
	NSX400/630					NSX1200
Circuit breaker construction	3P	3P	4P	4P	4P	2P (4P platform)
Pole connection	3P in series	2P in series	3P in series	4P in series	2P parallel	-
Terminal shield construction	3P	3P	4P	4P	4P	4P
upstream	LV438291	LV432593	LV438294	LV432594	LV438293	LV438293
upstream with rear connection	LV438291	LV432593 or LV432591 (short)	LV438294	LV432594 or LV432592 (short)	-	-
downstream	LV438291	LV438292	LV438295	LV438293	LV438293	LV438293
						

ComPacT NSX100 to NSX1200 DC
Temperature Derating

These values are valid for fixed and withdrawable circuit breakers with or without terminal shields.
- "⩽ 500 V" means that 2 poles only are used, for isolated system, this table shall be used up to 250 V only.
- "> 500 V" means that 3 or 4 poles are used, for isolated system, this table shall be used up to 500 V only.

When the ambient temperature is greater than 40 °C, overload-protection characteristics are slightly modified.
To determine tripping times using time/current curves, use the values of the current indicated in the table below, corrected to take into account the ambient temperature.

ComPacT NSX DC temperature derating

NSX DC configuration	Type of trip unit	Rating In (A) for a given temperature						
		Ambient temp. 40 °C	Ambient temp. 45 °C	Ambient temp. 50 °C	Ambient temp. 55 °C	Ambient temp. 60 °C	Ambient temp. 65 °C	Ambient temp. 70 °C
NSX100 DC 1/2P 1P 250 V - 2P 500 V	TM16D	16	15.6	15.2	14.8	14.5	14	13.8
	TM25D	25	24.5	24	23.5	23	22	21
	TM30D	30	31.3	30.5	30	29.5	29	28.5
	TM40D	40	39	38	37	36	35	34
	TM50D	50	49	48	47	46	45	44
	TM63D	63	61.5	60	58	57	55	54
	TM80D	80	78	76	74	72	70	68
	TM100D	100	97.5	95	92.5	90	87.5	85
NSX160 DC 1/2P 1P 250 V - 2P 500 V	TM125D	125	122	119	116	113	109	106
	TM160D	160	156	152	147	144	140	136
NSX100 DC 3/4P ⩽ 500 V	TM16D	16.8	16.4	16	15.5	15.2	14.7	14.5
	TM25D	26.3	25.7	25.2	24.7	24.2	23.1	22.1
	TM32D	33.6	33	32	31.5	31	30.5	30
	TM40D	42	41	40	39	38	37	36
	TM50D	53	51	50	49	48	47	46
	TM63D	66	65	63	61	60	58	57
	TM80DC	84	82	80	78	76	74	71
	TM100DC	105	102	100	97	95	92	89
NSX160 DC 3/4P ⩽ 500 V	TM125DC	131	128	125	122	119	114	111
	TM160DC	168	164	160	154	151	147	143
NSX250 DC 3/4P ⩽ 500 V	TM200DC	210	205	200	194	189	184	179
	TM250DC	250	240	235	230	220	210	200
NSX100 DC 3/4P > 500 V	TM16D	16	15.6	15.2	14.8	14.5	14	13.8
	TM25D	25	24.5	24	23.5	23	22	21
	TM32D	32	31.3	30.5	30	29.5	29	28.5
	TM40D	40	39	38	37	36	35	34
	TM50D	50	49	48	47	46	45	44
	TM63D	63	61.5	60	58	57	55	54
	TM80DC	80	78	76	74	72	70	68
	TM100DC	100	97.5	95	92.5	90	87.5	85
NSX160 DC 3/4P > 500 V	TM125DC	125	122	119	116	113	109	106
	TM160DC	160	156	152	147	144	140	136
NSX250 DC > 500 V	TM200DC	200	195	190	185	180	175	170
	TM250DC	230	225	220	210	200	190	180
NSX400 DC ⩽ 500 V	TM250DC	250 A	250 A	240 A	230 A	220 A	205 A	195 A
	TM320DC	320 A	320 A	315 A	305 A	295 A	280 A	270 A
	TM400DC	400 A	400 A	395 A	380 A	370 A	355 A	340 A
NSX400 DC > 500 V	TM250DC	250 A	250 A	240 A	230 A	220 A	205 A	195 A
	TM320DC	320 A	320 A	315 A	305 A	295 A	280 A	270 A
	TM400 DC	400 A	400 A	395 A	380 A	370 A	350 A	340 A
NSX630 DC ⩽ 500 V	TM500DC	500 A	500 A	490 A	475 A	460 A	440 A	420 A
	TM600DC	600 A	600 A	585 A	560 A	535 A	510 A	485 A
NSX630 DC > 500 V	TM500DC	500 A	480 A	465 A	450 A	440 A	420 A	410 A
	TM600DC	-	-	-	-	-	-	-
NSX1200 DC 600 V	TM630DC	630 A	610 A	590 A	570 A	550 A	520 A	500 A
	TM800DC	800 A	775 A	740 A	720 A	695 A	665 A	640 A
	TM1000DC	1000 A	970 A	930 A	905 A	870 A	830 A	800 A
	TM1200DC	1200 A	1160 A	1115 A	1085 A	1040 A	995 A	955 A
NSX400 NA DC ⩽ 500 V		400 A	400 A	400 A	400 A	400 A	400 A	400 A
NSX400 NA DC > 500 V		400 A	400 A	400 A	400 A	400 A	400 A	400 A
NSX600 NA DC ⩽ 500 V		630 A	600 A	580 A	560 A	540 A	520 A	500 A
NSX600 NA DC > 500 V		605 A	585 A	570 A	550 A	530 A	505 A	485 A

Example : ComPacT NSX100 DC equipped with a TM80DC trip unit has a rating of:
- 84 A at 40 °C
- 78 A at 55 °C.

ComPacT NSX100 to NSX1200 DC

Characteristics of Circuit Breakers with Parallel Connection of Poles

When poles are connected in parallel,the trip unit corresponding to the maximum circuit breaker rating is never used, for safety reasons related to temperature rise.The heating conditions are modified.The table opposite indicates the new thermal ratings that should be used for 2P, 3P and 4P circuit breakers.

Type of circuit breaker	Pole connections	Type of trip unit	Equivalent rated current [1] In (A) at 40 °C	Magnetic threshold Ii (A) ±20 %	Breaking capacity Icu (kA)	
NSX100F DC					**250 V**	**500 V**
NSX100F DC 2-pole	2P in parallel	TM16D	40	520	36	-
		TM25D	63	800		
		TM30D	80	800		
		TM40D	100	1400		
		TM50D	125	1400		
		TM63D	158	1400		
See example 2 (see page A-8)		TM80D	200	1600		
NSX100F DC 3-pole	3P in parallel	TM16D	58	780	Please consult us	-
		TM25D	90	1200		
		TM32D	115	1650		
		TM40D	144	2100		
		TM50D	180	2100		
		TM63D	227	2100		
		TM80DC	288	2400		
		TM16G	58	240		
		TM25G	90	300		
		TM40G	144	300		
		TM63G	227	450		
		TM80G	288	750		
		TM100G	360	1200		
NSX100F DC 4-pole	4P in parallel	TM16D	74	1040	Please consult us	-
		TM25D	115	1600		
		TM32D	147	2200		
		TM40D	184	2800		
		TM50D	230	2800		
		TM63D	290	2800		
		TM80DC	368	3200		
		TM16G	74	320		
		TM25G	115	400		
		TM40G	184	400		
		TM63G	290	600		
		TM80G	368	1000		
		TM100G	460	1600		
	2 x 2P (in parallel) in series	TM16D	37	520	36	36
		TM25D	58	800		
		TM32D	74	1100		
		TM40D	46	1400		
		TM50D	115	1400		
		TM63D	145	1400		
		TM80DC	184	1600		
		TM16G	37	160		
		TM25G	58	200		
		TM40G	46	200		
		TM63G	145	300		
		TM80G	184	500		
		TM100G	230	800		

[1] Rated current of the assembly with the indicated pole connections.
Example : a ComPacT NSX100F DC 4-pole circuit breaker with 4 poles in parallel, equipped with a TM63D trip unit:

- An equivalent rated current of 290 A
- A fixed magnetic threshold of 2800 A.

ComPacT NSX100 to NSX1200 DC

Characteristics of Circuit Breakers with Parallel Connection of Poles

When poles are connected in parallel,the trip unit corresponding to the maximum circuit breaker rating is never used, for safety reasons related to temperature rise.The heating conditions are modified.The table opposite indicates the new thermal ratings that should be used for 2P, 3P and 4P circuit breakers.

Type of circuit breaker	Pole connections	Type of trip unit	Equivalent rated current [1] In (A) at 40 °C	Magnetic threshold Ii (A) ±20 %	Breaking capacity Icu (kA)	
NSX160F DC					**250 V**	**500 V**
NSX160F DC 2-pole	2P in parallel	TM125D	313	2400	36	-
NSX160F DC 3-pole	3P in parallel	TM100DC	360	2400	Please consult us	-
		TM125DC	450	3750		
		TM125G	450	1560		
		TM160G	576	1560		
NSX160F DC 4-pole	4P in parallel	TM100DC	460	3200		
		TM125DC	575	5000		
		TM125G	575	2080		
		TM160G	736	2080		
See example 1 (see page A-8)	2x2P (in parallel) in series	TM100DC	230	1600	36	36
		TM125DC	288	2500		
		TM125G	288	1040		
		TM160G	368	1040		
NSX250F DC						
NSX250F DC 3-pole	2P in parallel	TM160DC	400	2500	36	-
		TM200DC	500	2000 to 4000		
NSX250F DC 3-pole	3P in parallel	TM160DC	576	3750	Please consult us	-
		TM200DC	720	3000 to 6000		
		TM200G	720	1560		
		TM250G	900	1875		
NSX250F DC 4-pole	4P in parallel	TM160DC	736	5000		
		TM200DC	920	4000 to 8000		
		TM200G	920	2080		
		TM250G	1150	2500		
	2x2P (in parallel) in series	TM160DC	368	2500	36	36
		TM200DC	460	2000 to 4000		
		TM200G	460	1040		
		TM250G	575	1250		

Example : a ComPacT NSX160F DC 4-pole circuit breaker with 2x2P poles in parallel, equipped with a TM125DC trip unit:

- A equivalent rated current of 288 A
- A fixed magnetic threshold of 2500 A.

ComPacT NSX100 to NSX1200 DC

Characteristics of Circuit Breakers with Parallel Connection of Poles

When poles are connected in parallel,the trip unit corresponding to the maximum circuit breaker rating is never used, for safety reasons related to temperature rise.The heating conditions are modified.The table opposite indicates the new thermal ratings that should be used for 2P, 3P and 4P circuit breakers.

Type of circuit breaker	Pole connections	Type of trip unit	Equivalent rated current [1] In (A) at 40 °C	Magnetic threshold Ii (A) ±20 %	Breaking capacity Icu (kA)	
NSX400F DC					**250 V**	**500 V**
NSX400F DC 3-pole	2P in parallel	TM250DC	500	1250 to 2000	36	-
		TM320DC	640	1600 to 3200		
	3P in parallel	TM250DC	750	1875 to 3000		
		TM320DC	960	2400 to 4800		
NSX400F DC 4-pole	4P in parallel	TM250DC	1000	2500 to 4000		
		TM320DC	1280	3200 to 6400		
	2x2P (in parallel) in series	TM250DC	500	1250 to 2000	36	36
		TM320DC	640	1600 to 3200		
NSX630F DC						
NSX630F DC 3-pole	2P in parallel	TM500DC	1000	2500 to 5000	36	-
		TM600DC	1065	3000 to 6000		
NSX630F DC 3-pole	3P in parallel	TM500DC	1485	3750 to 7500		
		TM600DC	1500	4500 to 9000		
NSX630F DC 4-pole	4P in parallel	TM500DC	1650	5000 to 10000		
		TM600DC	1985	6000 to 12000		


ComPacT NSX DC PV
Safety Clearances and Minimum Distances

Safety Clearance Using Terminals Shields


- Terminal shields must be used with all DC PV circuit breakers when operating at 1000 V DC.
- Terminal shields can be used in option with DC PV switch-disconnectors (U ⩽ 1000 V DC).

ComPacT NSX80 to 200 DC PV and ComPacT NSX250 to 500 DC PV


Minimal distance between two adjacent devices

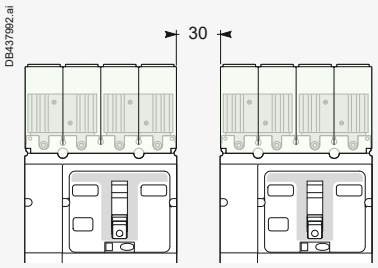


Minimal distance between the device and panels

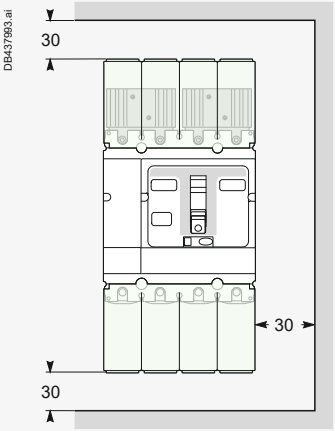

Minimal distance between the device and panels

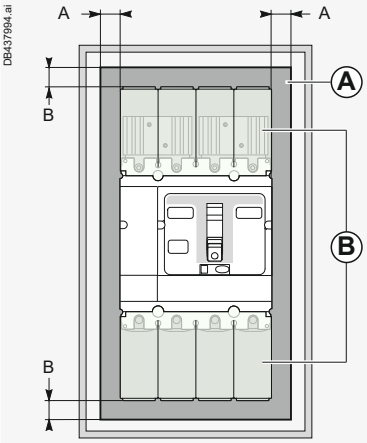

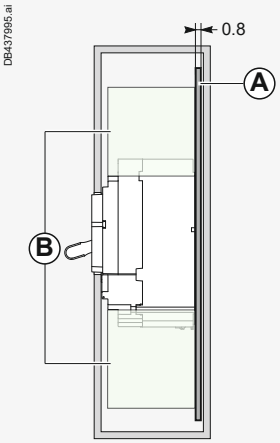

Dimensions (mm)	Insulation, insulated bars or painted sheet metal	
	A	B
NSX80-200 DC PV	13	13
NSX250 to 500 DC PV	26	26

(A) Fiber insulating plate to be made by the customer.
(B) Long terminal shield.


Note: The thermal behavior of switchgear and enclosures warrants careful monitoring. PV generator boxes and array boxes are usually installed outdoors and exposed to the elements. In the event of high ambient temperatures, high IP levels could reduce air flow and thermal power dissipation.
In addition, the way switchgear devices achieve high voltage operation - i.e. through the use of poles in series - increases their temperature. Special attention should therefore be paid to the temperature of switchgear inside outdoor enclosures on the DC side.
Schneider Electric recommends checking the installation as per IEC 61439 or any other equivalent standard.

Safety Clearance with Interphase Barriers


- Interphase barriers can used **only with DC PV switch-disconnectors** (U ⩽ 1000 V DC).

ComPacT NSX100 to 630 NA DC PV


Minimal distance between two adjacent devices

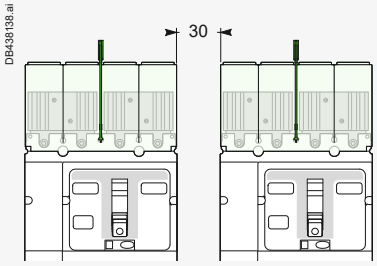


Minimal distance between the device and panels

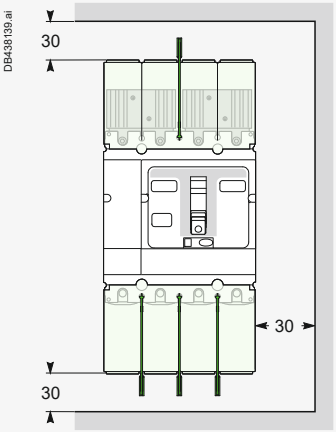

Minimal distance between the device and panels

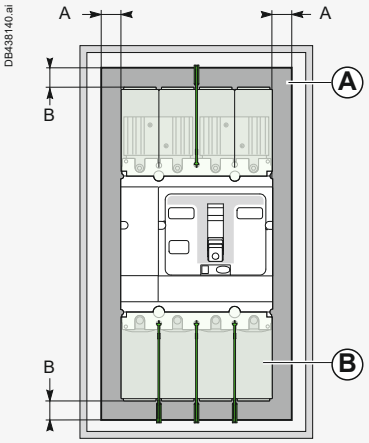

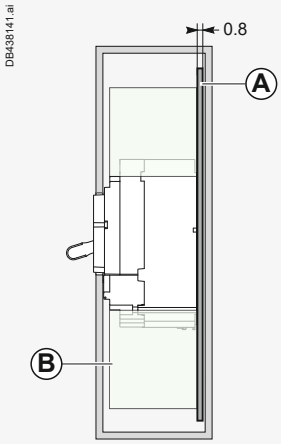

Dimensions (mm)	Insulation, insulated bars or painted sheet metal	
	A	B
NSX100 to 250 DC PV	13	13
NSX400 to 630 DC PV	26	26

(A) Fiber insulating plate to be made by the customer.
(B) Long terminal shield.

Note: The thermal behavior of switchgear and enclosures warrants careful monitoring. PV generator boxes and array boxes are usually installed outdoors and exposed to the elements. In the event of high ambient temperatures, high IP levels could reduce air flow and thermal power dissipation.
In addition, the way switchgear devices achieve high voltage operation - i.e. through the use of poles in series - increases their temperature. Special attention should therefore be paid to the temperature of switchgear inside outdoor enclosures on the DC side.
Schneider Electric recommends checking the installation as per IEC 61439 or any other equivalent standard.



ComPacT NSX200 NA DC PV with short heatsinks and interphase barriers



ComPacT NSX200 NA DC PV with long heatsinks and interphase barriers

B

ComPacT NSX DC PV
Temperature Derating

ComPacT switch-disconnectors have been tested for operation in industrial atmospheres. It is recommended that the equipment be cooled or heated to the proper operating temperature and kept free of excessive vibration and dust.

DC PV switch-disconnectors

ComPacT NSX NA DC PV														
IP	Bottom interphase barrier	Bottom terminal shield	Top interphase barrier	Top terminal shield	Top series connection	Maximum current (A): I_{th} 40 °C	45 °C	50 °C	55 °C	60 °C	65 °C	70 °C	Cooper cable section [1]
NSX100 NA DC PV 4P													
IP0	3 (LV429329)	No	1 (LV429329)	No	Short 2 x LV438328	100	100	100	100	100	100	100	Cu 35 mm²
IP4X	No	LV429518	No	LV438327	Short 2 x LV438328	100	100	100	100	100	100	100	Cu 35 mm²
NSX160 NA DC PV 4P													
IP0	3 (LV429329)	No	1 (LV429329)	No	Short 2 x LV438328	160	160	160	160	160	155	145	Cu 70 mm²
IP0	3 (LV429329)	No	1 (LV429329)	No	Long 2 x LV438339	160	160	160	160	160	160	160	Cu 70 mm²
IP4X	No	LV429518	No	LV438327	Short 2 x LV438328	160	160	160	160	150	145	135	Cu 70 mm²
NSX200 NA DC PV 4P													
IP0	3 (LV429329)	No	1 (LV429329)	No	Short 2 x LV438328	200	195	190	180	170	160	150	Cu 95 mm²
IP0	3 (LV429329)	No	1 (LV429329)	No	Long 2 x LV438339	200	200	200	200	195	185	170	Cu 95 mm²
IP4X	No	LV429518	No	LV438327	Short 2 x LV438328	190	180	175	165	155	150	140	Cu 95 mm²
NSX400 NA DC PV 4P													
IP3X	No	LV432594	No	LV438337	LV438338	400	400	400	400	400	390	380	Cu 240 mm²
IP0	3 (LV432570)	No	1 (LV429329)	No	LV438338	400	400	400	400	400	400	400	Cu 240 mm²
NSX500 NA DC PV 4P													
IP3X	No	LV432594	No	LV438337	LV438338	500	500	490	470	450	435	420	Cu 2 x 150 mm²
IP0	3 (LV432570)	No	1 (LV429329)	No	LV438338	500	500	500	500	500	500	480	Cu 2 x 150 mm²

For ComPacT NSX the overload protection is calibrated at 40 °C and for C60 DC PV at 20 °C. This means that when the ambient temperature is less or greater than these temperatures, the Ir protection pickup is slightly modified.

- Temperature rise for ComPacT range have been checked with terminal shields (mandatory) heatsink on top, four cables on bottom connections with section and length according to IEC60947-1 Table 9 and 10.
- Values in the tables are provided for vertical mounting only. In case of horizontal mounting consult us. To obtain the tripping time for a given temperature:
  - See the tripping curves for 20 or 40 °C
  - Determine tripping times corresponding to the Ir value (thermal setting on the device), corrected for the breaker ambient temperature as indicated in the tables below.

DC PV overcurrent protection

ComPacT NSX TM DC PV											
Maximum current (A): I_{th}											Cooper cable section [1]
20 °C	25 °C	30 °C	35 °C	40 °C	45 °C	50 °C	55 °C	60 °C	65 °C	70 °C	
NSX80 TM DC PV											
88	86	84	82	80	77	75	72	69	66	63	Cu 25 mm²
NSX125 TM DC PV											
137.5	135	131	128	125	121	116	112	108	103	98	Cu 50 mm²
NSX160 TM DC PV											
176	172	168	164	160	153	147	142	136	130	124	Cu 70 mm²
NSX200 TM DC PV											
194	189	183	178	172	167	161	155	149	142	136	Cu 95 mm²
200	200	200	200	200	188	182	175	168	160	153	Cu 95 mm² [2]
NSX250 TM DC PV											
302	295	288	280	250	243	235	228	220	210	197	Cu 120 mm²
NSX320 TM DC PV											
371	362	352	342	320	309	297	286	273	261	248	Cu 185 mm²
NSX400 TM DC PV											
455	444	433	421	400	386	372	358	343	327	311	Cu 240 mm²
NSX500 TM DC PV											
557	542	526	511	495	478	461	444	426	405	384	Cu 2x150 mm²

[1] Temperature rise have been checked with four cables on bottom connections with section and length according to IEC60947-1 Table 9.

a. When used in array boxes, with short connection to string protections the cross section of the bars or cables shall have a higher cross section.

b. When cables have a cross section lower than the value indicated an additional 0.9 derating coefficient shall be applied. Values in the tables are provided for vertical mounting only.

[2] Take into account this derating line for products with date code over --15011.

ComPacT NSX630b to 1600 DC PV Switch-Disconnectors [1]

All the given values come from connections tests.
For other kind of connections (rear horizontal/rear vertical) the values remain the same.

DC PV switch-disconnector

ComPacT NSX NA DC PV IP	Bottom interphase barrier	Bottom terminal shield	Top interphase barrier	Top terminal shield	Top series connection	Maximum current (A): I_{th} 40 °C	45 °C	50 °C	55 °C	60 °C	65 °C	70 °C	Copper cable section
NSX630b NA DC PV 4P													
IP2X	No	33629	No	LV438968	2 x LV438966	630	630	630	630	630	630	630	Cu 2 x 185 mm²
IP0	3 (33646)	No	1 (33646)	No	2 x LV438966	630	630	630	630	630	630	630	Cu 2 x 185 mm²
NSX800 NA DC PV 4P													
IP2X	No	33629	No	LV438968	2 x LV438966	800	800	800	800	800	800	800	Cu 2 x 240 mm²
IP0	3 (33646)	No	1 (33646)	No	2 x LV438966	800	800	800	800	800	800	800	Cu 2 x 240 mm²
NSX1000 NA DC PV 4P													
IP2X	No	33629	No	LV438968	2 x LV438966	1000	1000	1000	1000	1000	1000	1000	Bar Cu 2 x 60 x 5 mm
IP0	3 (33646)	No	1 (33646)	No	2 x LV438966	1000	1000	1000	1000	1000	1000	1000	Bar Cu 2 x 60 x 5 mm
NSX1250 NA DC PV 4P													
IP2X	No	33629	No	LV438968	2 x LV438966	1250	1250	1250	1250	1232	1169	1102	Bar Cu 2 x 80 x 5 mm
IP0	3 (33646)	No	1 (33646)	No	2 x LV438966	1250	1250	1250	1250	1250	1227	1157	Bar Cu 2 x 80 x 5 mm
NSX1600 NA DC PV 4P													
IP2X	No	33629	No	LV438968	2 x LV438966	1473	1428	1384	1338	1291	1243	1193	Bar Cu 2 x 100 x 5 mm
IP0	3 (33646)	No	1 (33646)	No	2 x LV438966	1500	1500	1500	1448	1397	1345	1291	Bar Cu 2 x 100 x 5 mm

[1] For a switch-disconnector mounted in horizontal position, the derating to be applied is equivalent to that of a front or horizontal rear connected switch-disconnector.

The values indicated in the tables opposite are typical values.

Power dissipated per pole (P/pole) in Watts (W)
The value indicated in the table is the power dissipated at I_N, four-pole switchboard (these values can be higher than the power calculated on the basis of the pole resistance). Measurement and calculation of the dissipated power are carried out in compliance with the recommendations of Annex G of standard IEC 60947-2.

Resistance per pole (R/pole) in milliohms (mΩ)
The value of the resistance per pole is provided as a general indication for a new device.
The value of the contact resistance must be determined on the basis of the measured voltage drop, in accordance with the manufacturer's test procedure.

ComPacT NSX80 TM to 500 TM DC PV switch-disconnectors

Version	Fixed device TM	
	R/pole	P/pole
NSX80 TM DC PV	1	6.40
NSX100 TM DC PV	0.72	7.20
NSX125 TM DC PV	0.68	10.63
NSX160 TM DC PV	0.49	12.54
NSX200 TM DC PV	0.44	17.60
NSX250 TM DC PV	0.33	20.63
NSX320 TM DC PV	0.215	22.02
NSX400 TM DC PV	0.16	25.60
NSX500 TM DC PV	0.134	33.50

ComPacT NSX630b NA to 1600 NA DC PV switch-disconnectors

Version	Fixed device NA	
	R/pole	P/pole
NSX630b NA DC PV	0.029	11.4
NSX800 NA DC PV	0.029	18.7
NSX1000 NA DC PV	0.030	29.7
NSX1250 NA DC PV	0.030	47.3
NSX1600 NA DC PV	0.033	74.0


Note: This measurement is not sufficient to determine the quality of the contacts, i.e. the capacity of the circuit breaker to carry its rated current.

ComPacT NSX DC EP
Safety Clearances and Minimum Distances

Safety Clearance Using Terminals Shields


- Terminal shields must be used with all DC EP circuit breakers when operating at 1500 V DC.
- Terminal shields can be used in option with DC EP switch-disconnectors (U ⩽ 1500 V DC).

Minimal distance between two adjacent devices (ComPacT NSX250 TM DC EP and ComPacT NSX250 NA DC EP)

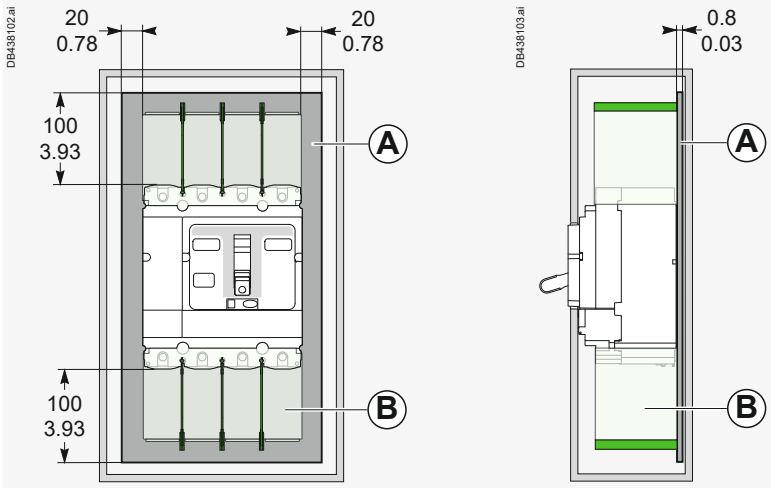

(A) Insulating screen (LV429331) or fiber insulating plate to be made by the customer.
(B) Interphase barriers (LV429329) or terminal shield.

Minimal distance between two adjacent devices (ComPacT NSX500 TM DC EP and ComPacT NSX630 NA DC EP)

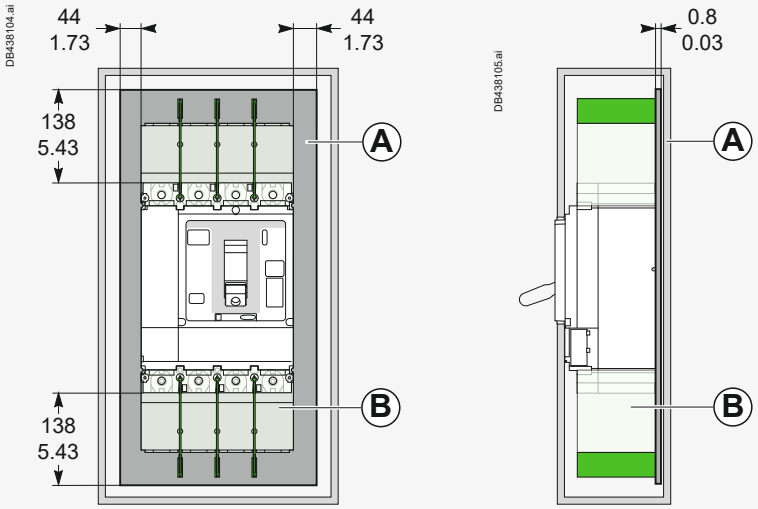

(A) Insulating screen (LV432579) or fiber insulating plate to be made by the customer.

(B) Interphase barriers (LV432570) or terminal shield.

Note:
The device must be installed in an IP5x enclosure. The thermal behavior of switchgear and enclosures warrants careful monitoring. PV generator boxes and array boxes are usually installed outdoors and exposed to the elements. In the event of high ambient temperatures, high IP levels could reduce air flow and thermal power dissipation.
In addition, the way switchgear devices achieve high voltage operation - i.e. through the use of poles in series - increases their temperature. Special attention should therefore be paid to the temperature of switchgear inside outdoor enclosures on the DC side.
Schneider Electric recommends checking the installation as per IEC 61439 or any other equivalent standard.

ComPacT NSX DC EP
Temperature Derating

ComPacT switch-disconnectors have been tested for operation in industrial atmospheres. It is recommended that the equipment be cooled or heated to the proper operating temperature and kept free of excessive vibration and dust.

DC EP switch-disconnectors

ComPacT NSX NA DC EP

IP	Bottom interphase barrier	Bottom terminal shield	Top interphase barrier	Top terminal shield	Top series connection	Maximum current (A): I_{th} 40 °C	45 °C	50 °C	55 °C	60 °C	65 °C	70 °C	Cooper cable section [1]
NSX250 NA DC EP													
NSX100 NA DC EP 4P													
IP0	3 (LV429329)	No	1 (LV429329)	No	Short 2 x LV438328	100	100	100	100	100	100	100	Cu 35 mm²
IP4X	No	LV429518	No	LV438327	Short 2 x LV438328	100	100	100	100	100	100	100	Cu 35 mm²
NSX160 NA DC EP 4P													
IP0	3 (LV429329)	No	1 (LV429329)	No	Short 2 x LV438328	160	160	160	160	160	155	145	Cu 70 mm²
IP4X	No	LV429518	No	LV438327	Short 2 x LV438328	160	160	160	160	150	145	135	Cu 70 mm²
NSX200 NA DC EP 4P													
IP0	3 (LV429329)	No	1 (LV429329)	No	Short 2 x LV438328	200	195	190	180	170	160	150	Cu 95 mm²
IP4X	No	LV429518	No	LV438327	Short 2 x LV438328	190	180	175	165	155	150	140	Cu 95 mm²
IP0	3 (LV429329)	No	1 (LV429329)	No	Cable	200	200	200	200	200	200	200	Cu 95 mm²
NSX250 NA DC EP 4P													
IP0	3 (LV429329)	No	1 (LV429329)	No	Short 2 x LV438328	200	195	190	180	170	160	150	Cu 120 mm²
IP4X	No	LV429518	No	LV438327	Short 2 x LV438328	190	180	175	175	155	150	140	Cu 120 mm²
IP0	3 (LV429329)	No	1 (LV429329)	No	Cable	250	250	250	235	230	220	210	Cu 120 mm²
NSX630 NA DC EP													
NSX320 NA DC EP 4P													
IP3X	No	LV432594	No	LV438337	LV438338	320	320	320	320	320	320	320	Cu 185 mm²
IP0	3 (LV432570)	No	1 (LV429329)	No	LV438338	320	320	320	320	320	320	320	Cu 185 mm²
NSX400 NA DC EP 4P													
IP3X	No	LV432594	No	LV438337	LV438338	400	400	400	400	400	390	380	Cu 240 mm²
IP0	3 (LV432570)	No	1 (LV429329)	No	LV438338	400	400	400	400	400	400	400	Cu 240 mm²
NSX500 NA DC EP 4P													
IP3X	No	LV432594	No	LV438337	LV438338	500	500	490	470	450	435	420	Cu 2 x 150 mm²
IP0	3 (LV432570)	No	1 (LV429329)	No	LV438338	500	500	500	500	500	500	480	Cu 2 x 150 mm²
NSX630 NA DC EP 4P													
IP3X	No	LV432594	No	LV438337	LV438338	500	500	490	470	450	435	420	Cu 2 x 185 mm²
IP0	3 (LV432570)	No	1 (LV429329)	No	LV438338	500	500	500	500	500	500	480	Cu 2 x 185 mm²
IP0	3 (LV432570)	No	1 (LV429329)	No	Cable	630	610	590	570	550	530	510	Cu 2 x 185 mm²

For ComPacT NSX the overload protection is calibrated at 40 °C and for C60 DC PV at 20 °C. This means that when the ambient temperature is less or greater than these temperatures, the Ir protection pickup is slightly modified.

- Temperature rise for ComPacT range have been checked with terminal shields (mandatory) heatsink on top, four cables on bottom connections with section and length according to IEC60947-1 Table 9 and 10.
- Values in the tables are provided for vertical mounting only. In case of horizontal mounting consult us. To obtain the tripping time for a given temperature:
  - See the tripping curves for 20 or 40 °C
  - Determine tripping times corresponding to the Ir value (thermal setting on the device), corrected for the breaker ambient temperature as indicated in the tables below.

[1] Temperature rise have been checked with four cables on bottom connections with section and length according to IEC60947-1 Table 9.
a. When used in array boxes, with short connection to string protections the cross section of the bars or cables shall have a higher cross section.
b. When cables have a cross section lower than the value indicated an additional 0.9 derating coefficient shall be applied.
Values in the tables are provided for vertical mounting only.
[2] Take into account this derating line for products with date code over --15011.

ComPacT NSX630b to 1600 DC EP Switch-Disconnectors [1]

All the given values come from connections tests.
For other kind of connections (rear horizontal/rear vertical) the values remain the same.

DC EP overcurrent protection

ComPacT NSX TM DC EP Maximum current (A): I_{th} 20 °C	25 °C	30 °C	35 °C	40 °C	45 °C	50 °C	55 °C	60 °C	65 °C	70 °C	Cooper cable section [2]
NSX250 DC EP											
NSX100 TM DC EP											
110	108	107	105	104	102	100	95	89	84	78	Cu 35 mm²
NSX125 TM DC EP											
137	135	133	131	129	127	125	119	112	105	98	Cu 50 mm²
NSX160 TM DC EP											
176	174	172	169	166	163	160	151	142	133	124	Cu 70 mm²
NSX200 TM DC EP											
225	221	217	213	209	205	200	189	177	165	153	Cu 95 mm² [3]
NSX250 TM DC EP											
262	260	258	256	254	252	250	238	226	213	200	Cu 120 mm²
NSX500 DC EP											
NSX250 TM DC EP											
302	294	286	277	268	259	250	237	224	211	197	Cu 120 mm²
NSX320 TM DC EP											
371	363	355	347	338	329	320	302	284	266	248	Cu 185 mm²
NSX400 TM DC EP											
455	446	437	428	419	410	400	378	356	334	311	Cu 240 mm²
NSX500 TM DC EP											
557	548	539	530	520	510	500	471	442	413	384	Cu 2x150 mm²

[1] For a switch-disconnector mounted in horizontal position, the derating to be applied is equivalent to that of a front or horizontal rear connected switch-disconnector.
[2] Temperature rise have been checked with four cables on bottom connections with section and length according to IEC60947-1 Table 9.
a. When used in array boxes, with short connection to string protections the cross section of the bars or cables shall have a higher cross section.
b. When cables have a cross section lower than the value indicated an additional 0.9 derating coefficient shall be applied. Values in the tables are provided for vertical mounting only.
[3] Take into account this derating line for products with date code over --15011.

The values indicated in the tables opposite are typical values.

Power dissipated per pole (P/pole) in Watts (W)
The value indicated in the table is the power dissipated at I_N, four-pole switchboard (these values can be higher than the power calculated on the basis of the pole resistance). Measurement and calculation of the dissipated power are carried out in compliance with the recommendations of Annex G of standard IEC 60947-2.

Resistance per pole (R/pole) in milliohms (mΩ)
The value of the resistance per pole is provided as a general indication for a new device.
The value of the contact resistance must be determined on the basis of the measured voltage drop, in accordance with the manufacturer's test procedure.


ComPacT NSX100 TM to 500 TM DC EP switch-disconnectors

Version	Fixed device TM R/pole	P/pole
NSX250 DC EP		
NSX100 TM DC EP	0.72	7.20
NSX125 TM DC EP	0.68	10.63
NSX160 TM DC EP	0.49	12.54
NSX200 TM DC EP	0.44	17.60
NSX250 TM DC EP	0.44	17.60
NSX500 DC EP		
NSX250 TM DC EP	0.33	20.63
NSX320 TM DC EP	0.215	22.02
NSX400 TM DC EP	0.16	25.60
NSX500 TM DC EP	0.134	33.50

Note: This measurement is not sufficient to determine the quality of the contacts, i.e. the capacity of the circuit breaker to carry its rated current.


MasterPact NW10 to NW40 DC, EPDC, DC PV
Installation in Switchboard

Possible Positions

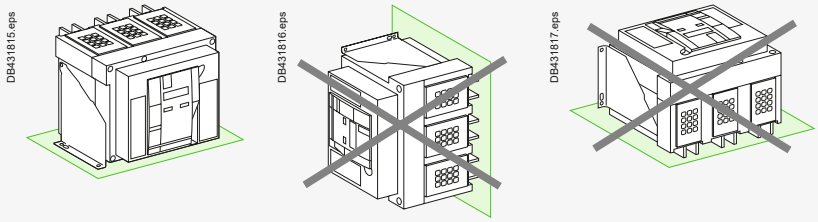


Power Supply

The plus and minus polarities **(LINE + and LINE -)** of the power supply must be connected as indicated in the “Dimensions and connection” chapter.

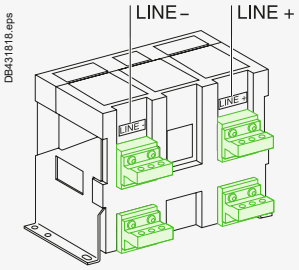


Mounting the Circuit Breaker

It is important to distribute the weight of the device uniformly over a rigid mounting surface such as rails or a base plate.
This mounting plane should be perfectly flat (tolerance on support flatness: 2 mm). This eliminates any risk of deformation which could interfere with correct operation of the circuit breaker.
MasterPact devices can also be mounted on a vertical plane using the special brackets.

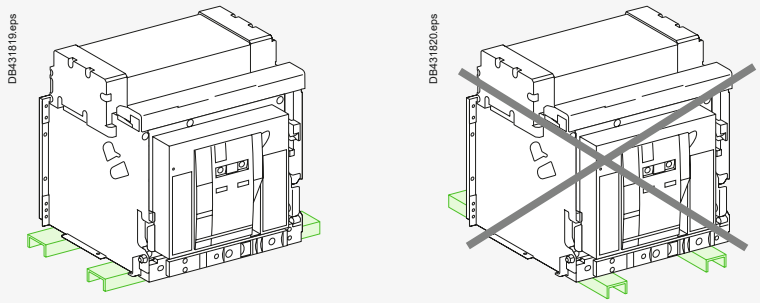

Mounting on rails

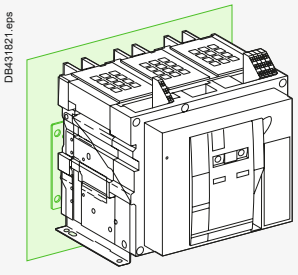


Mounting with vertical brackets

MasterPact NW10 to NW40 DC, EPDC, DC PV
Door Interlock

Mounted on the right or left-hand side of the craddle, this device inhibits opening of the cubicle door when the circuit breaker is in “connected” or “test” position.
If the breaker is put in the “connected” position with the door open, the door may be closed without having to disconnect the circuit breaker.


Door Interlock Catch VPEC

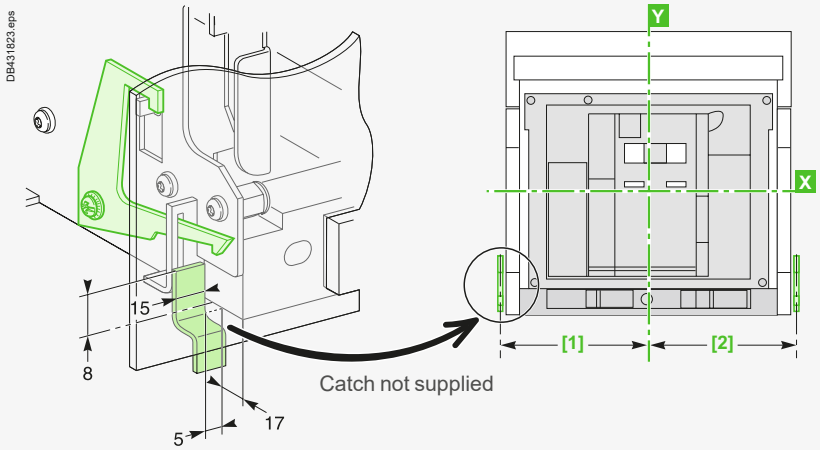

Dimensions (mm)		
Type DC	**[1]**	**[2]**
NW10-40 DC (versions C-D)	215	215
NW10-40 DC (version E)	330	215
Type DC PV	**[1]**	**[2]**
NW10-40 DC PV (version D)	215	215


Breaker in "Connected" or "Test" Position

Door Cannot Be Opened

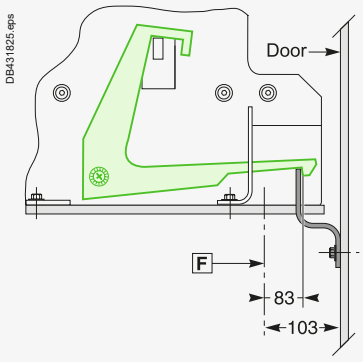

Breaker in "Disconnected" Position

Door Can Be Opened

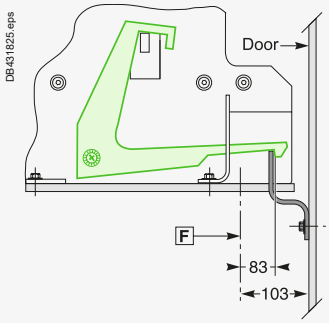


Note: The door interlock can either be mounted on the right side or the left side of the breaker.
F: Datum

MasterPact NW10 to NW40 DC, EPDC, DC PV
Cable-Type Door Interlock - Connection of MN, MX and XF Voltage Releases

Cable-Type Door Interlock IPA

This option avoids door opening when the circuit breaker is closed and avoids circuit breaker closing when the door is open.
For this, a special plate associated with a lock and a cable is mounted on the right side of the circuit breaker.
With this interlock installed, the source changeover function cannot be implemented.

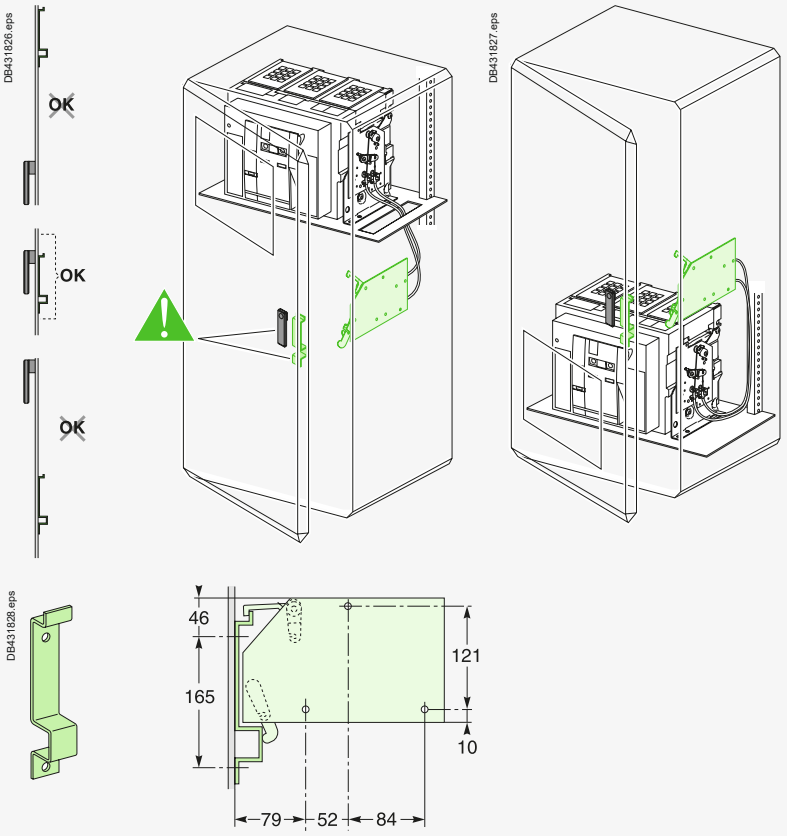

Wiring of Voltage Releases

During pick-up, the power consumed is approximately 150 to 200 VA. For low control voltages (12, 24, 48 V), maximum cable lengths are imposed by the voltage and the cross-sectional area of cables.

Recommended Maximum Cable Lengths (Meter)


		12 V		24 V		48 V	
		2.5 mm²	1.5 mm²	2.5 mm²	1.5 mm²	2.5 mm²	1.5 mm²
MN	U source 100 %	-	-	58	35	280	165
	U source 85 %	-	-	16	10	75	45
MX-XF	U source 100 %	21	12	115	70	550	330
	U source 85 %	10	6	75	44	350	210

Note: The indicated length is that of each of the two wires.

Cable Connections


If cables are used for the power connections, make sure that they do not apply excessive mechanical forces to the circuit breaker terminals.
For this, make the connections as follows:

- Extend the circuit breaker terminals using short bars designed and installed according to the recommendations for bar-type power connections:
  - For a single cable, use solution **B** opposite
  - For multiple cables, use solution **C** opposite.
- In all cases, follow the general rules for connections to busbars:
  - Position the cable lugs before inserting the bolts
  - The cables should firmly tightened to the framework of the switchboard **E**.

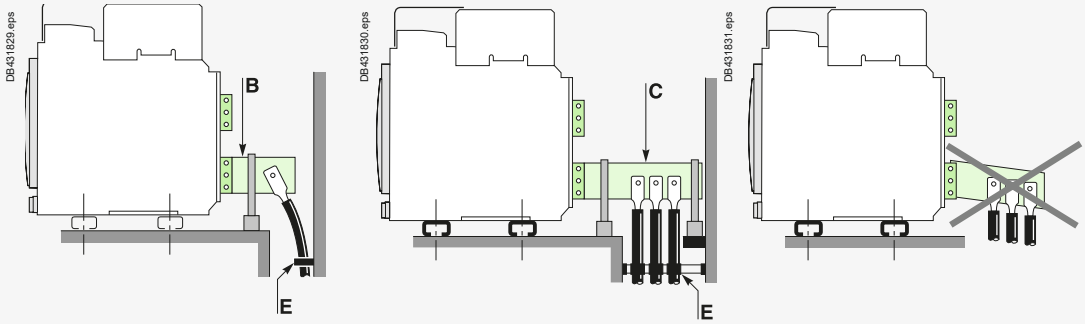

Busbar Connections

The busbars should be suitably adjusted to ensure that the connection points are positioned on the terminals before the bolts are inserted **B.** The connections are held by the support which is solidly fixed to the framework of the switchboard, such that the circuit breaker terminals do not have to support its weight **C**. (This support should be placed close to the terminals).

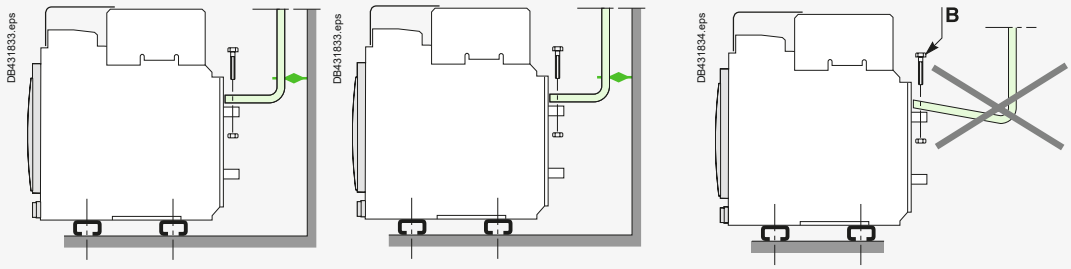


Electrodynamic Stresses

The first busbar support or spacer shall be situated within a maximum distance from the connection point of the breaker (see table below). This distance must be respected so that the connection can withstand the electrodynamic stresses between phases in the event of a short circuit.

Maximum distance A between busbar to circuit breaker connection and the first busbar support or spacer with respect to the value of the prospective short-circuit current.					
Isc (kA)	30	50	65	80	100
distance A (mm)	350	300	250	150	150

MasterPact NW10 to NW40 DC, EPDC, DC PV
Power Connection

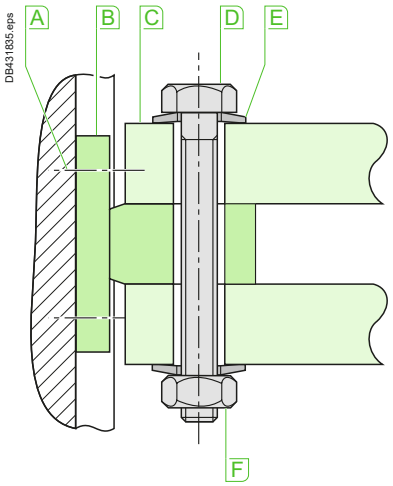


A Terminal screw factory-tightened to 16 Nm
B Breaker terminal
C Busbar
D Bolt
E Washer
F Nut

Clamping

Correct clamping of busbars depends amongst other things, on the tightening torques used for the nuts and bolts. Over-tightening may have the same consequences as under-tightening.
For connecting busbars (Cu ETP-NFA51-100) to the circuit breaker, the tightening torques to be used are shown in the table below.
These values are for use with copper busbars and steel nuts and bolts, class 8.8.
The same torques can be used with AGS-T52 quality aluminium bars (French standard NFA 02-104 or American National Standard H-35-1).


Examples

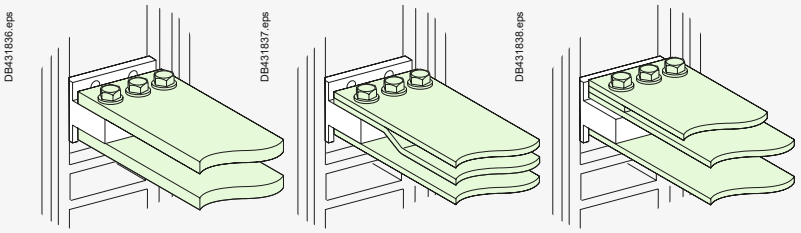


Tightening torques			
Ø Nominal (mm)	Ø Drilling (mm)	Tightening torque (Nm) with flat washers or split lockwashers	Tightening torque (Nm) with contact or serrated washers
10	11	37.5	50

Busbar Drilling

Examples

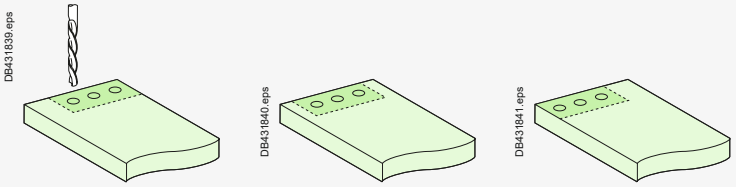


Isolation Distance

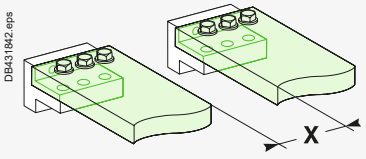

Dimensions (mm)	
Ui	X mini
500 V DC	8 mm
900 V DC	14 mm


Busbar Bending

When bending busbars maintain the radius indicated below (a smaller radius would cause cracks).

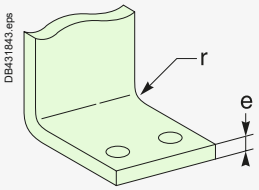


Dimensions (mm)		
e	Radius of curvature r	
	Min.	Recommended
5	5	7.5
10	15	18 to 20


Horizontal Rear Connection NW10 to NW20 DC - DC PV

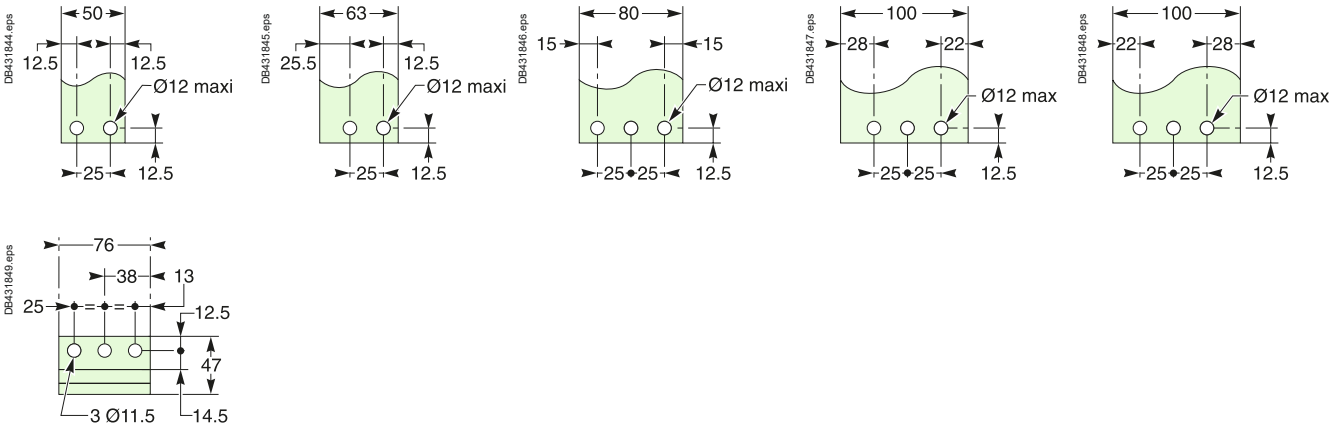

Vertical Rear Connection NW10 to NW20 DC - DC PV

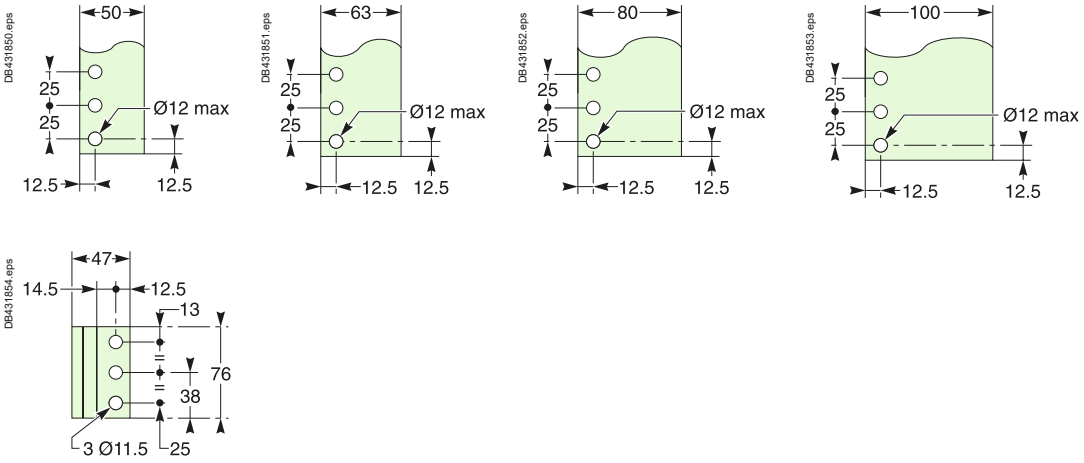


Vertical Rear Connection NW40 DC - DC PV

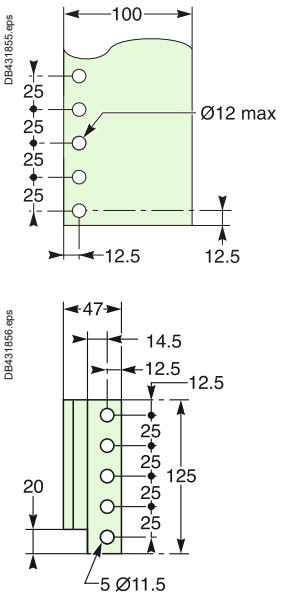

MasterPact NW10 to NW40 DC, EPDC, DC PV
Busbar Sizing

DB431857.eps

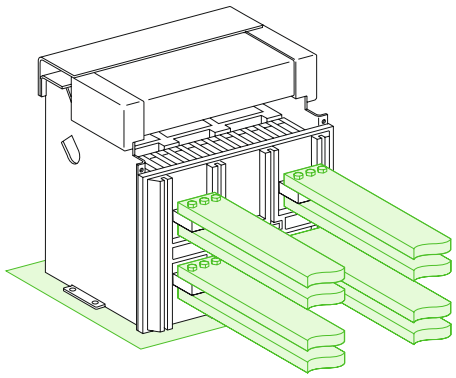

Rear Horizontal Connection

Basis of Tables

- Maximum permissible busbar temperature: 100 °C
- Ti: temperature around the circuit breaker and its connections
- Busbar material is unpainted copper.

Example

Conditions:

- Drawout version
- Horizontal busbars
- Ti: 50 °C
- Service current: 2000 A.


Solution

For Ti = 50 °C, use an NW20 DC - DC PV which can be connected with three 100 x 5 mm bars or two 80 x 10 mm bars.

MasterPact NW DC, EPDC, DC PV	Maximum service current	Ti: 40 °C no. of bars		Ti: 50 °C no. of bars		Ti: 60 °C no. of bars	
		5 mm thick bars	10 mm thick bars	5 mm thick bars	10 mm thick bars	5 mm thick bars	10 mm thick bars
NW10 DC, EPDC	**1000**	3b.50 x 5	1b.63 x 10	3b.50 x 5	2b.50 x 10	3b.63 x 5	2b.50 x 10
NW20 DC, EPDC	**2000**	3b.100 x 5	2b.80 x 10	3b.100 x 5	2b.80 x 10	3b.100 x 5	3b.80 x 10
NW20 HADCD-PV	**2000**	3b.100 x 5	2b.80 x 10	3b.100 x 5	2b.80 x 10	3b.100 x 5	3b.80 x 10

Note: The values indicated in these tables have been extrapolated from test data and theoretical calculations. These tables are only intended as a guide and cannot replace industrial experience or a temperature rise test.

DB431858.eps

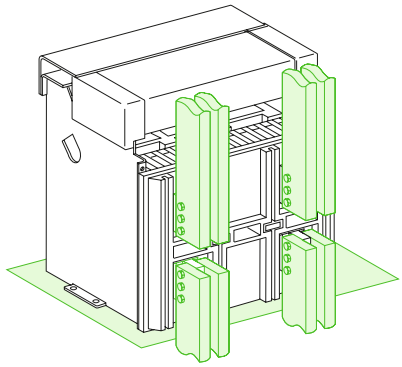

Rear Vertical Connection

Basis of Tables

- Maximum permissible busbar temperature: 100 °C
- Ti: temperature around the circuit breaker and its connections
- Busbar material is unpainted copper.

Example

Conditions:

- Fixed version
- Vertical busbars
- Ti: 40 °C
- Service current: 1000 A.

Solution

For Ti = 40 °C, use an NW10 DC - DC PV which can be connected with two 50 x 5 mm bars or one 50 x 10 mm bar.

MasterPact NW DC, EPDC, DC PV	Maximum service current	Ti: 40 °C no. of bars		Ti: 50 °C no. of bars		Ti: 60 °C no. of bars	
		5 mm thick bars	10 mm thick bars	5 mm thick bars	10 mm thick bars	5 mm thick bars	10 mm thick bars
NW10 DC, EPDC	**1000**	2b.50 x 5	1b.50 x 10	2b.50 x 5	1b.50 x 10	2b.63 x 5	1b.63 x 10
NW20 DC, EPDC	**2000**	3b.100 x 5	2b.63 x 10	3b.100 x 5	2b.63 x 10	3b.100 x 5	3b.63 x 10
NW40 DC, EPDC	**4000**	-	4b.100 x 10	-	4b.100 x 10	-	4b.100 x 10
NW20 HADCD-PV	**2000**	3b.100 x 5	2b.63 x 10	3b.100 x 5	2b.63 x 10	3b.100 x 5	3b.63 x 10
NW40 HADCD-PV	**4000**	-	4b.100 x 10	-	4b.100 x 10	-	4b.100 x 10

Note: The values indicated in these tables have been extrapolated from test data and theoretical calculations. These tables are only intended as a guide and cannot replace industrial experience or a temperature rise test.

MasterPact NW10 to NW40 DC, EPDC, DC PV

Temperature Derating - Power Dissipation

Temperature Derating

The table below indicates the maximum current rating, for each connection type, as a function of the ambient temperature around the circuit breaker and the busbars. For ambient temperatures greater than 60 °C, consult us.
Ti: temperature around the circuit breaker and its connections.

Version		Drawout device										Fixed device									
Connection		Rear horizontal					Rear vertical					Rear horizontal					Rear vertical				
temp. Ti		40	45	50	55	60	40	45	50	55	60	40	45	50	55	60	40	45	50	55	60
NW DC																					
NW10	**Version C**	1000					1000					1000					1000				
	Version D	1000					1000					1000					1000				
	Version E	1000					1000					1000					1000				
NW20	**Version C**	2000					2000					2000					2000				
	Version D	2000					2000					2000					2000				
	Version E	2000					2000					2000					2000				
NW40	**Version C**	-					4000					-					4000				
	Version D	-					4000		3900	3750	3600	-					4000				
	Version E	-					4000		3800	3650	3500	-					4000				
NW EPDC																					
NW10 EPDC-D		1000					1000					-					-				
NW20 EPDC-D		2000					2000					-					-				
NW40 EPDC-D		-					4000		3900	3750	3600	-					-				
NW DC PV																					
NW20	**Version D**	2000					2000					2000					2000				
NW40	**Version D**	-					4000		3900	3750	3600	-					4000				

Power Dissipation

Total power dissipation is the value measured at IN, for a 3 pole (version C, D [1]) or 4 pole (version E) breaker (values above the power $P = 3RI^2$).
[1] DC PV version D only.

Version	Drawout device			Fixed device		
	Power dissipation (Watt)			Power dissipation (Watt)		
Version	**C**	**D**	**E**	**C**	**D**	**E**
NW10 DC	45	75	105	25	40	60
NW20 DC	135	230	330	90	160	235
NW40 DC	460	800	1150	360	580	850

Version	Drawout device	No Fixed device
	Power dissipation (Watt)	
Version	**D**	
NW10 EPDC-D	75	
NW20 EPDC-D	230	
NW40 EPDC-D	800	

Version	Drawout device	Fixed device
	Power dissipation (Watt)	Power dissipation (Watt)
Version	**D**	**D**
NW20 HADCD-PV	230	160
NW40 HADCD-PV	800	580



Dimensions and Connection

ComPacT (Fixed Version) 1P-2P NSX100-NSX160 DC
Dimensions, Mounting, Cutout C-4

Dimensions and Mounting
ComPacT NSX100 to 1200 DC Fixed Version C-6
ComPacT NSX100 to 630 DC Plug-in Version C-8
ComPacT NSX100 to 630 DC Withdrawable Version C-10
Motor Mechanism Module for ComPacT NSX100 to 1200 DC C-12
Direct Rotary Handle for ComPacT NSX100 to 1200 DC C-13
MCC and CNOMO Type Direct Rotary Handles for ComPacT NSX100 to 1200 DC Fixed Version C-14
Extended Rotary Handle for ComPacT NSX100 To1200 DC C-15

Front-Panel Accessories C-16
ComPacT NSX100 to 1200 DC C-16

Power Connections
ComPacT NSX100 to 1200 DC Fixed Version C-18
ComPacT NSX100 to 630 DC Fixed Version C-20
Connection of Insulated Bars or Cables with Lugs to ComPacT NSX100 to 1200 DC C-22
Connection of Bare Cables to ComPacT NSX100 to 1200 DC C-23

ComPacT (Fixed Version) 2P-3P-4P Parallel and Series Connection of Poles
ComPacT NSX100 to NSX250 DC C-24
ComPacT NSX400 to NSX630 DC C-25

ComPacT (Fixed Version) 4P Parallel and Series Connection of Poles
ComPacT NSX630 to NSX1200 DC C-26

ComPacT (Withdraw. Version) 3P-4P Parallel and Series Connection of Poles
ComPacT NSX100 to NSX250 DC C-27
ComPacT NSX400 to NSX630 DC C-28

ComPacT (Fixed Version) 4P Connection of Poles, Dimensions and Mounting
ComPacT NSX100 to NSX630 DC PV - DC EP C-29

ComPacT (Fixed Version) 4P Connection of Poles, Dimensions
ComPacT NSX630b to 1600 DC PV C-30

C

Other Chapters
Presentation 2
Functions and Characteristics A-1
Installation Recommendations B-1
Electrical Diagrams D-1
Additional Characteristics E-1
Catalog Numbers and Order Form F-1

Dimensions and Connection

ComPacT (Fixed Version)
4P Rear Connection of Poles, Mounting
ComPacT NSX630b to 1600 DC PV C-32

MasterPact (Fixed Device)
NW10 to 40 DC Version C/D (3P),
Version E (4P) NW10 to 40 EPDC, DC PV Version D (3P) C-33
NW10 to 40 DC–Version C C-34
NW10 to 40 DC–DC PV–Version D C-35
NW10 to 40 DC–Version E C-36

MasterPact (Drawout Device)
NW10 to 40 DC Version C/D (3P) Version E (4P)
NW10 to 40 DC PV Version D (3P) C-37
NW10 to 40 DC–Version C C-38
NW10 to 40 DC, EPDC, DC PV–Version D C-39
NW10 to 40 DC–Version E C-40

MasterPact NW10 to 40 DC, EPDC, DC PV
Accessories C-41

Dimensions and Mounting
External Modules for ComPacT and MasterPact **C-43**
FDM121 Switchboard Display C-44
FDM128 Switchboard Display C-45

C

Other Chapters
Presentation 2
Functions and Characteristics A-1
Installation Recommendations B-1
Electrical Diagrams D-1
Additional Characteristics E-1
Catalog Numbers and Order Form F-1


Life Is On Schneider Electric

Other Chapters


Presentation 2
Functions and Characteristics A-1
Installation Recommendations B-1
Electrical Diagrams D-1
Additional Characteristics E-1
Catalog Numbers and Order Form F-1

ComPacT (Fixed Version) 1P-2P NSX100-NSX160 DC
Dimensions, Mounting, Cutout


Dimensions

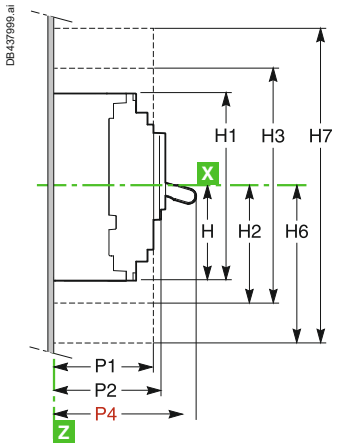

1 pole

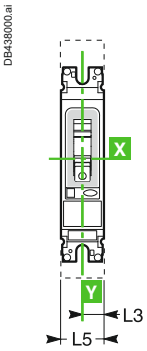

2 poles

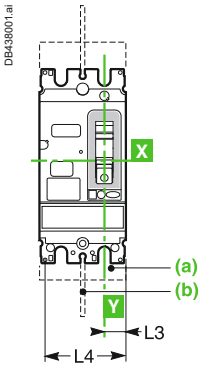


[a] Short terminal shields
[b] Interphase barriers

C


Mounting

On Backplate

1 pole

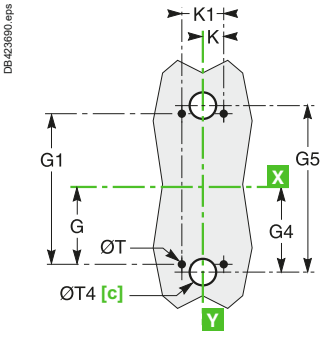


2 poles

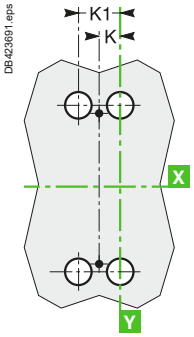


[c] For rear connection only.

On Rails

1 pole

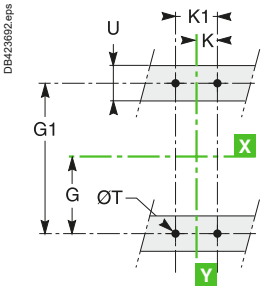

2 poles

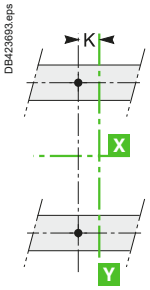



ComPacT (Fixed Version) 1P-2P NSX100-NSX160 DC


Dimensions, Mounting, Cutout


Front-Panel Cutout

On Backplate

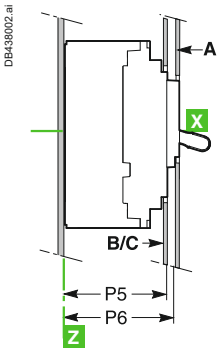


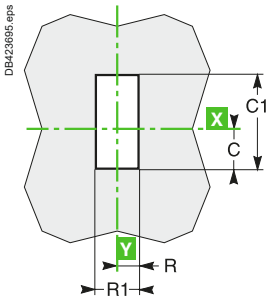


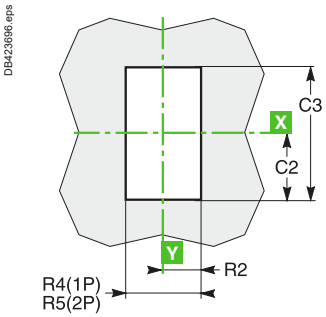

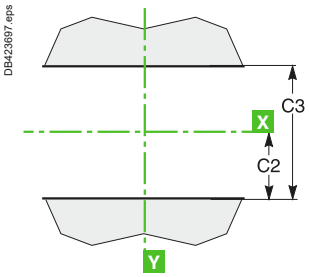

With Escutcheon

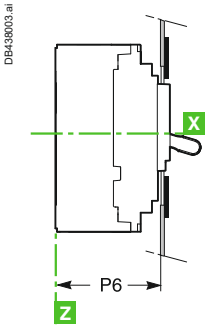

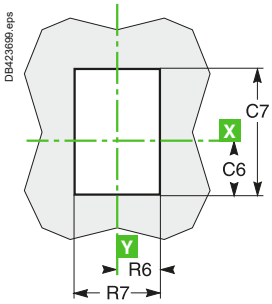

Dimensions (mm)

Type	C	C1	C2	C3	C6	C7	G	G1	G4	G5	H
NSX100/160 DC	29	76	54	108	43	104	62.5	125	70	140	80.5
Type	**H1**	**H2**	**H3**	**H4**	**H6**	**H7**	**K**	**K1**	**L3**	**L4**	**L5**
NSX100/160 DC	161	94	188	160.5	178.5	357	17.5	35	17.5	70	35
Type	**P1**	**P2**	**P4**	**P5**	**P6**	**R**	**R1**	**R2**	**R4**	**R5**	**R6**
NSX100/160 DC	81	86	111	83	88	14.5	29	19	38	73	29
Type	**R7**	**ØT**	**ØT4**	**U**							
NSX100/160 DC	58	6	22	⩽ 32							

C


Dimensions and Mounting

ComPacT NSX100 to 1200 DC Fixed Version

Dimensions

3P

4P, 2P (4P Circuit Breaker Platform)

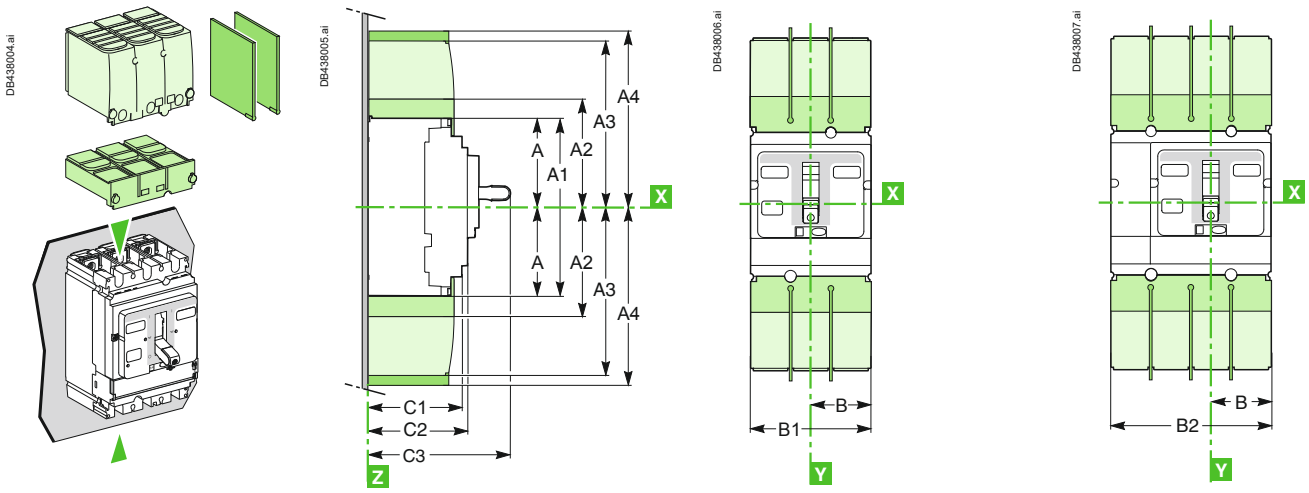


Interphase barriers
Short terminal shields

Long terminal shields (also available for NSX400/630 DC spreaders with 52.5 mm pitch: B1 = 157.5 mm, B2 = 210 mm)

Mounting

On Backplate


NSX100 to 250 DC	NSX400/630 DC	NSX100 to 1200 DC
3P	3P	4P, 2P (4P Circuit Breaker Platform)

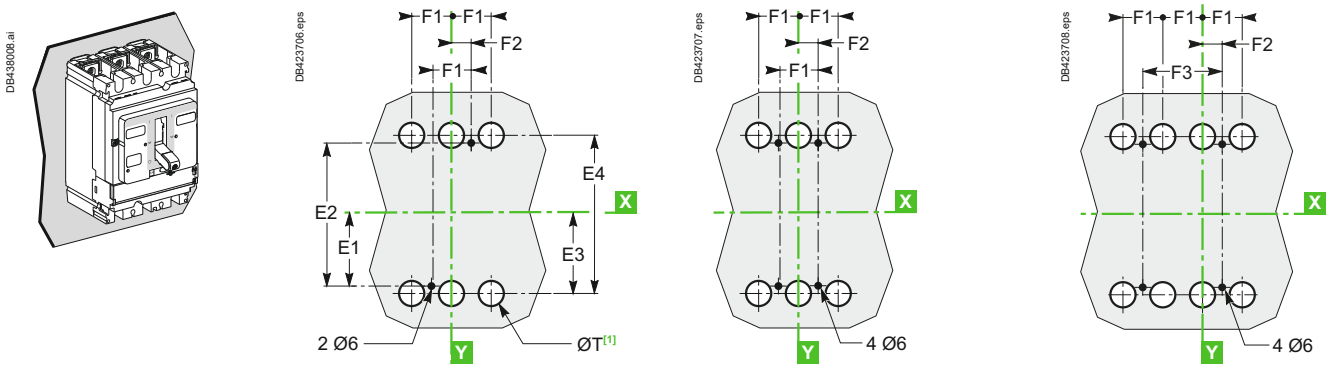

[1] The ØT holes are required for rear connection only.

On Rails

3P	3P	4P, 2P (4P Circuit Breaker Platform)

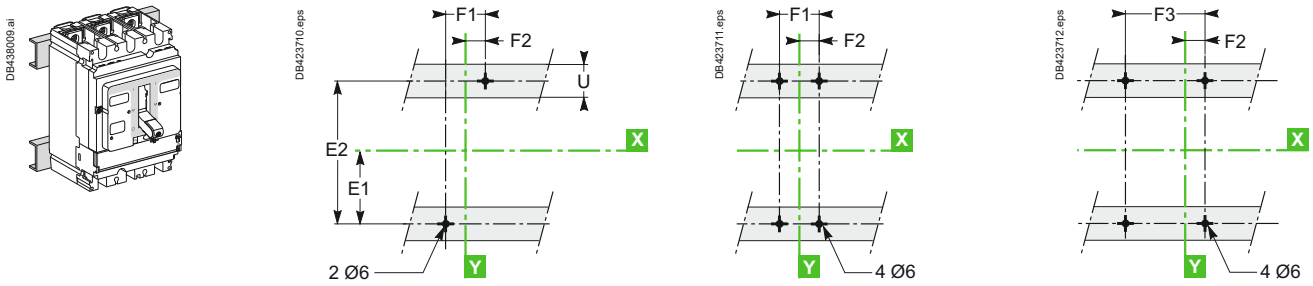


Life Is On Schneider Electric


Dimensions and Mounting
ComPacT NSX100 to 1200 DC Fixed Version

On DIN Rail with Adapter Plate (NSX100 to 250 DC)

DB438010.ai

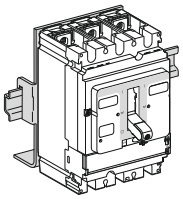

DB438011.ai

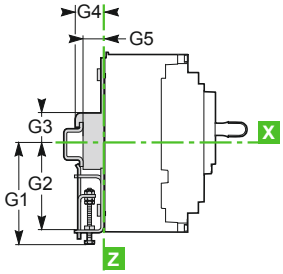

Dimensions (mm)


Type	A	A1	A2	A3	A4	B	B1	B2	C1	C2	C3
NSX100/160/250 DC	80.5	161	94	145	178.5	52.5	105	140	81	86	126
NSX400/630 DC	127.5	255	142.5	200	237	70	140	185	95.5	110	168
NSX1200 DC	-	-	-	240	-	70	-	185	95.5	110	168
Type	**E1**	**E2**	**F1**	**F2**	**F3**	**G1**	**G2**	**G3**	**G4**	**G5**	
NSX100/160/250 DC	62.5	125	35	17.5	70	95	75	13.5	23	17.5	
NSX400/630 DC	100	200	45	22.5	90	-	-	-	-	-	
NSX1200 DC	100	200	-	22.5	90	-	-	-	-	-	


C

Dimensions and Mounting


ComPacT NSX100 to 630 DC Plug-in Version

Dimensions

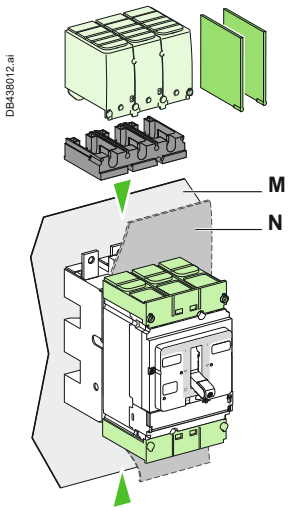


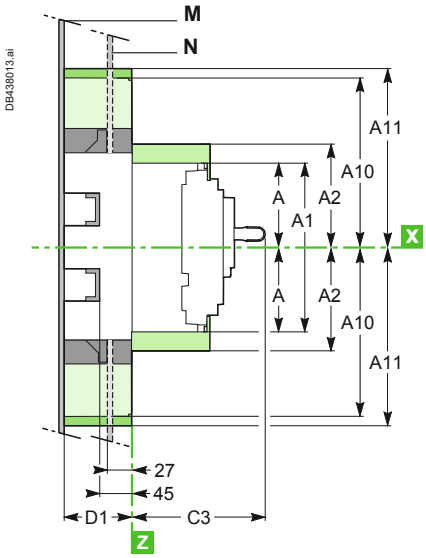

3P

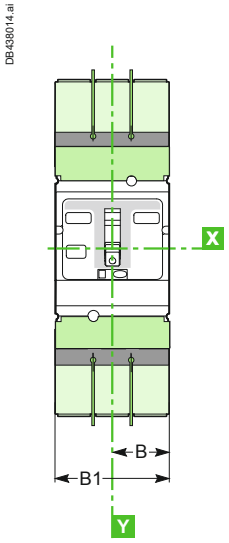

4P

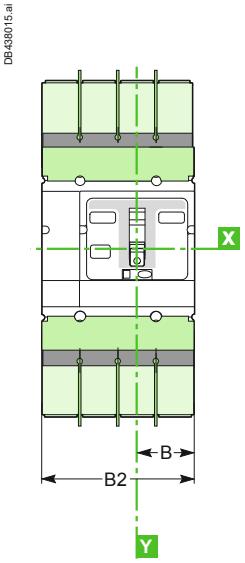

Interphase barriers for base

Short terminal shields on circuit breaker


Long terminal shields (also available for NSX400/630 DC spreaders with 52.5 mm pitch: /B1 = 157.5 mm, B2 = 210 mm)


Adapter for base, required to mount long terminal shields or interphase barriers

Mounting


Through Front Panel (N)

3P NSX100 to 250 DC

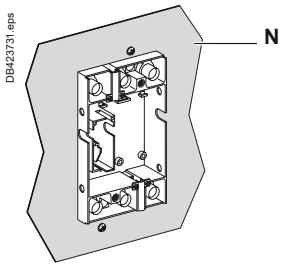


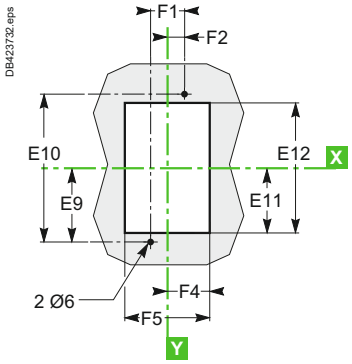

3P NSX400/630 DC

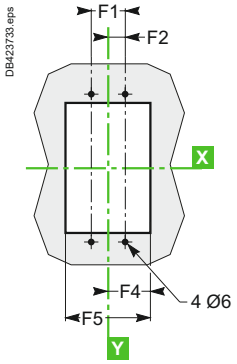


4P NSX100 to 630 DC

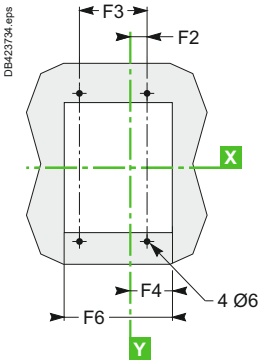



Dimensions and Mounting
ComPacT NSX100 to 630 DC Plug-in Version

On Backplate (M) — 3P — 4P


Front connection (an insulating screen is supplied with the base and must be fitted between the base and the backplate)

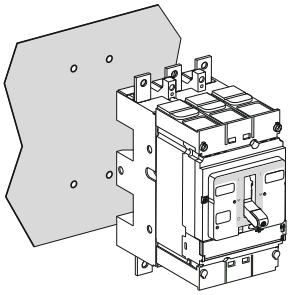


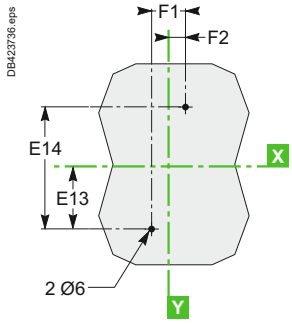


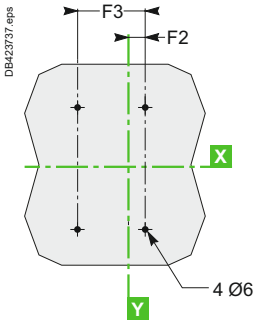

Connection by exterior-mounted rear connectors

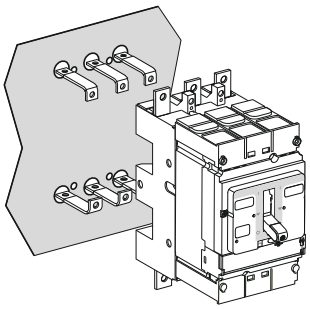


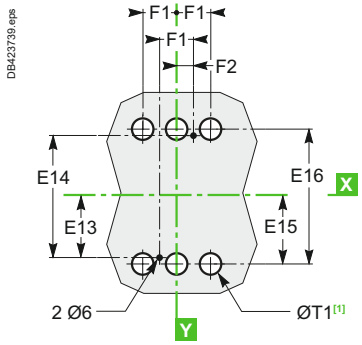


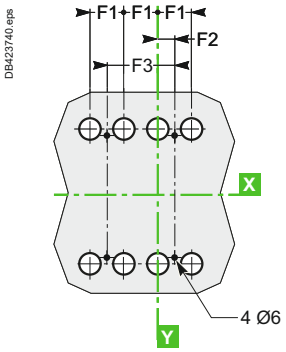


[1] The ØT1 holes are required for rear connection only.

Connection by interior-mounted rear connectors

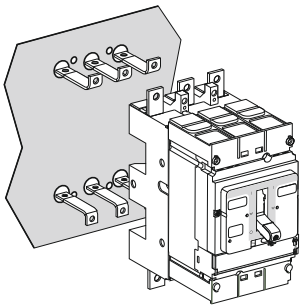


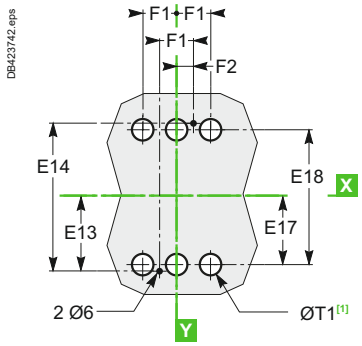


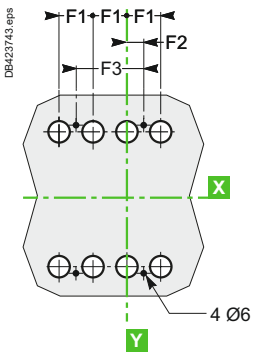


[1] The ØT1 holes are required for rear connection only.

On Rails — 3P — 4P

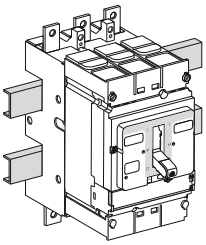

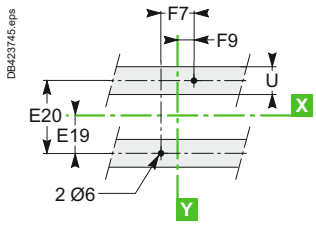

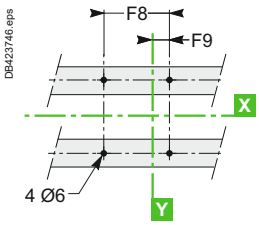


Type	A	A1	A2	A10	A11	B	B1	B2	C3	D1	E9	E10	E11	E12	E13	E14	E15
NSX100/160/250 DC	80.5	161	94	175	210	52.5	105	140	126	75	95	190	87	174	77.5	155	79
NSX400/630 DC	127.5	255	142.5	244	281	70	140	185	168	100	150	300	137	274	125	250	126
Type	**E16**	**E17**	**E18**	**E19**	**E20**	**F1**	**F2**	**F3**	**F4**	**F5**	**F6**	**F7**	**F8**	**F9**	**ØT1**	**U**	
NSX100/160/250 DC	158	61	122	37.5	75	35	17.5	70	54.5	109	144	70	105	35	24	⩽ 32	
NSX400/630 DC	252	101	202	75	150	45	22.5	90	71.5	143	188	100	145	50	33	⩽ 35	

C


Dimensions and Mounting


ComPacT NSX100 to 630 DC Withdrawable Version


Dimensions

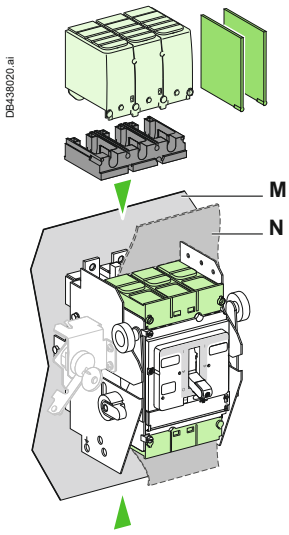


3P

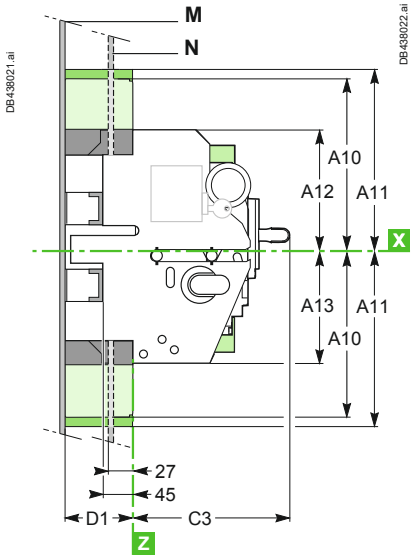

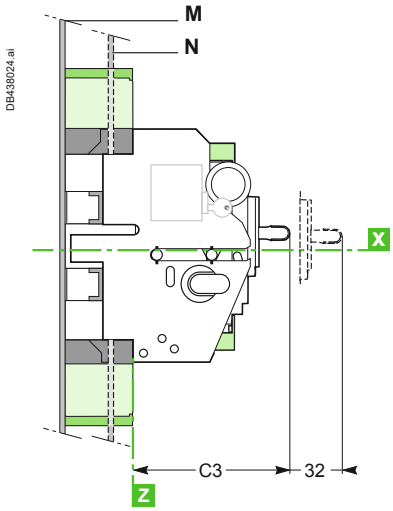

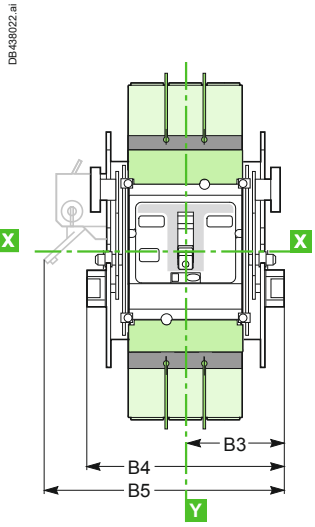


4P

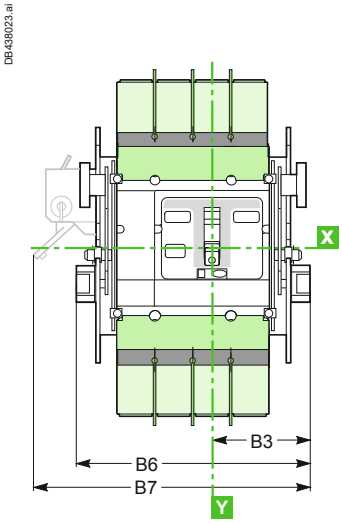


Interphase barriers for base
Short terminal shields on circuit breaker
Long terminal shields
Adapter for base, required to mount long terminal shields or interphase barriers


Mounting


Through Front Panel (N)

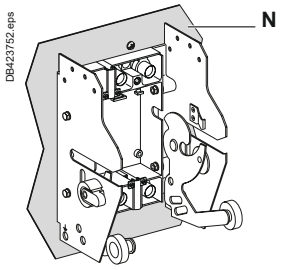

3P	3P	4P
NSX100 to 250 DC	NSX400/630 DC	NSX100 to 630 DC

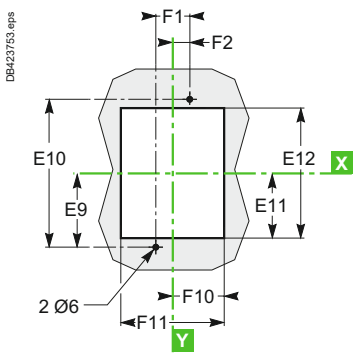

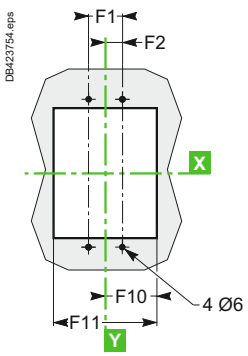

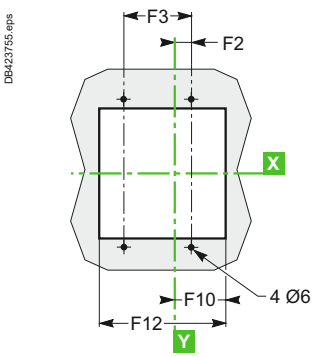

Dimensions and Mounting


ComPacT NSX100 to 630 DC Withdrawable Version


On Backplate (M)


3P

4P


Front connection (an insulating screen is supplied with the base and must be fitted between the base and the backplate)

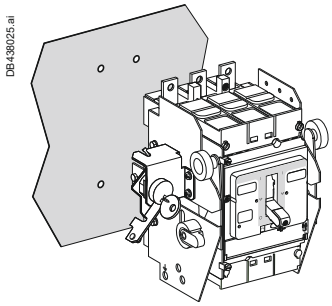


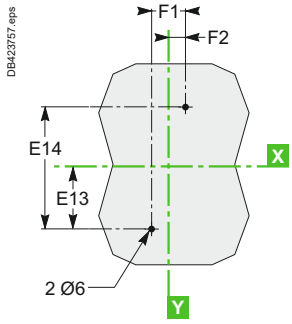


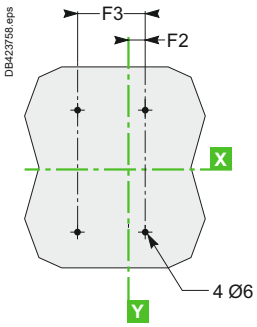

Connection by exterior-mounted rear connectors

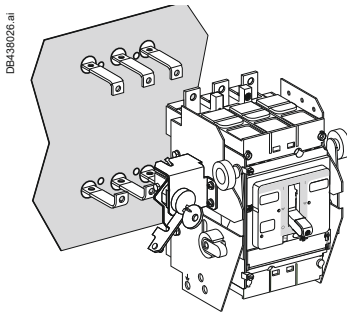


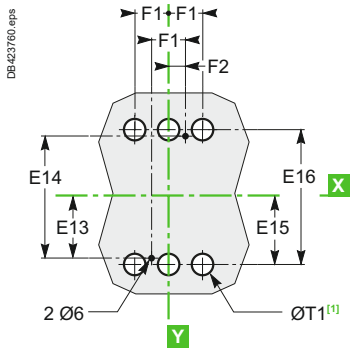


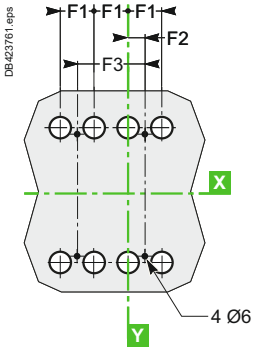


[1] The ØT1 holes are required for rear connection only.

Connection by interior-mounted rear connectors

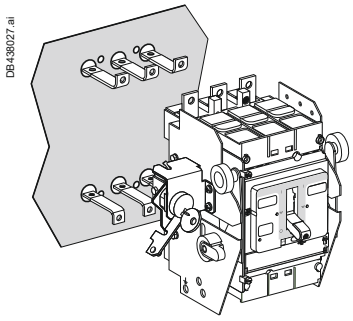

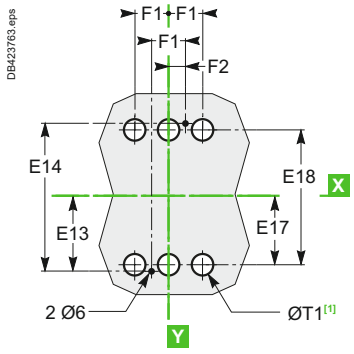

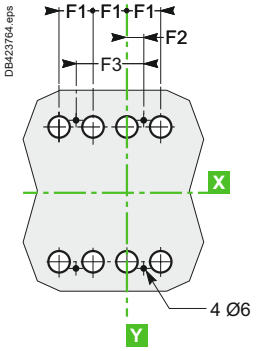



[1] The ØT1 holes are required for rear connection only.


On Rails

3P

4P

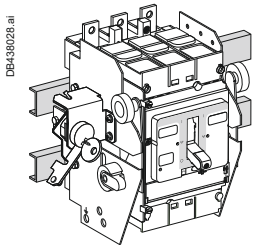

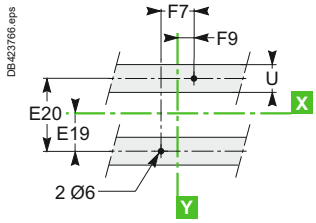

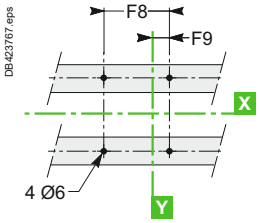

Type	A10	A11	A12	A13	B3	B4	B5	B6	B7	C3	D1	E9	E10	E11	E12	E13	E14
NSX100/160/250 DC	175	210	106.5	103.5	92.5	185	216	220	251	126	75	95	190	87	174	77.5	155
NSX400/630 DC	244	281	140	140	110	220	250	265	295	168	100	150	300	137	274	125	250
Type	**E15**	**E16**	**E17**	**E18**	**E19**	**E20**	**F1**	**F2**	**F3**	**F7**	**F8**	**F9**	**F10**	**F11**	**F12**	**ØT1**	**U**
NSX100/160/250 DC	79	158	61	122	37.5	75	35	17.5	70	70	105	35	74	148	183	24	⩽ 32
NSX400/630 DC	126	252	101	202	75	150	45	22.5	90	100	145	50	91.5	183	228	33	⩽ 35

Dimensions and Mounting


Motor Mechanism Module for ComPacT NSX100 to 1200 DC


Dimensions


3P


4P, 2P(4P Circuit Breaker Platform)

Fixed Circuit Breaker

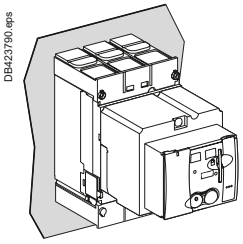

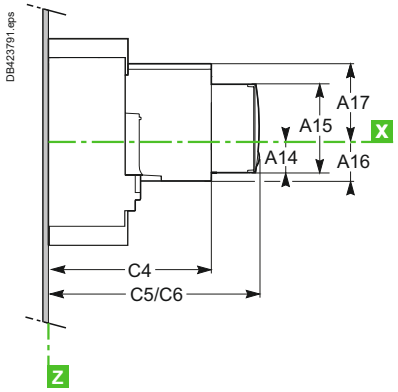


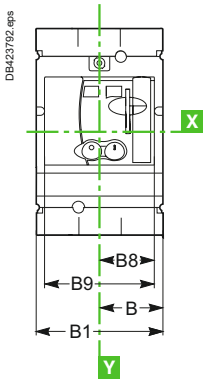


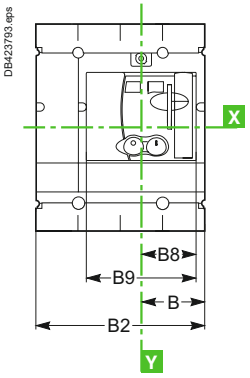


C5: without keylock
C6: with keylock


Plug-in Circuit Breaker

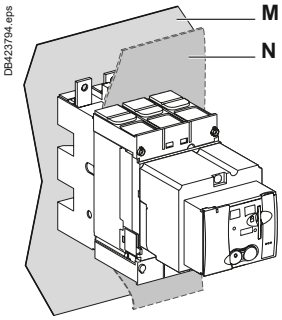

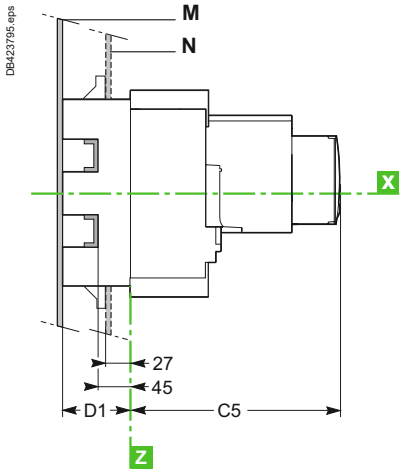

Withdrawable Circuit Breaker

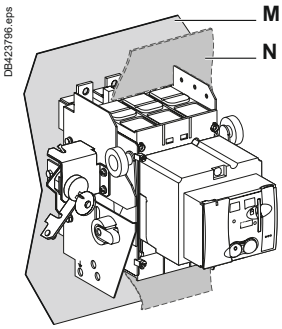

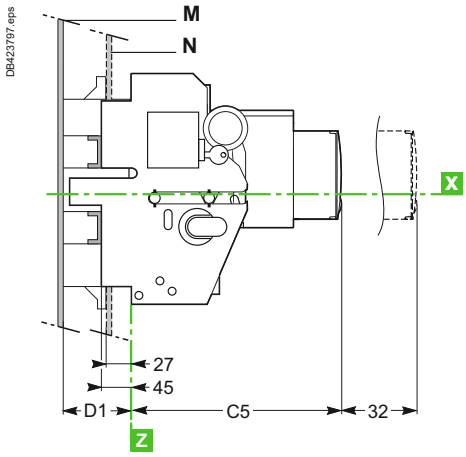

Type	A14	A15	A16	A17	B	B1	B2	B8	B9	C4	C5	C6	D1
NSX100/160/250 DC	27.5	73	34.5	62.5	52.5	105	140	45.5	91	143	182	209.5	75
NSX400/630 DC	40	123	52	100	70	140	185	61.5	123	215	256	258	100
NSX1200 DC	40	123	52	100	70	140	185	61.5	123	215	-	258	-

Dimensions and Mounting


Direct Rotary Handle for ComPacT NSX100 to 1200 DC


Dimensions


3P


4P, 2P (4P Circuit Breaker Platform)

Fixed Circuit Breaker

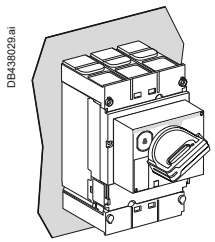

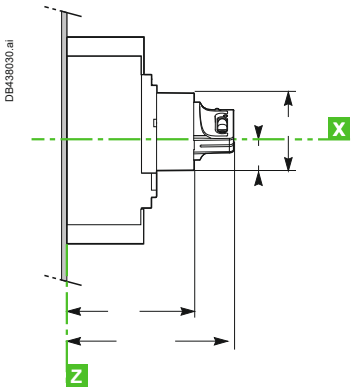


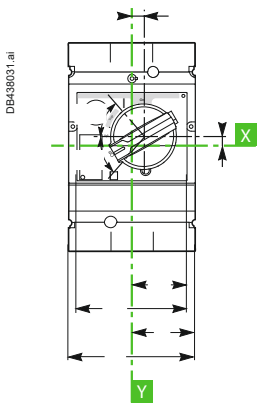


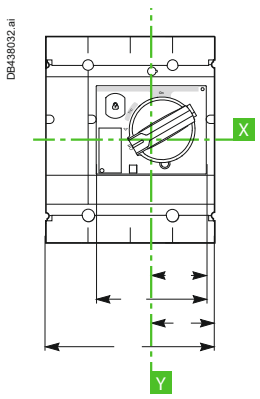


C8: without keylock
C9: with keylock


Plug-in Circuit Breaker

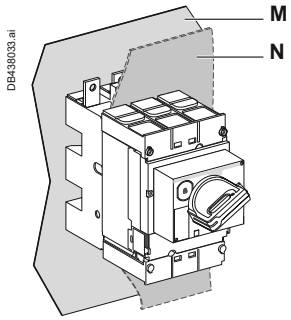

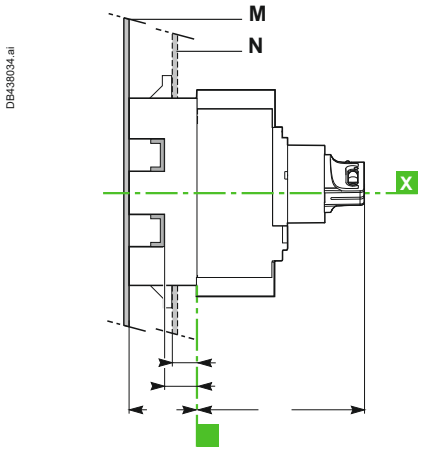

Withdrawable Circuit Breaker

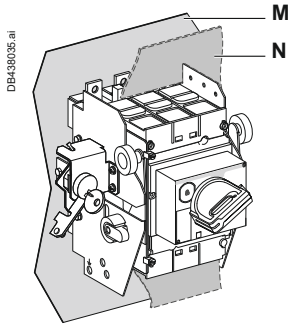

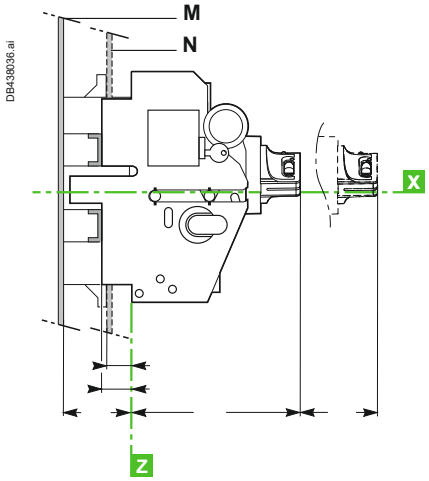


Type	A14	A15	A18	B	B1	B2	B8	B9	B10	C7	C8	C9	D1
NSX100/160/250 DC	27.5	73	9	52.5	105	140	45.5	91	9.25	121	155	164	75
NSX400/630 DC	40	123	24.6	70	140	185	61.5	123	5	145	179	188	100
NSX1200 DC	40	123	24.6	70	140	185	61.5	123	5	145	-	188	-


Dimensions and Mounting


MCC and CNOMO Type Direct Rotary Handles for ComPacT NSX100 to 1200 DC Fixed Version

Dimensions


MCC Type Direct Rotary Handle

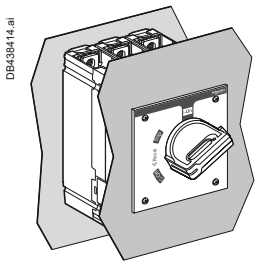


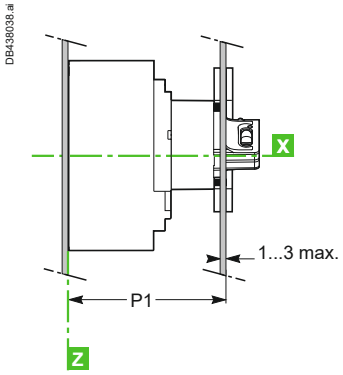


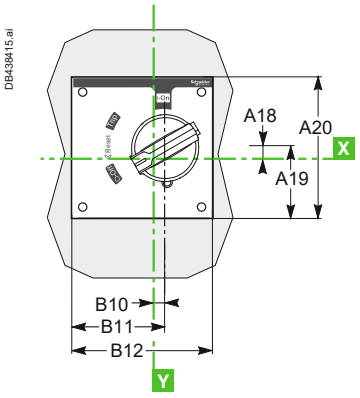

CNOMO Type Direct Rotary Handle

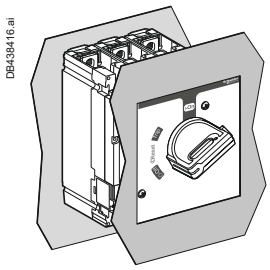

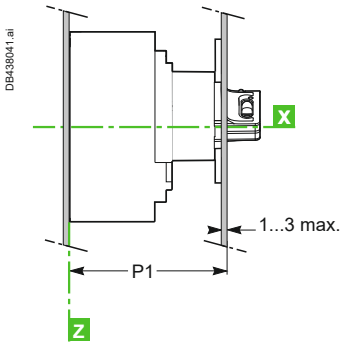


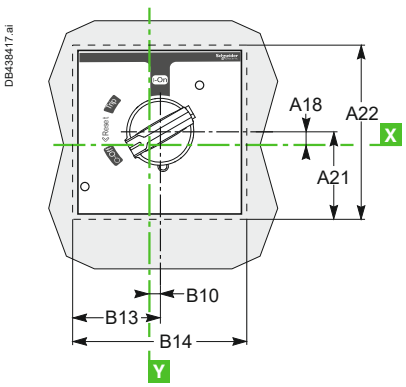


Front-Panel Cutout


NSX100 to 250 DC


MCC Type Direct Rotary Handle

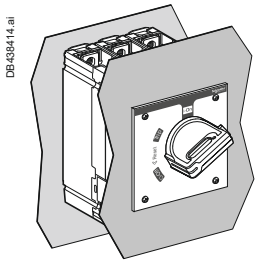

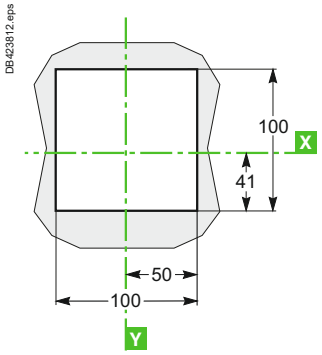

CNOMO Type Direct Rotary Handle

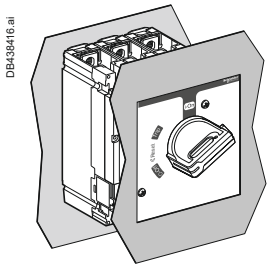


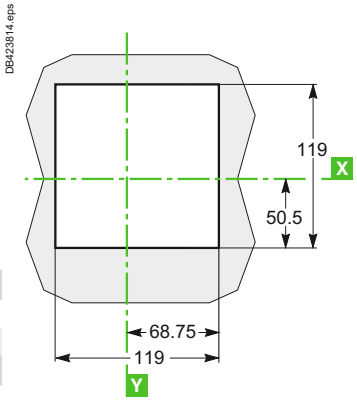


Type	A18	A19	A20	A21	A22	B10
NSX100/160/250 DC	9	60	120	65	130	9.25
NSX400/630/1200 DC	24.6	83	160	82	164	5
Type	**B11**	**B12**	**B13**	**B14**	**P1**	**P2**
NSX100/160/250 DC	69	120	65	130	125	135
NSX400/630/1200 DC	85	160	82	164	149	158

NSX400/630/1200 DC

MCC Type Direct Rotary Handle

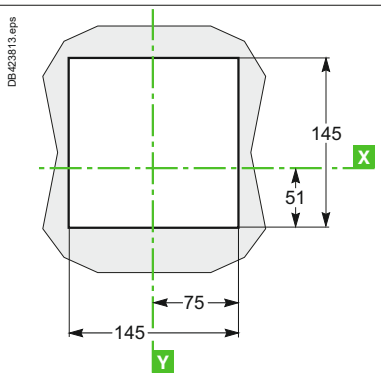


CNOMO Type Direct Rotary Handle

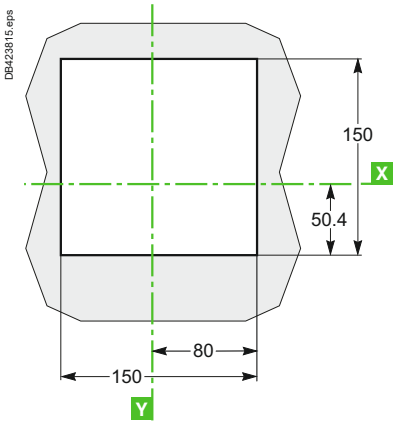


Extended Rotary Handle for ComPacT NSX100 To1200 DC

Dimensions

Fixed and Plug-in Circuit Breakers

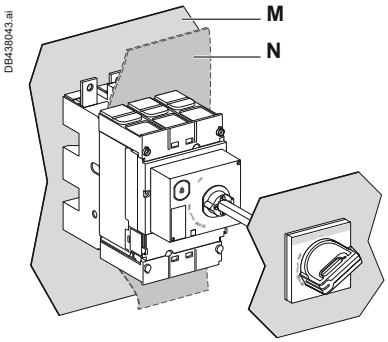


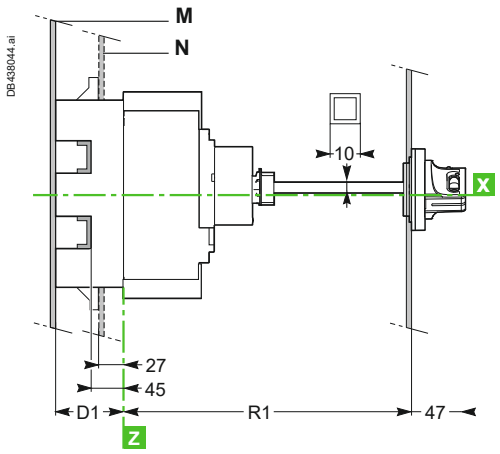


Cutout for shaft (mm)

Type	R1
NSX100/160/250 DC	min. 171 max. 600
NSX400/630/1200 DC	min 195 max. 600

Withdrawable Circuit Breaker

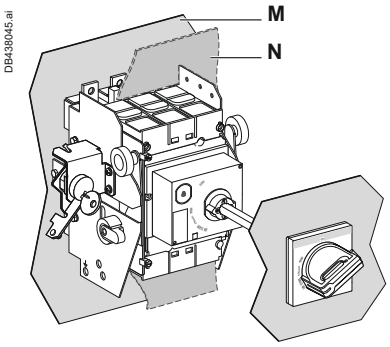

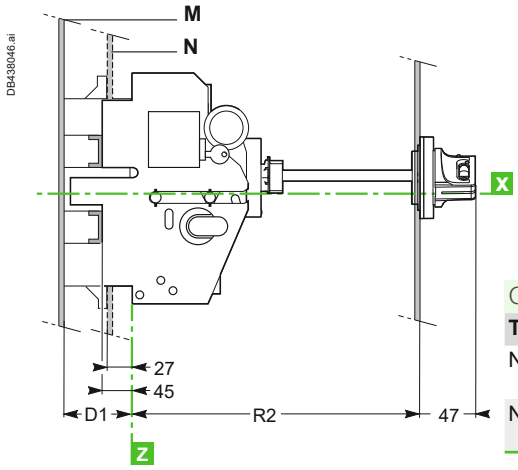



Cutout for shaft (mm)

Type	R2
NSX100/160/250 DC	min. 248 max. 600
NSX400/630 DC	min. 272 max. 600

Dimensions and Front-Panel Cutout


Type	A18	B10	D1
NSX100/160/250 DC	9	9.25	75
NSX400/630/1200 DC	24.6	5	100

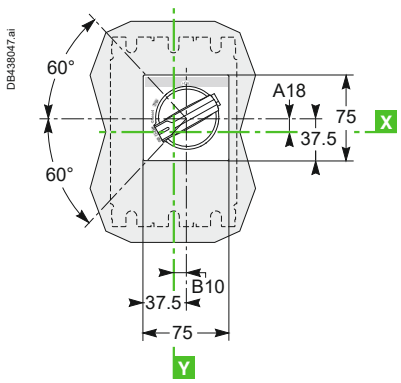

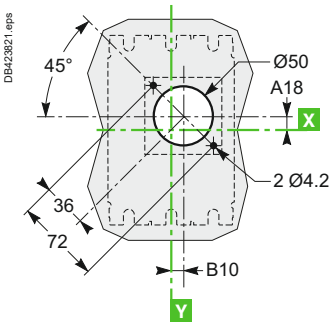


Front-Panel Accessories
ComPacT NSX100 to 1200 DC

IP30 Front-Panel Escutcheons
For Toggle, Rotary Handle or Motor Mechanism Module

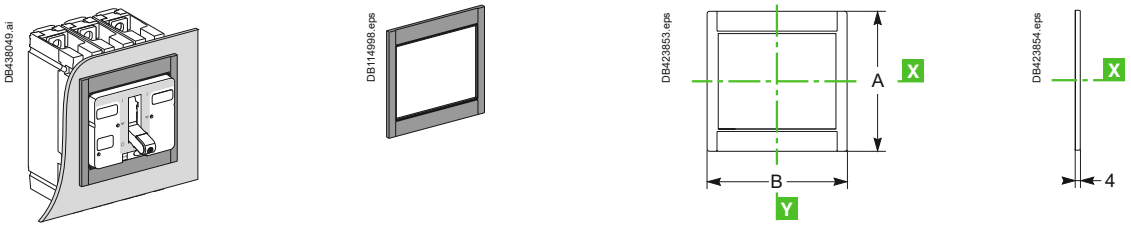


For Toggle or Rotary Handle with Access to Trip Unit

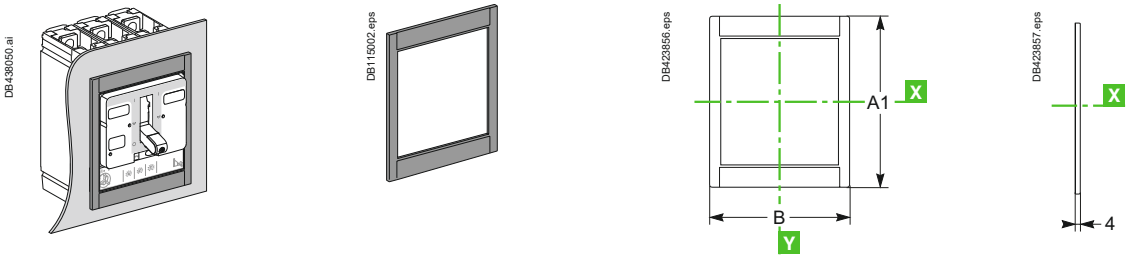


C


IP40 Front-Panel Escutcheons
For Toggle, Rotary Handle or Motor Mechanism Module and Protection Collar

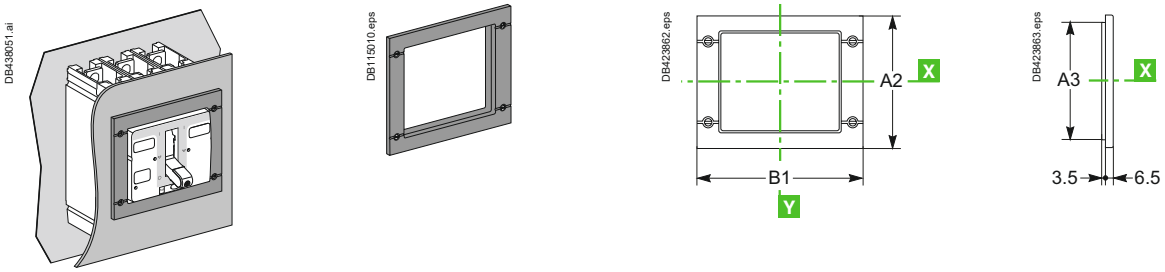



Protection Collars for IP40 Front-Panel Escutcheons
For Toggle

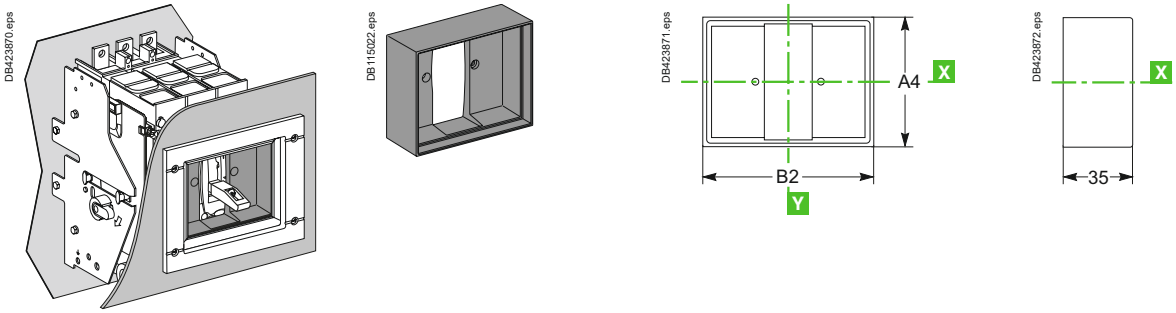


IP43 Toggle Cover

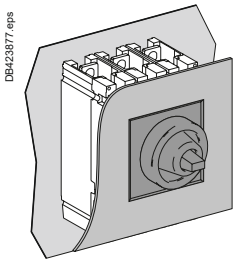

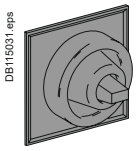

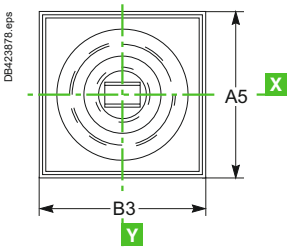

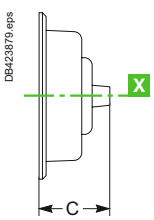


Type	A	A1	A2	A3	A4	A5	B	B1	B2	B3	C
NSX100/160/250 DC	113	138	114	101	73	85	**113**	157	91	**103**	40
NSX400/630/1200 DC	163	211	164	151	122.5	138	163	189	122.5	138	60


C

Power Connections
ComPacT NSX100 to 1200 DC Fixed Version

Front Connection without Accessories

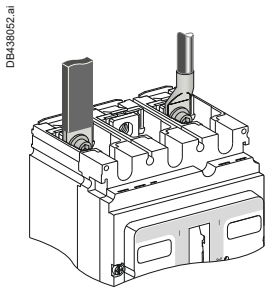


NSX100 to 250 DC

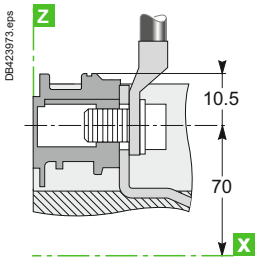


Cables with lugs/bars

NSX400/630 DC

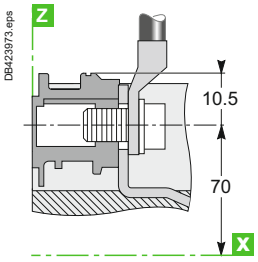

Bars/cables with lugs


NSX1200 DC

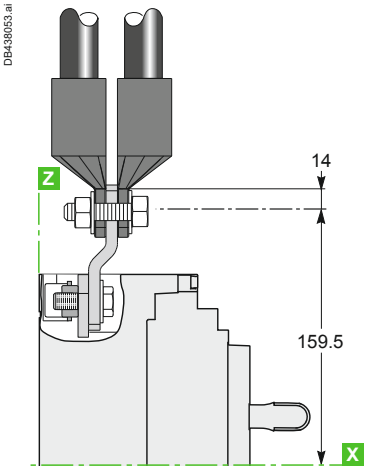


C

Connection with Accessories


Long and Short Rear Connectors

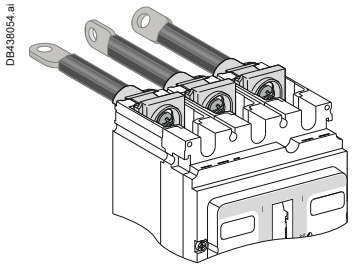


NSX100 to 250 DC

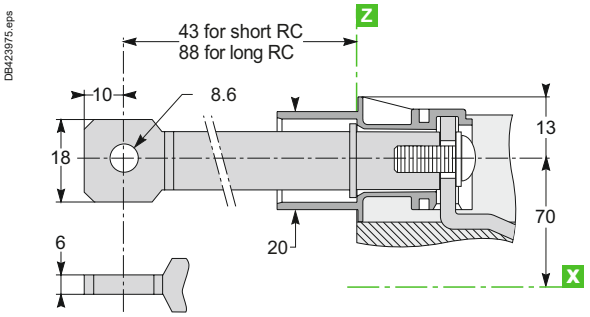


NSX400/630 DC

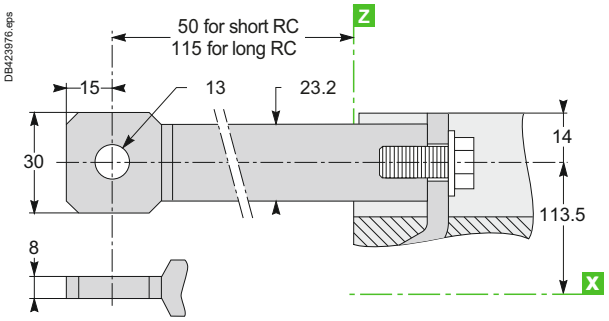

Bare-Cable Connectors

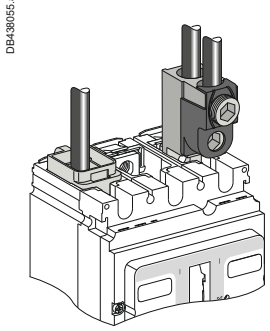


NSX100 to 250 DC

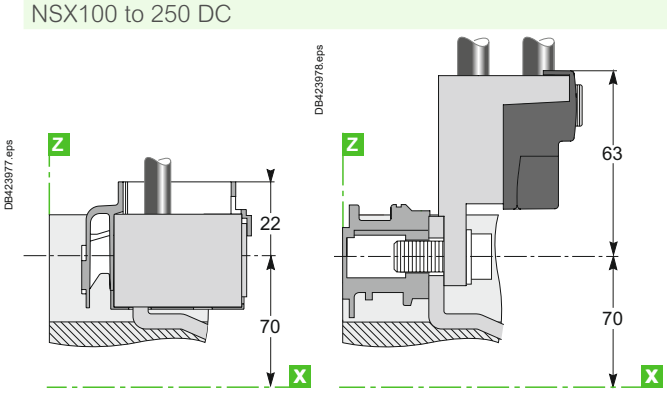


Connection with Accessories (Cont.)

Bare-Cable Connectors

DB438056.ai

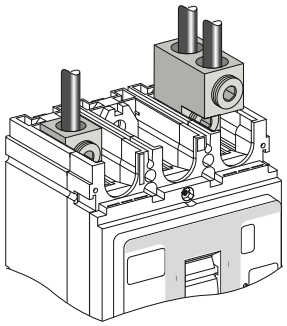


DB438057.ai

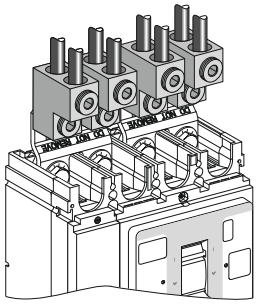


NSX400/1200 DC


DB423979.eps

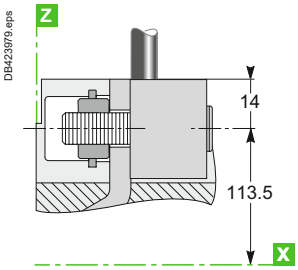

DB423980.eps

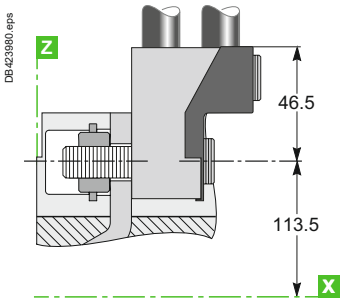


DB438058.ai

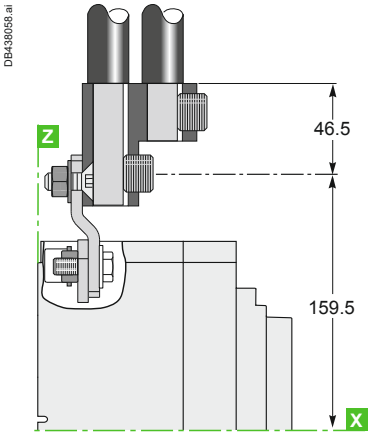


Distribution Connectors (for NSX100 to 250 DC Only)

DB115456.eps

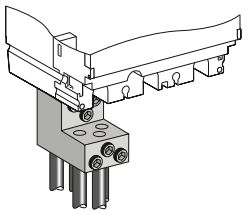


DB423981.eps

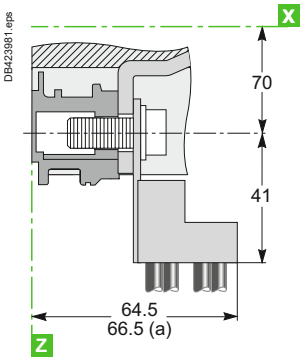

(a) NSX250 DC


Right-Angle Terminal Extensions (Upstream Only)

DB438059.ai

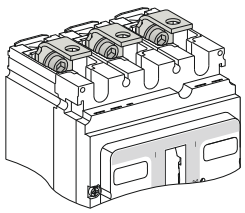


NSX100 to 250 DC

DB423982.eps

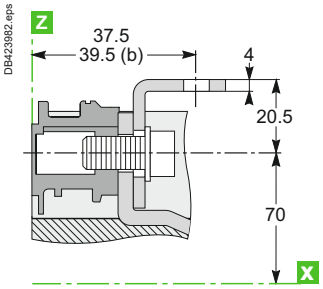

NSX400/630 DC

DB423983.eps

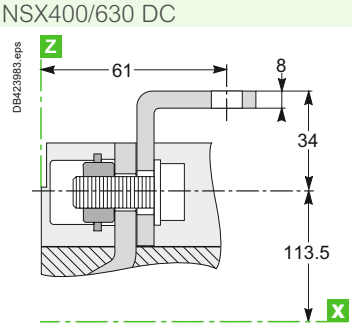

(b) NSX250 DC

C


Power Connections

ComPacT NSX100 to 630 DC Fixed Version

Connection with Accessories (Cont.)

Straight Terminal Extensions (for NSX100 to 250 DC Only)


DB438060.ai

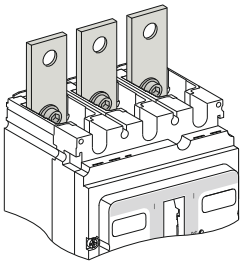

Edgewise Terminal Extensions


NSX100 to 250 DC

DB423984.eps

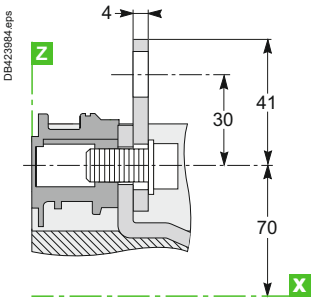

NSX400/630 DC


DB438061.ai

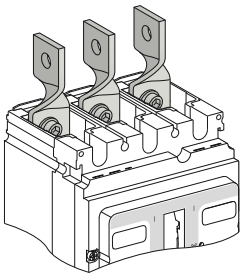

45° Terminal Extensions


NSX100 to 250 DC

DB423985.eps

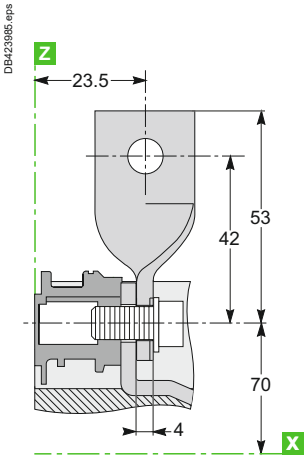


NSX400/630 DC

DB423986.eps

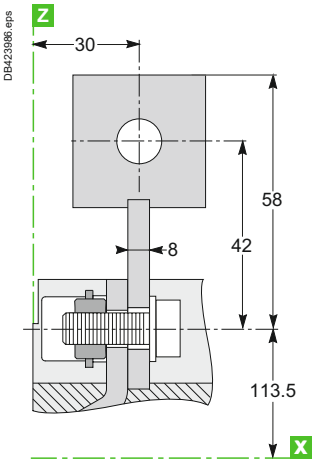


DB438062.ai

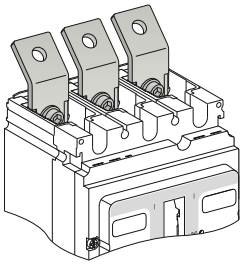


Double-L Terminal Extensions

NSX100 to 250 DC


DB423987.eps

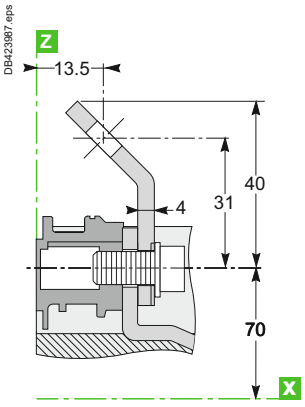

DB423988.eps

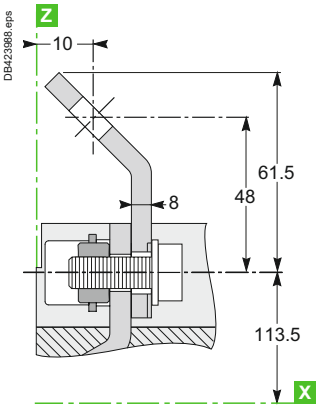


DB438063.ai

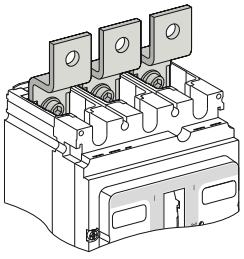


NSX100 to 250 DC


DB423989.eps

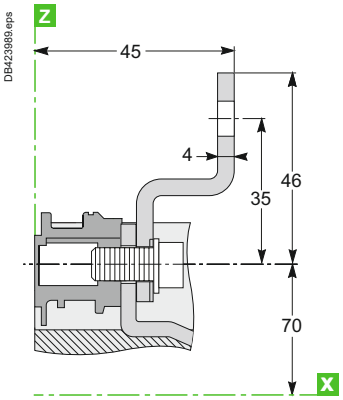


Connection with Accessories (Cont.)

Spreaders 3P 4P

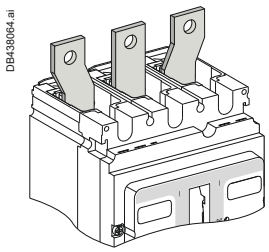


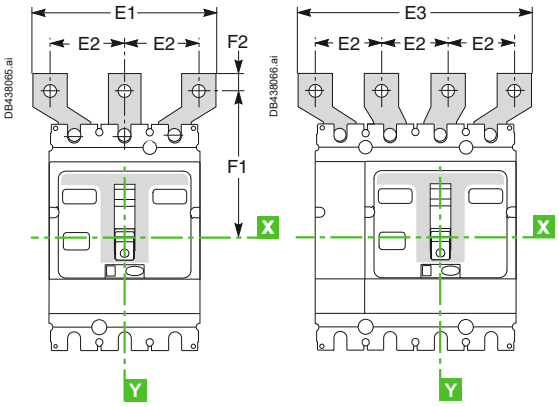

NSX100 to 250 DC

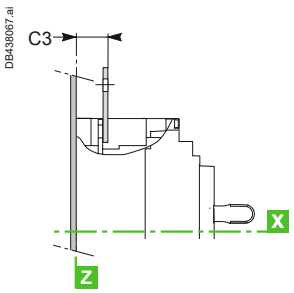



NSX400/630 DC

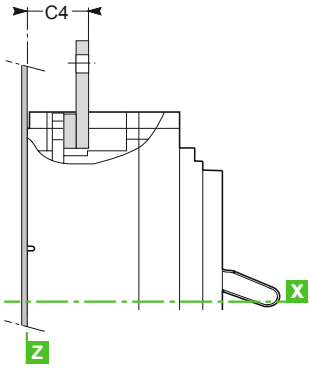


Type	C3	C4	E1	E2	E3	F1	F2
NSX100/160 DC	23.5	-	114	45	159	100	**11**
NSX250 DC	25.5	-	114	45	159	100	**11**
NSX400/630 DC	-	44	135 170	52.5 70	187.5 240	152.5 166	15 15

One-Piece Spreader (for NSX100 to 250 Only)

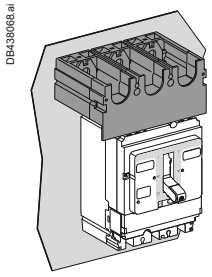

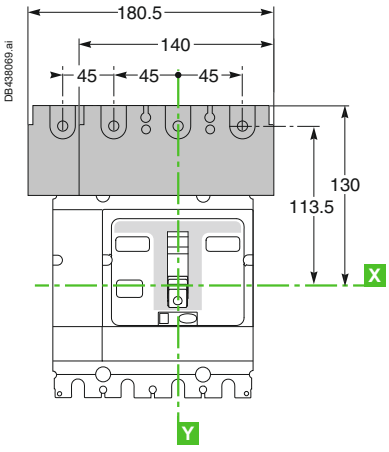


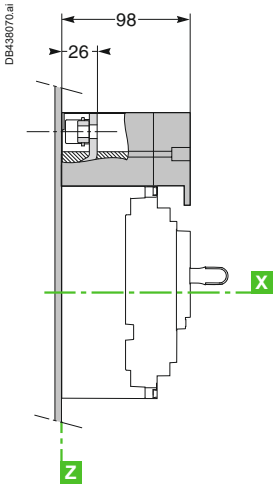


C

Power Connections


Connection of Insulated Bars or Cables with Lugs to ComPacT NSX100 to 1200 DC

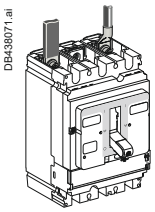

DB438071.ai

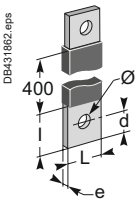

DB431862.eps

Bar

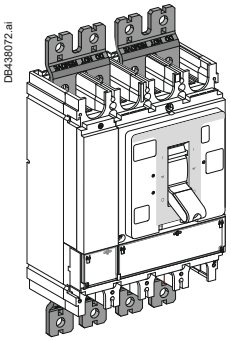
DB438072.ai




DB431863.eps

Lug


Accessories for NSX100 to 250 DC

Straight Terminal Extensions


DB431660.eps

Tinned copper


Double-L Terminal Extensions


DB431664.eps

Tinned copper


Spreaders

separate parts


DB431665.eps

Tinned copper

One-piece spreader



DB431864.eps

Tinned copper

For U > 600 V, the mandatory insulation kit is not compatible with spreaders made up of separate parts.

Accessories for NSX400 and 630 DC

Spreaders Made up of Separate Parts for 52.5 and 70 Mm Pitch



DB431865.eps

Tinned copper

For U > 600 V, use of the 52.5 mm pitch spreaders requires a specific insulation kit.
The 70 mm pitch spreaders may not be used.


Accessories for NSX100 to 630 DC

Right-Angle Terminal Extensions


DB431661.eps


Tinned copper
To be mounted on upstream side

Edgewise Terminal Extensions


DB431663.eps

Tinned copper

45° Terminal Extensions


DB431662.eps

Tinned copper


Direct Connection to NSX100 to 1200 DC

Dimensions		NSX100 DC	NSX160/250 DC	NSX400/630/1200 DC
Bars	L (mm)	⩽ 25	⩽ 25	⩽ 32
	l (mm)	d + 10	d + 10	d + 15
	d (mm)	⩽ 10	⩽ 10	⩽ 15
	e (mm)	⩽ 6	⩽ 6	3 ⩽ e ⩽ 10
	Ø (mm)	6.5	8.5	10.5
Lugs	L (mm)	⩽ 25	⩽ 25	⩽ 32
	Ø (mm)	6.5	8.5	10.5
Torque (Nm) [1]		10	15	50
Torque (Nm) [2]		5/5	5/5	20/11
Torque (Nm) [3]		8	8	20

[1] Tightening torque on the circuit breaker for lugs or bars.
[2] Tightening torque on fixed devices for rear connectors//tightening torque on plug-in or withdrawable devices for power connectors.
[3] Tightening torque on the plug-in base for terminal extensions.

Connection with Accessories to NSX100 to 250 DC (IEC 228)

Pole Pitch	
Without spreaders	35 mm
With spreaders	45 mm

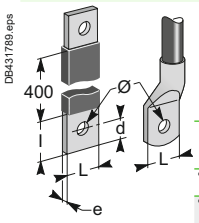

DB431789.eps


Dimensions		With Spreaders or Terminal Extensions	
		NSX100 DC	NSX160/250 DC
Bars	L (mm)	⩽ 25	⩽ 25
	l (mm)	20 ⩽ l ⩽ 25	20 ⩽ l ⩽ 25
	d (mm)	⩽ 10	⩽ 10
	e (mm)	⩽ 6	⩽ 6
	Ø (mm)	6.5	8.5
Lugs	L (mm)	⩽ 25	⩽ 25
	Ø (mm)	6.5	8.5
Torque (Nm) [1]		10	15
Torque (Nm) [2]		5	5

[1] Tightening torque on the circuit breaker for spreaders or terminal extensions.
[2] Tightening torque on the plug-in base for spreaders or terminal extensions.

Spreaders and straight, right-angle, 45°, double-L and edgewise terminal extensions are supplied with flexible interphase barriers.

Connection with Accessories to NSX400 DC and 630 DC (IEC 228)

Pole Pitch	
Without spreaders	45 mm
With spreaders	52.5 or 70 mm

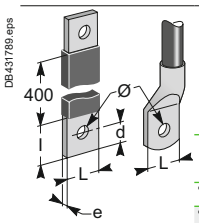


DB431789.eps

Dimensions		With Spreaders	With Terminal Extensions
Bars	L (mm)	⩽ 40	⩽ 32
	l (mm)	d + 15	30 ⩽ l ⩽ 34
	d (mm)	⩽ 20	⩽ 15
	e (mm)	3 ⩽ e ⩽ 10	3 ⩽ e ⩽ 10
	Ø (mm)	12.5	10.5
Lugs	L (mm)	⩽ 40	⩽ 32
	Ø (mm)	12.5	10.5
Torque (Nm) [1]		50	50
Torque (Nm) [2]		20	20

[1] Tightening torque on the circuit breaker for spreaders or terminal extensions.
[2] Tightening torque on the plug-in base for spreaders or terminal extensions.

Spreaders and right-angle, 45° and edgewise terminal extensions are supplied with flexible interphase barriers.

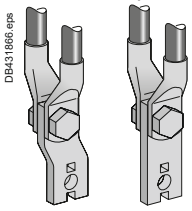

DB431866.eps

Mounting detail: 2 cables with lugs


Power Connections

Connection of Bare Cables to ComPacT NSX100 to 1200 DC


Connection for NSX100 to 250 DC




1-cable connector





2-cable connector



Distribution connector

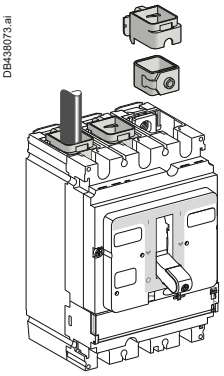

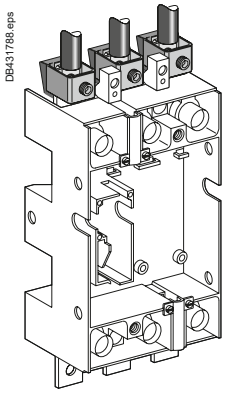




1-cable connector	Steel ⩽ 160 A	Aluminium ⩽ 250 A		
L (mm)	25	25		
S (mm²) Cu/Al	1.5 to 95 [1]	25 to 50	70 to 95	120 to 185 150 max. flex.
Torque (Nm)	12	20	26	26
2-cable connector				
L (mm)	25 or 50			
S (mm²) Cu/Al	2 x 50 to 2 x 120			
Torque (Nm)	22			
6-cable distribution connector (copper or aluminium)				
L (mm)	15 or 30			
S (mm²) Cu/Al	1.5 to 6 [1]	8 to 35		
Torque (Nm)	4	6		

[1] For flexible cables from 1.5 to 4 mm², connection with crimped or self-crimping ferrules.


Connection for NSX400 and 630 DC



1-cable connector




2-cable connector




	1-cable connector	2-cable connector
L (mm)	30	30 or 60
S (mm²) Cu/Al	35 to 300 rigid 240 max. flex.	2 x 35 to 2 x 240 rigid 240 max. flex.
Torque (Nm)	31	31

Connection for NSX630 and 1200 DC



2-cable connector



	2-cable connector
L (mm)	30 or 60
S (mm²) Cu/Al	2 x 35 to 2 x 240 rigid 240 max. flex.
Torque (Nm)	31

Conductor Materials and Electrodynamic Stresses

ComPacT NSX DC circuit breakers can be connected indifferently with bare-copper, tinned-copper and tinned-aluminium conductors (flexible or rigid bars, cables).
In the event of a short-circuit, thermal and electrodynamic stresses will be exerted on the conductors. They must therefore be correctly sized and held in place by supports.
Electrical connection points on switchgear devices (switch-disconnectors, contactors, circuit breakers, etc.) should not be used for mechanical support.
Any partition between upstream and downstream connections of the device must be made of non-magnetic material.


C

ComPacT (Fixed Version) 2P-3P-4P
Parallel and Series Connection of Poles
ComPacT NSX100 to NSX250 DC

2P Fixed Version (ComPacT NSX100-160 N/H DC) - 3P Fixed Version (ComPacT NSX100-250 DC)


With Series Connections

2 poles 3 poles

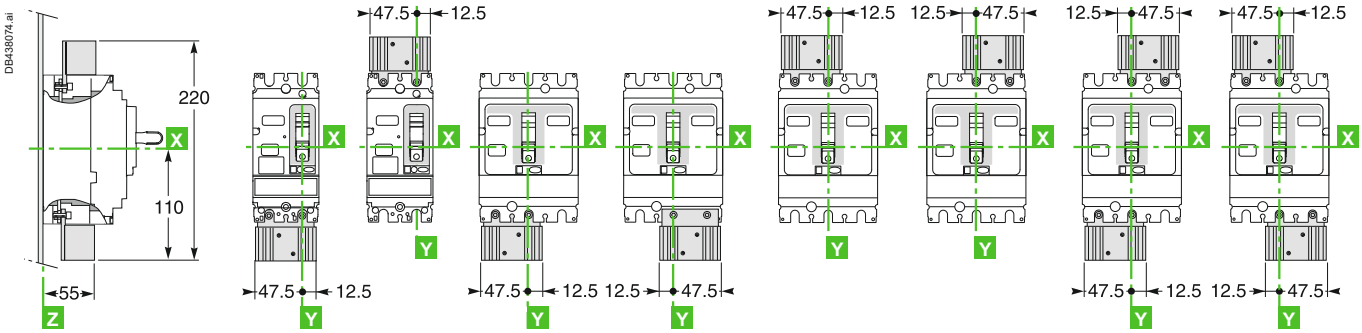


With Parallel Connections

2 poles 3 poles

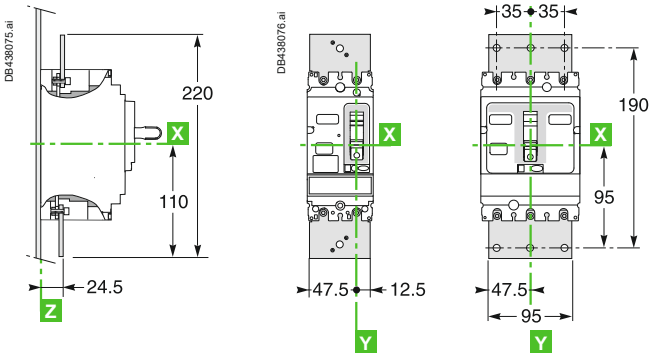


4P Fixed Version (ComPacT NSX100-250 DC)

With Series Connections

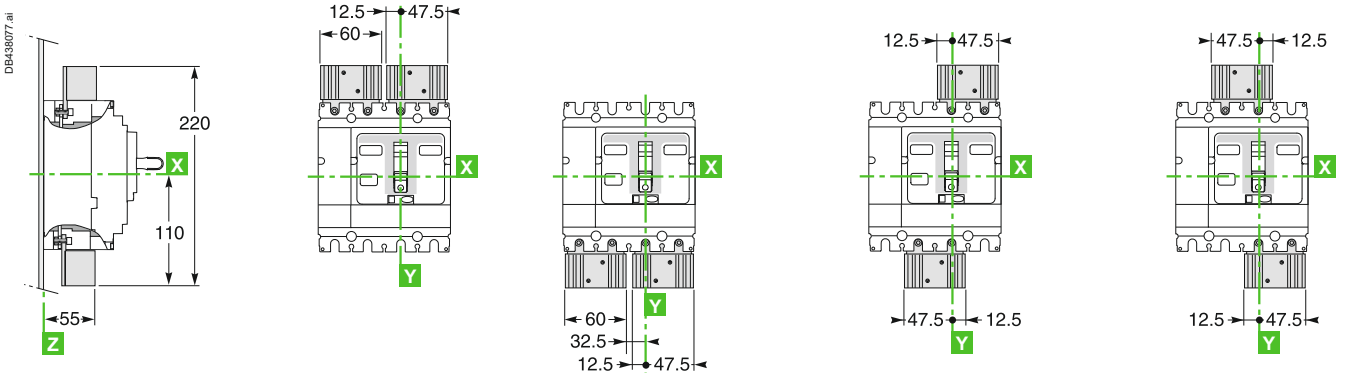

With Parallel Connections


2 x 2 poles 4 poles

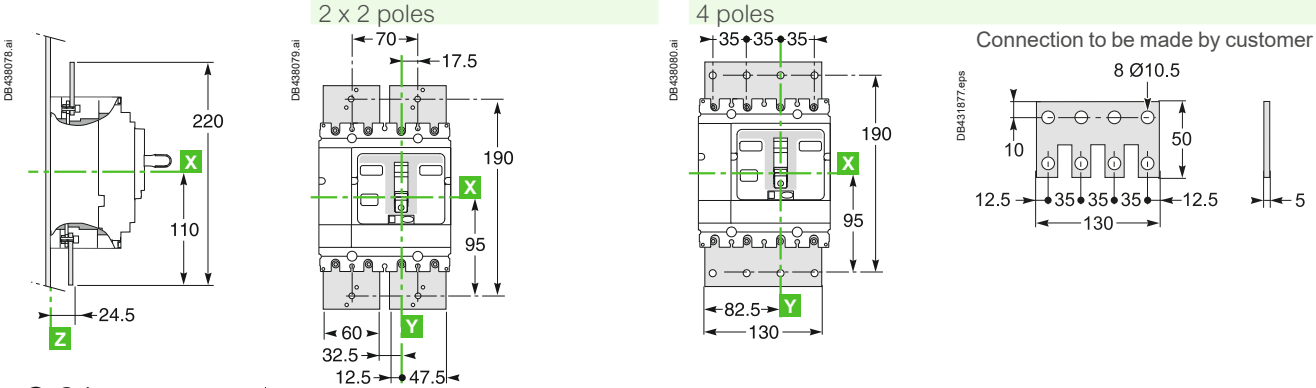


ComPacT (Fixed Version) 2P-3P-4P
Parallel and Series Connection of Poles
ComPacT NSX400 to NSX630 DC

3P Fixed Version (ComPacT NSX400-630 DC)

With Series Connections

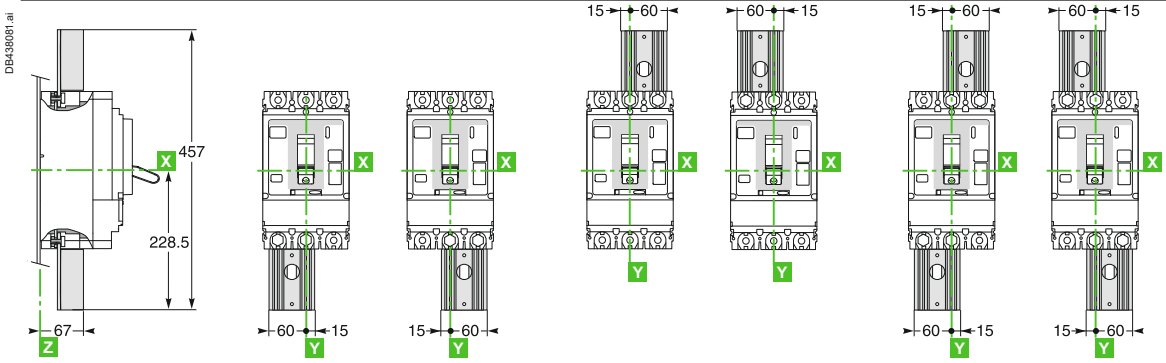


With Parallel Connections

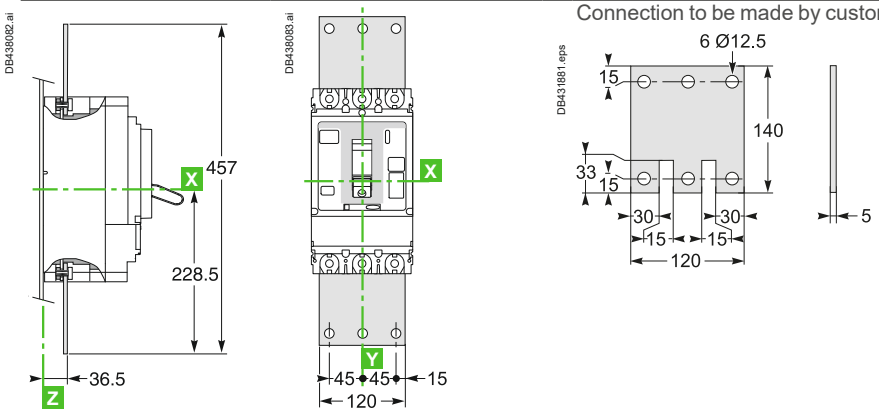

4P Fixed Version (ComPacT NSX400 to NSX630 DC)


With Series Connections

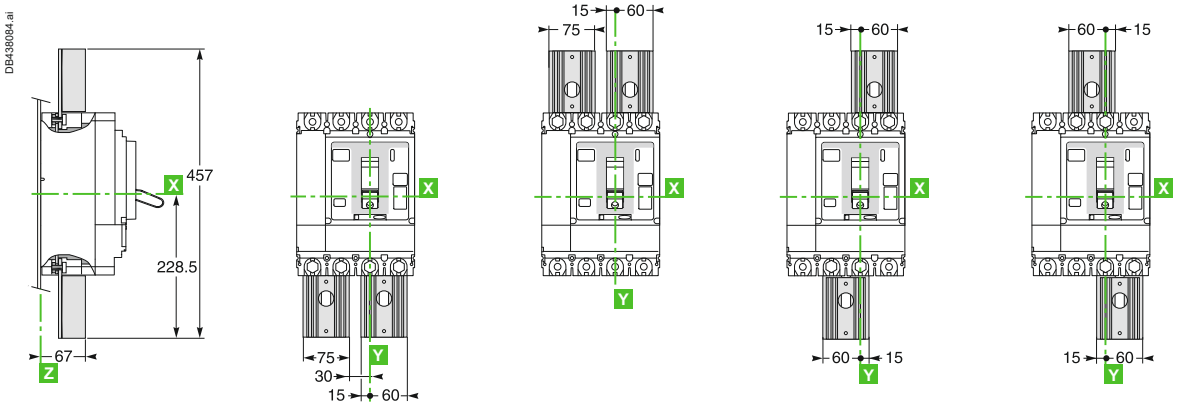

With Parallel Connections


2 x 2 poles


4 poles

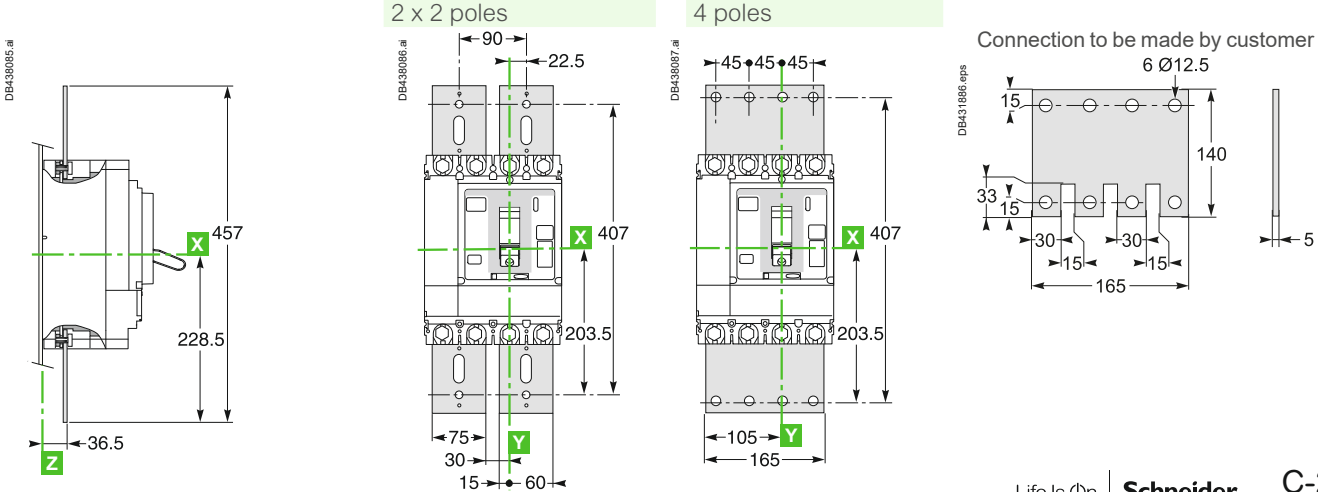

ComPacT (Fixed Version) 4P
Parallel and Series Connection of Poles
ComPacT NSX630 to NSX1200 DC

4P Fixed Version (ComPacT NSX630 to NSX1200DC)
With Parallel Connections

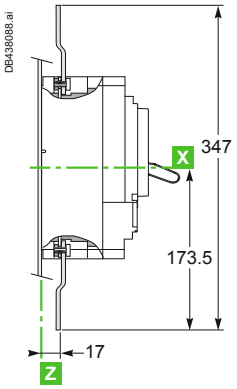

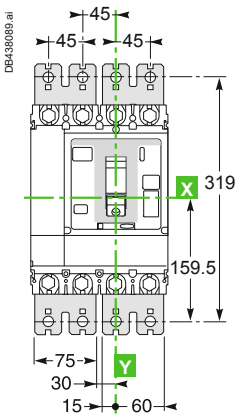


C


ComPacT (Withdraw. Version) 3P-4P Parallel and Series Connection of Poles


ComPacT NSX100 to NSX250 DC

3P Withdrawable Version


Connections Mounted with Heat Sink Directed Outwards

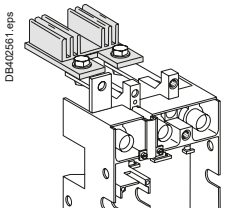


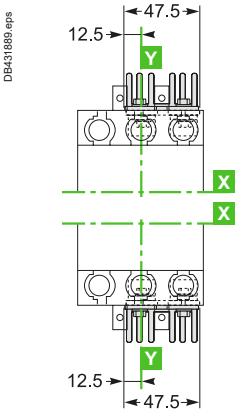


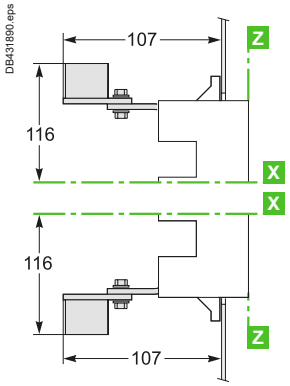

Connections Mounted with Heat Sink Directed Inwards

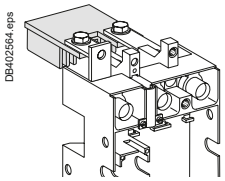


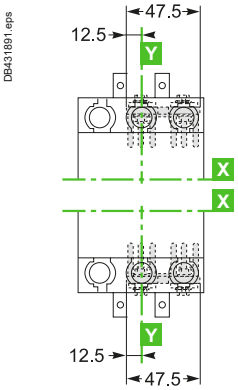


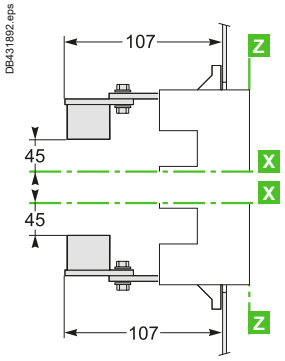


4P Withdrawable Version


Connections Mounted with Heat Sink Directed Outwards

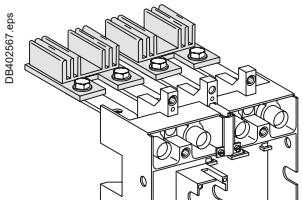


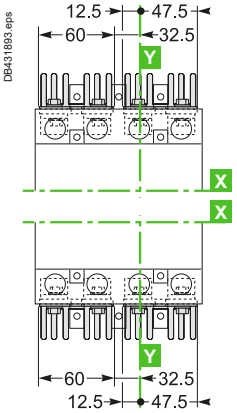


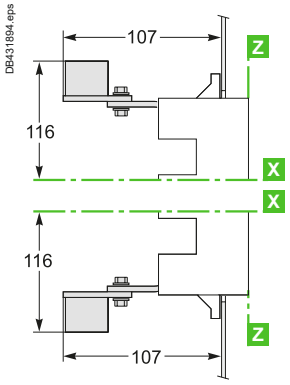

Connections Mounted with Heat Sink Directed Inwards

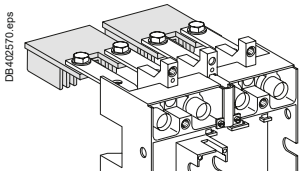

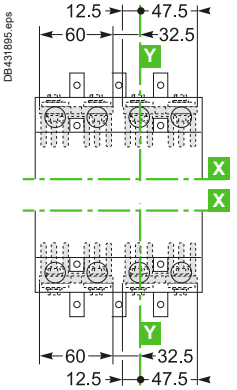

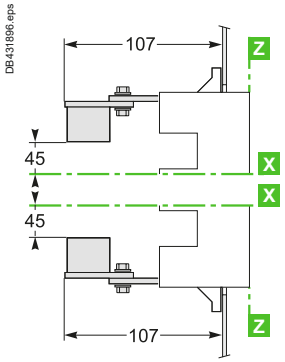



C


ComPacT (Withdraw. Version) 3P-4P
Parallel and Series Connection of Poles
ComPacT NSX400 to NSX630 DC

3P Withdrawable Version


Connections Mounted with Heat Sink Directed Outwards

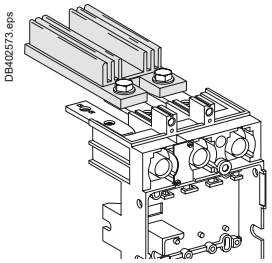


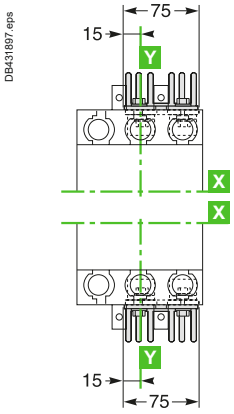


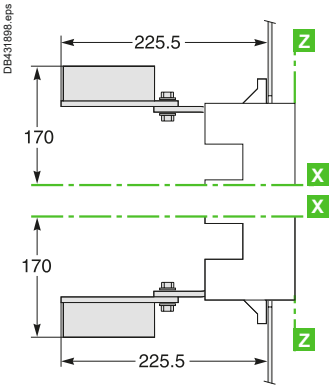

Connections Mounted with Heat Sink Directed Inwards

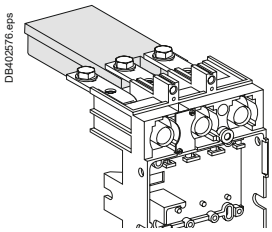


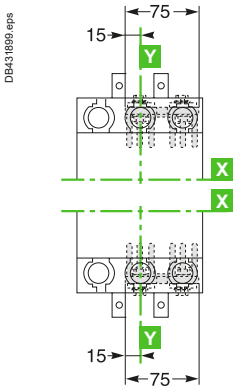


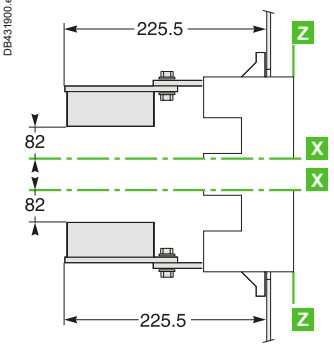


4P Withdrawable Version


Connections Mounted with Heat Sink Directed Outwards

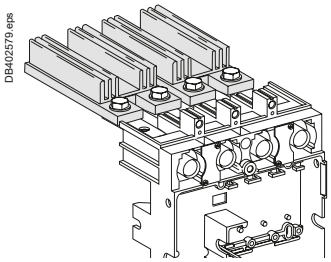


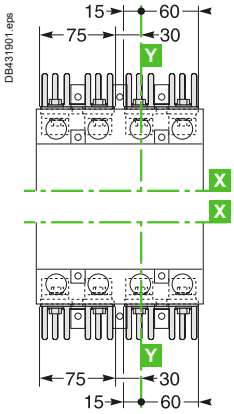


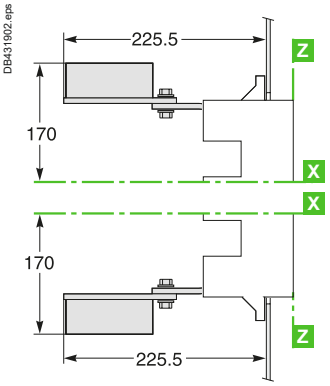

Connections Mounted with Heat Sink Directed Inwards

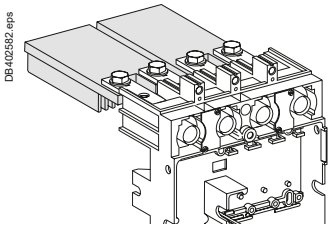


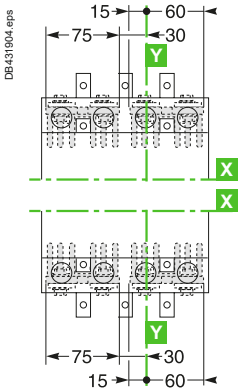

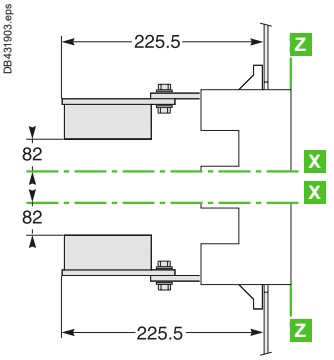


ComPacT (Fixed Version)
4P Connection of Poles, Dimensions and Mounting
ComPacT NSX100 to NSX630 DC PV - DC EP


4P Fixed Version (ComPacT NSX100-200 DC PV)
With Series Connections

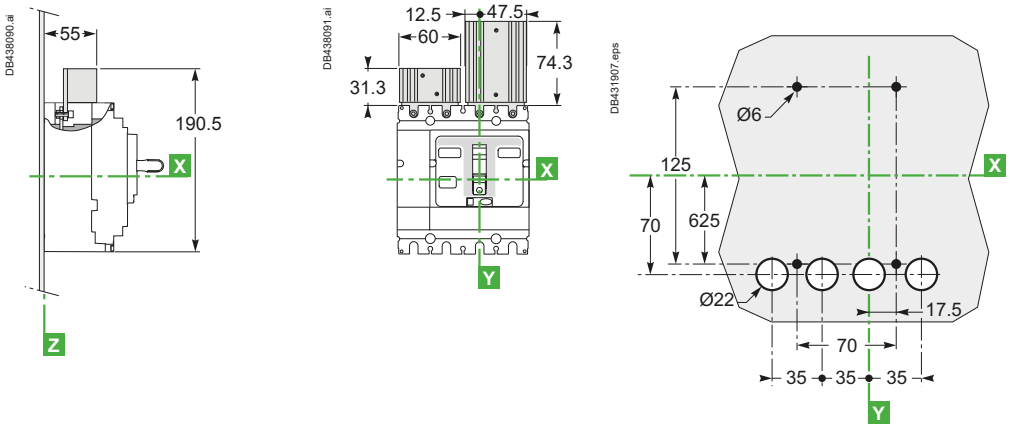

4P Fixed Version (ComPacT NSX250-630 DC PV)
With Series Connections

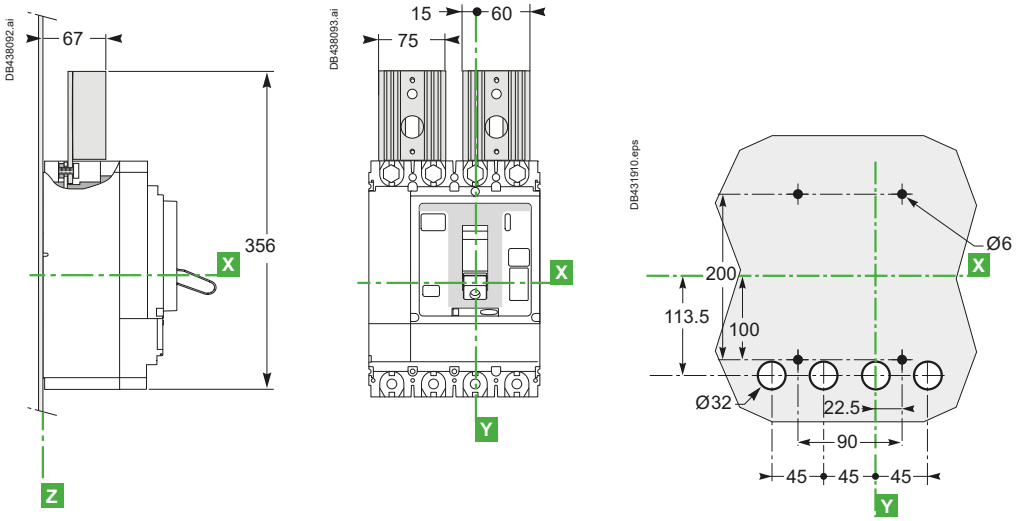

Dimensions

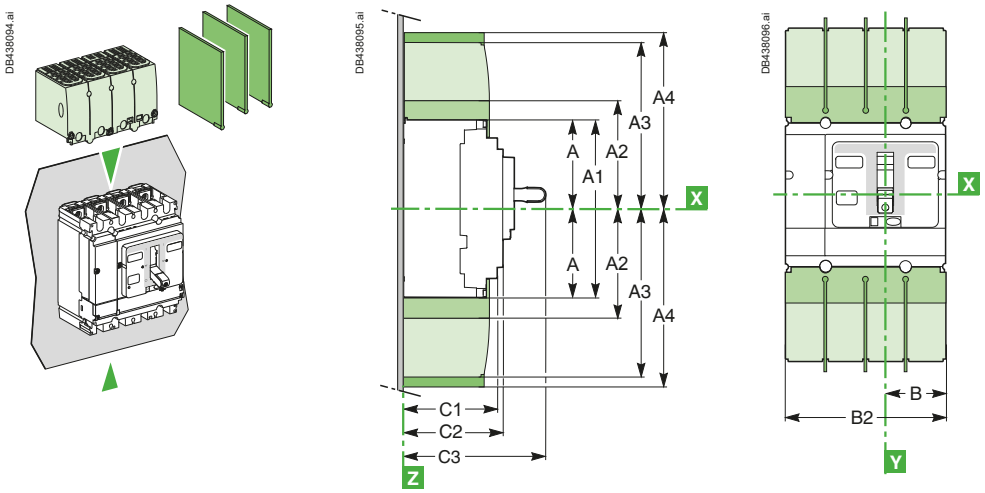

Interphase barriers
Long terminal shields

Long terminal shields (also available for NSX400/630 DC spreaders with 52.5 mm pitch: B2 = 210 mm)


Type	A	A1	A2	A3	A4	B	B2	C1	C2	C3
NSX100/160/200 DC PV	80.5	161	94	145	178.5	52.5	140	81	86	126
NSX250/630 DC PV	127.5	255	142.5	240	237	70	185	95.5	110	168

ComPacT (Fixed Version)
4P Connection of Poles, Dimensions
ComPacT NSX630b to 1600 DC PV


Electrical Control

Front Connection

DB431912.eps

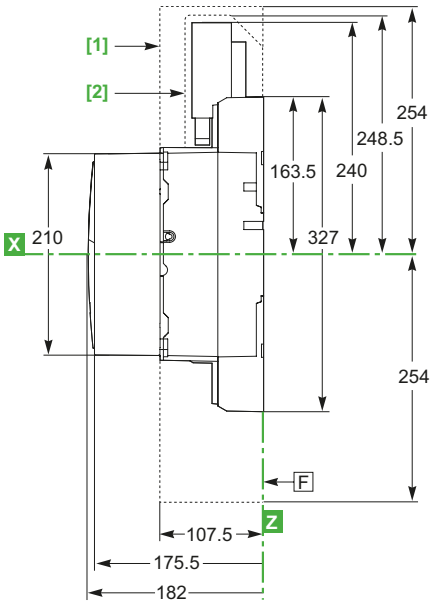


DB431913.eps

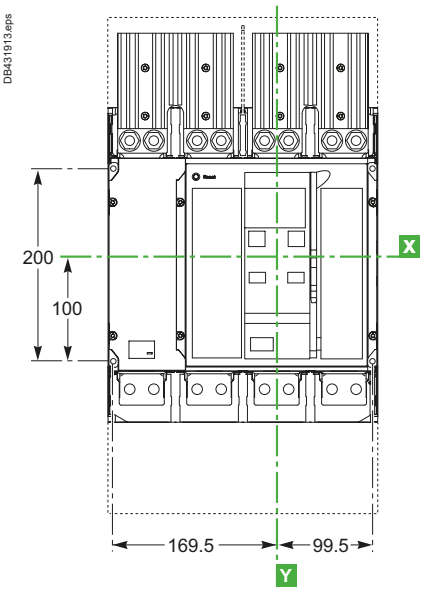


[1] With terminal shield.
[2] With phase separator.

Rear Connection

DB431914.eps

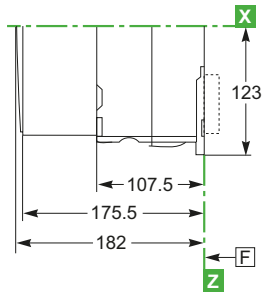


DB431915.eps

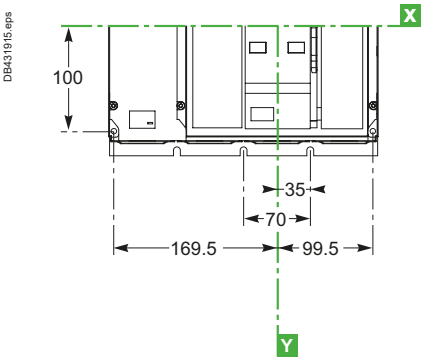


Front-Panel Cutouts

Door cutout A

DB431916.eps

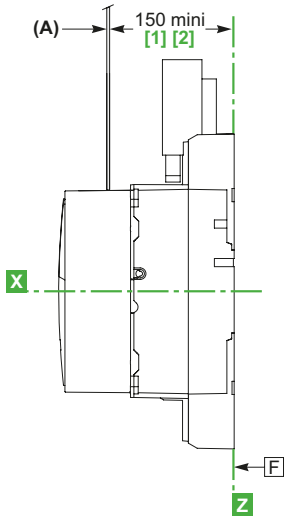


DB431917.eps

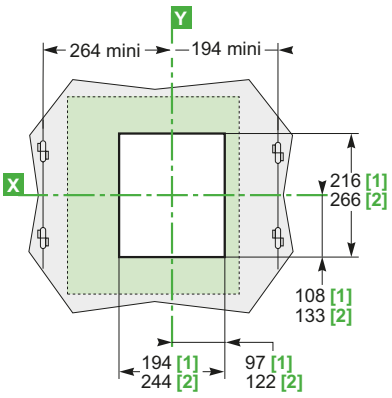


F: Datum
[1] Without escutcheon.
[2] With escutcheon.

ComPacT (Fixed Version)
4P Front Connection of Poles, Mounting
ComPacT NSX630b to 1600 DC PV

On Backplate

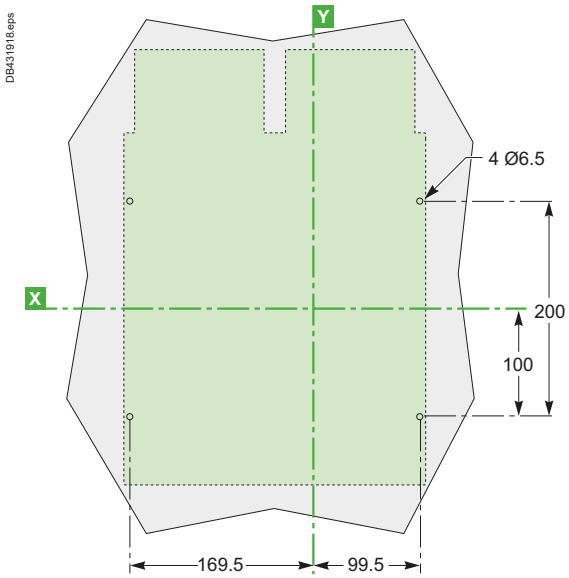


On Rails

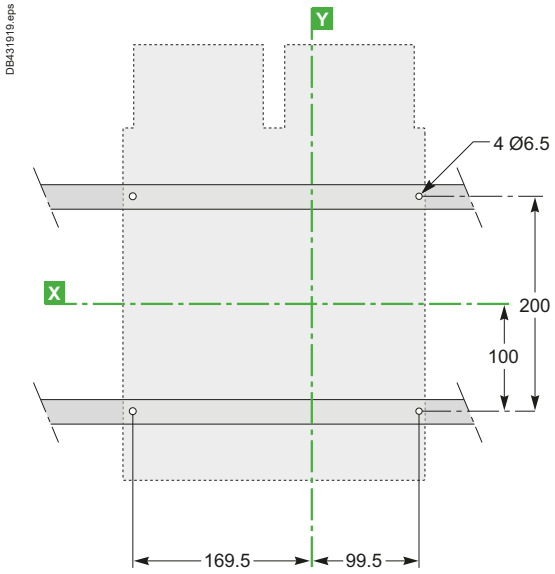


Note: Mounting parameters for electrically operated devices are identical to those for manually operated devices.
X and **Y** are the symmetry planes for a 4-pole device.
Z is the back plane of the device.

ComPacT (Fixed Version)
4P Rear Connection of Poles, Mounting
ComPacT NSX630b to 1600 DC PV

On Backplate

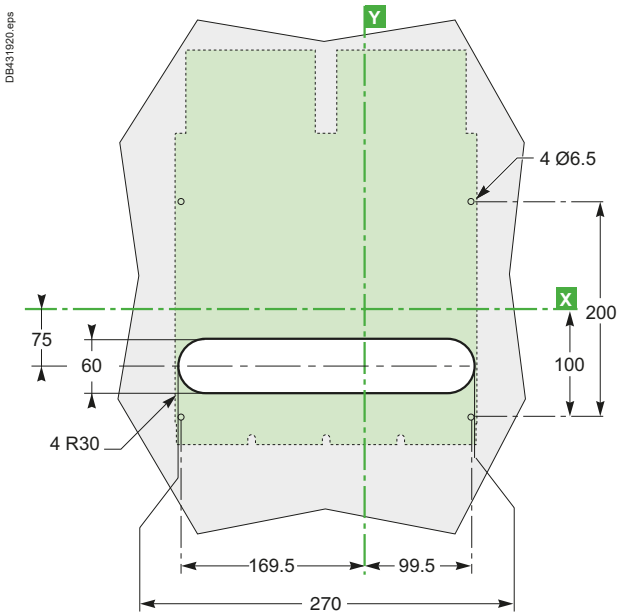

On Rails

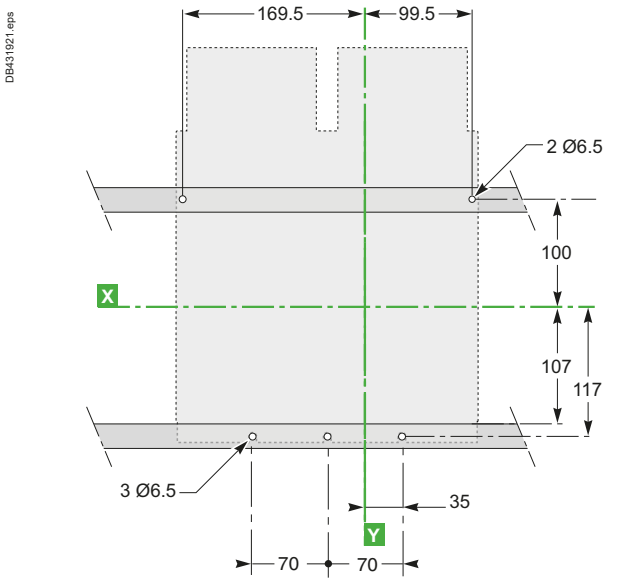



Note: Mounting parameters for electrically operated devices are identical to those for manually operated devices.
X and **Y** are the symmetry planes for a 4-pole device.
Z is the back plane of the device.

MasterPact (Fixed Device)


NW10 to 40 DC Version C/D (3P), Version E (4P) NW10 to 40 EPDC, DC PV Version D (3P)

Device

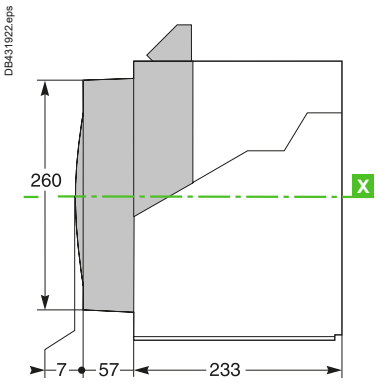


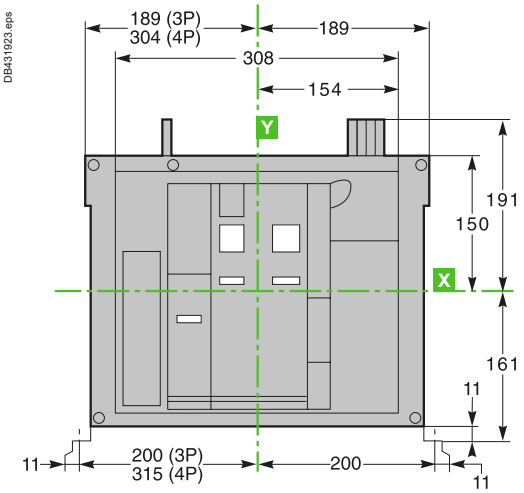


Mounting on Base Plate or Rails

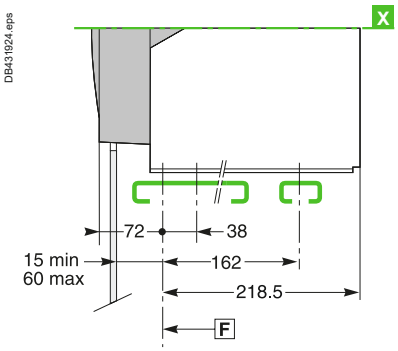


Mounting Detail

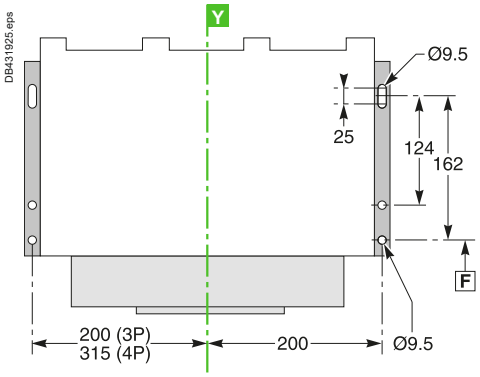


Safety Clearances

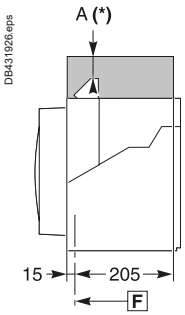

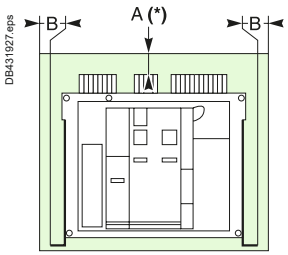

Door Cutout

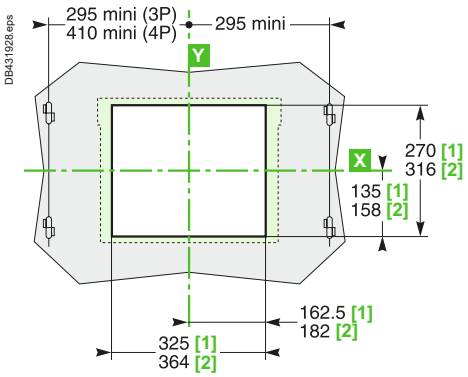


	Insulated parts	Metal parts	Energized parts
A	0	0	100
B	0	0	60

F: Datum


Note:
[1] Without escutcheon.
[2] With escutcheon.
X and Y are the symmetry planes for a 3-pole device.
A[*] An overhead clearance of 110 mm is required to remove the arc chutes.
An overhead clearance of 20 mm is required to remove the terminal block.


MasterPact (Fixed Device)
NW10 to 40 DC–Version C

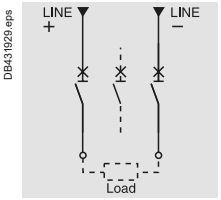


Connections


Horizontal Rear Connection (NW10–NW20 DC)

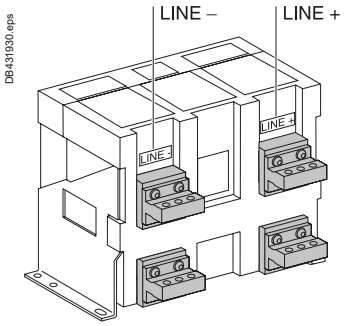

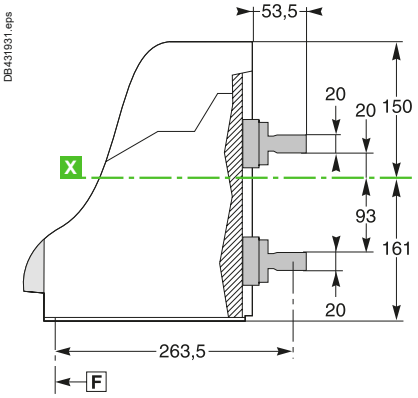


Detail

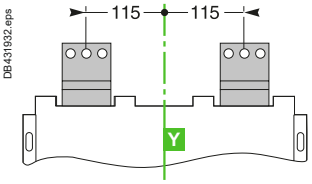


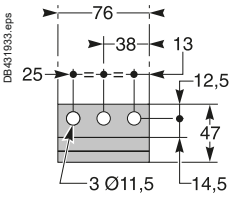


C


Vertical Rear Connection (NW10–NW20 DC)

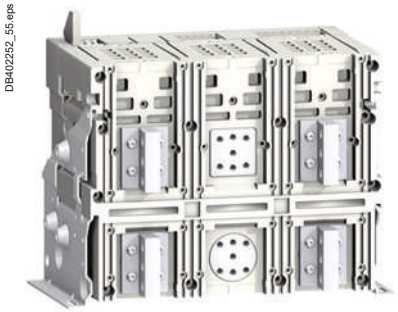

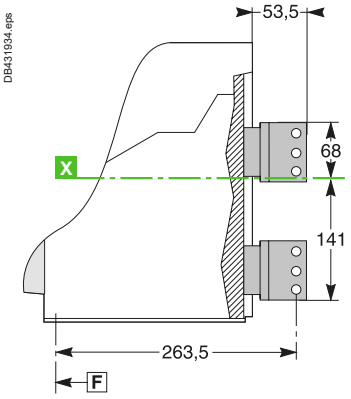


Detail

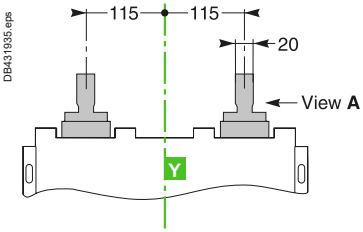


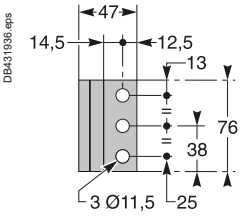


View A detail


Vertical Rear Connection (NW40 DC)

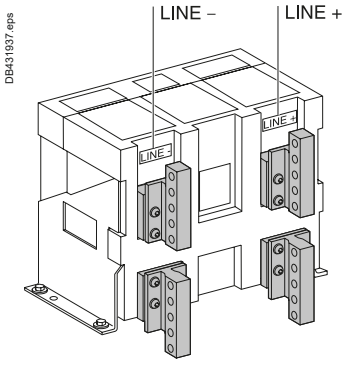

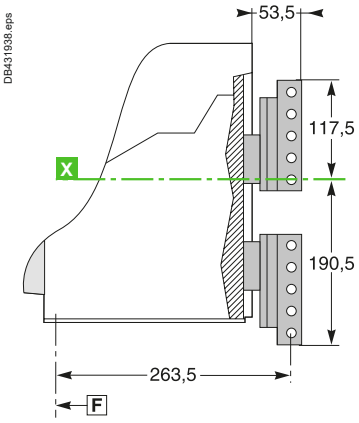


Detail

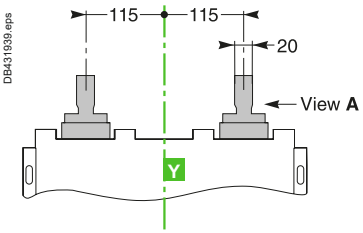

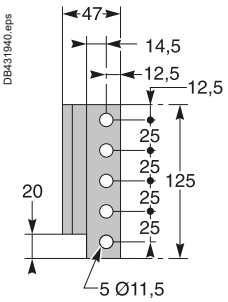


View A detail


Note: Recommended connection screws: M10 class 8.8.
Tightening torque: 50 Nm with contact washer.

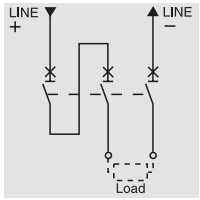


Connections

Horizontal Rear Connection (NW10–NW20 DC–DC PV)

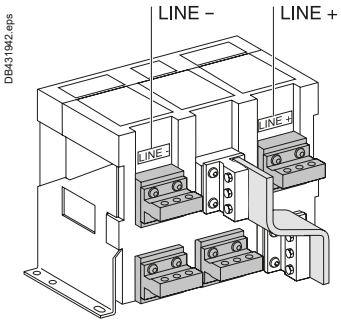


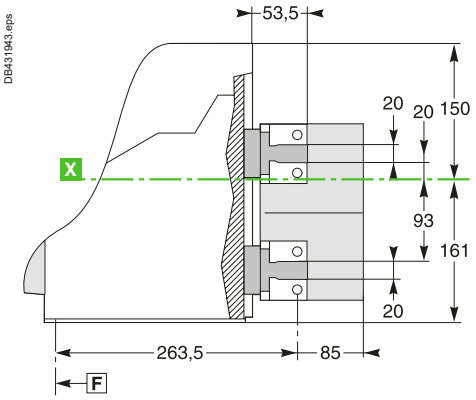


Detail

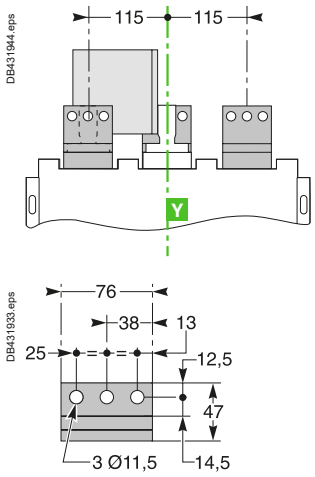


Vertical Rear Connection (NW10–NW20 DC–DC PV)

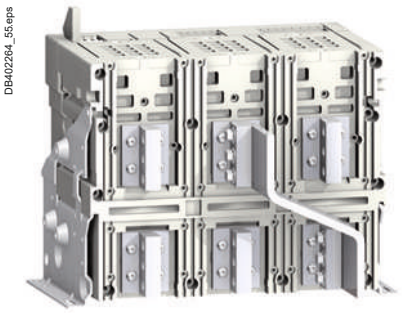

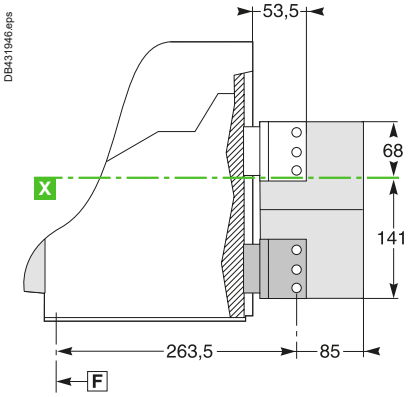



Detail

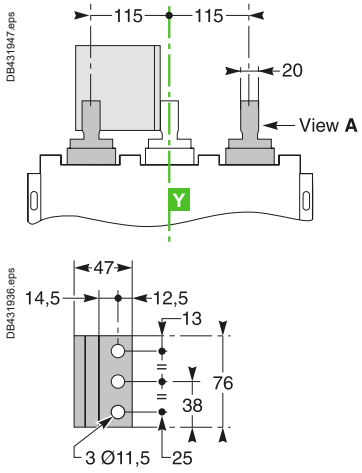


View A detail

Vertical Rear Connection (NW40 DC–DC PV)

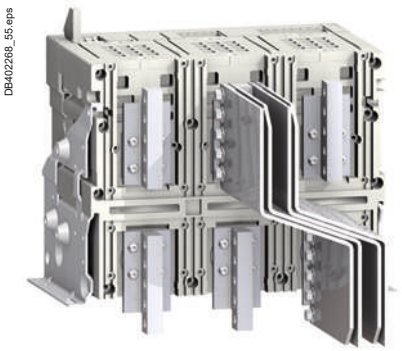

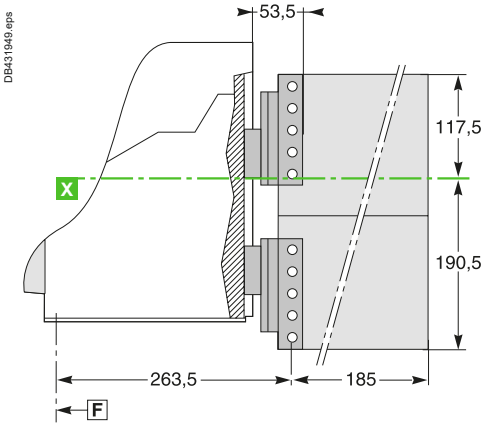


Detail

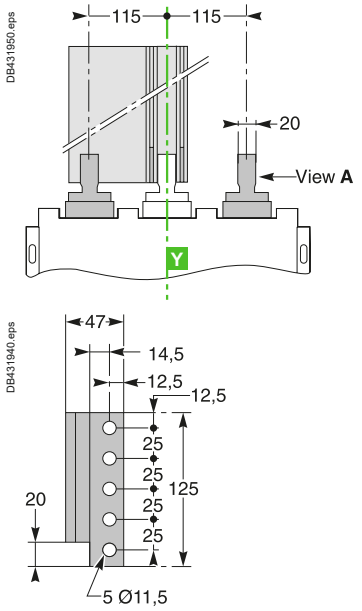

View A detail

Note: Recommended connection screws: M10 class 8.8.
Tightening torque: 50 Nm with contact washer.


MasterPact (Fixed Device)
NW10 to 40 DC–Version E

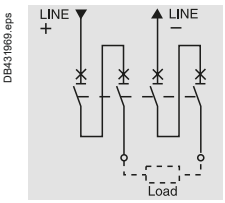


Connections


Horizontal Rear Connection (NW10–NW20 DC)



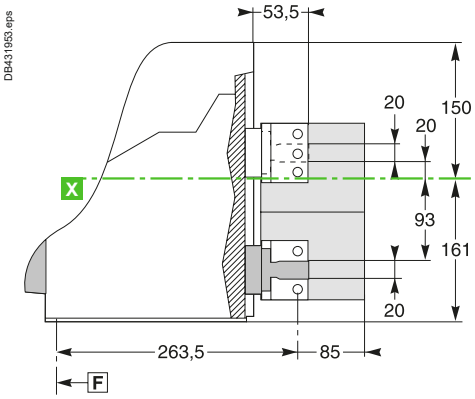



Detail

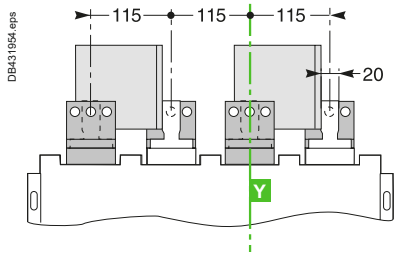

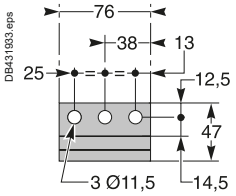



Vertical Rear Connection (NW10–NW20 DC)

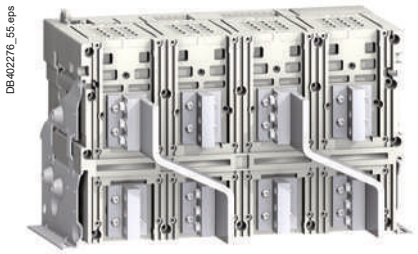

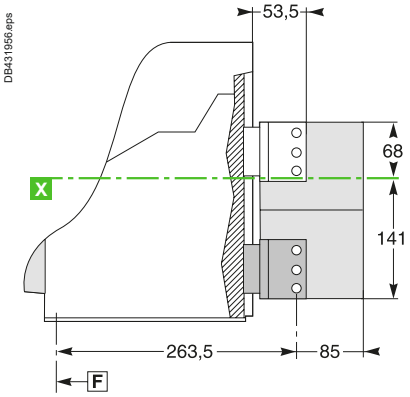


Detail

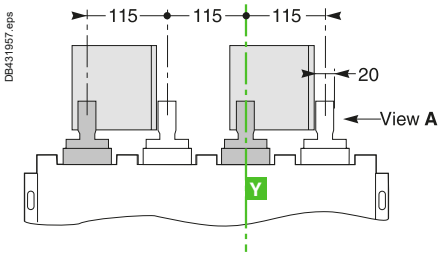


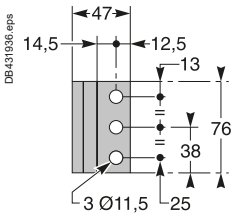


View A detail


Vertical Rear Connection (NW40 DC)

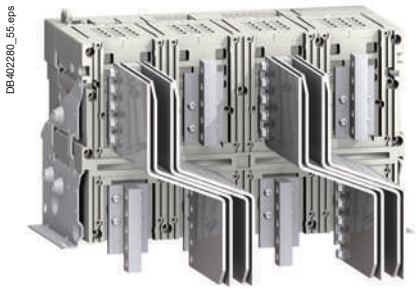

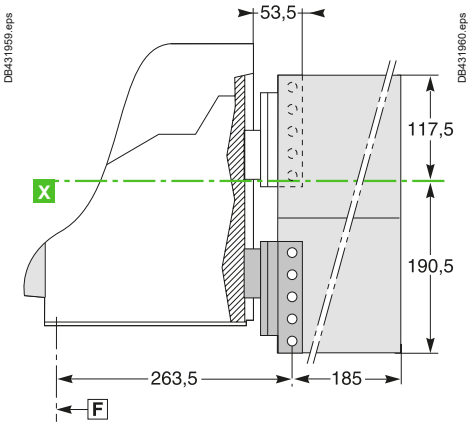

Detail

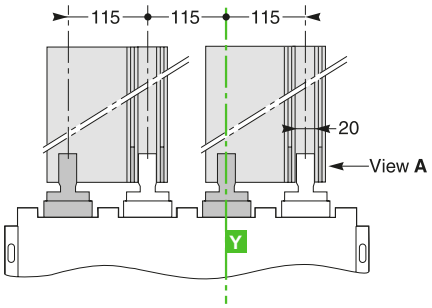

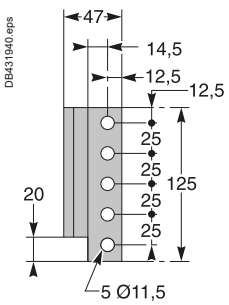


View A detail


Note: Recommended connection screws: M10 class 8.8.
Tightening torque: 50 Nm with contact washer.

MasterPact (Drawout Device)

NW10 to 40 DC Version C/D (3P) Version E (4P)
NW10 to 40 DC PV Version D (3P)


Device

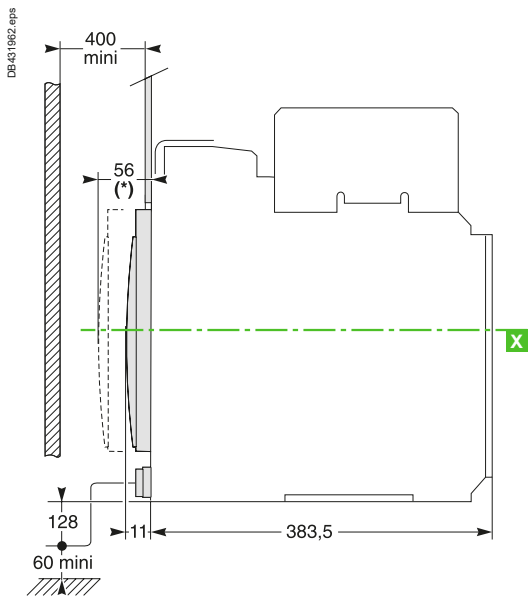

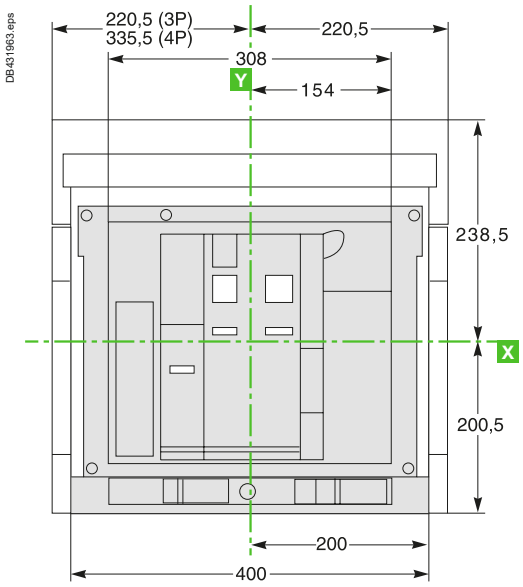


[*] Drawout position.


Mounting on Base Plate or Rails

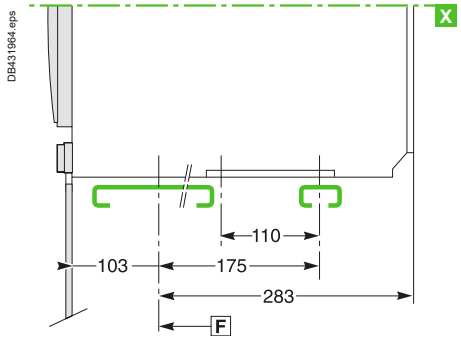


Mounting Detail

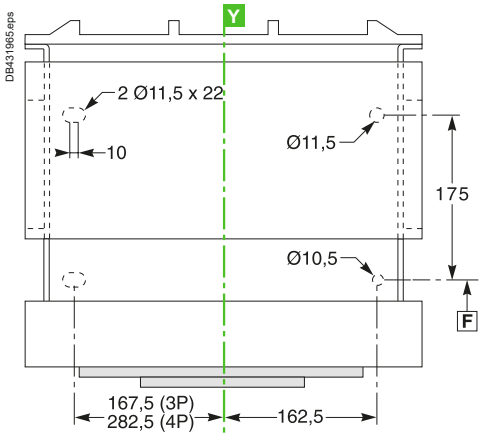

Safety Clearances

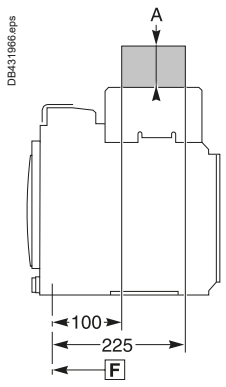


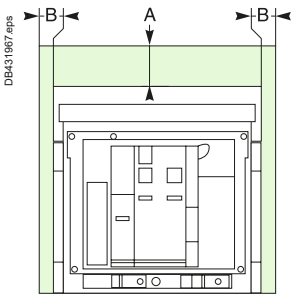

	Insulated parts	Metal parts	Energized parts
A	0	0	0
B	0	0	60


F: Datum

Door Cutout

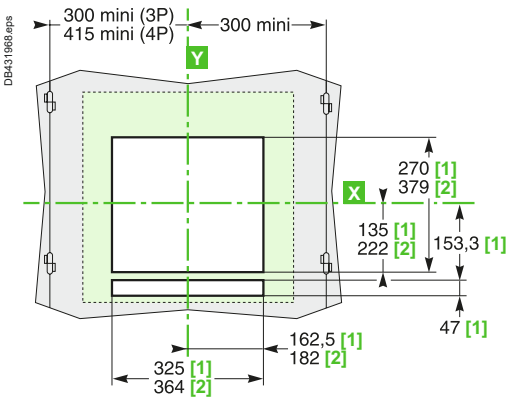

Note:
[1] Without escutcheon
[2] With escutcheon
X and Y are the symmetry planes for a 3-pole device.


MasterPact (Drawout Device)
NW10 to 40 DC–Version C

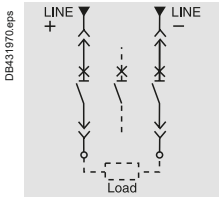


Connections

Horizontal Rear Connection (NW10–NW20 DC)




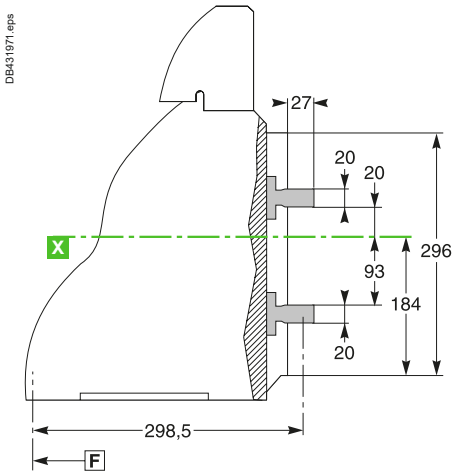


Detail

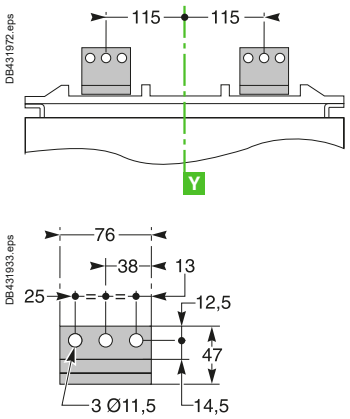


Vertical Rear Connection (NW10–NW20 DC)

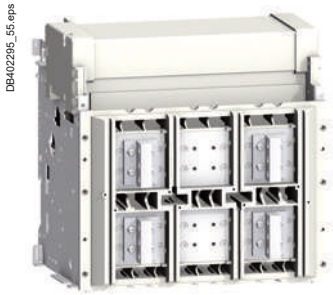

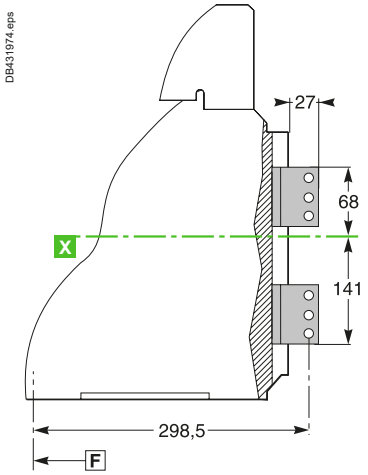



Detail

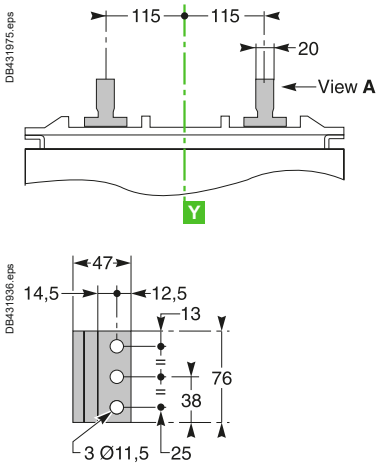


View A detail

Vertical Rear Connection (NW40 DC)

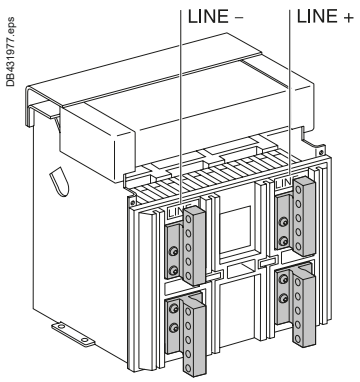

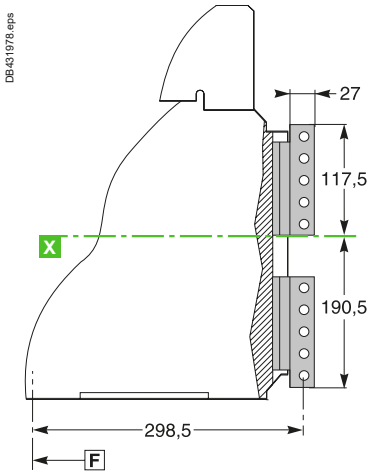

Detail

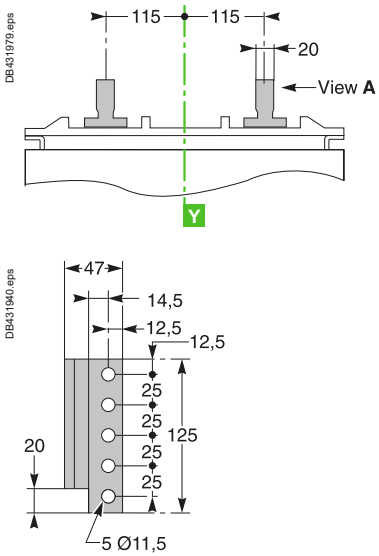


View A detail

Note: Recommended connection screws: M10 class 8.8.
Tightening torque: 50 Nm with contact washer.


MasterPact (Drawout Device)


NW10 to 40 DC, EPDC, DC PV–Version D

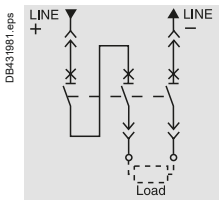


Connections

Horizontal Rear Connection (NW10–NW20 DC–DC PV)

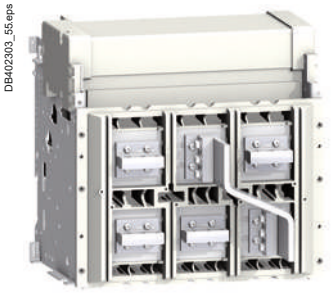


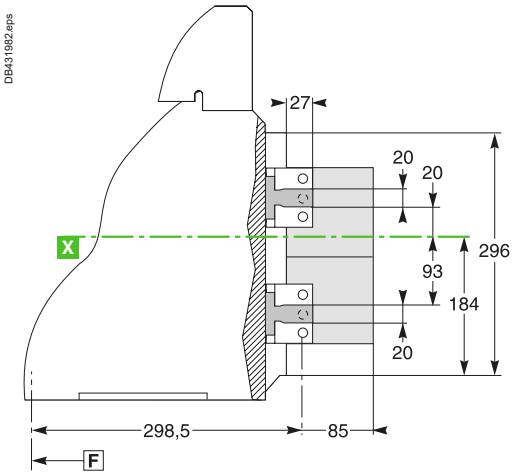


Detail

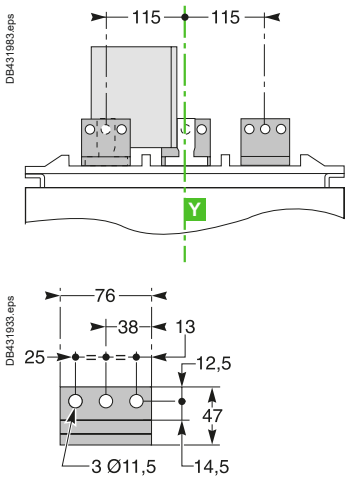


Vertical Rear Connection (NW10–NW20 DC–DC PV)

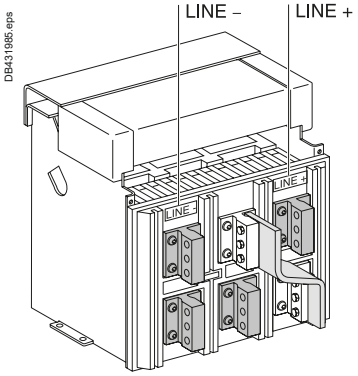

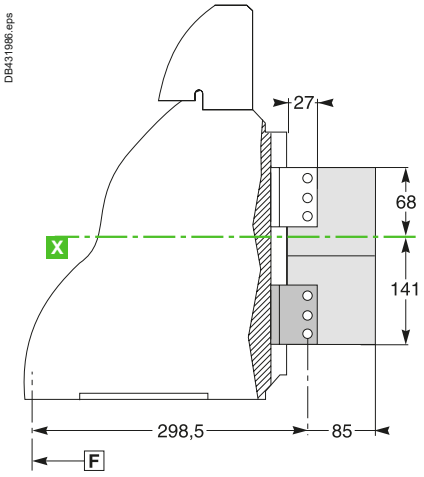



Detail

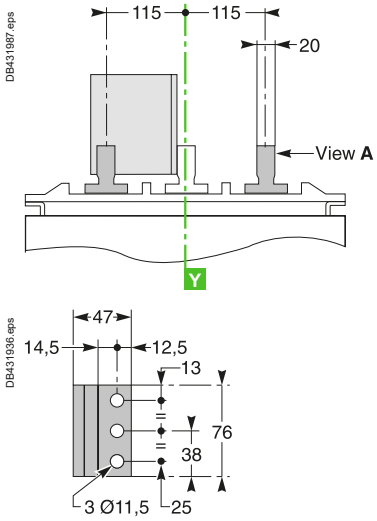


View A detail

Vertical Rear Connection (NW40 DC–DC PV)

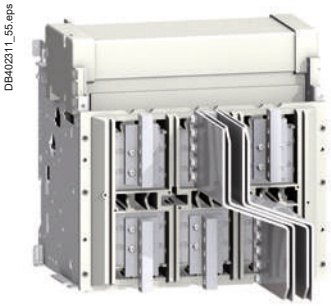

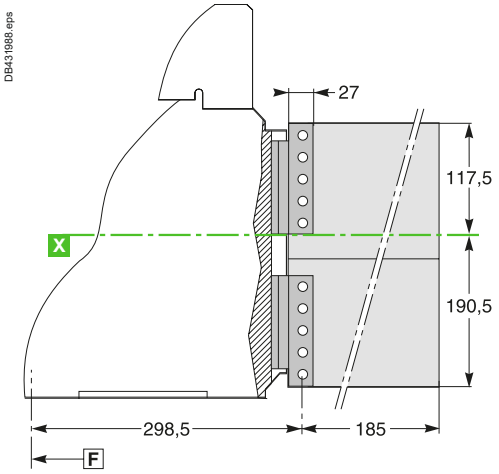

Detail

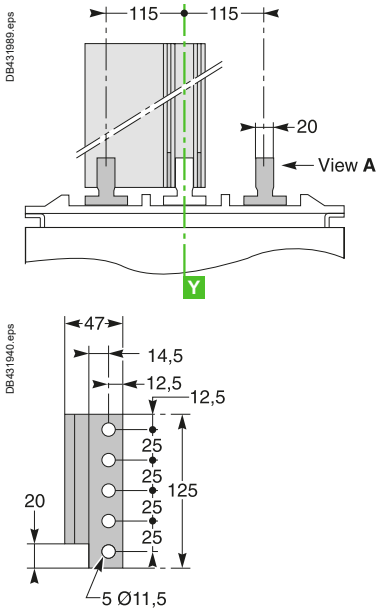


View A detail

Note: Recommended connection screws: M10 class 8.8.
Tightening torque: 50 Nm with contact washer.

C


MasterPact (Drawout Device)
NW10 to 40 DC–Version E

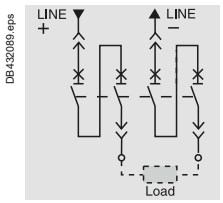


Connections


Horizontal Rear Connection (NW10–NW20 DC)



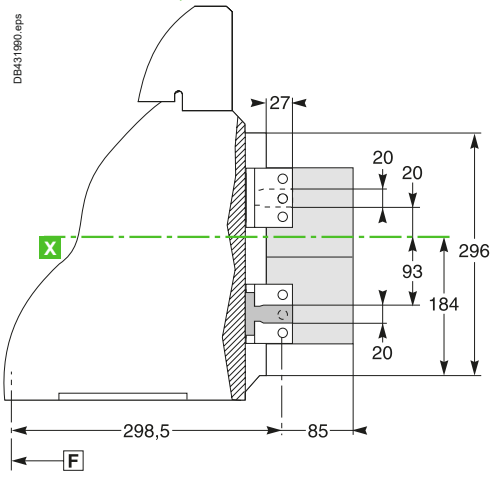



Detail

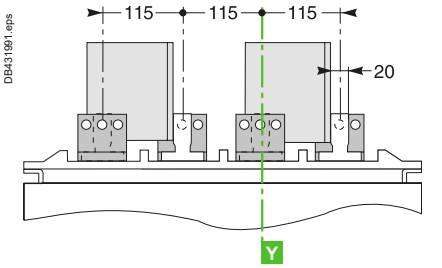

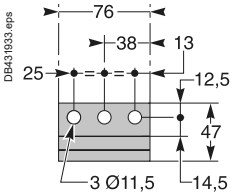



Vertical Rear Connection (NW10–NW20 DC)

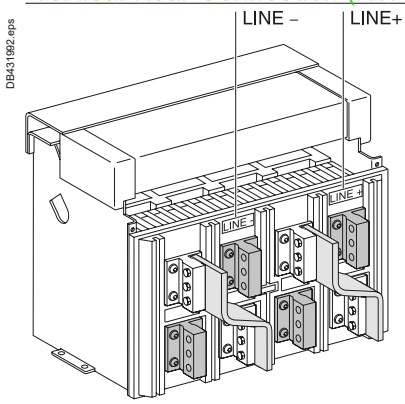

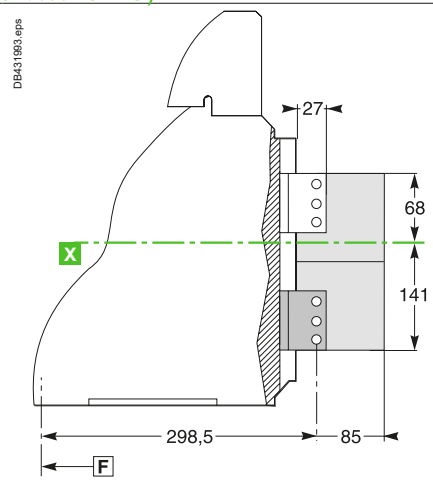


Detail

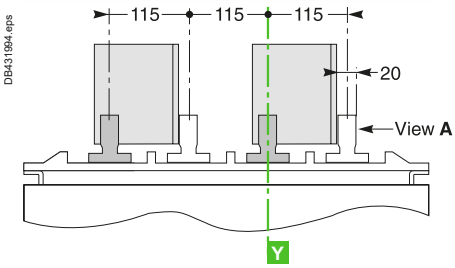


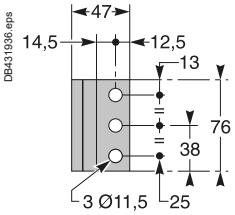


View A detail


Vertical Rear Connection (NW40 DC)

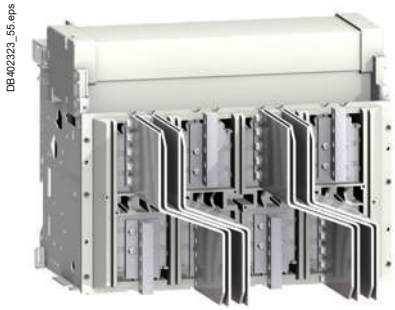

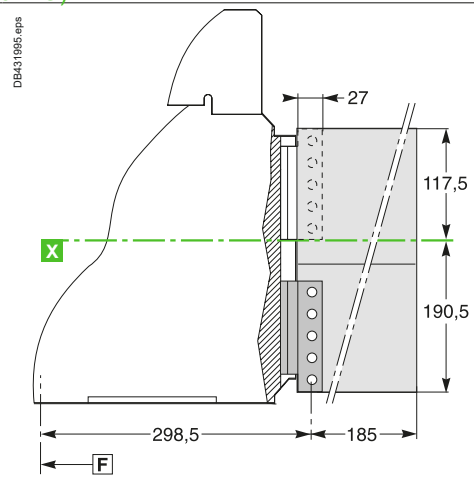

Detail

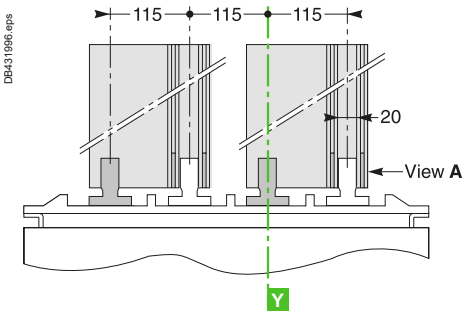

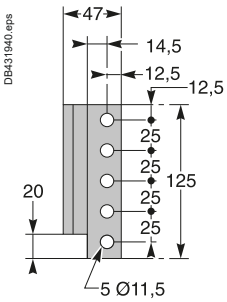


View A detail

Note: Recommended connection screws: M10 class 8.8.
Tightening torque: 50 Nm with contact washer.


Rear Panel Cutout (Drawout Device)

NW10 to NW40 DC–DC PV

DB431997.eps

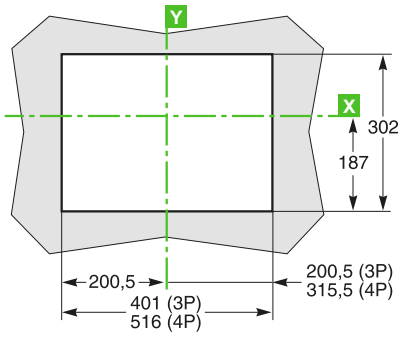

DB431998.eps

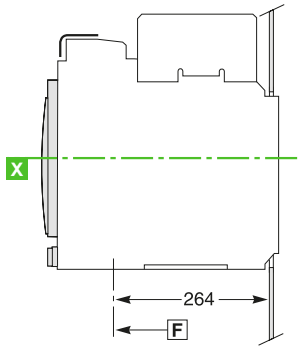


F: Datum

Escutcheon


Fixed Device

DB431999.eps

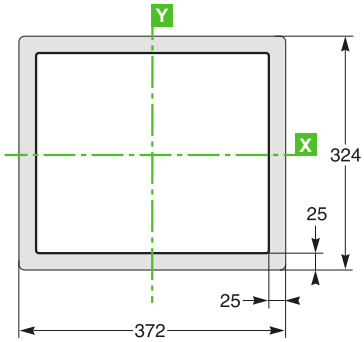


Drawout Device

DB432000.eps

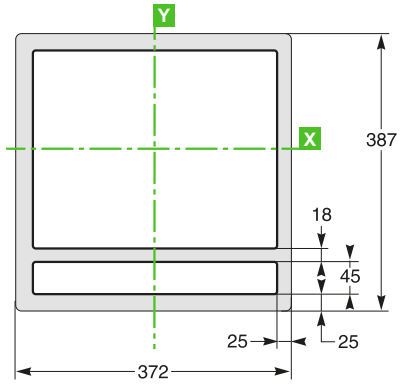


Connection of Auxiliary Wiring to Terminal Block

DB431955.eps

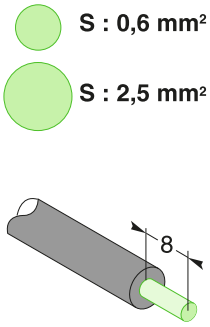



DB431958.eps

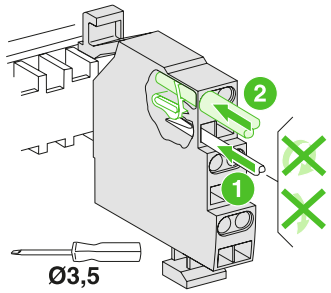

One conductor only per connection point

Delay Unit for MN Release

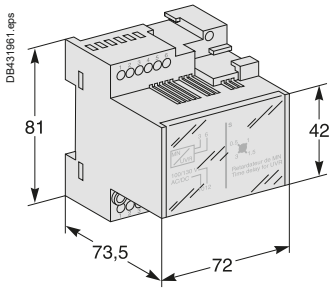


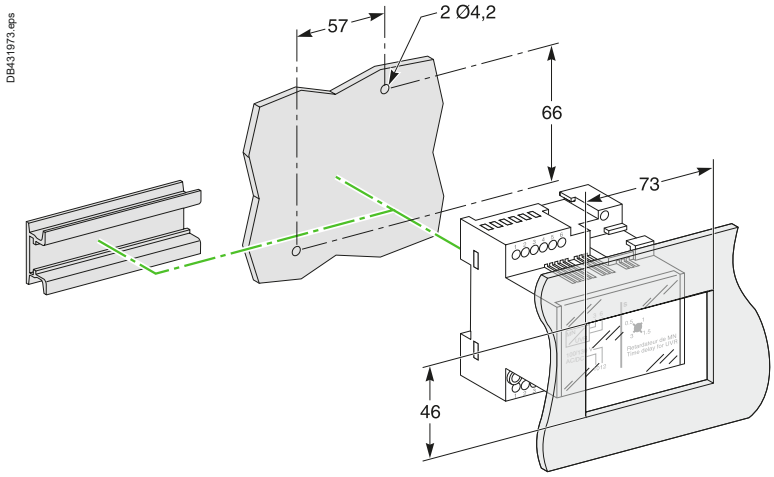

C


"Chassis" Communication Module


Modbus

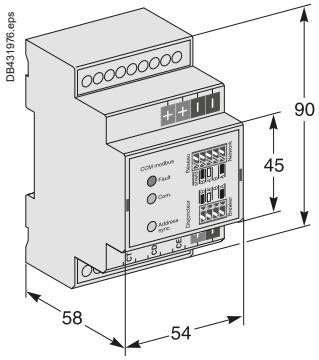


Dimensions and Mounting
External Modules for ComPacT and MasterPact


I/O (Input/Output) Application Module

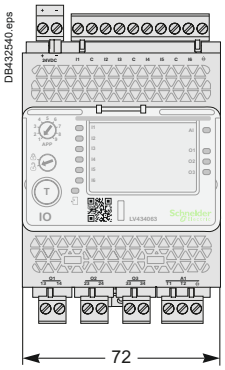

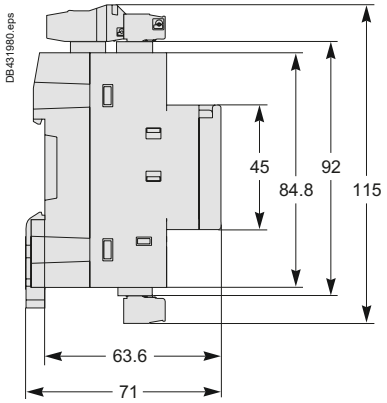



IFM–Modbus-SL Interface

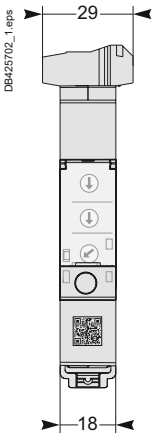

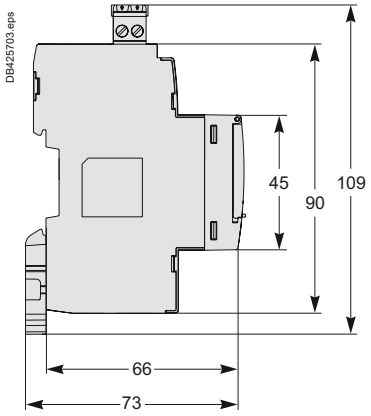



IFE–Ethernet Interface

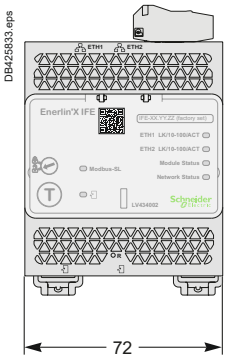

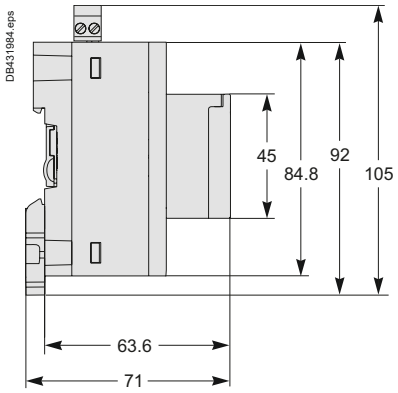

Com'X 210

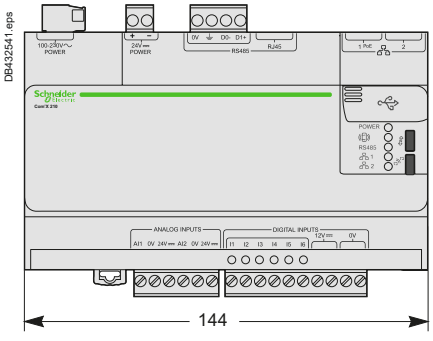


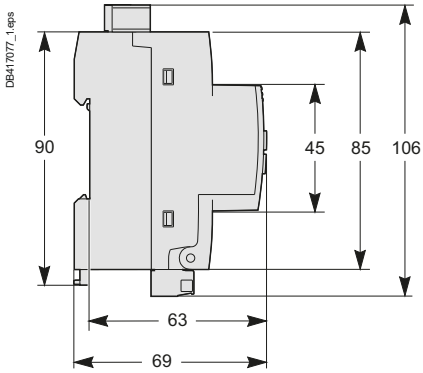


C

Dimensions and Mounting
FDM121 Switchboard Display


Dimensions

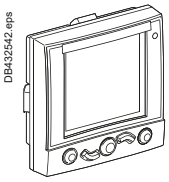


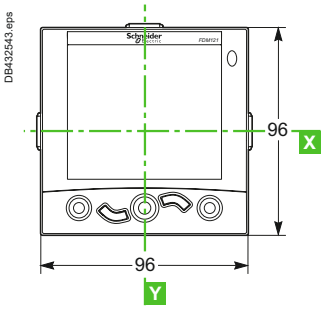


Mounting


Through Panel

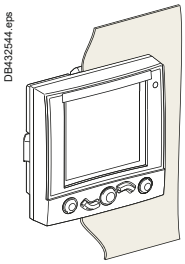


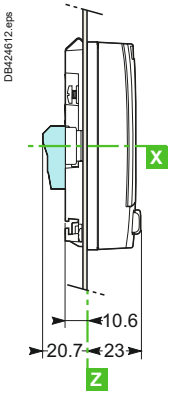


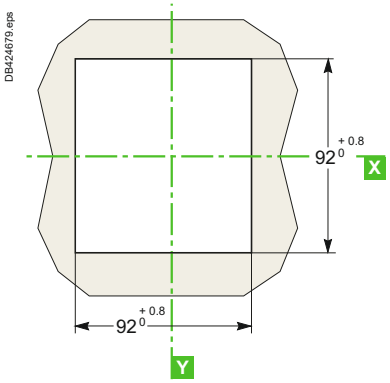


On Panel

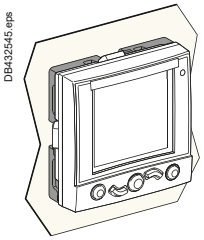

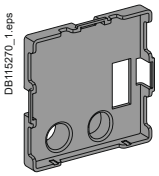

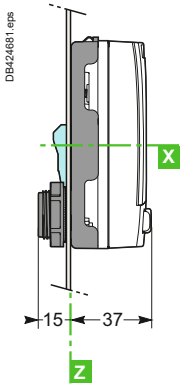


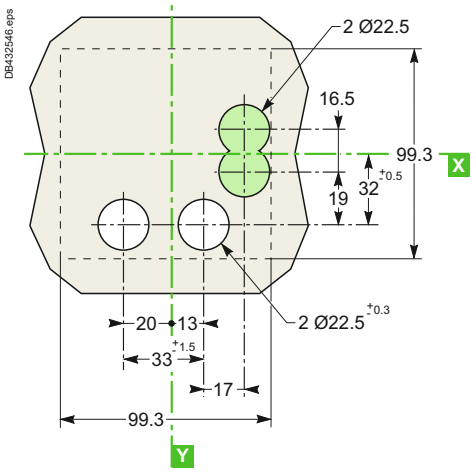


Connector (optional)

FDM128 Switchboard Display


Dimensions

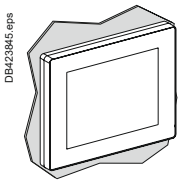


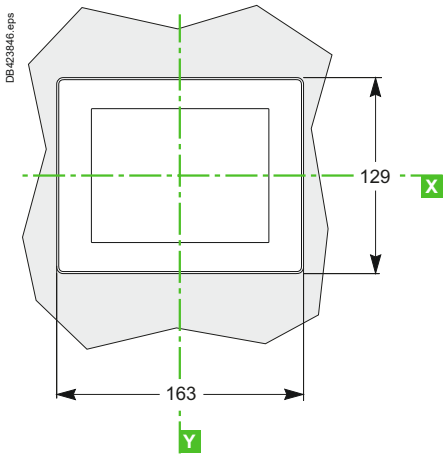



Mounting


On Panel

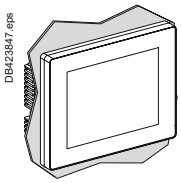

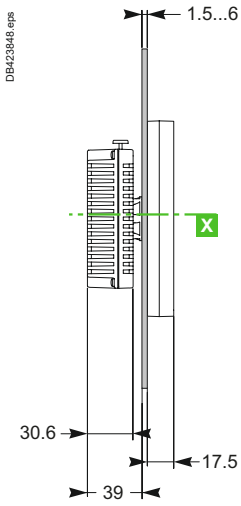

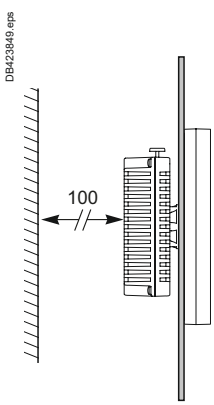

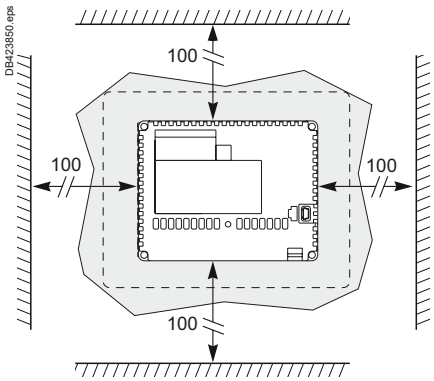

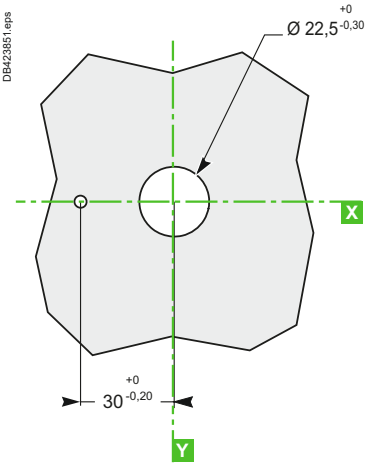



Electrical Diagrams

ComPacT NSX100 to 1200 DC
Fixed Circuit Breakers D-2

ComPacT NSX100 to 630 DC
Plug-in/Withdrawable Circuit Breakers D-4

ComPacT NSX100 to 630 DC - DC PV
Motor Mechanism D-6
Communication D-8

ComPacT NSX630b to NSX1600 DC PV
Fixed Switch-Disconnectors D-10

MasterPact NW10 to NW40 DC - DC PV
Fixed and Drawout Devices D-12

MasterPact NW DC - DC PV
Communication D-14

Fixed, Electrically Operated MasterPact NW DC - DC PV
Connection to the Communication Interface Module D-15


Withdrawable MasterPact NW DC - DC PV
Connection to the I/O and Communication Interface Module D-16

D


Other Chapters
Presentation 2
Functions and Characteristics A-1
Installation Recommendations B-1
Dimensions and Connection C-1
Additional Characteristics E-1
Catalog Numbers and Order Form F-1

ComPacT NSX100 to 1200 DC
Fixed Circuit Breakers

Remote Operation

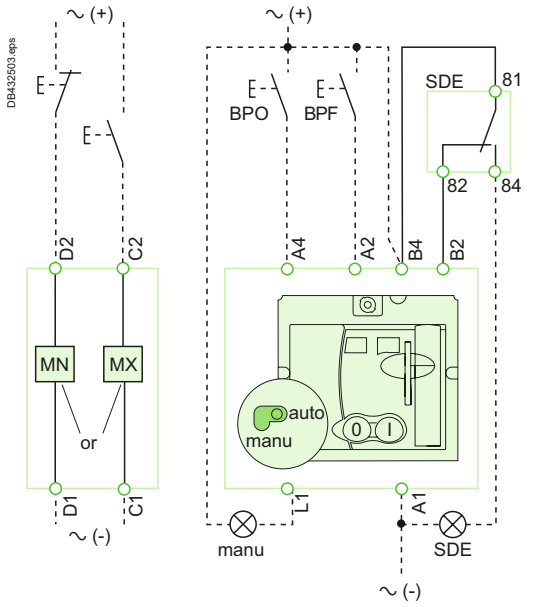

Motor mechanism (MT)

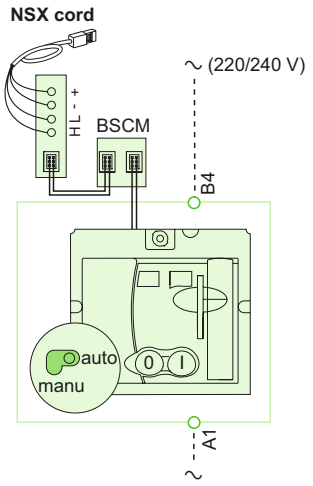

Communicating motor mechanism (MTc)

Remote Operation

MN: undervoltage release
or
MX: shunt release

Motor mechanism (MT)

A4: opening order
A2: closing order
B4, A1: power supply to motor mechanism
L1: manual position (manu)
B2: SDE interlocking (mandatory for correct operation)


BPO: opening pushbutton
BPF: closing pushbutton

Communicating motor mechanism (MTc) [1]

B4, A1: motor mechanism power supply
BSCM: breaker status and control module

D

Indication Contacts

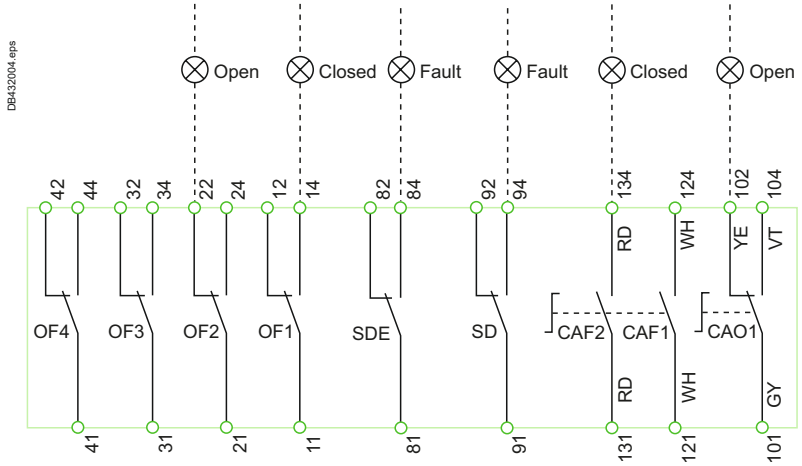

The diagram is shown with circuits de-energized, all devices open, connected and charged and relays in normal position.

Terminals shown in **o** must be connected by the customer.

OF2/OF1:	device ON/OFF indication contacts
OF4/OF3:	device ON/OFF indication contacts (NSX400/630)
SDE:	fault-trip indication contact (short-circuit, overload, ground fault, earth leakage)
SD:	trip-indication contact
CAF2/CAF1:	early-make contact (rotary handle only)
CAO1:	early-break contact (rotary handle only)


Color Code for Auxiliary Wiring

RD:	red	**VT:**	violet
WH:	white	**GY:**	grey
YE:	yellow	**OR:**	orange
BK:	black	**BL:**	blue
GN:	green		


D

ComPacT NSX100 to 630 DC
Plug-in/Withdrawable Circuit Breakers

Remote Operation

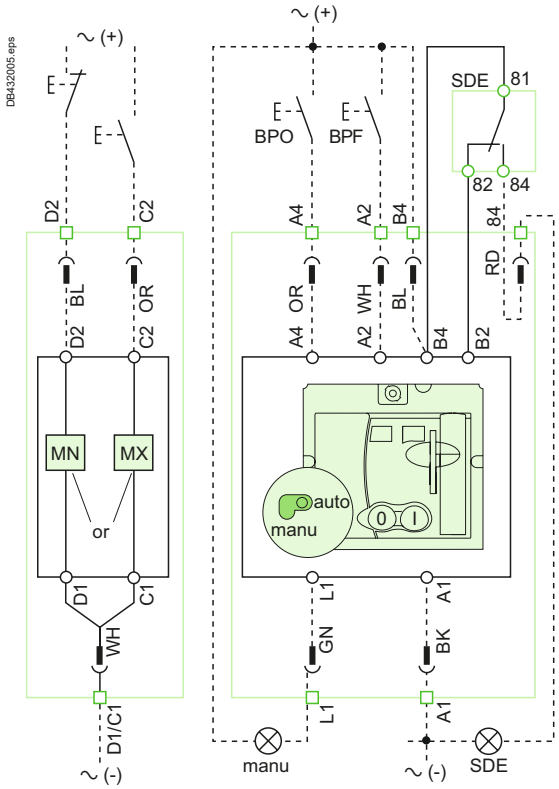


Motor mechanism (MT)

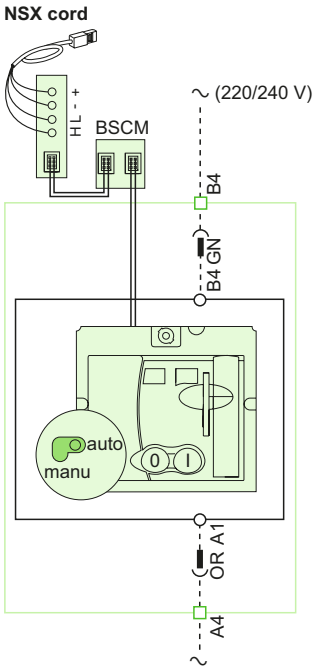


Communicating motor mechanism (MTc) [1]

[1] NSX100-250 DC only.

Indication Contacts

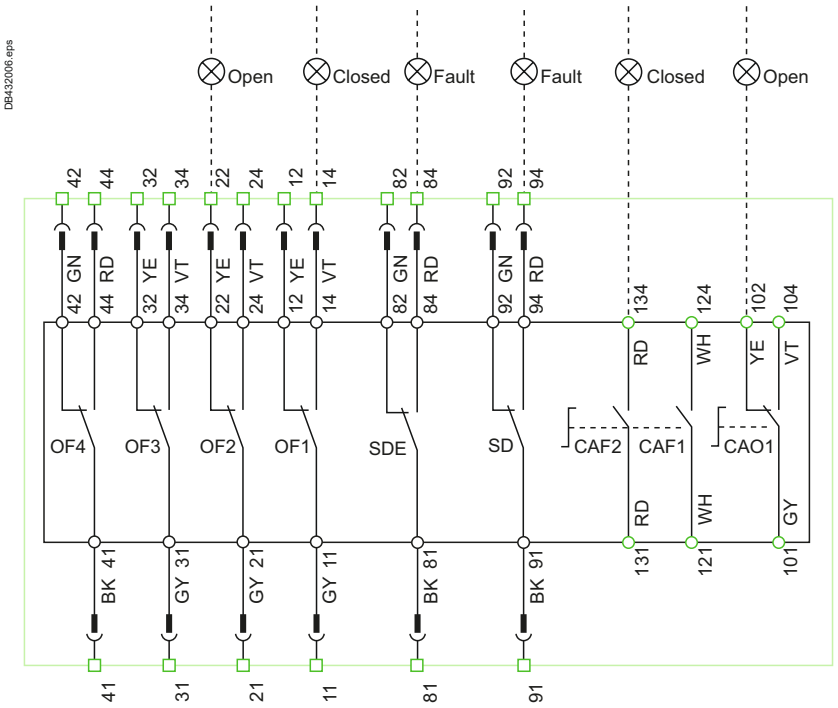

Carriage Switches

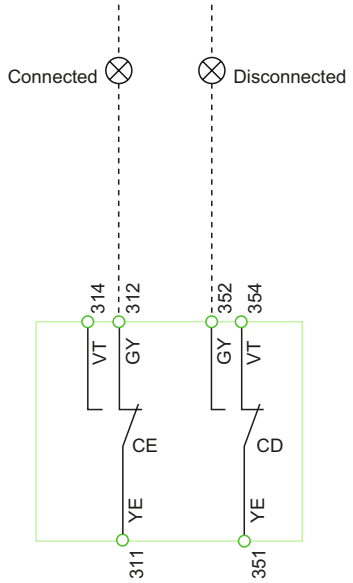

Remote Operation

MN: undervoltage release

or

MX: shunt release

Motor mechanism (MT)

A4: opening order

A2: closing order

B4, A1: motor mechanism power supply

L1: manual position (manu)

B2: SDE interlocking (mandatory for automatic or remote recharging)

BPO: opening pushbutton

BPF: closing pushbutton

Communicating motor mechanism (MTc)

B4, A1: motor mechanism power supply

BSCM: breaker status and control module

Indication Contacts

OF2/OF1: device ON/OFF indication contacts

OF4/OF3: device ON/OFF indication contacts (NSX400/630)

SDE: fault-trip indication contact (short-circuit, overload, ground fault, earth leakage)


SD: trip-indication contact

CAF2/CAF1: early-make contact (rotary handle only)

CAO1: early-break contact (rotary handle only)

ComPacT NSX100 to 630 DC - DC PV
Motor Mechanism

Motor Mechanism (MT) with Automatic Reset

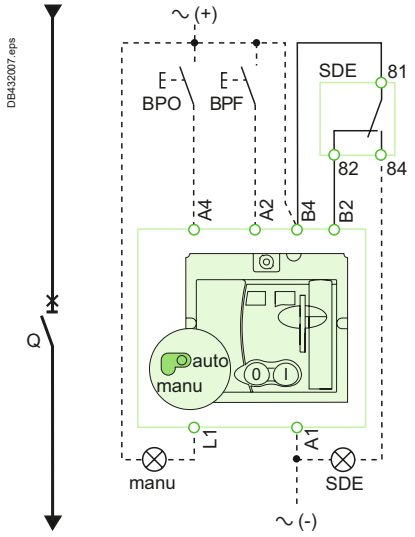


The diagram is shown with circuits
de-energized, all devices open, connected and charged and relays in normal position.


After tripping initiated by the “Push to trip” button or by the undervoltage (MN) release or the shunt (MX) release, device reset can be automatic, remote or manual.

Following tripping due to an electrical fault (with an SDE contact), reset must be carried out manually.

Motor Mechanism (MT) with Remote Reset

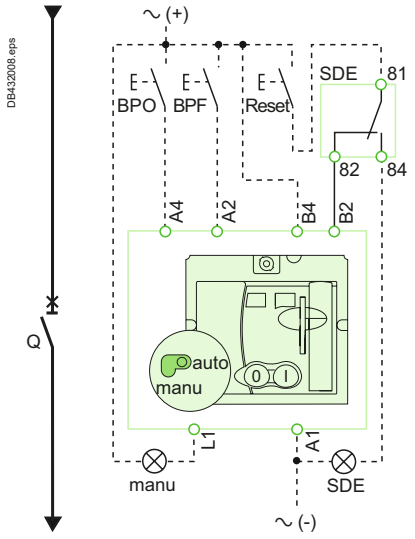


Motor Mechanism (MT) with Manual Reset

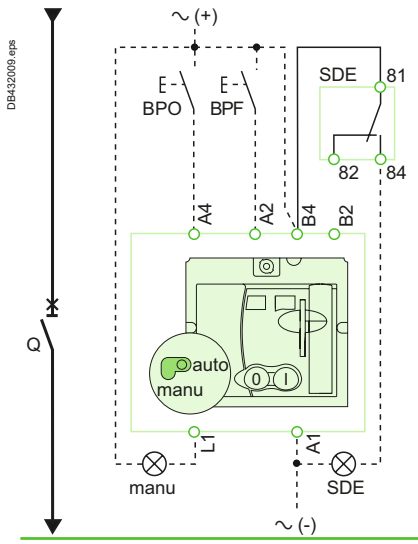


Symbols

Q:	circuit breaker
A4:	opening order
A2:	closing order
B4, A1:	motor mechanism power supply
L1:	manual position (manu)
B2:	SDE interlocking (mandatory for correct operation)
BPO:	opening pushbutton
BPF:	closing pushbutton
SDE:	fault-trip indication contact (short-circuit, overload, ground fault, earth leakage)

Communicating Motor Mechanism (MTc) [1]

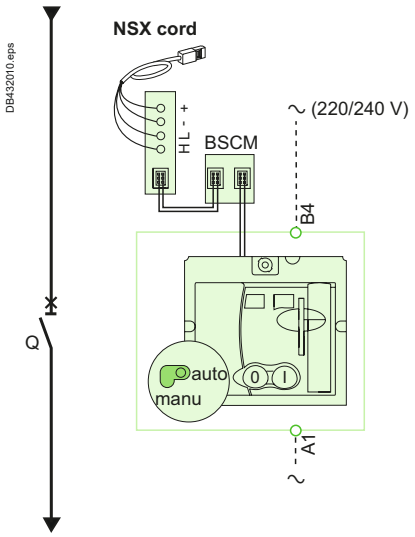


Schematic representation of the communicating motor mechanism (MT).

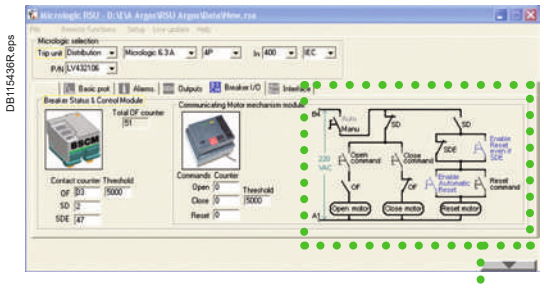

RSU utility setup screen for the communicating motor mechanism

RSU screen for the communicating motor mechanism (MTc)

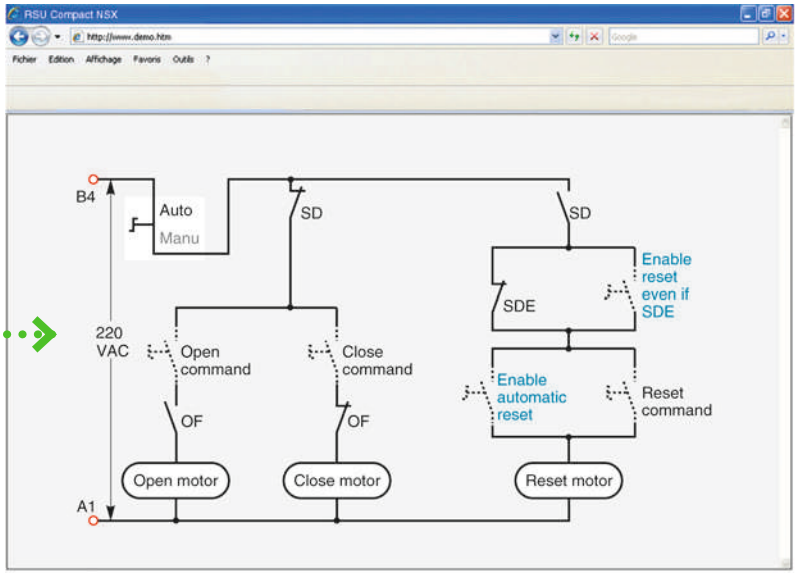

Single-line diagram of communicating motor mechanism
Opening, closing and reset orders are transmitted via the communication network. The "Enable automatic reset" and "Enable reset even if SDE" parameters must be set using the RSU software via the screen by clicking the blue text.

"**Auto/manu**" is a switch on the front of the motor mechanism.

Symbols


Q: circuit breaker
B4, A1: motor mechanism power supply
BSCM: breaker status and control module

Terminals shown in **O** must be connected by the customer.

[1] NSX100-250 only.

ComPacT NSX100 to 630 DC - DC PV - DC EP
Communication

Connection of Circuit Breakers to the Modbus Communication Network

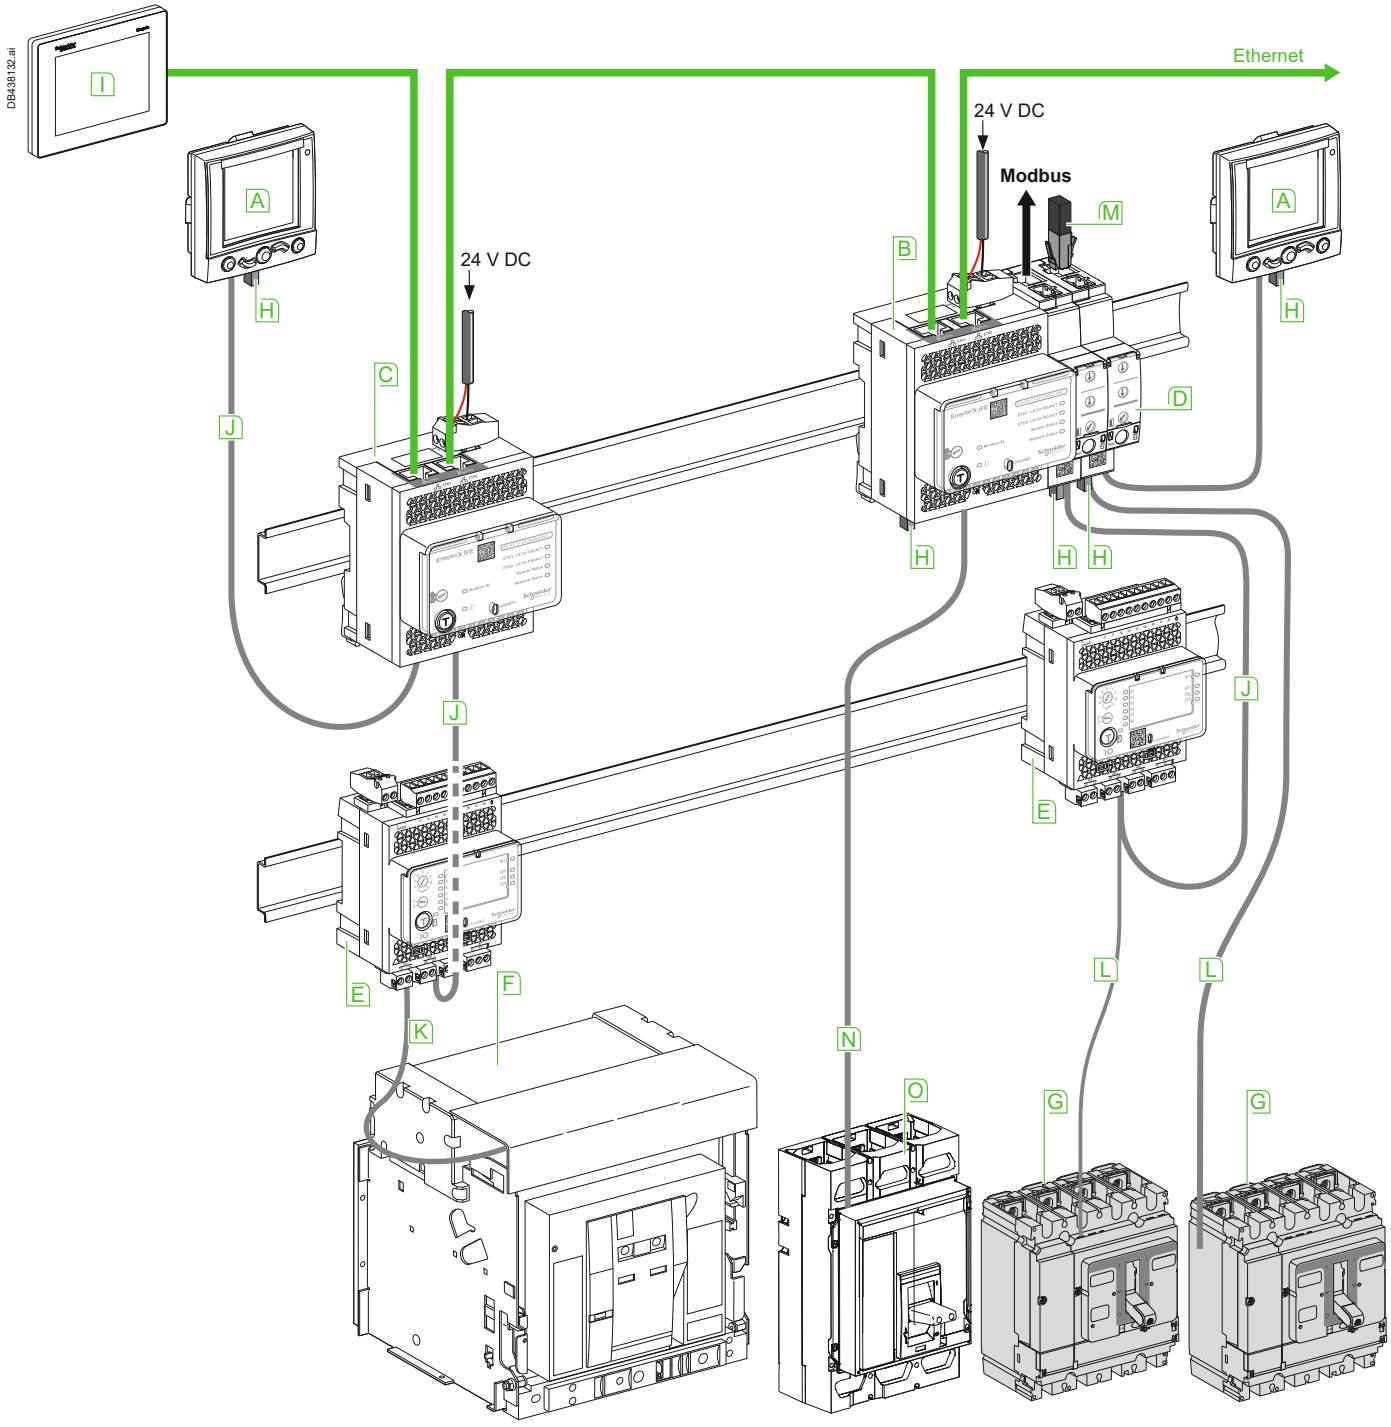

A FDM121 (TRV00121)	E I/O application module (LV434063)	I FDM128 (LV434128)
B IFE master (LV434002)	F MasterPact NW	M Modbus Termination [1] (VW3A8306RC)
C IFE (LV434001)	G ComPacT NSX	N ComPacT NS630b-3200
D IFM (LV434000)	H ULP termination (TRV00880)	


- J ULP cable
- K Breaker ULP cord
- L NSX cord
- Ethernet
- Modbus

[1] Modbus termination is mandatory, see ULP system user guide TRV99101.

ComPacT NSX100 to 630 DC - DC PV - DC EP

Communication

DB438133.ai

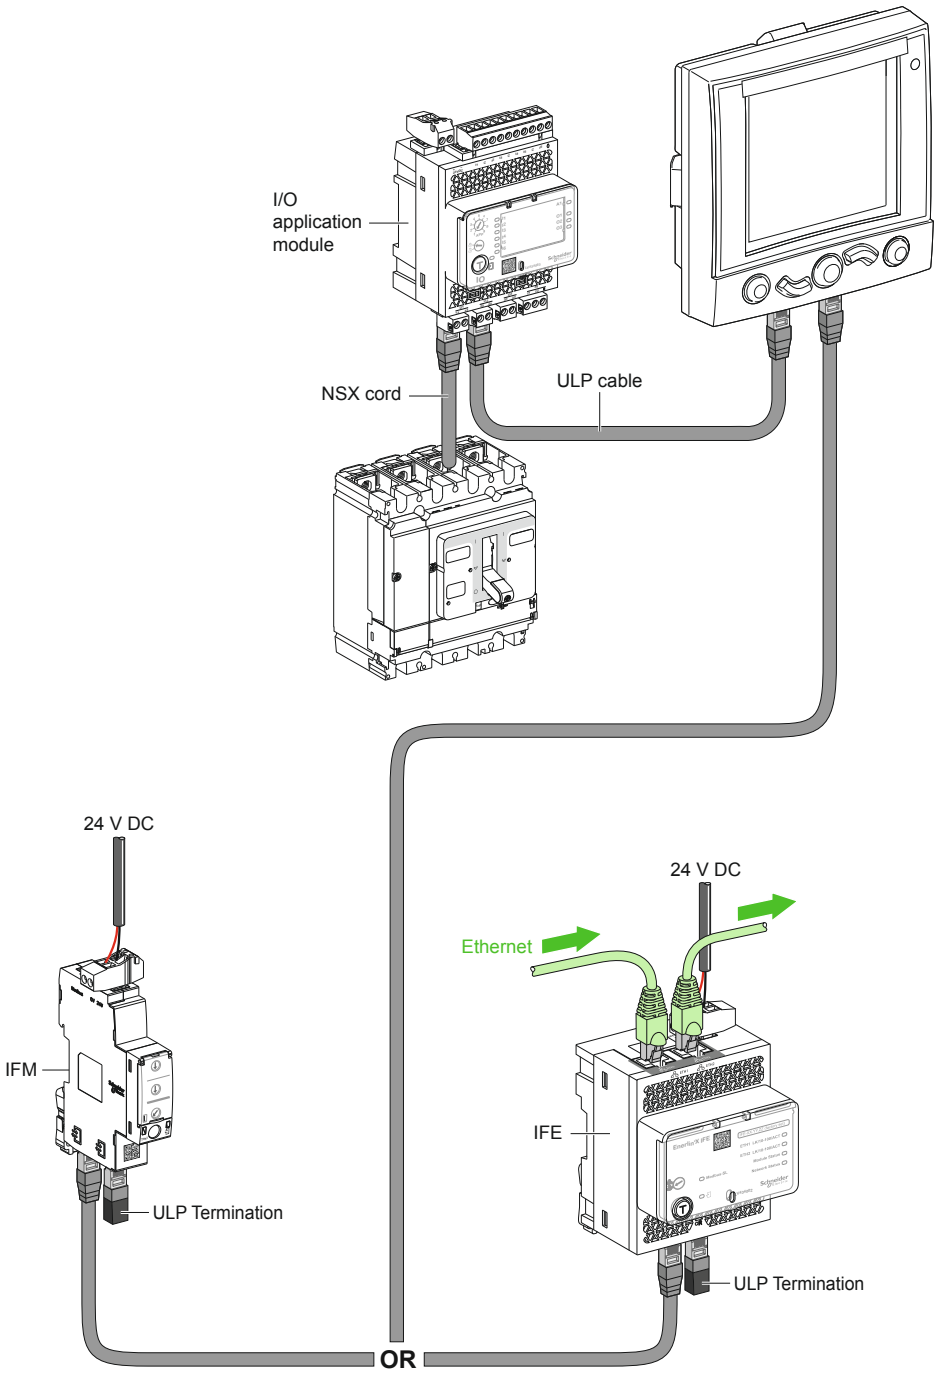


D

ComPacT NSX630b to NSX1600 DC PV
Fixed Switch-Disconnectors

The diagram is shown with circuits de-energized, all devices open, connected and charged and relays in the normal position.


Remote Operation

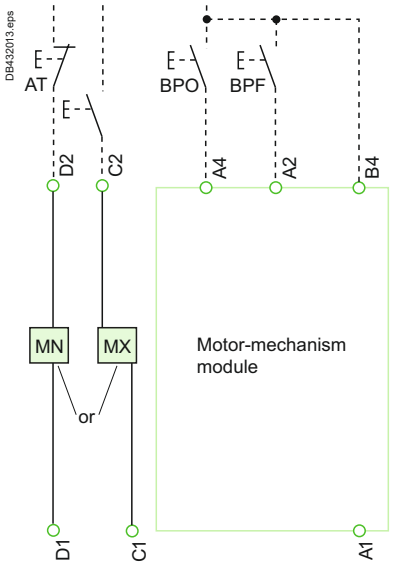

MN : undervoltage release
or
MX : shunt release

Motor-mechanism module [1]
A4 : electrical opening order
A2 : electrical closing order
B4, A1 : power supply for control devices and gear motor

[1] Spring-charging motor 440/480 V AC (380 V motor + additional resistor).

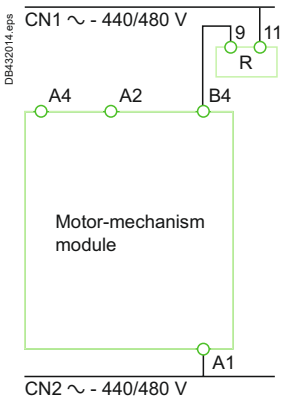


D

ComPacT NSX630b to NSX1600 DC PV
Fixed Switch-Disconnectors

Indication Contacts

OF3/OF2/OF1 : indication contacts

Terminal-Block Marking (Electrical Operation)

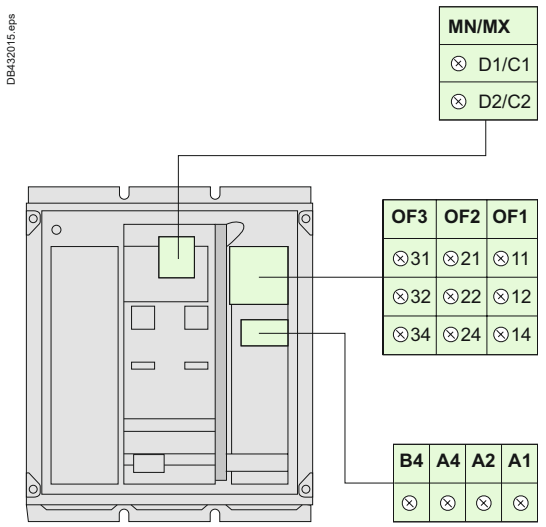


D


MasterPact NW10 to NW40 DC - DC PV
Fixed and Drawout Devices

Diagrams are shown with circuits de-energized,
all devices open, connected and charged and relays in the normal position.


Version C - DC

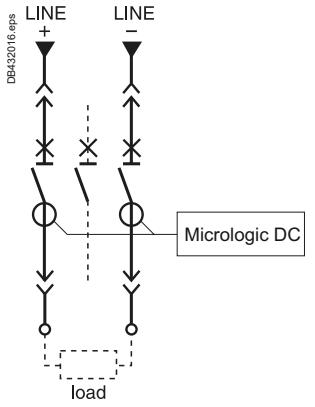


Version D - DC

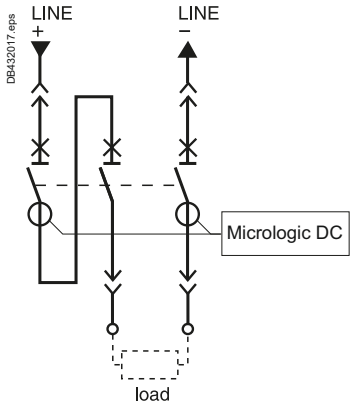


Remote Operation

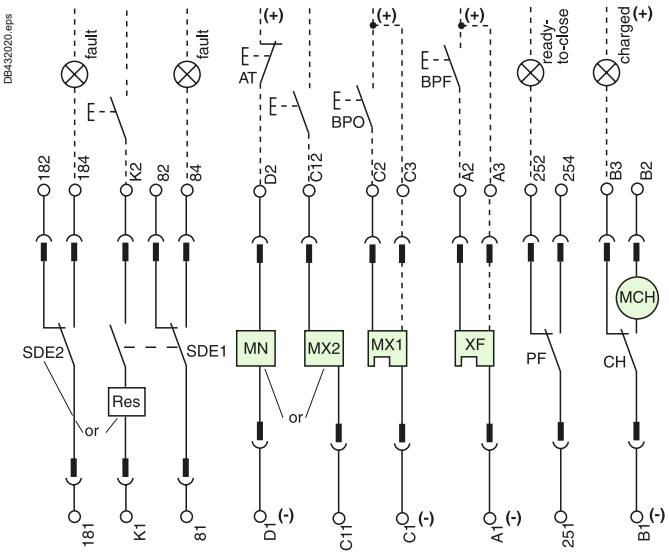

Version E - DC

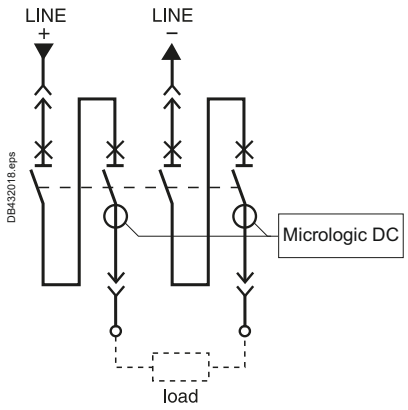

Version D - DC PV

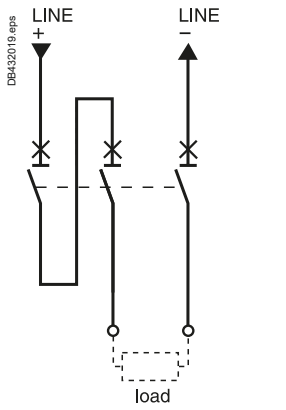

Control Unit

Terminal block marking

Com: E1-E6 communication

E5	E6
E3	E4
E1	E2

Remote Operation

SDE2 / Res	SDE1	MN / MX2	MX1	XF	PF	MCH
184 / K2	84	D2 / C12	C2	A2	254	B2
182	82		C3	A3	252	B3
181 / K1	81	D1 / C11	C1	A1	251	B1

SDE2: fault-trip indication contact
or
Res: remote reset

SDE1: fault-trip indication contact (supplied as standard)

MN: undervoltage release
or
MX2: shunt release

MX1: shunt release (standard or communicating)

XF: closing release (standard or communicating)


PF: ready-to-close contact

MCH: electric motor


Note: When communicating MX or XF releases are used, the third wire (C3,A3) must be connected even if the communication module is not installed.

MasterPact NW10 to NW40 DC - DC PV
Fixed and Drawout Devices

Indication Contacts

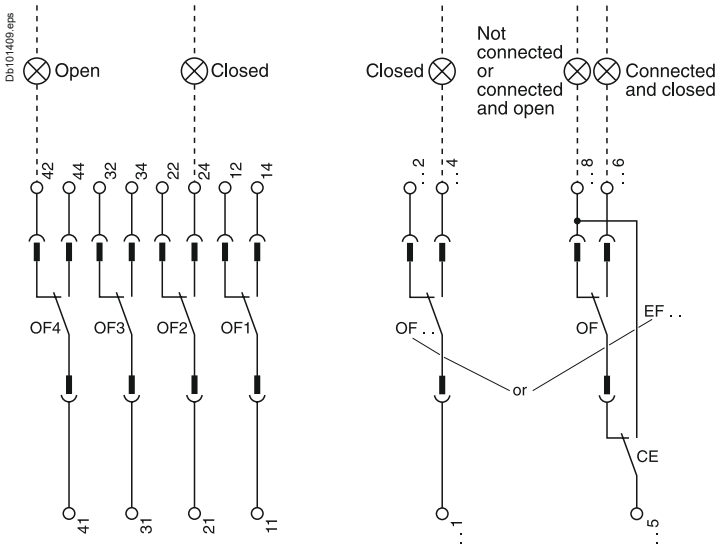

Chassis Contacts

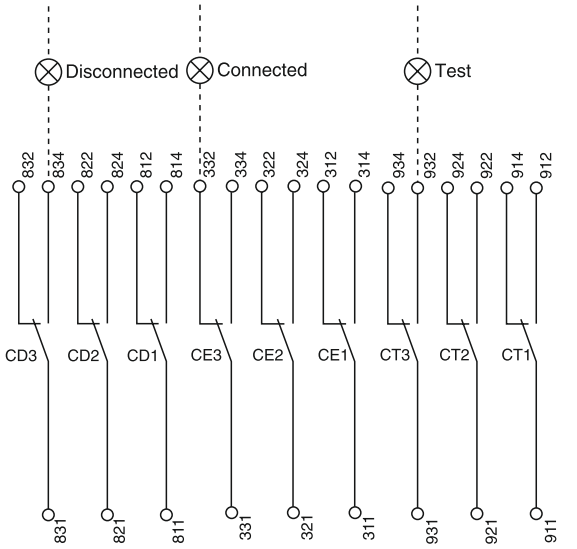

Indication Contacts

OF4	OF3	OF2	OF1
44	34	24	14
42	32	22	12
41	31	21	11

OF24	OF23	OF22	OF21	OF14	OF13	OF12	OF11
244	234	224	214	144	134	124	114
242	232	222	212	142	132	122	112
241	231	221	211	141	131	121	111

or

EF24	EF23	EF22	EF21	EF14	EF13	EF12	EF11
248	238	228	218	148	138	128	118
246	236	226	216	146	136	126	116
245	235	225	215	145	135	125	115

Chassis Contacts

CD3	CD2	CD1	CE3	CE2	CE1	CT3	CT2	CT1
834	824	814	334	324	314	934	924	914
832	822	812	332	322	312	932	922	912
831	821	811	331	321	311	931	921	911

or

CE6	CE5	CE4
364	354	344
362	352	342
361	351	341

or

CE9	CE8	CE7
394	384	374
392	382	372
391	381	371

Indication Contacts

OF4
OF3
OF2
OF1 — ON/OFF indication contacts

OF24 or EF24 — ON/OFF indication contacts Combined “connected-closed” indication contacts

OF22 or EF22

OF21 or EF21

OF14 or EF14

OF13 or EF13

OF12 or EF12

OF11 or EF11

Chassis Contacts

CD3
CD2
CD1 — Disconnected position contacts

CE3
CE2
CE1 — Connected position contacts

CT3
CT2
CT1 — Test position contacts

or

CE6
CE5
CE4 — Connected position contacts

or

CE9
CE8
CE7 — Connected position contacts

or

CD6
CD5
CD4 — Disconnected position contacts

Legend:

Drawout device only.


XXX SDE1, OF1, OF2, OF3, OF4 supplied as standard.

Interconnected connections (only one wire per connection point).

D

MasterPact NW DC - DC PV
Communication

Communication Achitecture

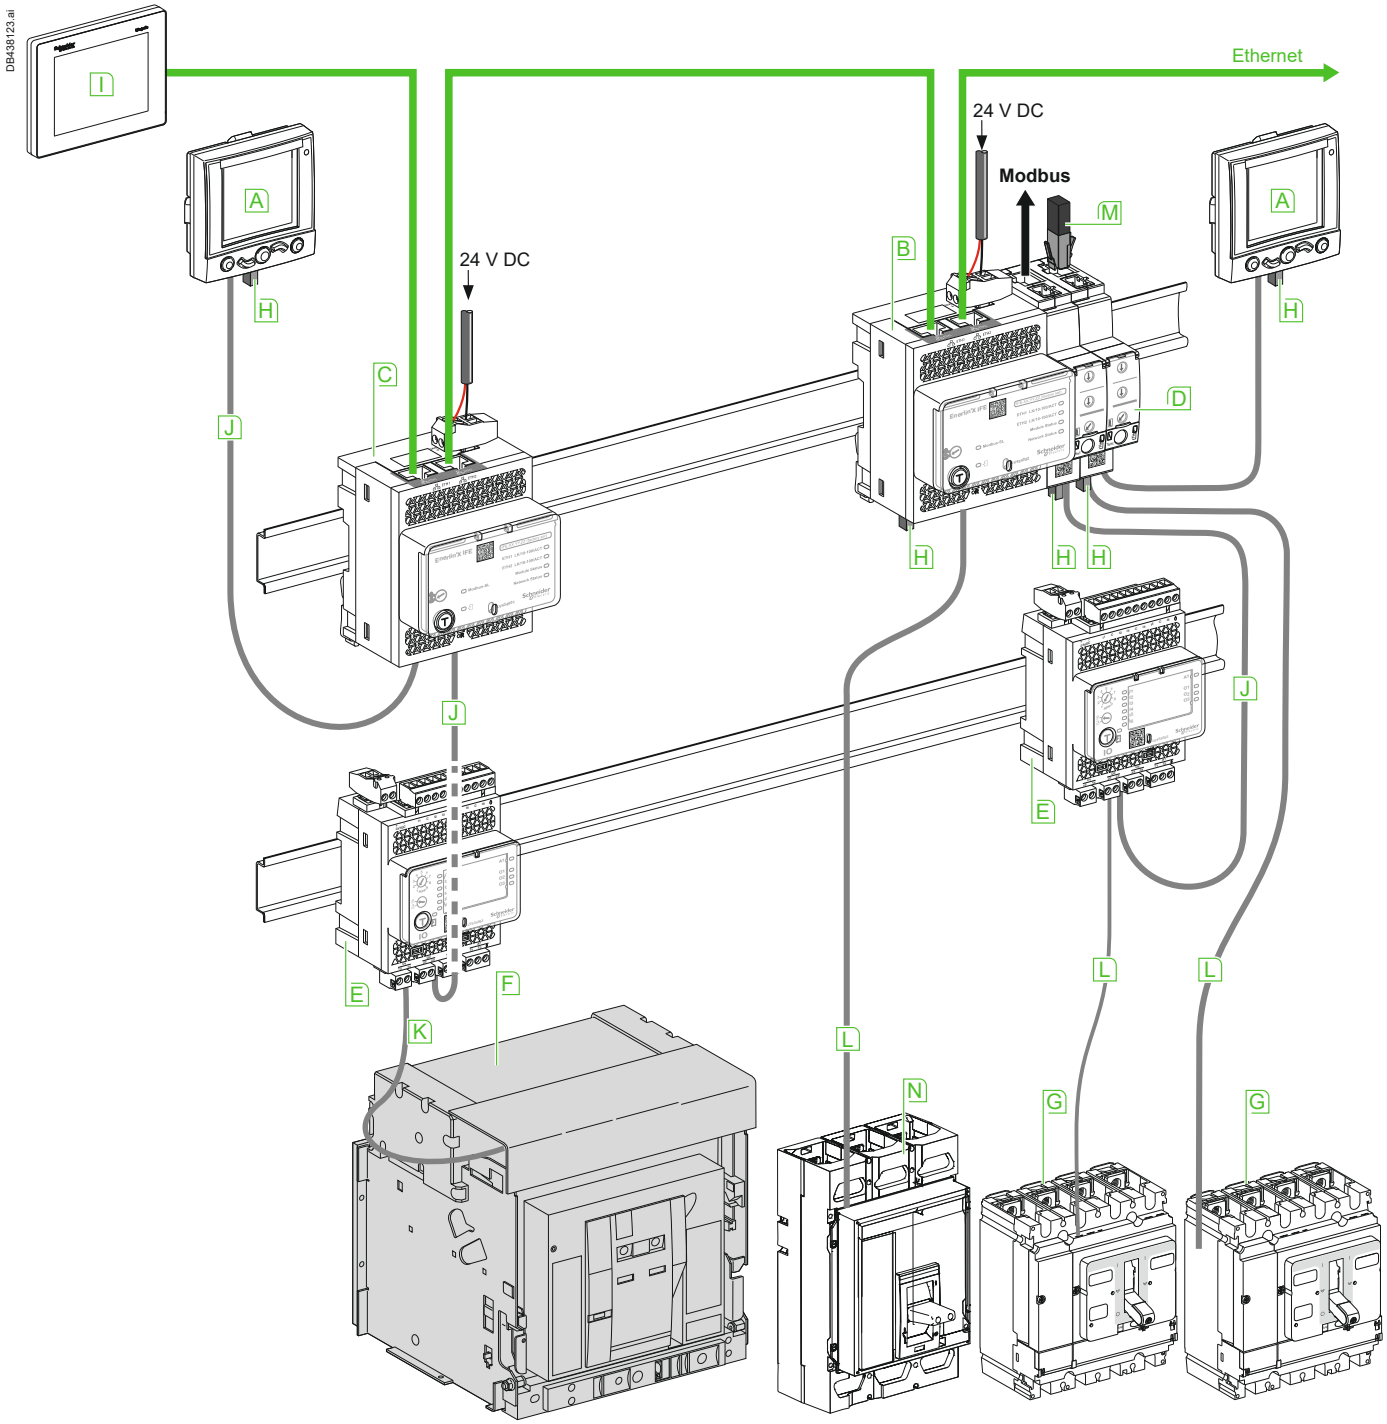

A FDM121 (TRV00121)
B IFE master (LV434002)
C IFE (LV434001)
D IFM (LV434000)
E I/O application module (LV434063)
F MasterPact NW
G ComPacT NSX
H ULP termination (TRV00880)
I FDM128 (LV434128)
M Modbus Termination [1] (VW3A8306RC)
N ComPacT NS630b-3200


J ULP cable
K Breaker ULP cord
L NSX cord
Ethernet
Modbus

[1] Modbus termination is mandatory, see ULP system user guide TRV99101.

Fixed, Electrically Operated MasterPact NW DC - DC PV


Connection to the Communication Interface Module

DB432548.eps

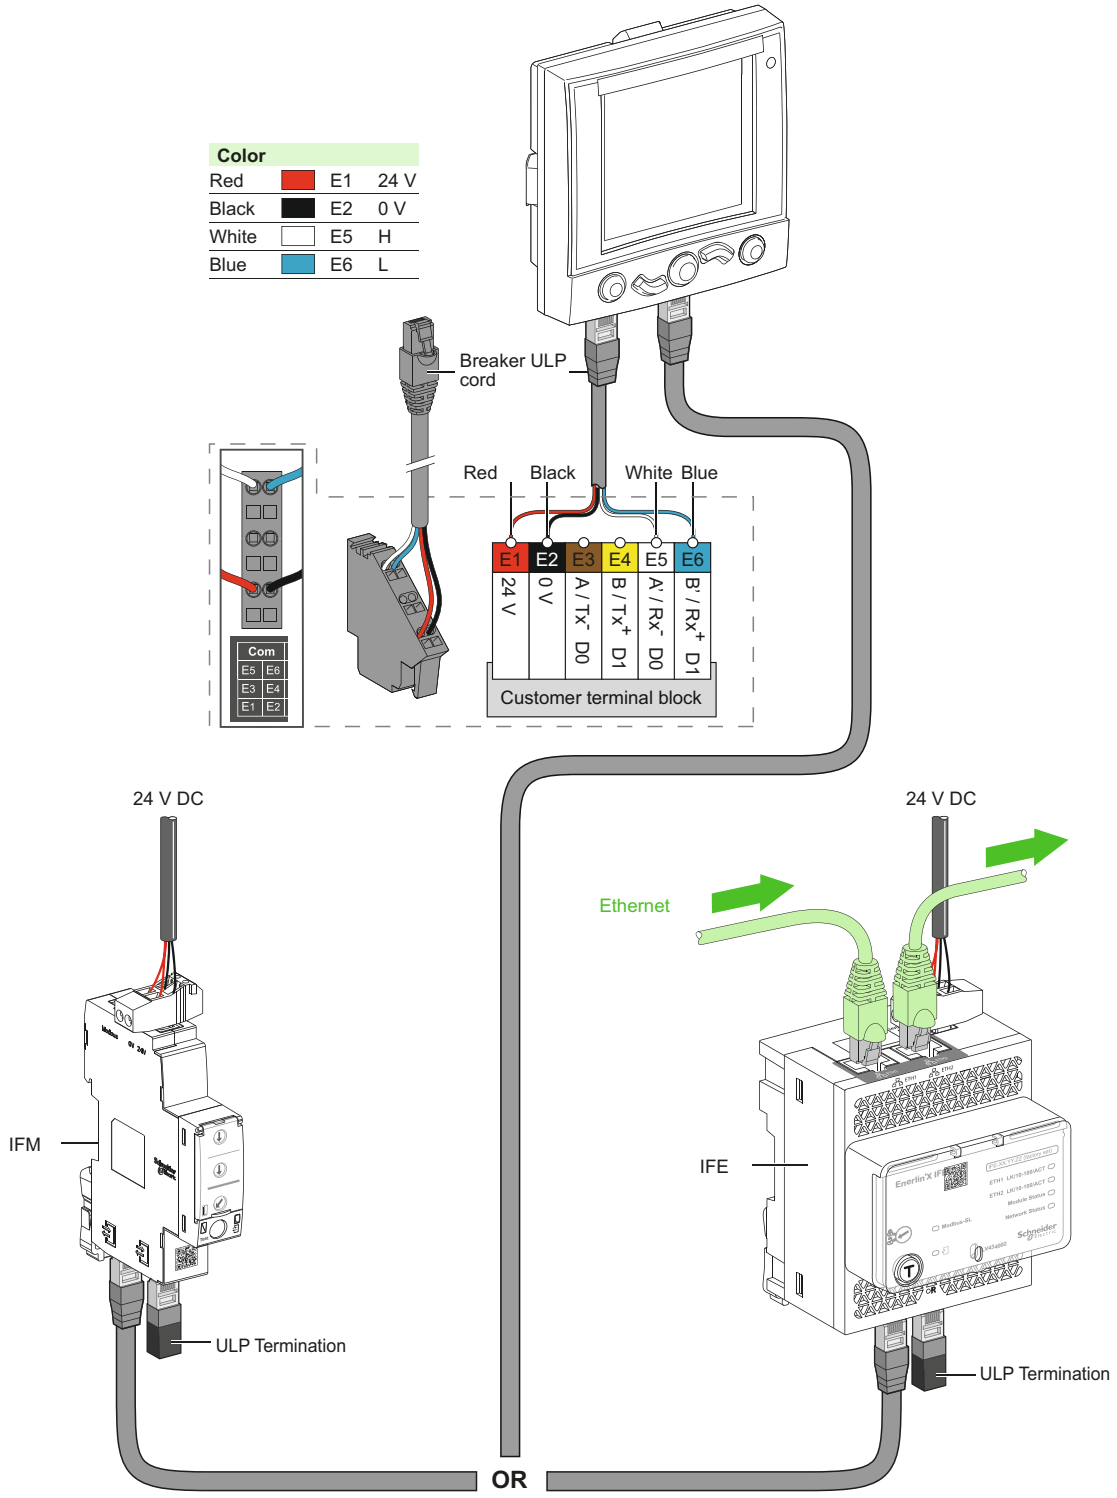

Withdrawable MasterPact NW DC - DC PV

Connection to the I/O and Communication Interface Module

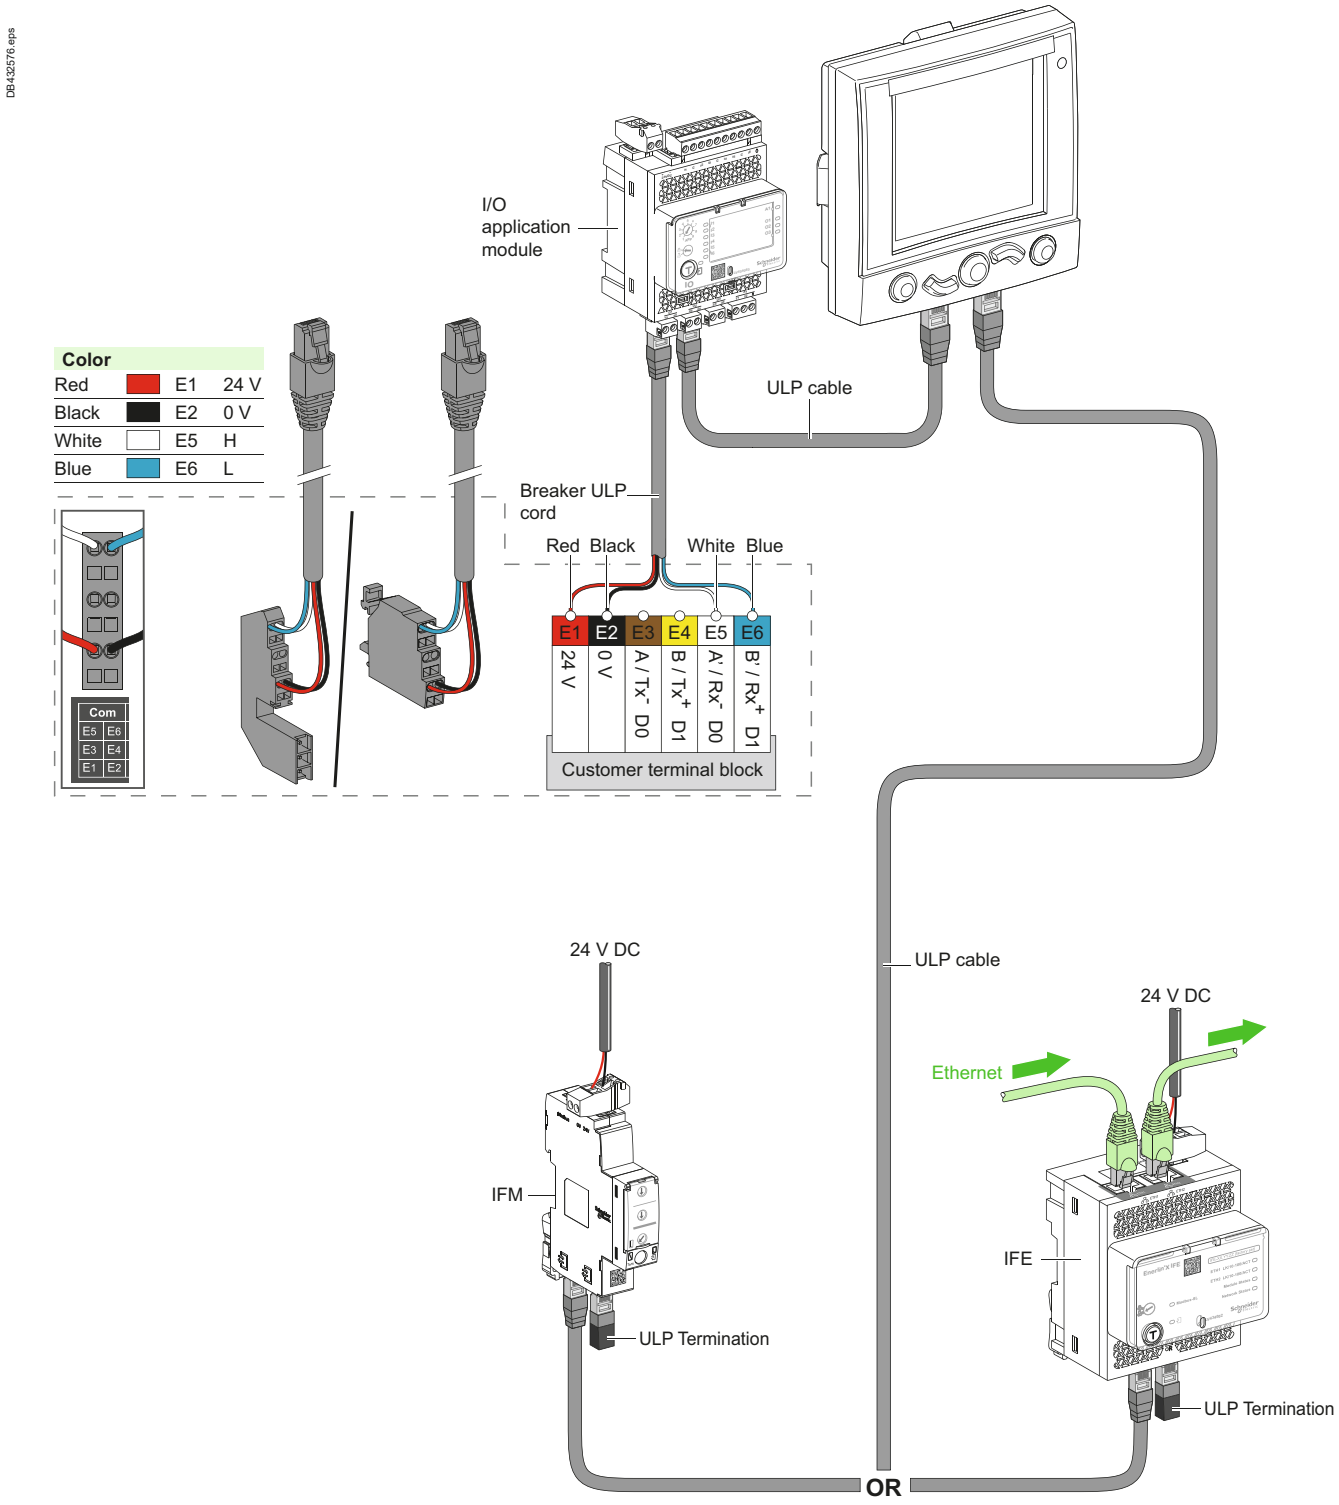

Additional Characteristics

ComPact NSX100 to 250 DC
TM-DC Magnetic Trip Units, Tripping Curves E-2
TMG Magnetic Trip Units, Tripping Curves E-5

ComPact NSX400 to 630 DC
TM-DC Trip Units, Tripping Curves E-8

ComPact NSX630 to 1200 DC
TM-DC Trip Units, Tripping Curves E-10

ComPacT NSX80 to 500 DC PV
TM-DC PV Magnetic Trip Units, Tripping Curves E-11

Current and Energy Limiting Curves
ComPact NSX DC E-14
ComPacT NSX DC EP E-16

MasterPact NW10 to NW40 DC
Tripping Curves U = 500 V DC, L/R = 5 Ms E-18
Tripping Curves U = 750/900 V DC, L/R = 5 Ms E-19
Tripping Curves U = 500 V DC, L/R = 15 Ms E-20
Tripping Curves U = 750/900 V DC, L/R = 15 Ms E-21
Tripping Curves U = 500/750 V DC, L/R = 30 Ms E-22
Tripping Curves U = 900 V DC, L/R = 30 Ms E-23


E

Other Chapters
Presentation 2
Functions and Characteristics A-1
Installation Recommendations B-1
Dimensions and Connection C-1
Electrical Diagrams D-1
Catalog Numbers and Order Form F-1


ComPact NSX100 to 250 DC

TM-DC Magnetic Trip Units, Tripping Curves

TM-DC 16

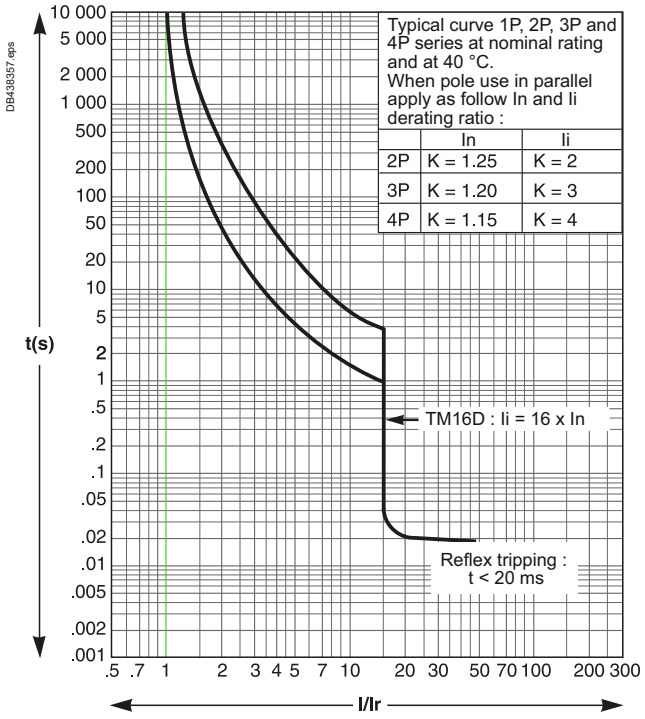


TM-DC 25

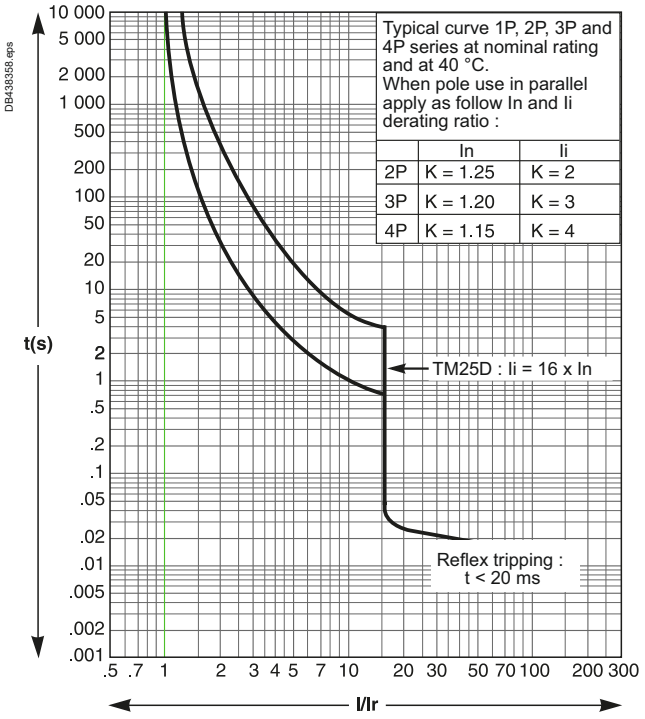


Reflex tripping.

E

TM-DC 30/TM-DC 32

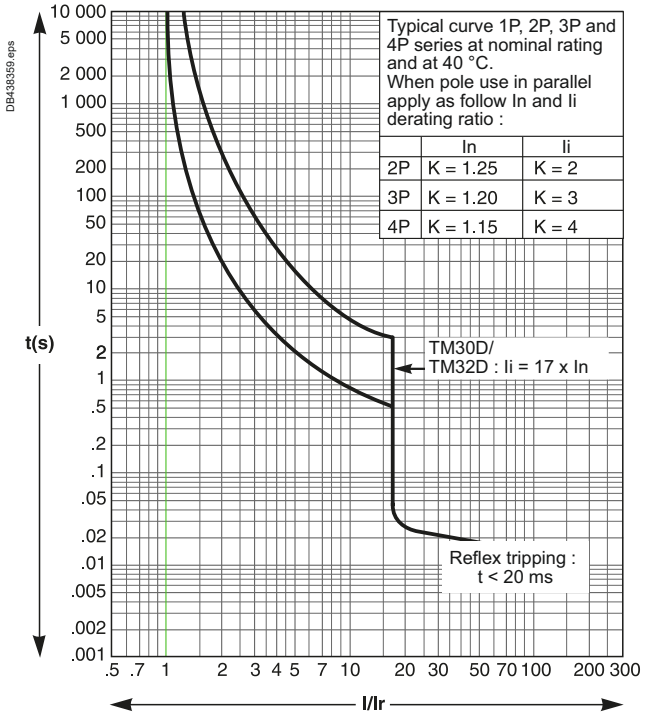

TM-DC 40

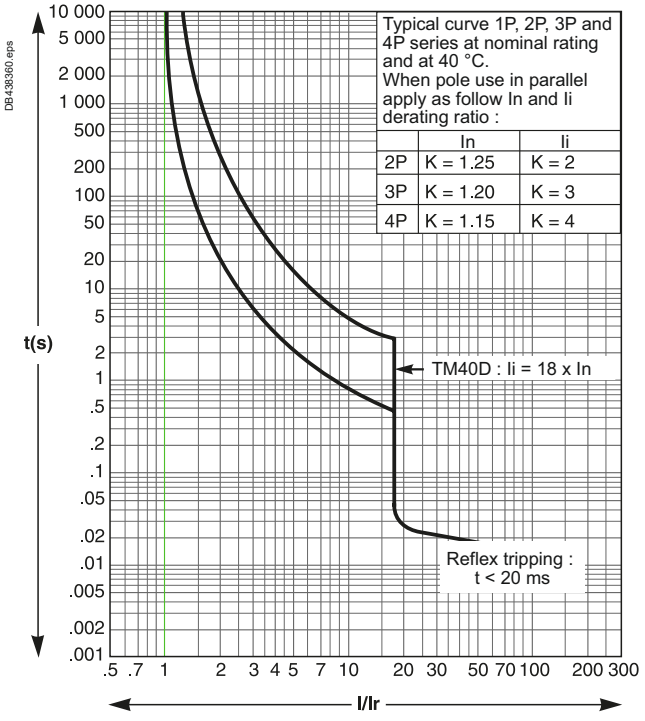


Reflex tripping.


ComPact NSX100 to 250 DC

TM-DC Magnetic Trip Units, Tripping Curves


TM-DC 50

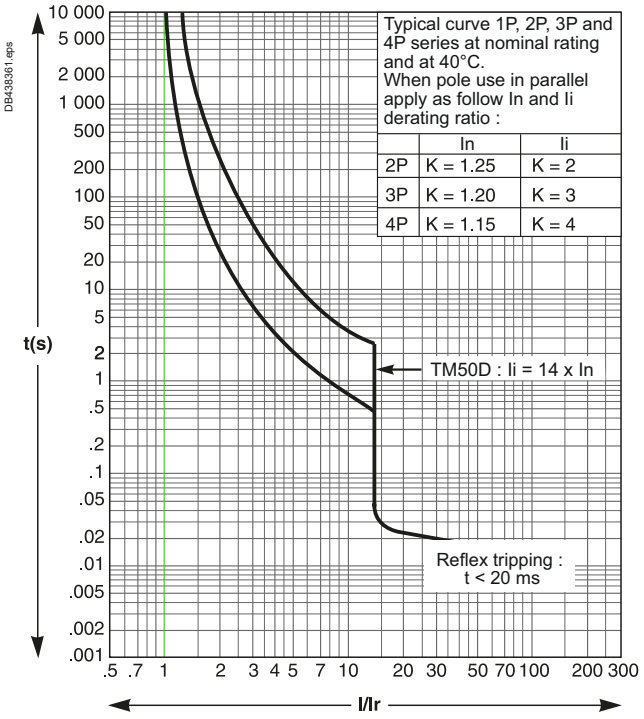


TM-DC 63

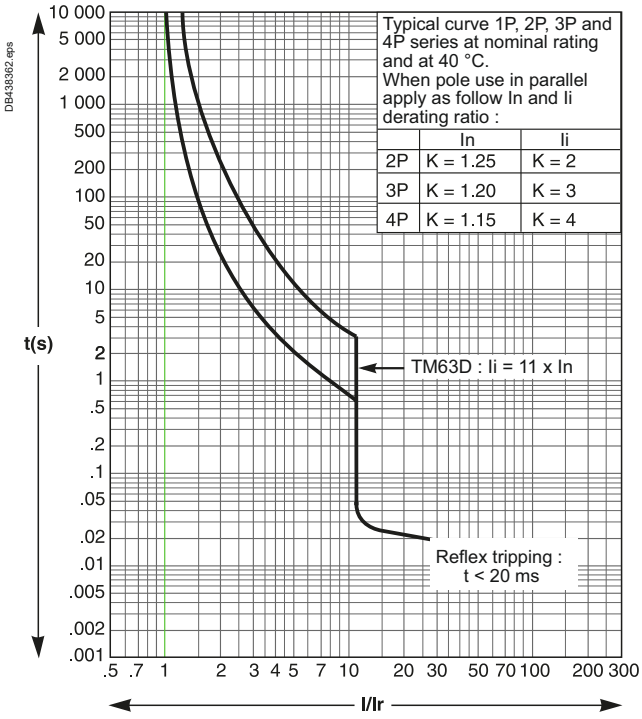

TM-DC 80

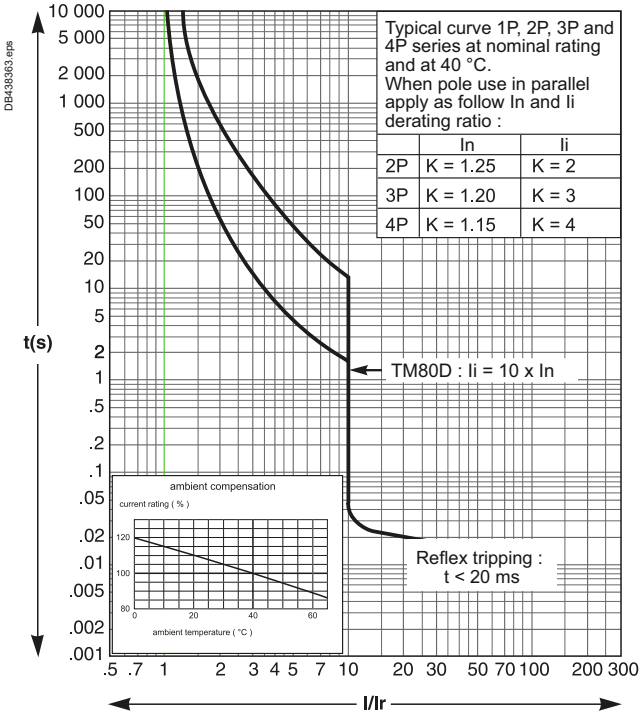

TM-DC 100

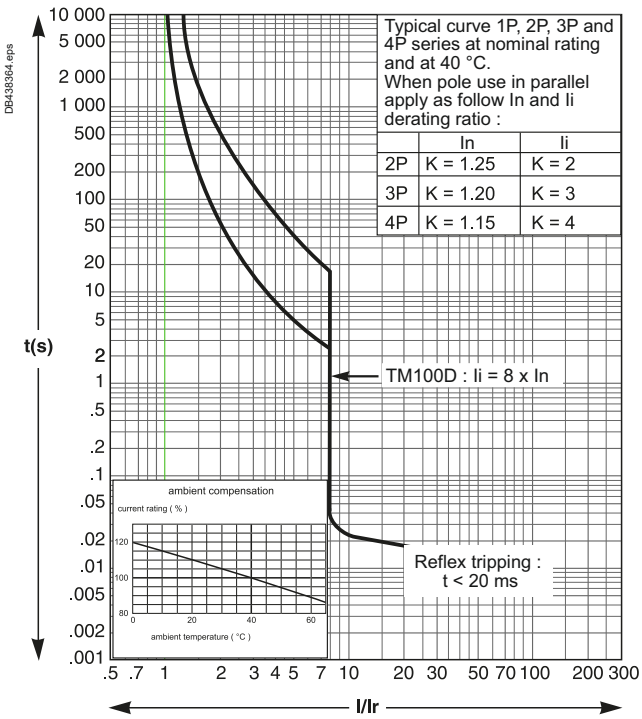


E


ComPact NSX100 to 250 DC

TM-DC Magnetic Trip Units, Tripping Curves

TM-DC 125

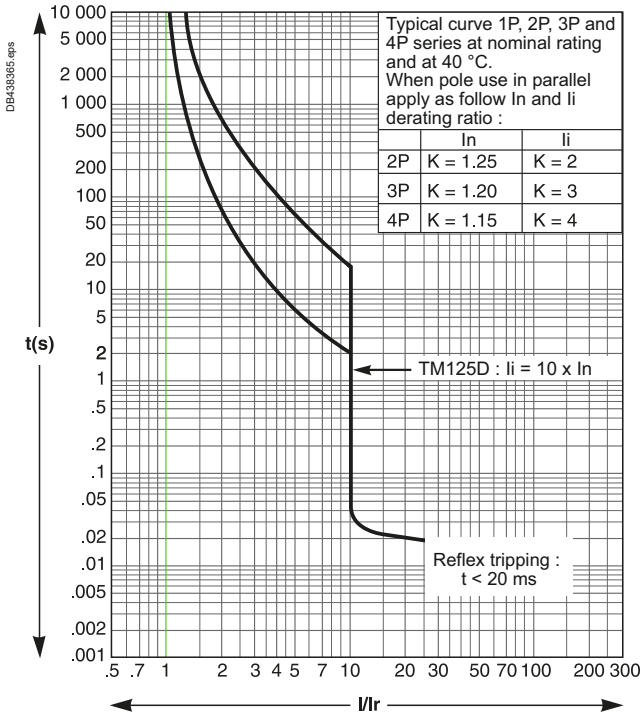


TM-DC 160

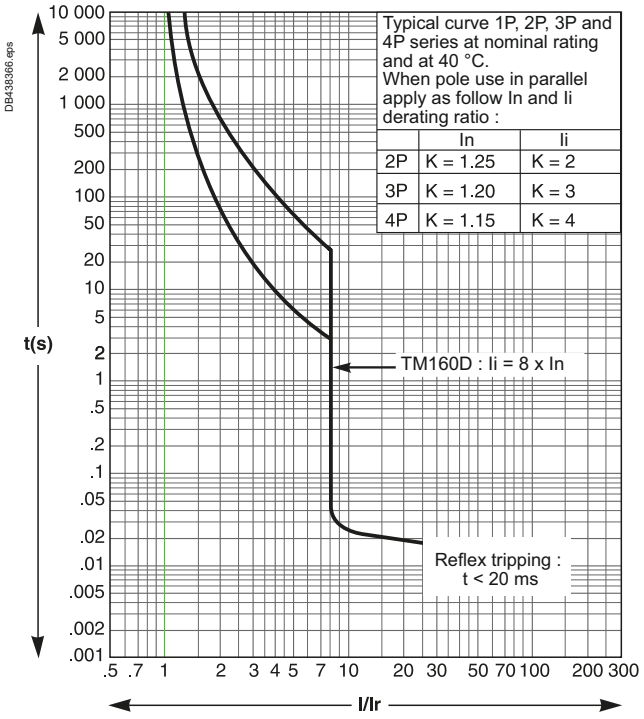


E

TM-DC 200

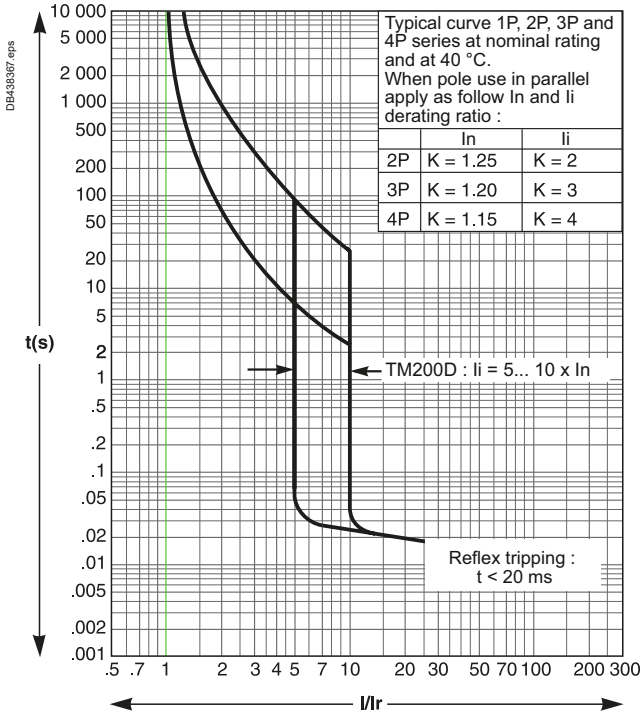


TM-DC 250

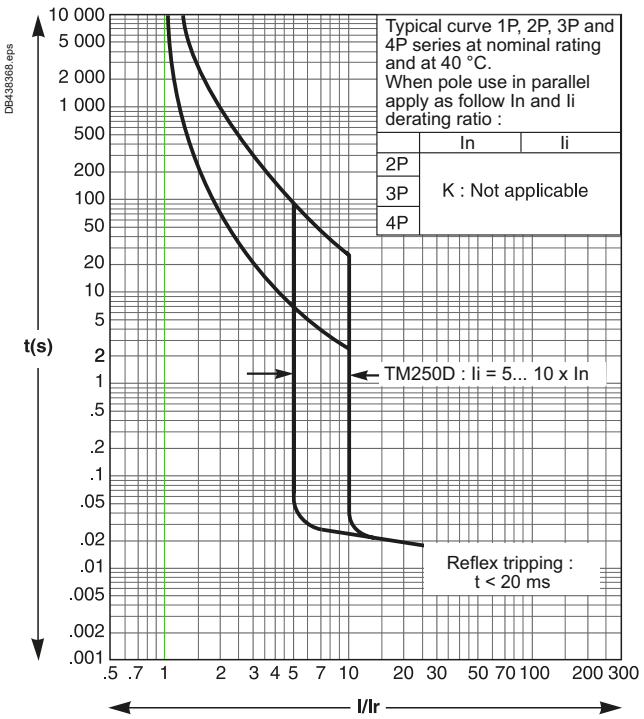


ComPact NSX100 to 250 DC

TMG Magnetic Trip Units, Tripping Curves


TM16G

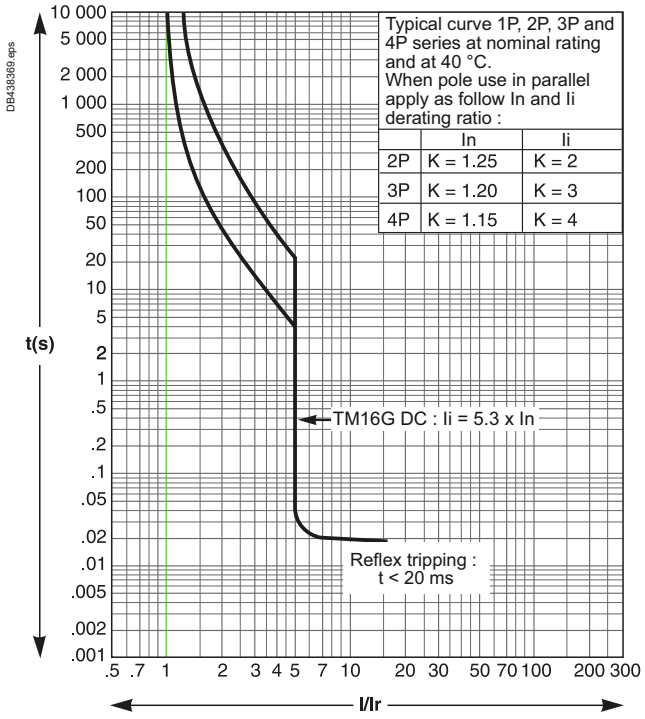


TM25G

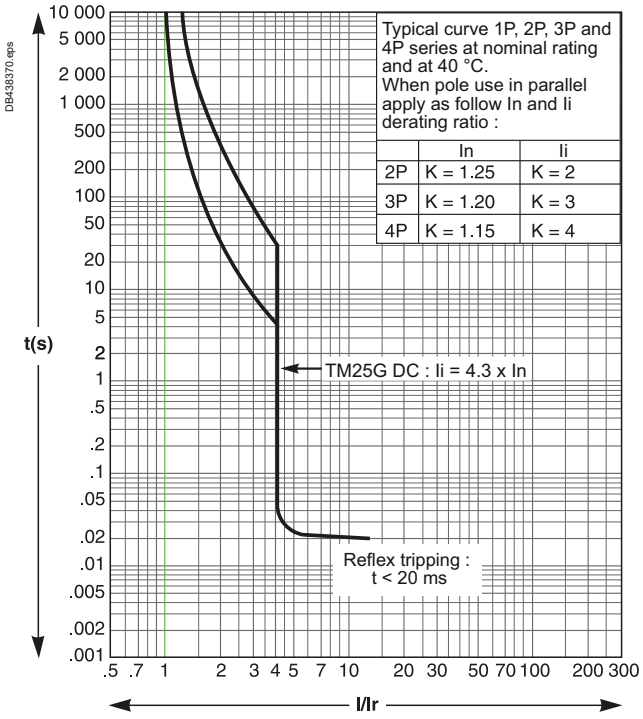

TM40G

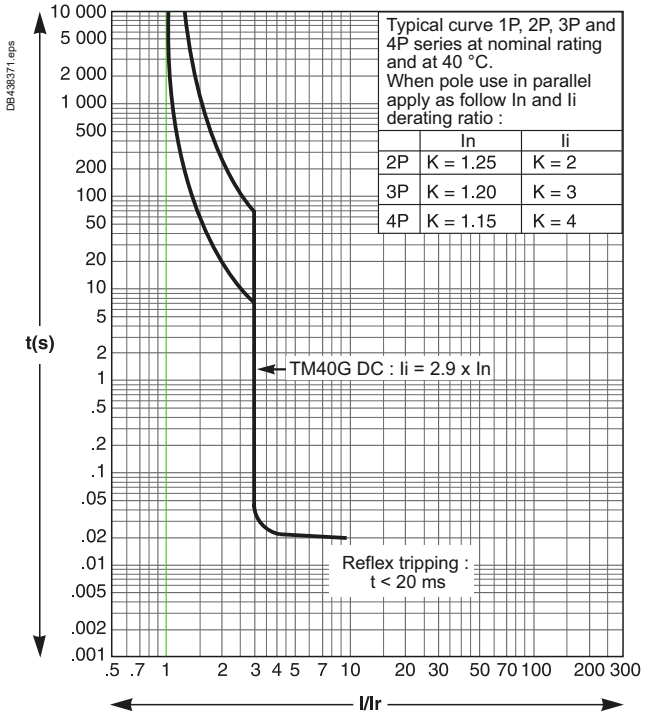


TM63G

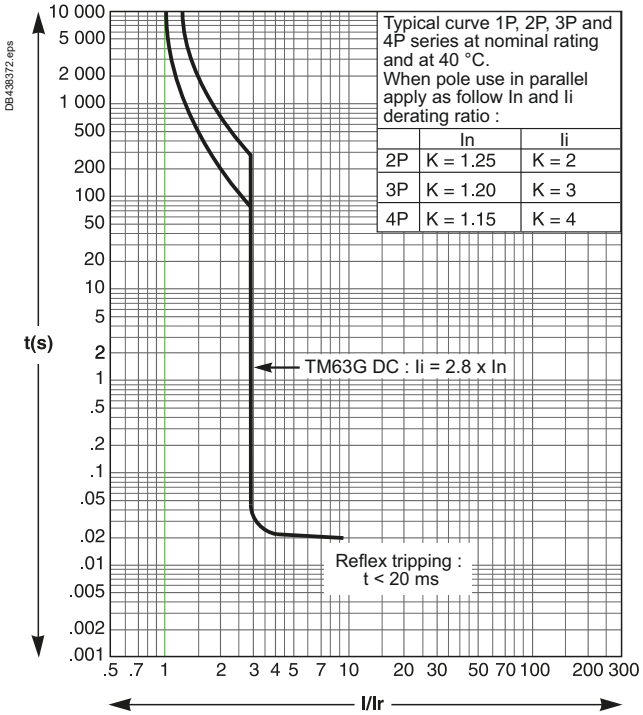


E

ComPact NSX100 to 250 DC
TMG Magnetic Trip Units, Tripping Curves


TM80G

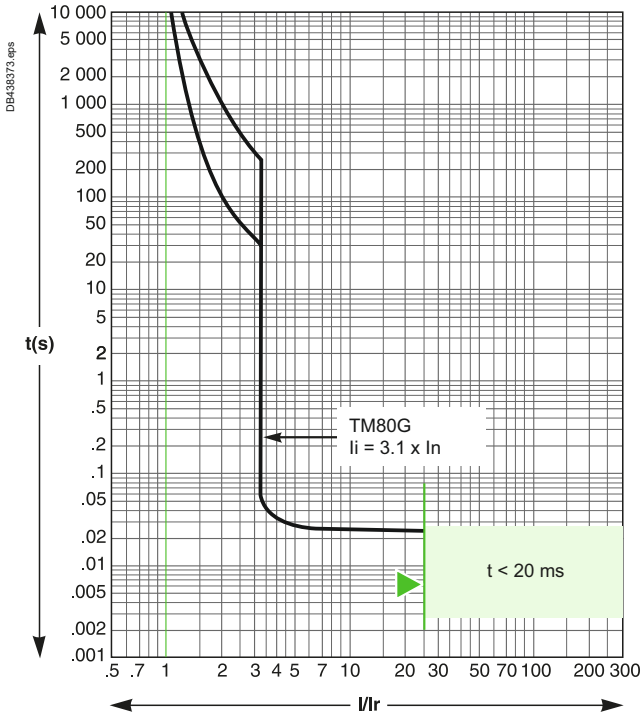


TM100G

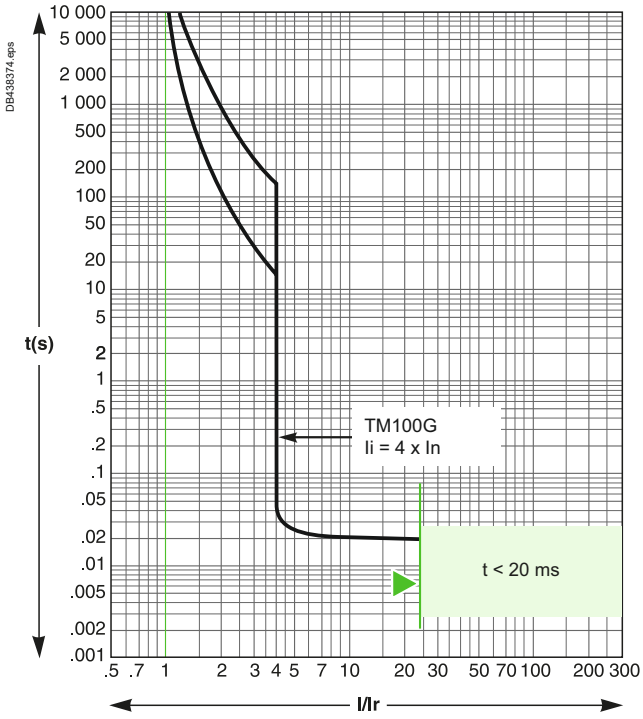

TM125G

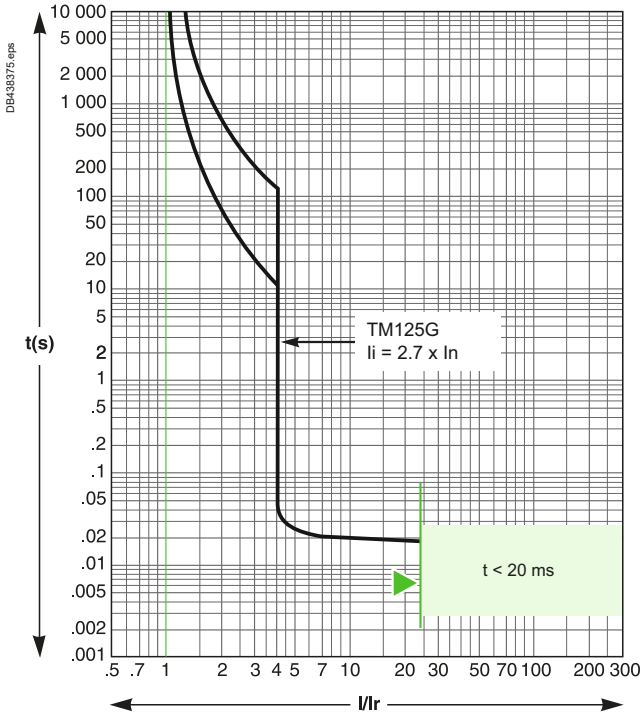


TM160G

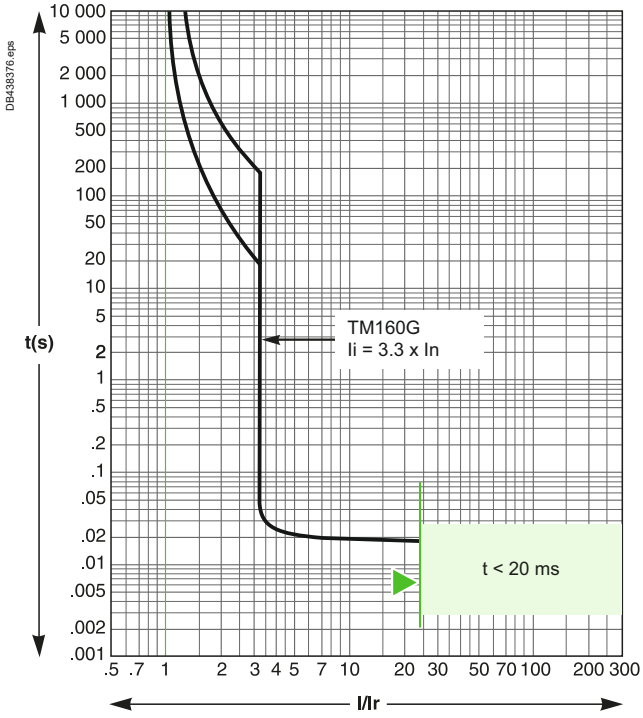


ComPact NSX100 to 250 DC

TMG Magnetic Trip Units, Tripping Curves

TM200G

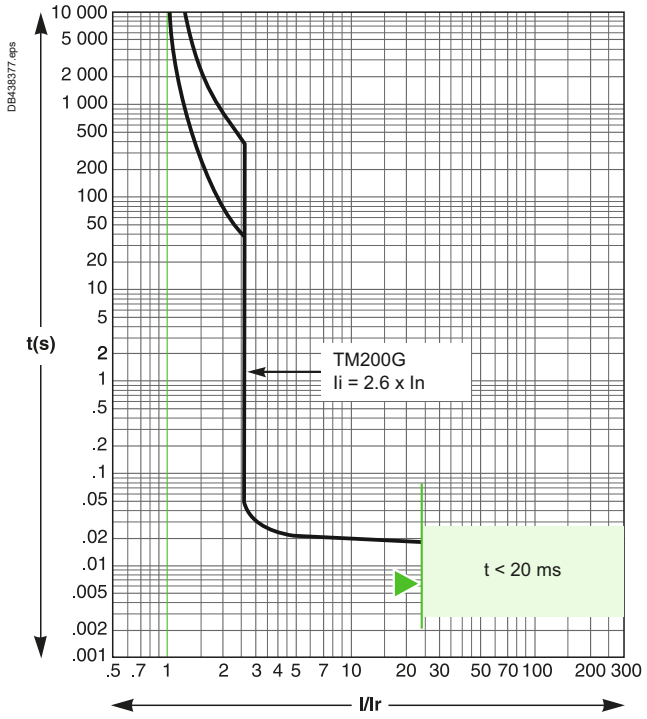


TM250G

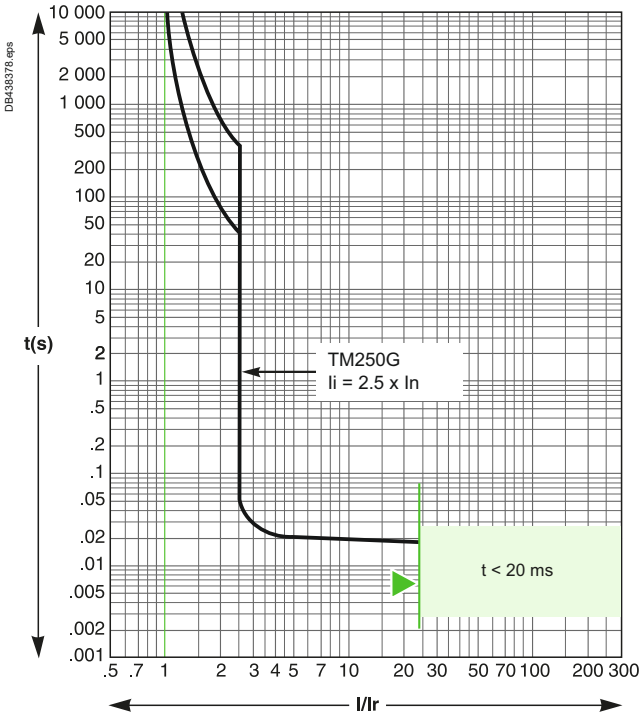


E

ComPact NSX400 to 630 DC
TM-DC Trip Units, Tripping Curves


TM-DC 250

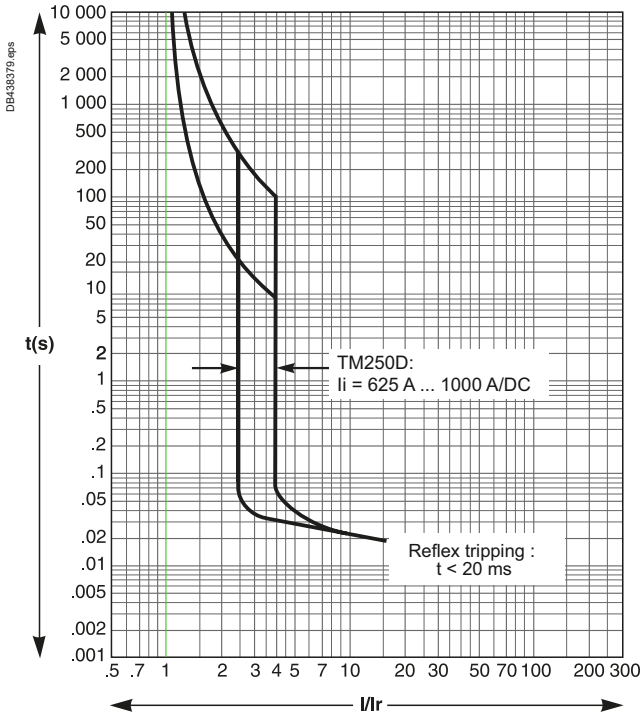


TM-DC 320

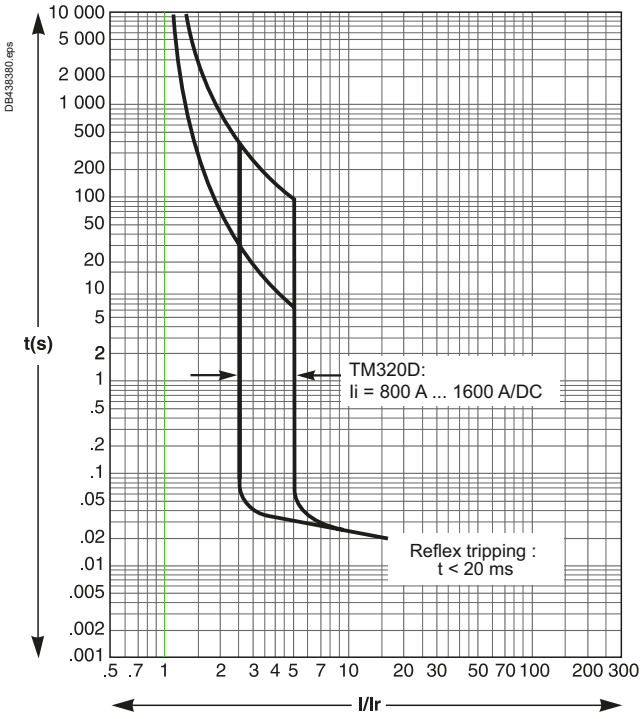


TM-DC 400

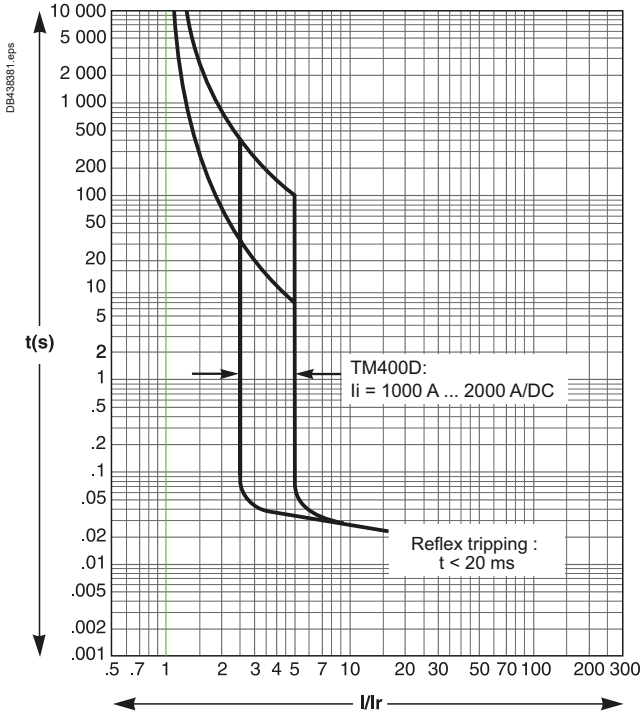

TM-DC 500

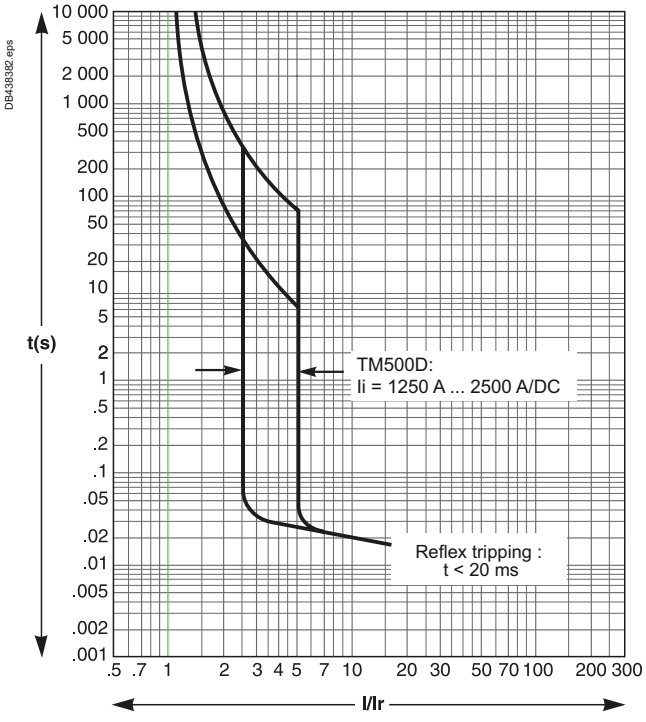


TM-DC 600

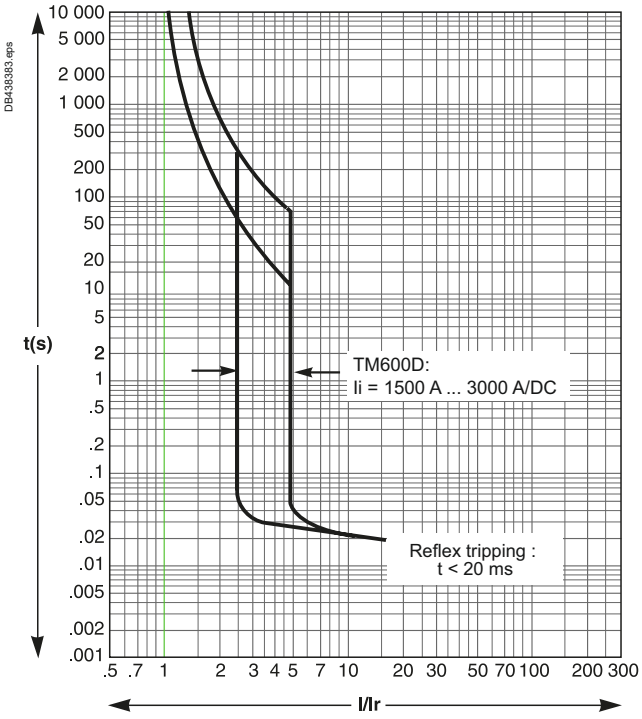

DB438383.eps
10 000
5 000
2 000
1 000
500
200
100
50
20
10
5
2
1
.5
.2
.1
.05
.02
.01
.005
.002
.001
t(s)
.5 .7 1 2 3 4 5 7 10 20 30 50 70 100 200 300
I/Ir
TM600D:
Ii = 1500 A ... 3000 A/DC
Reflex tripping :
t < 20 ms

ComPact NSX630 to 1200 DC
TM-DC Trip Units, Tripping Curves


TM-DC 630

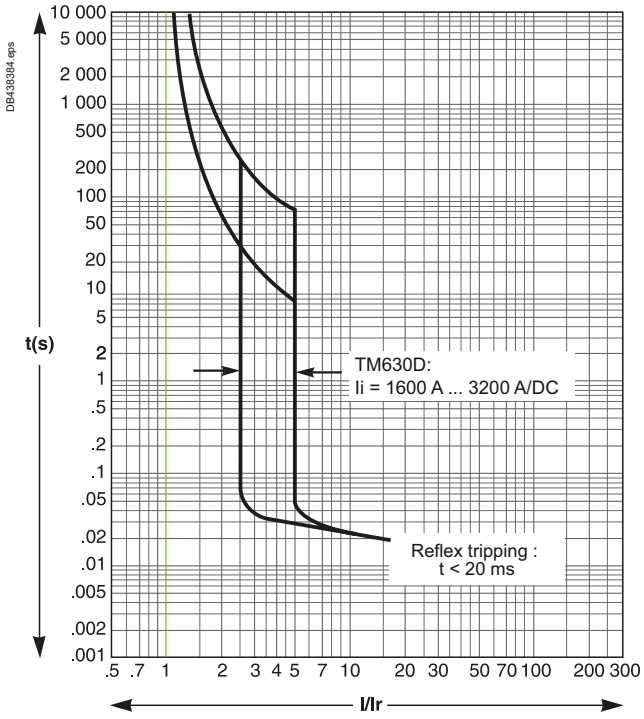


TM-DC 800

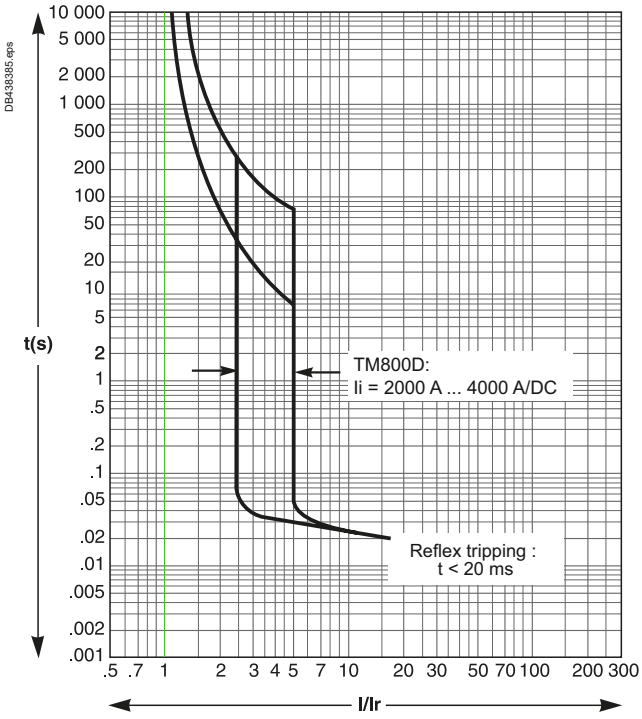

TM-DC 1000

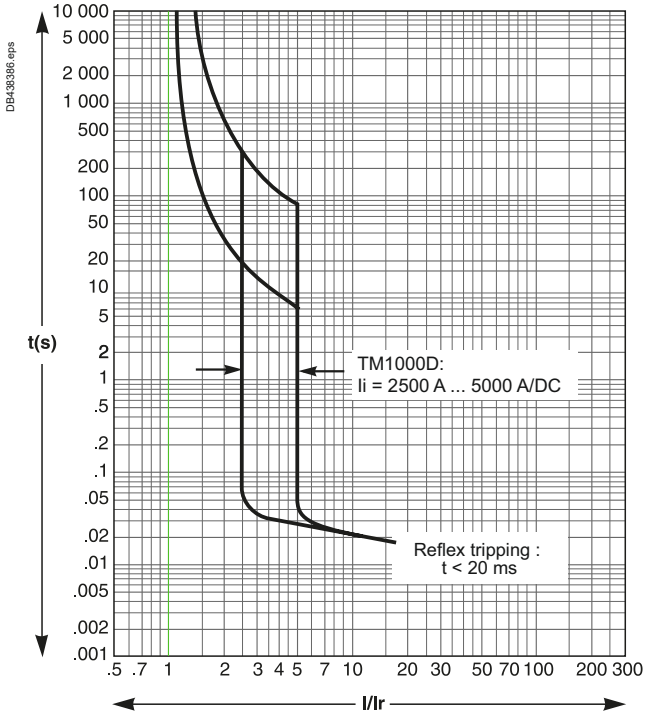

TM-DC 1200

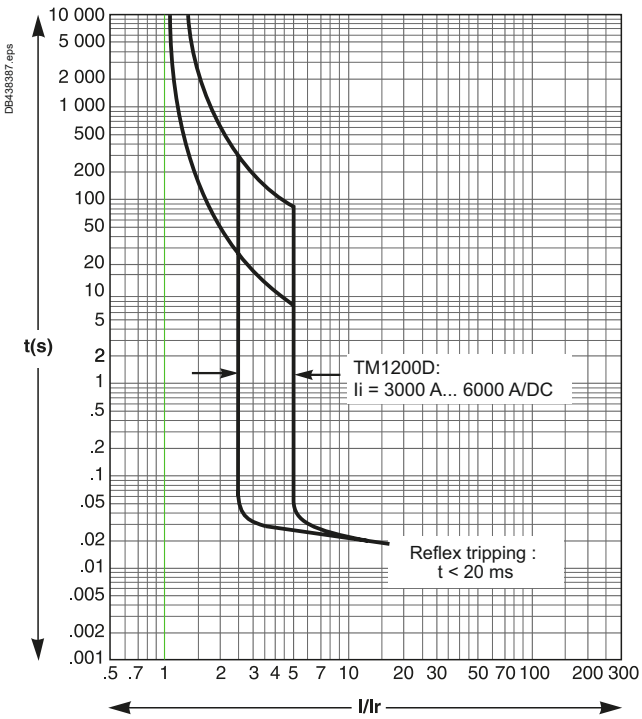


E


ComPacT NSX80 to 500 DC PV

TM-DC PV Magnetic Trip Units, Tripping Curves


TM-DC PV 80

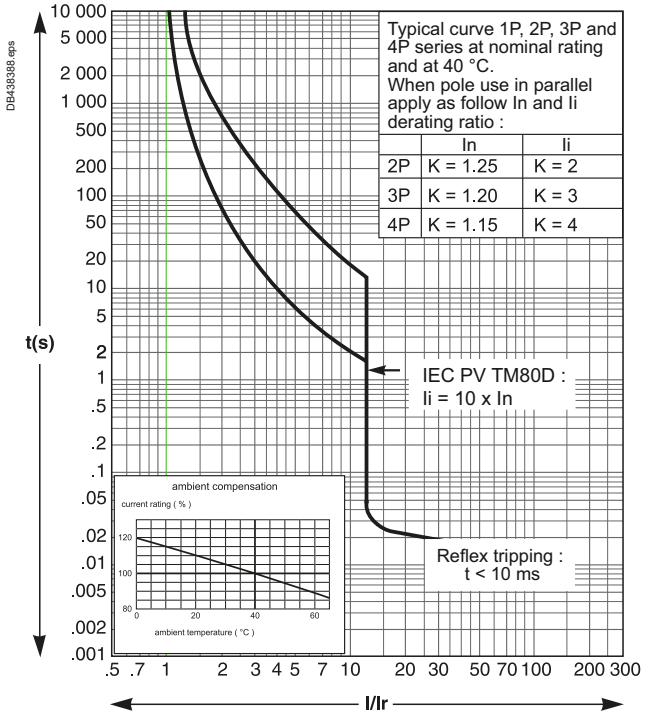


TM-DC PV 125

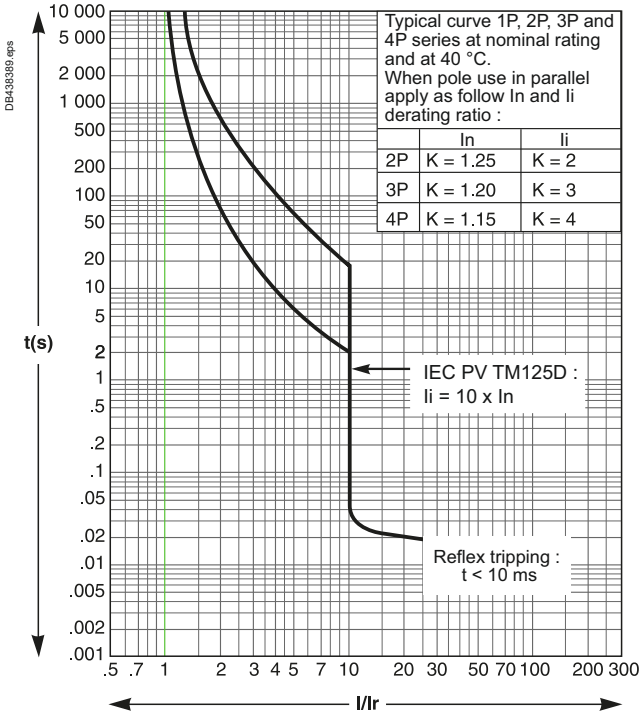

TM-DC PV 160

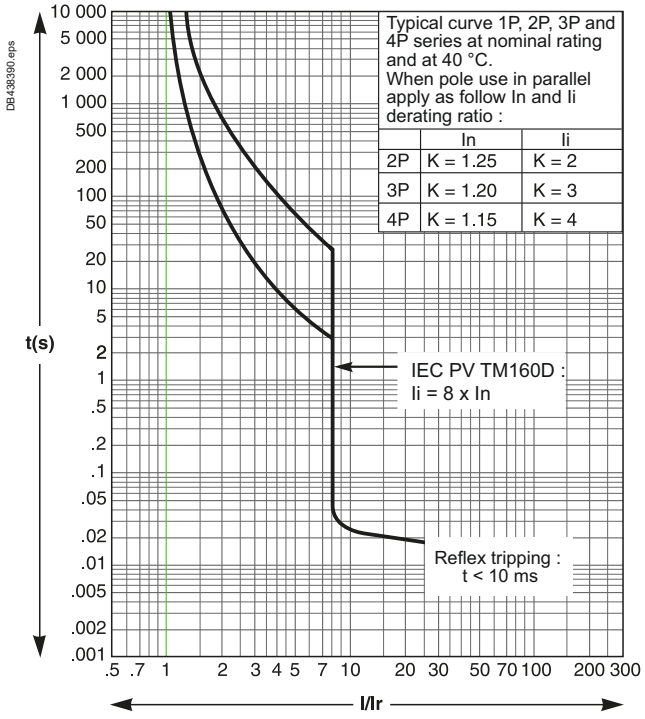

TM-DC PV 200

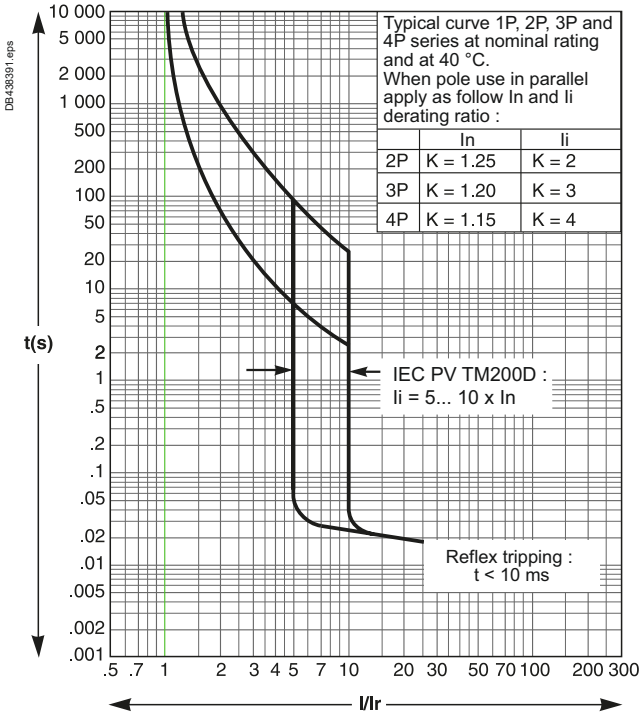


E


ComPacT NSX80 to 500 DC PV

TM-DC PV Magnetic Trip Units, Tripping Curves


TM-DC PV 250

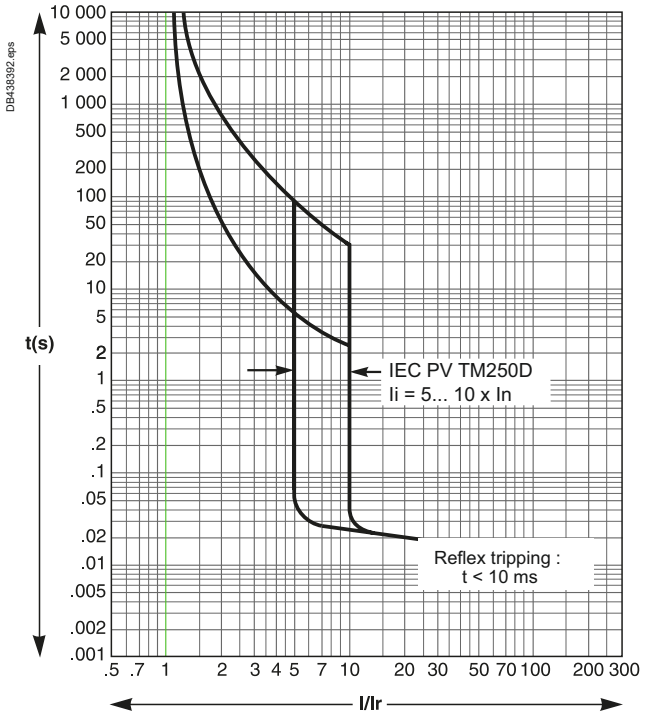

TM-DC PV 320/400

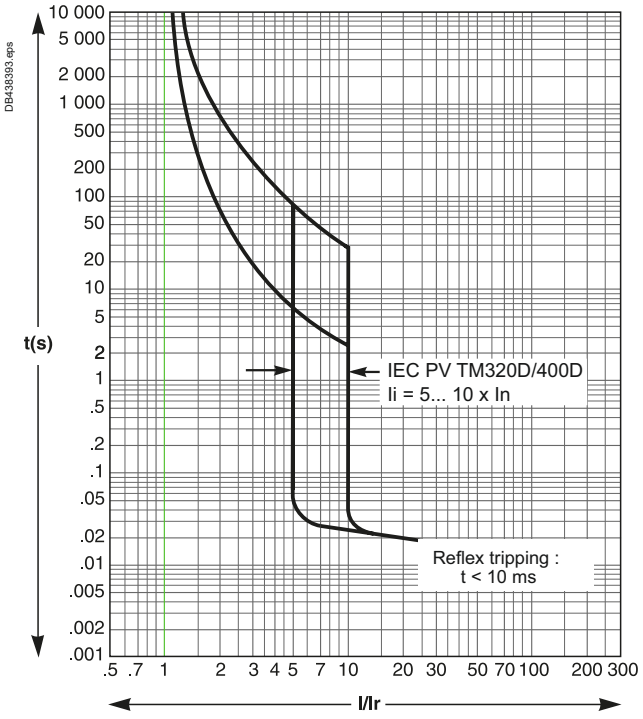


TM-DC PV 500

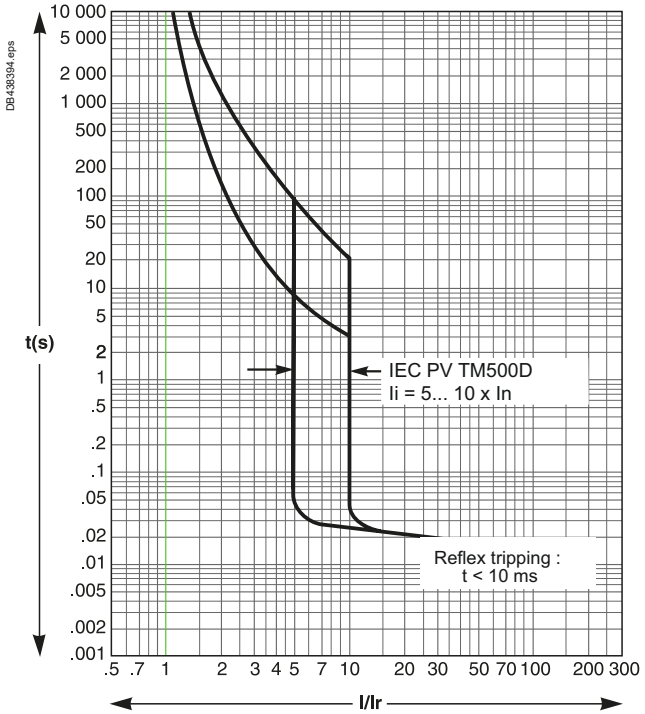

E

Current and Energy Limiting Curves

The limiting capacity of a circuit breaker is its aptitude to let through a current, during a short-circuit, that is less than the prospective short-circuit current.

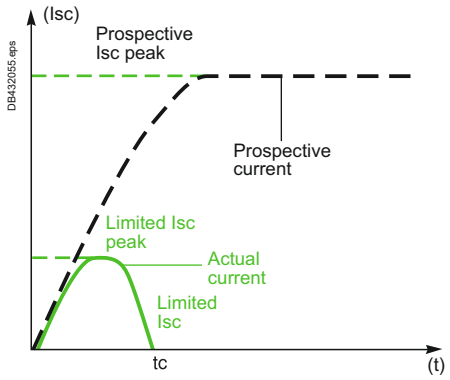

The exceptional limiting capacity of the ComPacT NSX DC range is due to the rotating double-break technique (very rapid natural repulsion of contacts and the appearance of two arc voltages in-series with a very steep wave front).

Ics = 100 % Icu

The exceptional limiting capacity of the ComPacT NSX DC range greatly reduces the forces created by fault currents in devices.
The result is a major increase in breaking performance.
In particular, the service breaking capacity Ics is equal to 100 % of Icu.
The Ics value, defined by IEC standard 60947-2, is ensured by tests comprising the following steps:

- Break three times consecutively a fault current equal to 100 % of Icu
- Check that the device continues to function normally, that is:
  - It conducts the rated current without abnormal temperature rise
  - Protection functions perform within the limits specified by the standard
  - Suitability for isolation is not impaired.

Longer Service Life of Electrical Installations

Current-limiting circuit breakers greatly reduce the negative effects of short-circuits on installations.

Thermal Effects

Less temperature rise in conductors, therefore longer service life for cables.

Mechanical Effects

Reduced electrodynamic forces, therefore less risk of electrical contacts or busbars being deformed or broken.

Electromagnetic Effects

Fewer disturbances for measuring devices located near electrical circuits.

Current and Energy Limiting Curves

The limiting capacity of a circuit breaker is expressed by two curves which are a function of the prospective short-circuit current (the current which would flow if no protection devices were installed):

- The actual peak current (limited current)
- Thermal stress (A^2s), i.e. the energy dissipated by the short-circuit in a conductor with a resistance of 1 Ω.

Example

What is the real value of a 150 kA rms prospective short-circuit (i.e. 330 kA peak) limited by an NSX250L DC upstream ?
The answer is 30 kA peak (curve page E-14).

Maximum Permissible Cable Stresses

The table below indicates the maximum permissible thermal stresses for cables depending on their insulation, conductor (Cu or Al) and their cross-sectional area (CSA). CSA values are given in mm^2 and thermal stresses in A^2s.

CSA		1.5 mm²	2.5 mm²	4 mm²	6 mm²	10 mm²
PVC	Cu	2.97×10^4	8.26×10^4	2.12×10^5	4.76×10^5	1.32×10^6
	Al					5.41×10^5
PRC	Cu	4.10×10^4	1.39×10^5	2.92×10^5	6.56×10^5	1.82×10^6
	Al					7.52×10^5
CSA		**16 mm²**	**25 mm²**	**35 mm²**	**50 mm²**	
PVC	Cu	3.4 x 106	8.26 x 106	1.62 x 107	3.31 x 107	
	Al	1.39 x 106	3.38 x 106	6.64 x 106	1.35 x 107	
PRC	Cu	4.69 x 106	1.39 x 107	2.23 x 107	4.56 x 107	
	Al	1.93 x 106	4.70 x 106	9.23 x 106	1.88 x 107	

Example


Is a Cu/PVC cable with a CSA of 10 mm^2 adequately protected by an NSX160F.
The table above indicates that the permissible stress is $1.32x10^6$ A^2s.
All short-circuit currents at the point where an NSX160F (Icu = 35 kA) is installed are limited with a thermal stress less than $6x10^5$ A^2s (curve page E-14).
Cable protection is therefore ensured up to the limit of the breaking capacity of the circuit breaker.


Current and energy limiting curves
ComPact NSX DC

Current-limiting curves and thermal stress for L/R = 5 ms

Peak current
U < 250 V DC: 1P
250 V < U < 500 V DC: 2P
500 V < U < 750 V DC: 3P

Thermal stress
U < 250 V DC: 1P
250 V < U < 500 V DC: 2P

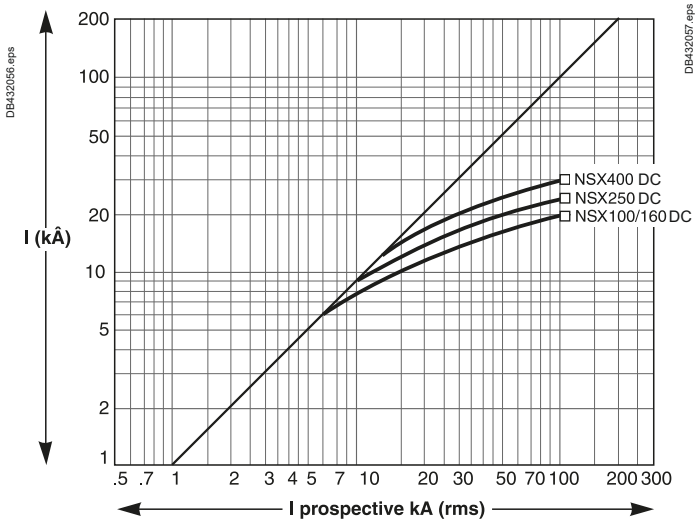


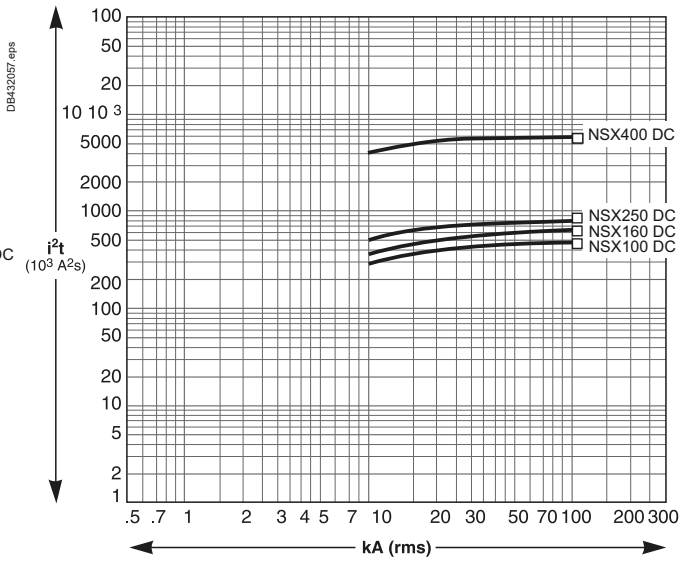


Current-limiting curves and thermal stress for L/R = 15 ms

Peak current
U < 250 V DC: 1P
250 V < U < 500 V DC: 2P
500 V < U < 750 V DC: 3P

Thermal stress
U < 250 V DC: 1P
250 V < U < 500 V DC: 2P

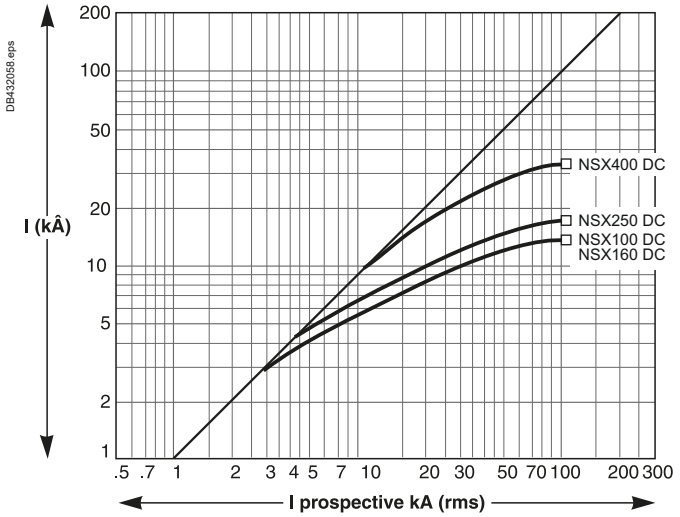

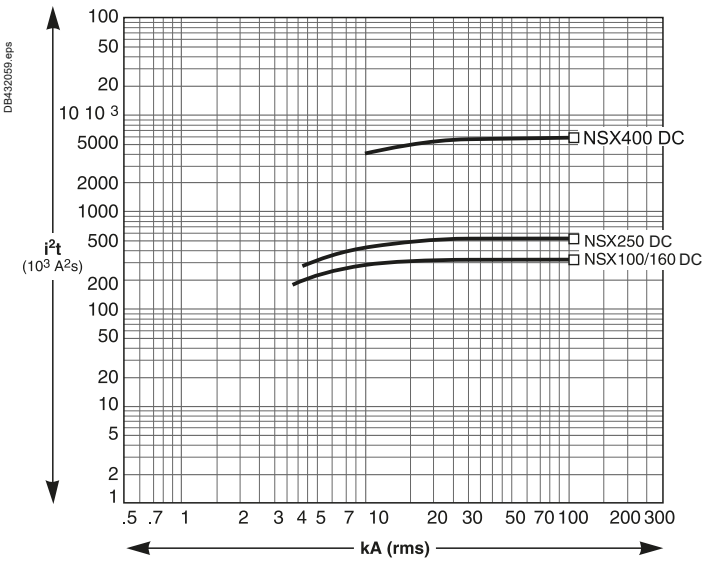



Current and energy limiting curves
ComPact NSX DC

Current-limiting curves and thermal stress for L/R = 5 ms

Peak current
U ⩽ 250 V DC: 1P
250 V < U < 600 V DC: 2P
600 V < U < 750 V DC: 3P

Thermal stress
U ⩽ 250 V DC: 1P
250 V < U < 600 V DC: 2P

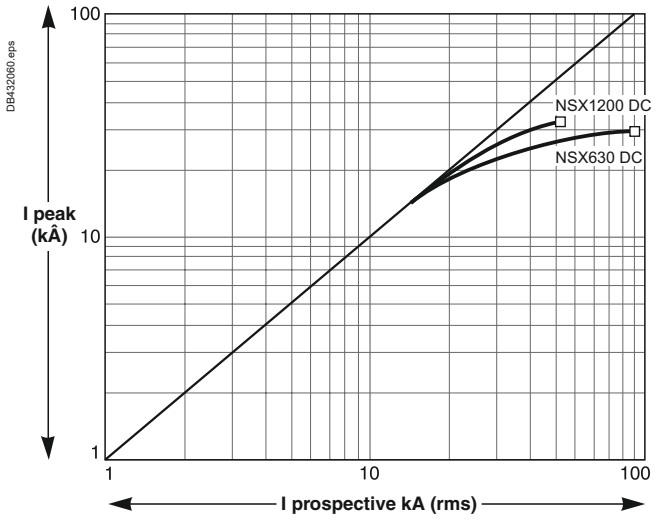


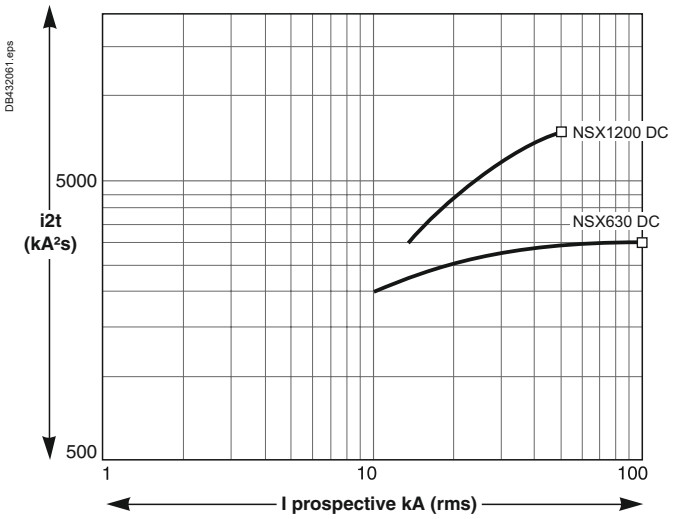


Current-limiting curves and thermal stress for L/R = 15 ms

Peak current
U ⩽ 250 V DC: 1P
250 V < U < 600 V DC: 2P
600 V < U < 750 V DC: 3P

Thermal stress
U ⩽ 250 V DC: 1P
250 V < U < 600 V DC: 2P

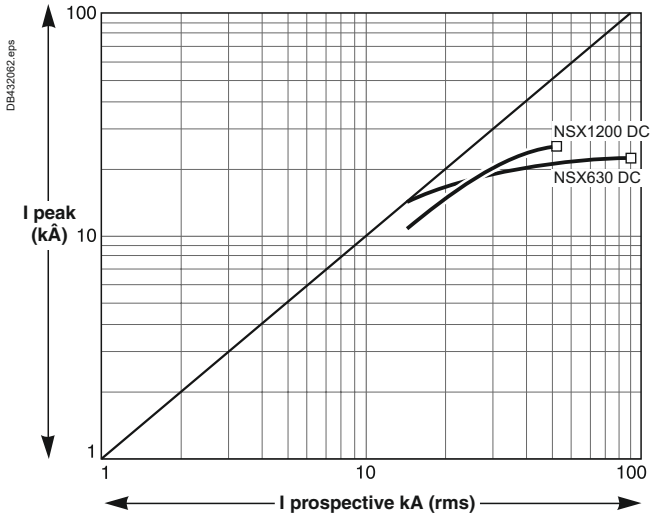


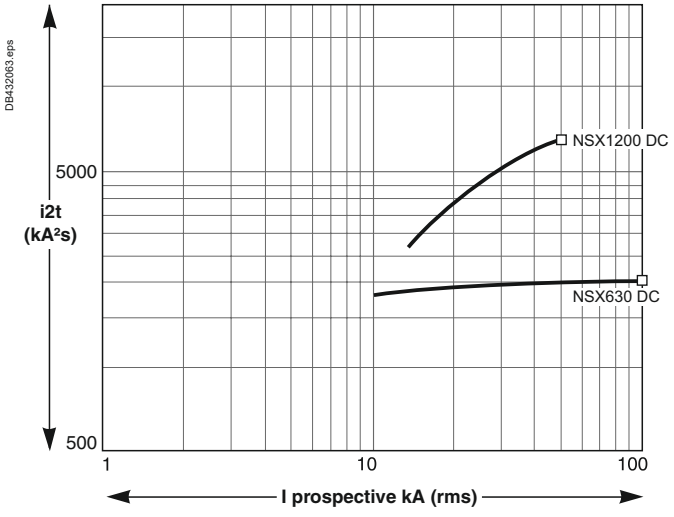


E

Current and Energy Limiting Curves
ComPacT NSX DC EP


NSX250DC EP TM100D

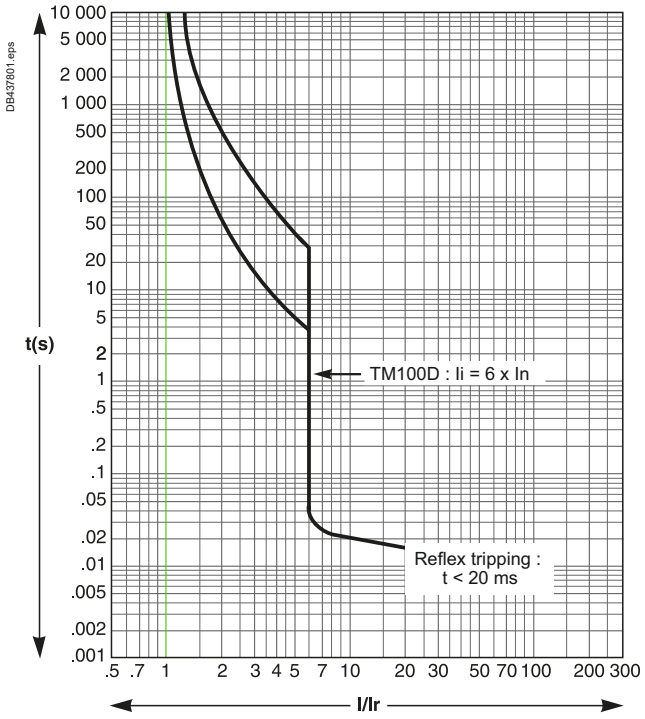


NSX250DC EP TM125D

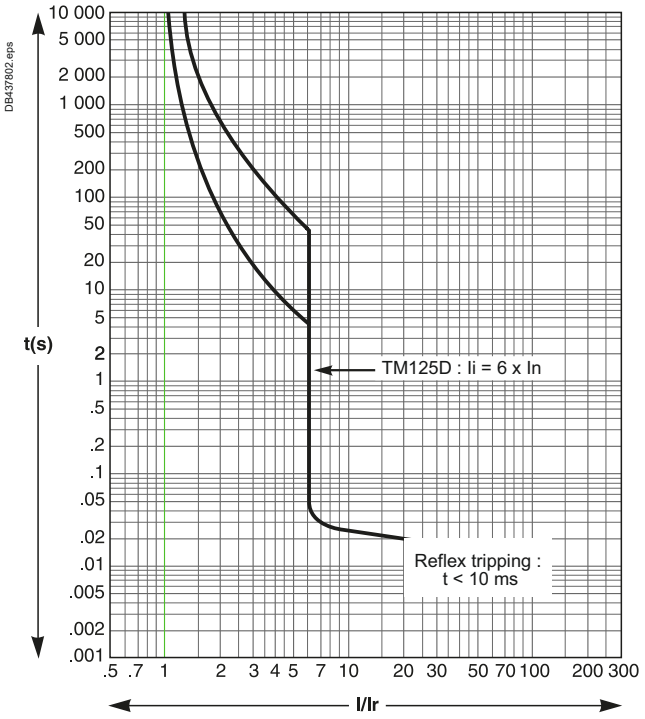

NSX250DC EP TM160D

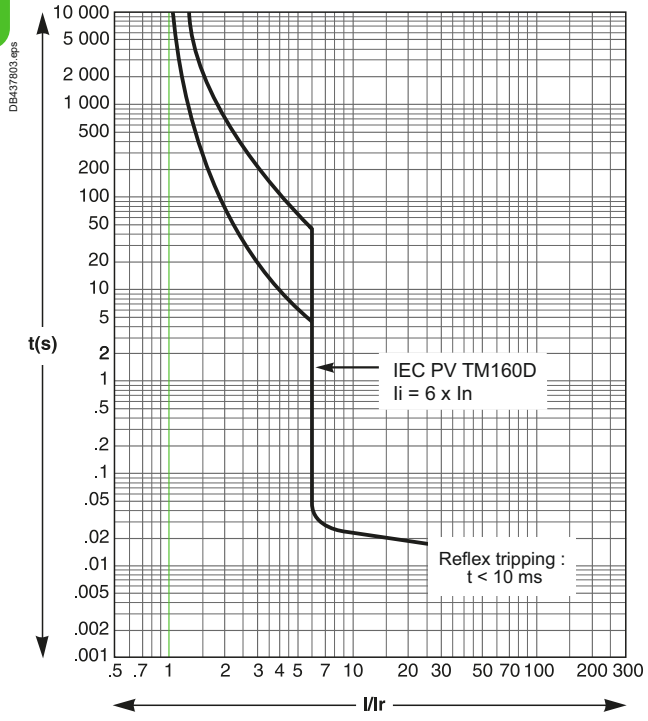


NSX250DC EP TM200D

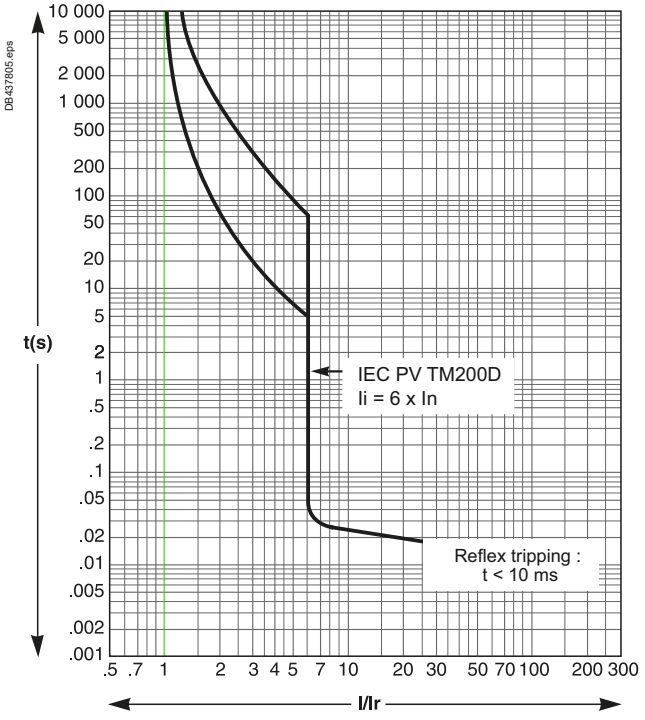


Current and Energy Limiting Curves
ComPacT NSX DC EP


NSX250DC EP TM250D

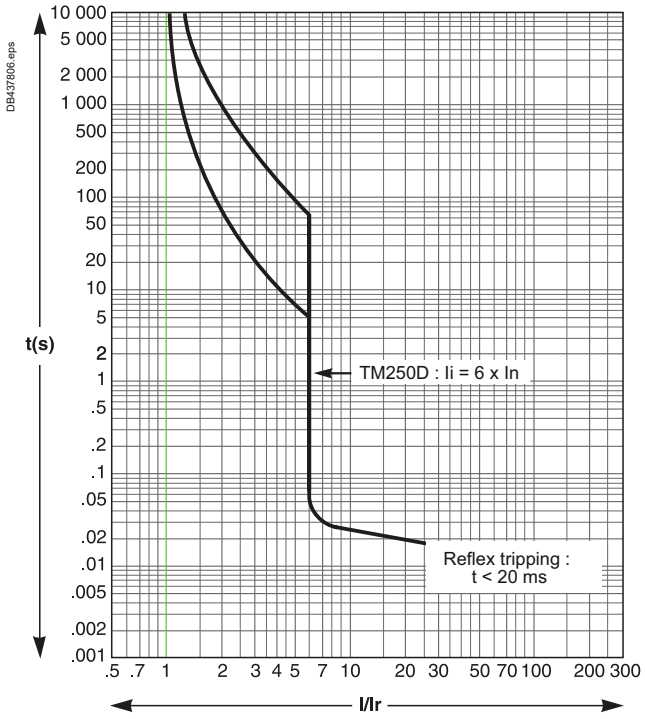


NSX500DC EP TM250D

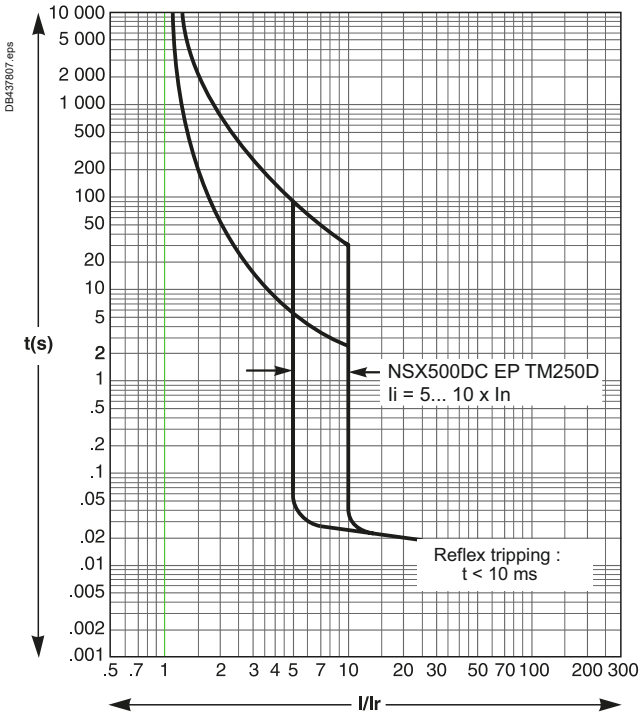

NSX500DC EP TM320/400D

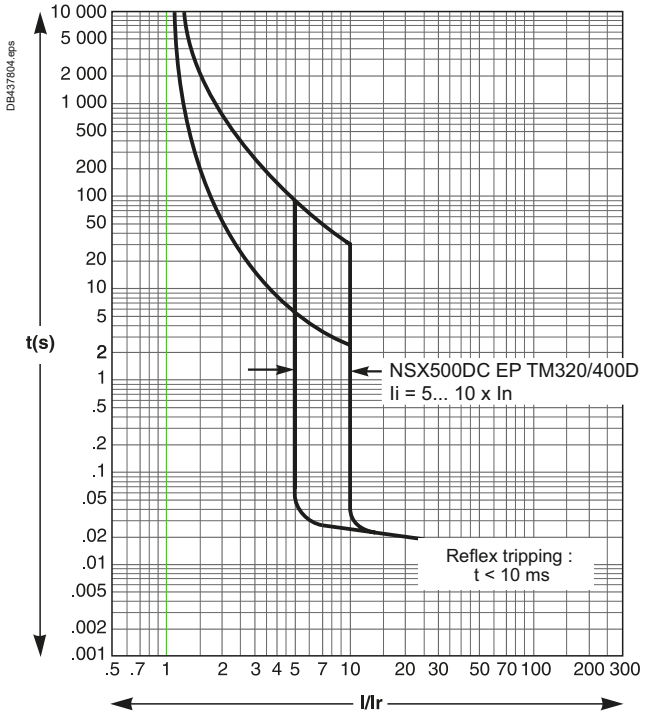

NSX500DC EP TM500D

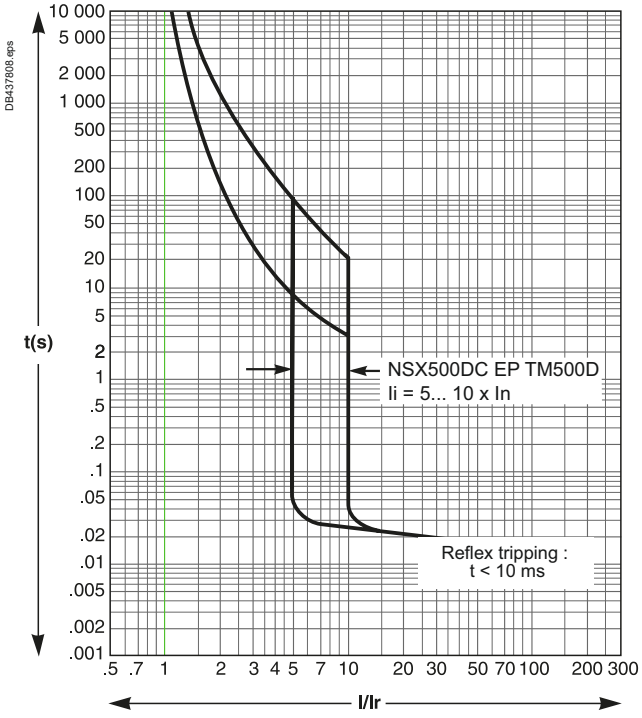

E


MasterPact NW10 to NW40 DC

Tripping Curves


U = 500 V DC, L/R = 5 Ms

MicroLogic DC 1.0 Instantaneous Protection


With 1250 - 2500 A Sensors

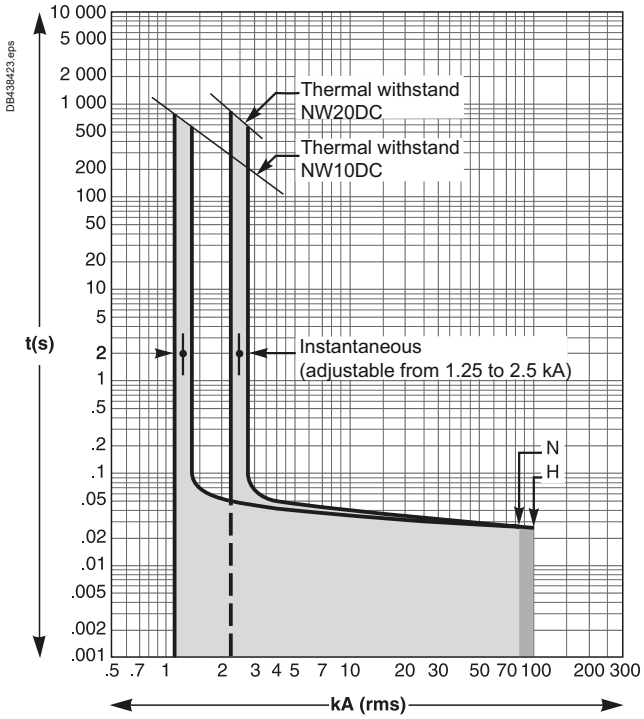

With 2500 - 5400 A Sensors

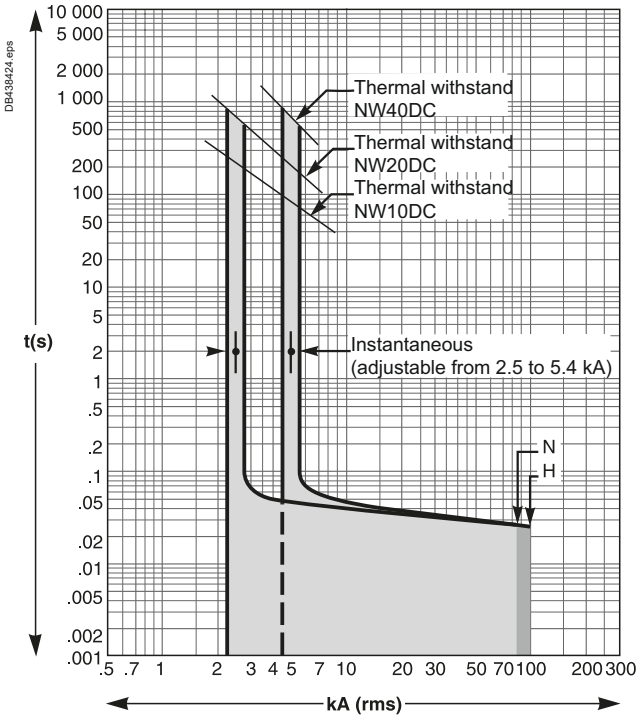

With 5000 - 11000 A Sensors

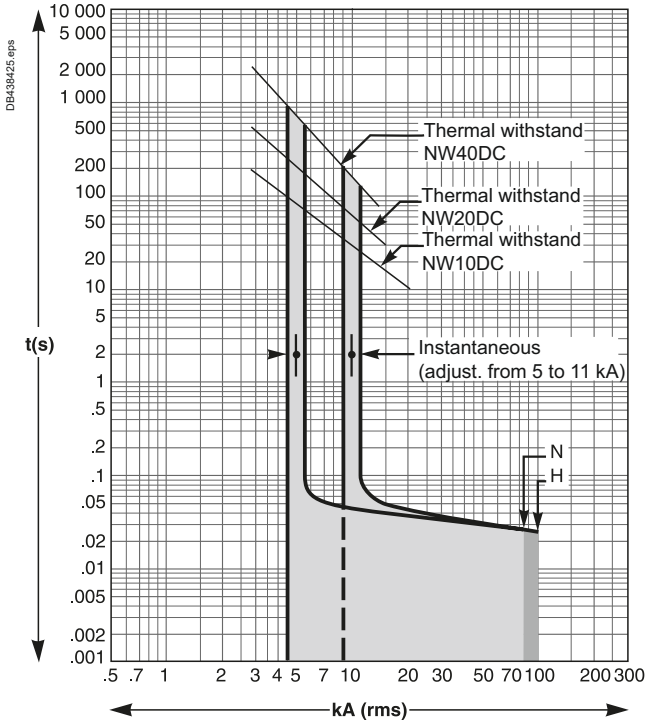

E


MasterPact NW10 to NW40 DC

Tripping Curves


U = 750/900 V DC, L/R = 5 Ms

MicroLogic DC 1.0 Instantaneous Protection


With 1250 - 2500 A Sensors

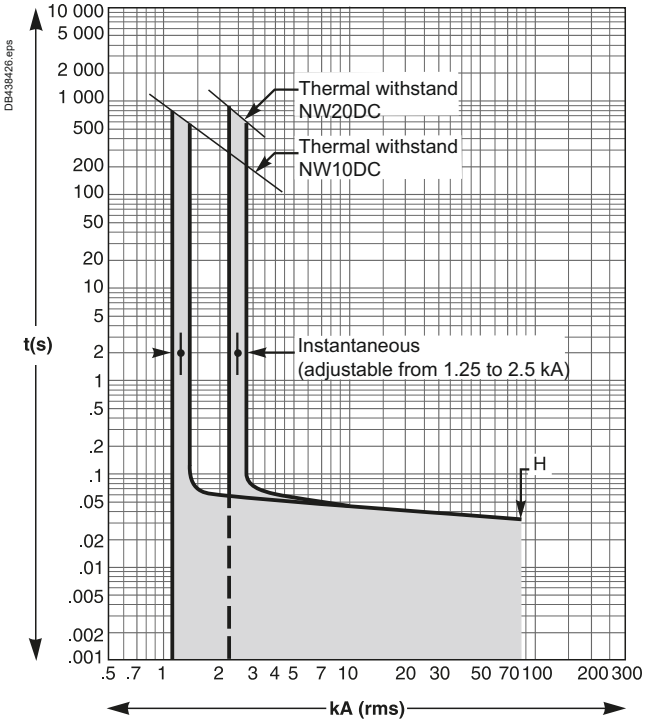

With 2500 - 5400 A Sensors

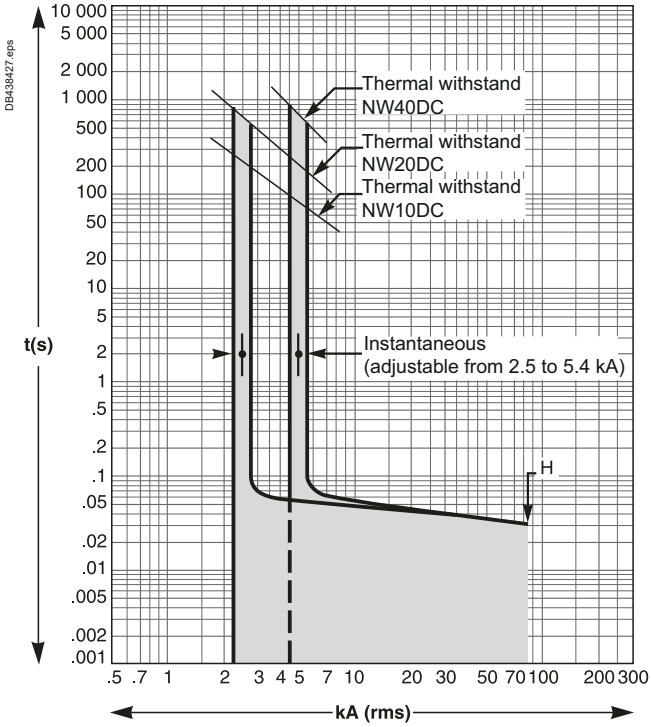

With 5000 - 11000 A Sensors

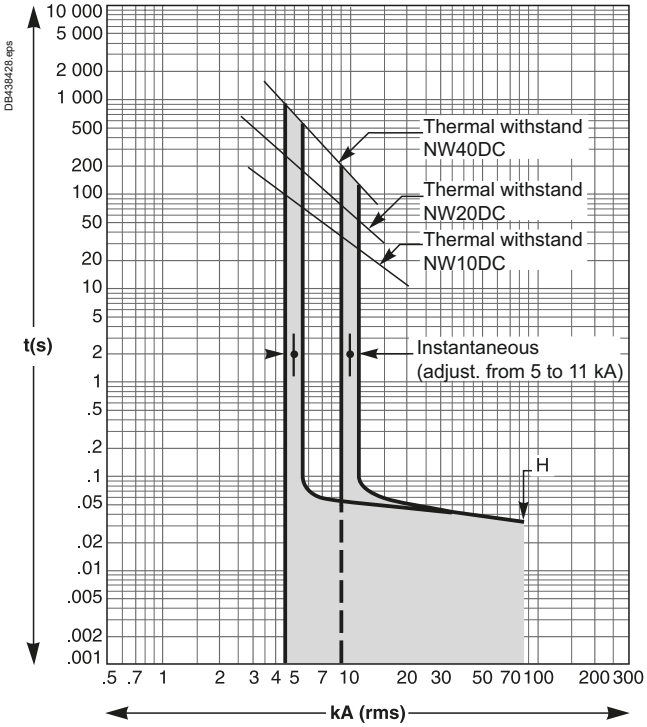

E


MasterPact NW10 to NW40 DC

Tripping Curves


U = 500 V DC, L/R = 15 Ms

MicroLogic DC 1.0 Instantaneous Protection


With 1250 - 2500 A Sensors

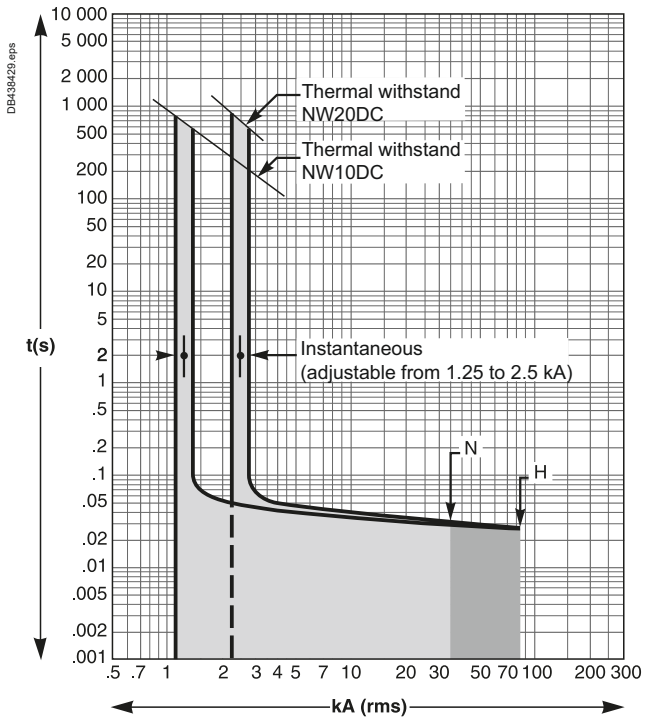

With 2500 - 5400 A Sensors

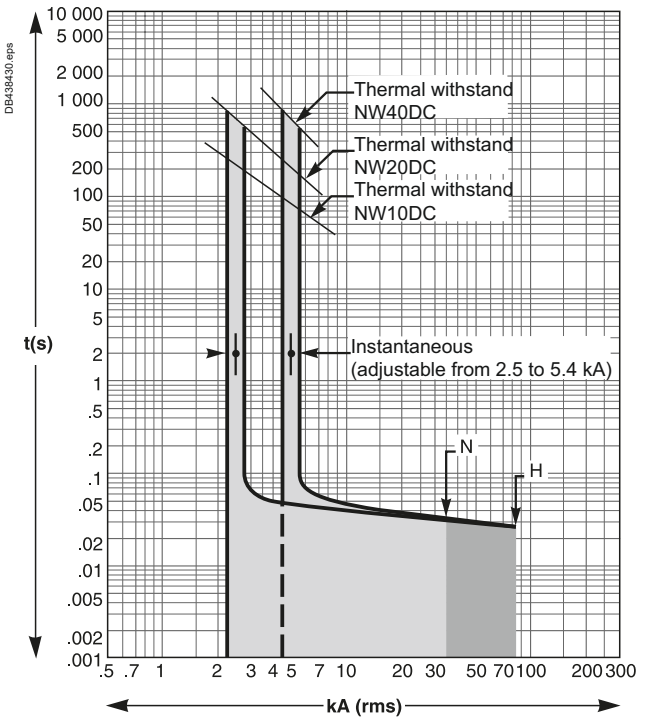


With 5000 - 11000 A Sensors

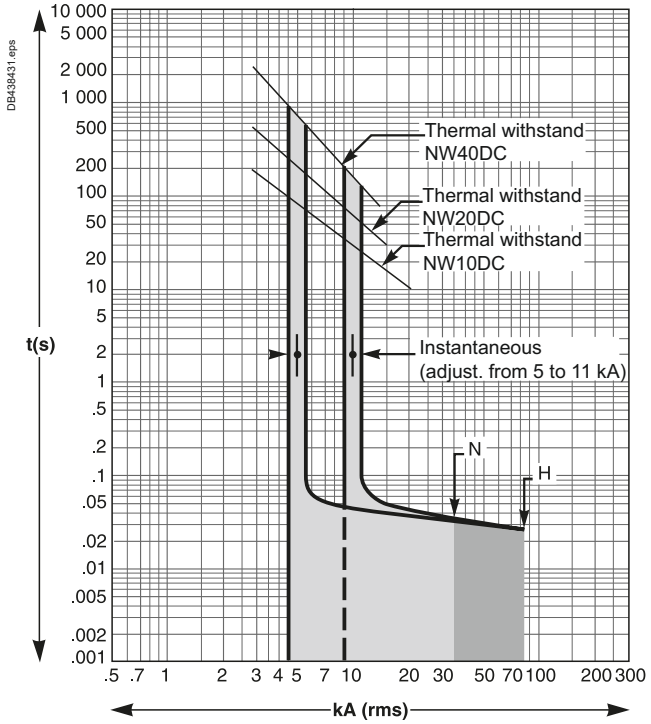


E

MicroLogic DC 1.0 Instantaneous Protection


With 1250 - 2500 A Sensors

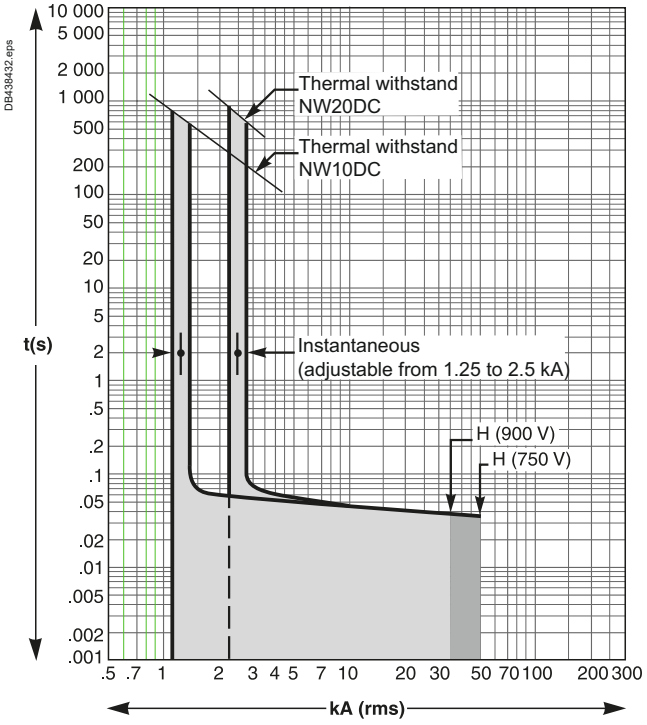

With 2500 - 5400 A Sensors

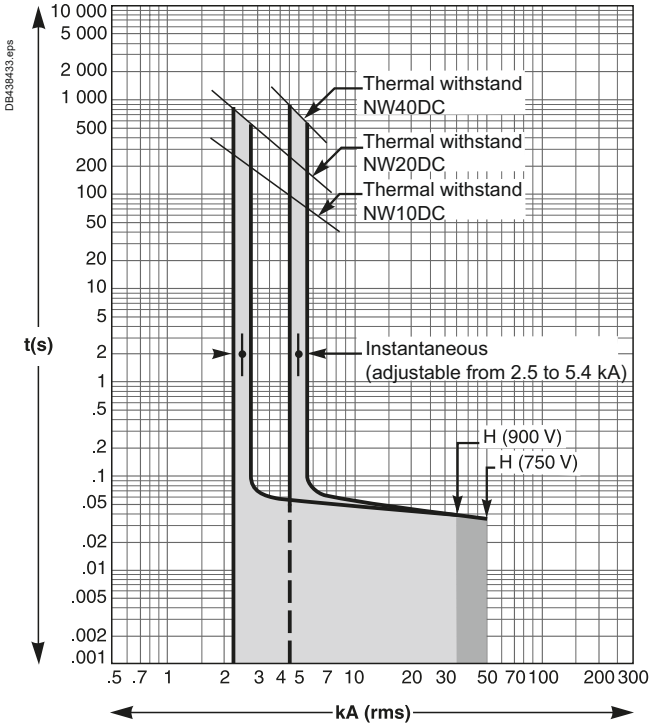

With 5000 - 11000 A Sensors

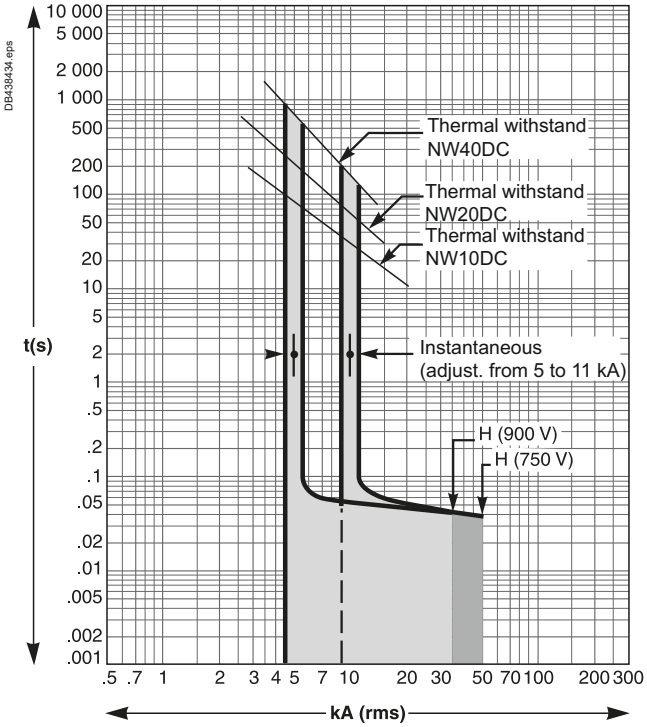

E


MasterPact NW10 to NW40 DC

Tripping Curves


U = 500/750 V DC, L/R = 30 Ms

MicroLogic DC 1.0 Instantaneous Protection


With 1250 - 2500 A Sensors

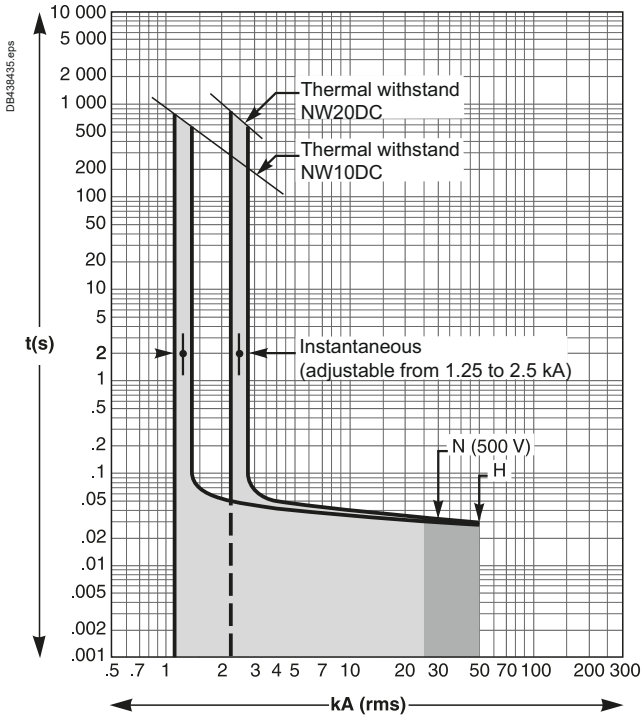

With 2500 - 5400 A Sensors

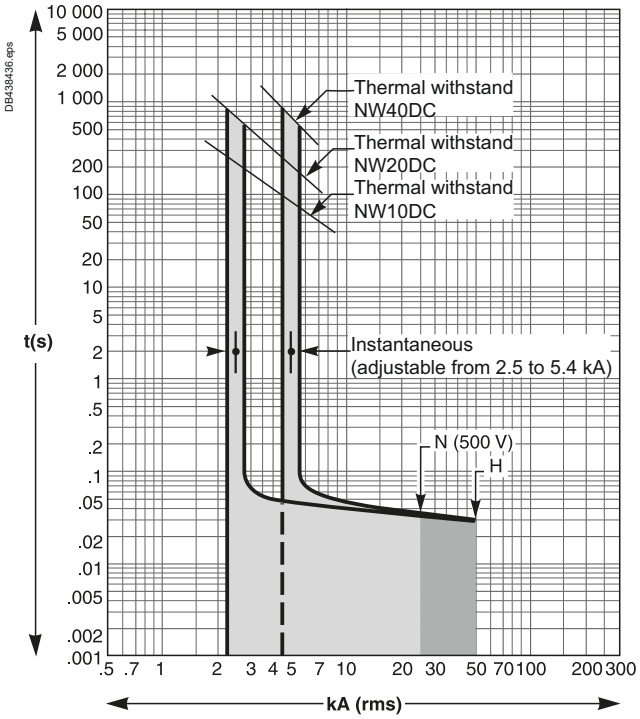


With 5000 - 11000 A Sensors

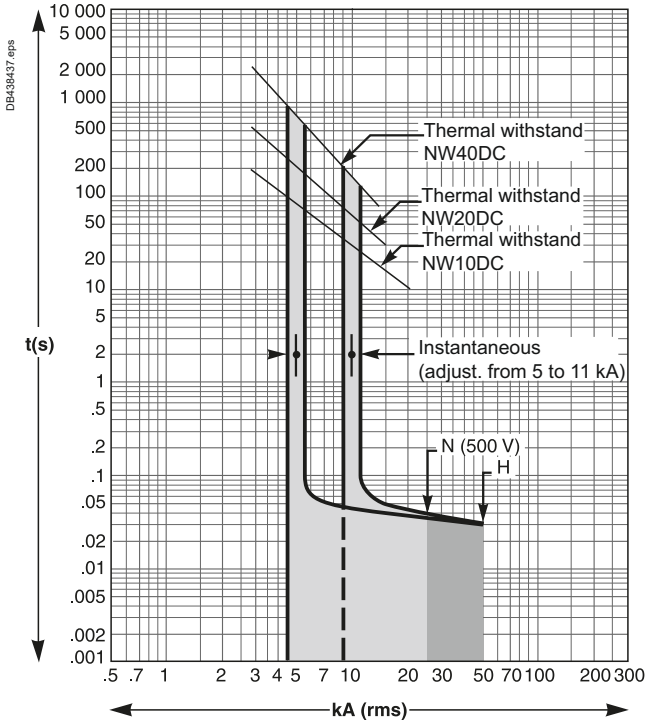


E

MicroLogic DC 1.0 Instantaneous Protection


With 1250 - 2500 A Sensors

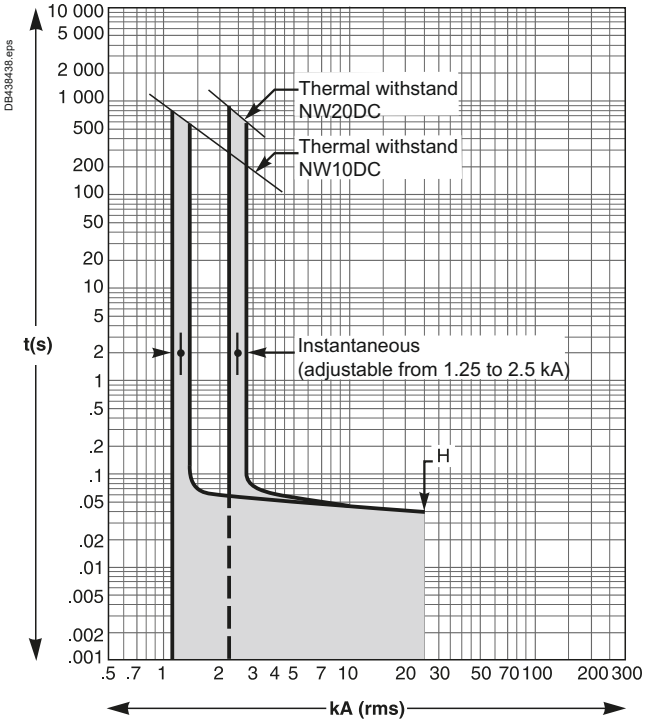

With 2500 - 5400 A Sensors

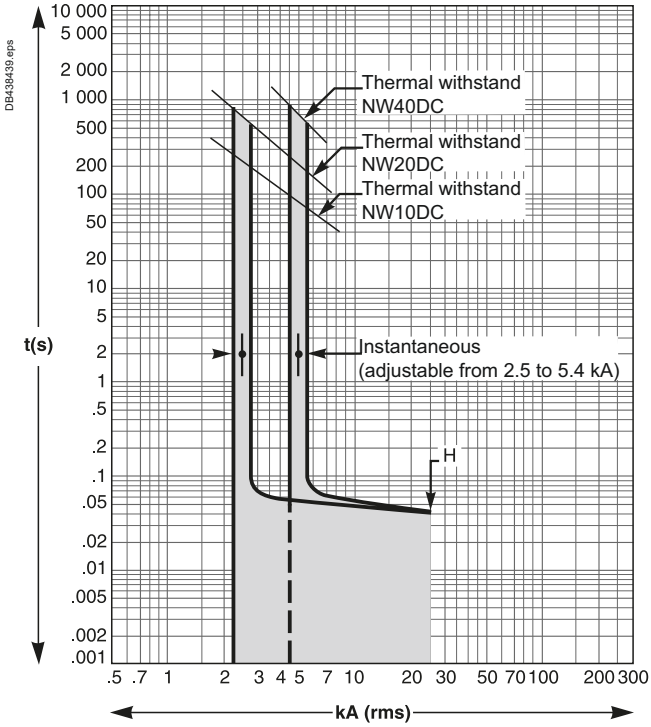

With 5000 - 11000 A Sensors

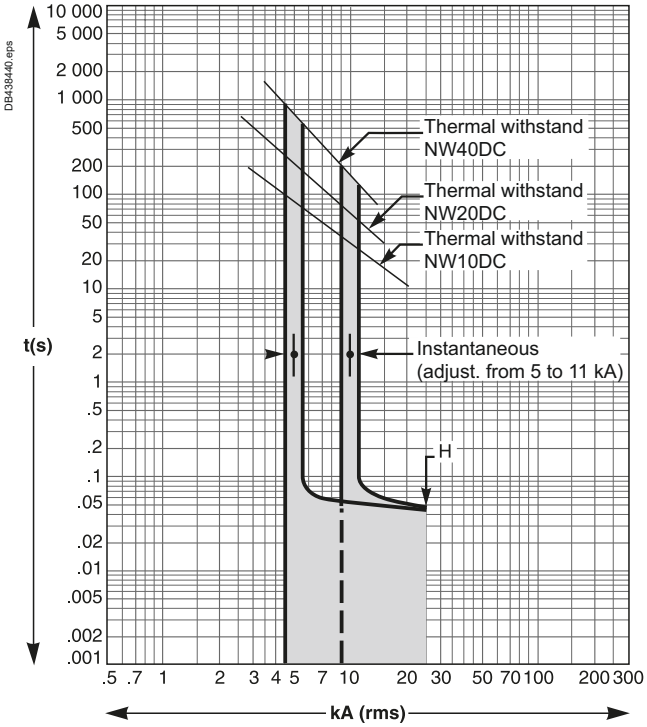

E



Catalog Numbers and Order Form

ComPacT NSX100 DC to NSX630 DC
Choice of Device F-4

ComPacT NSX100 DC to 1200 DC, NSX400 NA DC to NSX630 NA DC
Choice of Device F-5
Connection Accessories F-6
Electrical Auxiliaries F-8
Operation and Locking/Interlocking F-10
Installation F-11

ComPacT NSX100 DC to NSX630 DC
Plug-in/Withdrawable Accessories F-12

Spare Parts: ComPacT NSX100 DC to 1200 DC, NSX400 NA DC to NSX630 NA DC F-13

ComPacT INS DC PV - ComPacT NSX80/500 TM DC PV to NSX100/500 NA DC PV
Connection Accessories F-15
Electrical Auxiliaries F-17
Operation and Locking/Interlocking F-19
Installation F-20

ComPacT NSX630b to 1600 NA DC PV Fixed Electrically Operated
Complete Device without Motor Mechanism Module F-21
Device Based on Separate Components with or without Motor Mechanism Module F-22

ComPacT INS40 to 160 DC
Complete Fixed/FC Device and Accessories F-23
Accessories F-24

ComPacT INS250-100 to 630 DC
Complete Fixed/FC Device and Accessories F-26

ComPacT INV100 to 630 DC
Complete Fixed/FC Device and Specific Accessories F-27

F

Other Chapters
Presentation 2
Functions and Characteristics A-1
Installation Recommendations B-1
Dimensions and Connection C-1
Electrical Diagrams D-1
Additional Characteristics E-1

Catalog Numbers and Order Form

ComPacT INS250-100 to 250 DC
and ComPacT INV100 to 250 DC
Accessories F-28

ComPacT INS320 to 630 DC
and ComPacT INV320 to 630 DC
Accessories F-31

ComPacT INS630b to 2500 DC
Complete Fixed/FC Device and Accessories F-33
Complete Fixed/FC Device and Specific Accessories F-34

ComPacT INS630b to 2500 DC
and ComPacT INV630b to 2500 DC
Accessories F-35

NW10 DC to NW40 DC Fixed and Drawout
Circuit Breakers and Switch-Disconnectors F-37

NW10 DC to NW40 DC Fixed Circuit Breakers
Indication Contacts F-38
Remote Operation F-39

NW10 DC to NW40 DC Drawout Circuit Breakers
Indication Contacts F-40
Chassis Locking and Accessories F-41
Remote Operation F-42

Accessories for NW10 DC to NW40 DC Fixed and
Drawout Circuit Breakers F-43

F

Other Chapters
Presentation 2
Functions and Characteristics A-1
Installation Recommendations B-1
Dimensions and Connection C-1
Electrical Diagrams D-1
Additional Characteristics E-1

Catalog Numbers and Order Form

Spare Parts: Master**Pact** NW DC, EPDC, DC PV
Connection F-44
Remote Operation F-45
Chassis Locking and Accessories F-46
Clusters F-47
Circuit Breaker Locking and Accessories F-48
Mechanical Interlocking
for Source Changeover F-49
Indication Contacts F-50
Instructions F-51

Spare Parts: Master**Pact** NW DC, EPDC, DC PV
Monitoring and Control Converter F-52

Com**PacT** NSX100 DC to NSX250 DC
Circuit Breakers F-53

Com**PacT** NSX400 DC to NSX630 DC
Circuit Breakers and Switch-Disconnectors F-54

Com**PacT** NSX1200 DC Circuit Breakers F-55

Com**PacT** NSX80/500 TM DC PV
to NSX100/500 NA DC PV
Circuit Breakers and Switch-Disconnectors F-56

Com**PacT** NSX250/500 TM DC EP
to NSX250/630 NA DC EP
Circuit Breakers and Switch-Disconnectors F-57

Com**PacT** NSX630/1600 NA DC PV 4P,
Fixed Version
Upside: Front Connection, 2 Kit Heatsink, Phase Separator
Are Included F-58

Master**Pact** NW DC F-59


F

Other Chapters


Presentation 2
Functions and Characteristics A-1
Installation Recommendations B-1
Dimensions and Connection C-1
Electrical Diagrams D-1
Additional Characteristics E-1

ComPacT NSX100 DC to NSX630 DC
Choice of Device

ComPacT NSX100/160 F/N/M/S 1P/2P
With thermal-magnetic trip unit TM-D

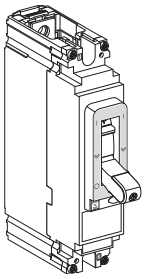

ComPacT NSX100F AC/DC		ComPacT NSX100F AC/DC
Rating	**1P 1d (Icu = 36 kA 250 V DC)**	**2P 2d (Icu = 36 kA 250 V DC/1P - 500 V DC/2P)**
TM16D	**C10F1TM016**	**C10F2TM016**
TM20D	**C10F1TM020**	**C10F2TM020**
TM25D	**C10F1TM025**	**C10F2TM025**
TM30D	**C10F1TM030**	**C10F2TM030**
TM40D	**C10F1TM040**	**C10F2TM040**
TM50D	**C10F1TM050**	**C10F2TM050**
TM63D	**C10F1TM063**	**C10F2TM063**
TM80D	**C10F1TM080**	**C10F2TM080**
TM100D	**C10F1TM100**	**C10F2TM100**
ComPacT NSX160F AC/DC		ComPacT NSX160F AC/DC
Rating	**1P 1d (Icu = 36 kA 250 V DC)**	**2P 2d (Icu = 36 kA 250 V DC/1P - 500 V DC/2P)**
TM125D	**C16F1TM125**	**C16F2TM125**
TM160D	**C16F1TM160**	**C16F2TM160**

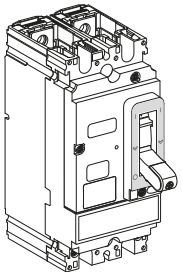

ComPacT NSX100N AC/DC		ComPacT NSX100M AC/DC
Rating	**1P 1d (Icu = 50 kA 250 V DC)**	**2P 2d (Icu = 85 kA 250 V DC/1P - 500 V DC/2P)**
TM16D	**C10N1TM016**	**C10M2TM016**
TM20D	**C10N1TM020**	**C10M2TM020**
TM25D	**C10N1TM025**	**C10M2TM025**
TM30D	**C10N1TM030**	**C10M2TM030**
TM40D	**C10N1TM040**	**C10M2TM040**
TM50D	**C10N1TM050**	**C10M2TM050**
TM63D	**C10N1TM063**	**C10M2TM063**
TM80D	**C10N1TM080**	**C10M2TM080**
TM100D	**C10N1TM100**	**C10M2TM100**
ComPacT NSX160N AC/DC		ComPacT NSX160M AC/DC
Rating	**1P 1d (Icu = 50 kA 250 V DC)**	**2P 2d (Icu = 85 kA 250 V DC/1P - 500 V DC/2P)**
TM125D	**C16N1TM125**	**C16M1TM125**
TM160D	**C16N1TM160**	**C16M1TM160**
ComPacT NSX100M AC/DC		ComPacT NSX100S AC/DC
Rating	**1P 1d (Icu = 85 kA 250 V DC)**	**2P 2d (Icu = 100 kA 250 V DC/1P - 500 V DC/2P)**
TM16D	**C10M1TM016**	**C10S2TM016**
TM20D	**C10M1TM020**	**C10S2TM020**
TM25D	**C10M1TM025**	**C10S2TM025**
TM30D	**C10M1TM030**	**C10S2TM030**
TM40D	**C10M1TM040**	**C10S2TM040**
TM50D	**C10M1TM050**	**C10S2TM050**
TM63D	**C10M1TM063**	**C10S2TM063**
TM80D	**C10M1TM080**	**C10S2TM080**
TM100D	**C10M1TM100**	**C10S2TM100**
ComPacT NSX160M AC/DC		ComPacT NSX160S AC/DC
Rating	**1P 1d (Icu = 85 kA 250 V DC)**	**2P 2d (Icu = 100 kA 250 V DC/1P - 500 V DC/2P)**
TM125D	**C16M1TM125**	**C16S2TM125**
TM160D	**C16M1TM160**	**C16S2TM160**


F

ComPacT NSX100 DC to 1200 DC, NSX400 NA DC to NSX630 NA DC

Choice of Device


ComPacT NSX100/160/250 DC

Basic frame

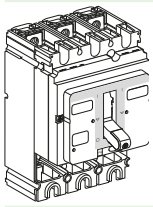
DB438126.ai

	3P	4P
Rating	**(Icu = 36 kA 250 V DC/1P - 500 V DC/ 2P - 750 V DC/3P)**	
NSX100F DC	**C10F3D**	**C10F4D**
NSX160F DC	**C16F3D**	**C16F4D**
NSX250F DC	**C25F3D**	**C25F4D**
	(Icu = 100 kA 250 V DC/1P - 500 V DC/ 2P - 750 V DC/3P)	
NSX100S DC	**C10S3D**	**C10S4D**
NSX160S DC	**C16S3D**	**C16S4D**
NSX250S DC	**C25S3D**	**C25S4D**

+ Trip unit

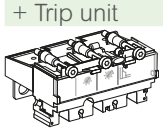
DB112246.eps


Standard protection: trip unit TM-D/DC

Rating	**3P** 3d	**4P** 4d
TM16D	**C103TM016**	**C104TM016**
TM25D	**C103TM025**	**C104TM025**
TM32D	**C103TM032**	**C104TM032**
TM40D	**C103TM040**	**C104TM040**
TM50D	**C103TM050**	**C104TM050**
TM63D	**C103TM063**	**C104TM063**
TM80DC	**C103TM080D**	**C104TM080D**
TM100DC	**C103TM100D**	**C104TM100D**
TM125DC	**C163TM125D**	**C164TM125D**
TM160DC	**C163TM160D**	**C164TM160D**
TM200DC	**C253TM200D**	**C254TM200D**
TM250DC	**C253TM250D**	**C254TM250D**

Type G protection: trip unit TM-G

Rating	**3P** 3d	**4P** 4d
TM16G	**C103MG016**	**C104MG016**
TM25G	**C103MG025**	**C104MG025**
TM40G	**C103MG040**	**C104MG040**
TM63G	**C103MG063**	**C104MG063**
TM80G	**C103MG080**	**C104MG080**
TM100G	**C103MG100**	**C104MG100**
TM125G [*]	**C163MG125**	**C164MG125**
TM160G [*]	**C163MG160**	**C164MG160**
TM200G [*]	**C253MG200**	**C254MG200**
TM250G [*]	**C253MG250**	**C254MG250**

ComPacT NSX250/630 F/S DC

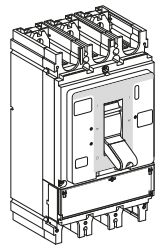
DB438127.ai


	3P	4P
Rating	**(Icu = 36 kA 250 V DC/1P - 500 V DC/ 2P - 750 V DC/3P)**	
NSX250F TM-DC	**C40F3TM250D**	**C40F4TM250D**
NSX320F TM-DC	**C40F3TM320D**	**C40F4TM320D**
NSX400F TM-DC	**C40F3TM400D**	**C40F4TM400D**
NSX500F TM-DC	**C63F3TM500D**	**C63F4TM500D**
	(Icu = 36 kA 250 V DC/1P - 500 V DC/ 2P)	
NSX600F TM-DC	**C63F3TM600D**	**C63F4TM600D**
	(Icu = 100 kA 250 V DC/1P - 500 V DC/ 2P - 750 V DC/3P)	
NSX250S TM-DC	**C40S3TM250D**	**C40S4TM250D**
NSX320S TM-DC	**C40S3TM320D**	**C40S4TM320D**
NSX400S TM-DC	**C40S3TM400D**	**C40S4TM400D**
NSX500S TM-DC	**C63S3TM500D**	**C63S4TM500D**
	(Icu = 100 kA 250 V DC/1P - 500 V DC/ 2P)	
NSX600S TM-DC	**C63S3TM600D**	**C63S4TM600D**

ComPacT NSX630/1200 DC

Rating	**2P (Icu = 50 kA 300 V DC/ 1P - 600 V DC/2P)**
	without bare cable connector
NSX630 TM-DC	**C1BN2TM630D**
NSX800 TM-DC	**C1BN2TM800D**
NSX1000 TM-DC	**C1BN2TM10HD**
NSX1200 TM-DC	**C1BN2TM12HD**

ComPacT NSX100/160/250 NA [1]

With NA switch-disconnector unit

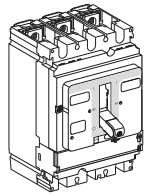
DB438128.ai

ComPacT NSX100NA

Rating	2P	3P	4P
100	**C102100S**	**C103100S**	**C104100S**

ComPacT NSX160NA

Rating	2P	3P	4P
160	**C162160S**	**C163160S**	**C164160S**

ComPacT NSX250NA

Rating	2P	3P	4P
250	**C252250S**	**C253250S**	**C254250S**

ComPacT NSX400/630 NA DC

	3P	4P
ComPacT NSX400 NA DC	**C403400DS**	**C404400DS**
ComPacT NSX630 NA DC	**C633630DS**	**C634630DS**


[1] See catalog ComPacT NSX LVPED221001EN for order form and configurated product.
[*] Adapted products (basic frame and trip unit TMG are not sold separately).


F

ComPacT NSX100 DC to 1200 DC, NSX400 NA DC to NSX630 NA DC


Connection Accessories

Special Connection Accessories for Parallel or Series Connection


DB432093.eps








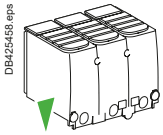


DB425458.eps

			NSX100-250 DC	NSX400-630 DC	NSX1200 DC
Connection accessories					
Connection accessories for parallel or series connection of 2 poles [1]	1 connection plate equipped with heat sink + 1 interphase barrier [2]		**LV438328**	**LV438338**	
Connection plates					
Connection plates for parallel connection of 3 poles	1 set of 2 connection plates		**LV438329**	[3]	
Connection plates for parallel connection of 4 poles			[3]	[3]	
1P short terminal shields	1 pair		**LV438320**		
2P short terminal shields	2 pairs	2 x	**LV438320**		
3P terminal shields for series connection of poles	1 set		**LV438325**	**LV438291** [5] **LV438292** [5]	
4P terminal shields for series connection of poles	1 set		**LV438326**	**LV438294** [5] **LV438295** [5]	
4P terminal shields for parallel connection of poles (2P/4P)	1 set		**LV438327**	**LV438293** [5]	**LV438293** [5]
1 long terminal shield for breaker or plug-in base	3P		**LV429517**		
	4P		**LV429518**		

Connection Accessories (Cu or Al)

				NSX100-250 DC	NSX400-630 DC
Rear connections					
 DB112225.eps	2 short			**LV429235**	**LV432475**
	2 long			**LV429236**	**LV432476**
Bare cable connectors					
 DB112226.eps	Steel connectors	1.5 to 95 mm² ; ≤ 160 A	Set of 2	**LV429246**	
			Set of 3	**LV429242**	
			Set of 4	**LV429243**	
 DB112725.eps	Aluminium connectors	25 to 95 mm² ; ≤ 250 A	Set of 2	**LV429255**	
			Set of 3	**LV429227**	
			Set of 4	**LV429228**	
		120 to 185 mm² ; ≤ 250 A	Set of 2	**LV429247**	
			Set of 3	**LV429259**	
			Set of 4	**LV429260**	
 DB112726.eps	Clips for connectors		Set of 10	**LV429241**	
 DB112227.eps	Aluminium connectors for 2 cables [4] 2 x (50 to 120 mm²) ; ≤ 250 A		Set of 3 (3P)	**LV429218**	
			Set of 4 (4P)	**LV429219**	
	Aluminium connectors 1x (35 to 300 mm²)		Set of 3 (3P)		**LV432479**
			Set of 4 (4P)		**LV432480**
 DB112228.eps	Aluminium connectors [4] for 6 cables 6 x (1.5 to 35 mm²) ; ≤ 250 A		Set of 3 (3P)	**LV429248**	
			Set of 4 (4P)	**LV429249**	
	Aluminium connectors for 2 cables 2 x (35 to 300 mm²)		Set of 3 (3P)		**LV432481**
			Set of 4 (4P)		**LV432482**
 DB112724.eps	6.35 mm voltage tap for steel or aluminium connectors		Set of 10	**LV429348**	









[1] Series connection: 2 poles = 1 connection plate.
3 poles = 2 connection plates.
4 poles = 3 connection plates.
Parallel connection: 2 poles = 2 connection plates.
3 poles = 1 set of 2 connection plates (29499).
2 x 2 poles = 4 connection plates.

[2] These connection accessories come with an interphase barrier.
[3] To be made by the customer.
[4] Supplied with 2 or 3 interphase barriers.
[5] Refer to page B-5 for details.

F

ComPacT NSX100 DC to 1200 DC, NSX400 NA DC to NSX630 NA DC

Connection Accessories (Cont.)

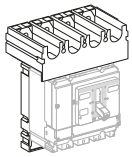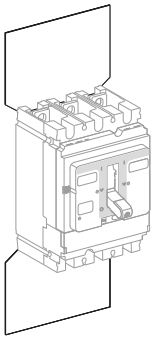Connection Accessories (Cu or Al)		NSX100-250 DC	NSX400-630 DC	NSX1200 DC
Terminal extensions				
 DB432094.eps — Right-angle terminal extensions	Set of 3	**LV429261**	**LV432484**	
	Set of 4	**LV429262**	**LV432485**	
 DB432095.eps — Straight terminal extensions	Set of 3	**LV429263**		
	Set of 4	**LV429264**		
 DB112230.eps — 45° terminal extension [1]	Set of 3	**LV429223**		
	Set of 4	**LV429224**		
 DB112231.eps — Edgewise terminal extensions [1]	Set of 3	**LV429308**	**LV432486**	
	Set of 4	**LV429309**	**LV432487**	
 DB112234.eps — Double-L terminal extensions [1]	Set of 3	**LV429221**		
	Set of 4	**LV429222**		
 DB112235.eps — Spreaders from 35 to 45 mm pitch [1]	3P	**LV431563**		
	4P	**LV431564**		
 DB438129.ai — One-piece spreader from 35 to 45 mm pitch	3P	**LV431060**		
	4P	**LV431061**		
Front alignment base (for one-piece spreader)	3P/4P	**LV431064**		
Crimp lugs for copper cable (supplied with 2 or 3 interphase barriers)				
 DB112237.eps — For cable 120 mm²	Set of 3	**LV429252**		
	Set of 4	**LV429256**		
For cable 150 mm²	Set of 3	**LV429253**		
	Set of 4	**LV429257**		
For cable 185 mm²	Set of 3	**LV429254**	**LV429254**	**LV429254**
	Set of 4	**LV429258**	**LV429258**	**LV429258**
For cable 240 mm²	Set of 3		**LV432500**	**LV432500**
	Set of 4		**LV432501**	**LV432501**
For cable 300 mm²	Set of 3		**LV432502**	**LV432502**
	Set of 4		**LV432503**	**LV432503**
Crimp lugs for aluminium cable (supplied with 2 or 3 interphase barriers)				
 DB112238.eps — For cable 150 mm²	Set of 3	**LV429504**		
	Set of 4	**LV429505**		
For cable 185 mm²	Set of 3	**LV429506**	**LV429506**	**LV429506**
	Set of 4	**LV429507**	**LV429507**	**LV429507**
For cable 240 mm²	Set of 3		**LV432504**	**LV432504**
	Set of 4		**LV432505**	**LV432505**
For cable 300 mm²	Set of 3		**LV432506**	**LV432506**
	Set of 4		**LV432507**	**LV432507**
Barriers				
 DB432096.eps — Interphase barriers	Set of 6	**LV429329**	**LV432570**	
Insulation screen				
 DB438130.ai — 2 insulating screens for breaker (45 mm pitch)	3P	**LV429330**		
	4P	**LV429331**		
2 insulating screens for breaker (70 mm pitch)	3P		**LV432578**	
	4P		**LV432579**	


[1] Supplied with 2 or 3 interphase barriers.

F


ComPacT NSX100 DC to 1200 DC, NSX400 NA DC to NSX630 NA DC
Electrical Auxiliaries

Electrical Auxiliaries


Auxiliary contacts (changeover)



OF or SD or SDE or SDV		**29450**
OF or SD or SDE or SDV low level		**29452**
SDE adapter, mandatory for trip unit		**LV429451**




Voltage releases		MX	MN
AC	24 V 50/60 Hz	**LV429384**	**LV429404**
	48 V 50/60 Hz	**LV429385**	**LV429405**
	110-130 V 50/60 Hz	**LV429386**	**LV429406**
	220-240 V 50/60 Hz 208-277 V 60 Hz	**LV429387**	**LV429407**
	380-415 V 50 Hz 440-480 V 60 Hz	**LV429388**	**LV429408**
	525 V 50 Hz - 600 V 60 Hz	**LV429389**	**LV429409**
DC	12 V	**LV429382**	**LV429402**
	24 V	**LV429390**	**LV429410**
	30 V	**LV429391**	**LV429411**
	48 V	**LV429392**	**LV429412**
	60 V	**LV429383**	**LV429403**
	125 V	**LV429393**	**LV429413**
	250 V	**LV429394**	**LV429414**

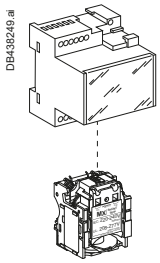

MN 48 V 50/60 Hz with fixed time delay		
Composed of:	MN 48 V DC	**LV429412**
	Delay unit 48 V 50/60 Hz	**LV429426**
MN 220-240 V 50/60 Hz with fixed time delay		
Composed of:	MN 250 V DC	**LV429414**
	Delay unit of 220-240 V 50/60 Hz	**LV429427**
MN 48 V DC/AC 50/60 Hz with adjustable time delay		
Composed of:	MN 48 V DC	**LV429412**
	Delay unit 48 V DC/AC 50/60 Hz	**33680**
MN110-130 V DC/AC 50/60 Hz with adjustable time delay		
Composed of:	MN 125 V DC	**LV429413**
	Delay unit 100-130 V DC/AC 50/60 Hz	**33681**
MN 220-250 V DC/AC 50/60 Hz with adjustable time delay		
Composed of:	MN 250 V DC	**LV429414**
	Delay unit 200-250 V DC/AC 50/60 Hz	**33682**


Motor Mechanism

Motor mechanism module supplied with SDE adapter



	Voltage	MT100/160	MT250	MT400-630
AC	48-60 V 50/60 Hz	**LV429440**	**LV431548**	**LV432639**
	110-130 V 50/60 Hz	**LV429433**	**LV431540**	**LV432640**
	220-240 V 50/60 Hz 208-277 V 60 Hz	**LV429434**	**LV431541**	**LV432641**
	380-415 V 50/60 Hz 440-480 V 60 Hz	**LV429435**	**LV431542**	**LV432642** **LV432647**
DC	24-30 V	**LV429436**	**LV431543**	**LV432643**
	48-60 V	**LV429437**	**LV431544**	**LV432644**
	110-130 V	**LV429438**	**LV431545**	**LV432645**
	250 V	**LV429439**	**LV431546**	**LV432646**
Operations counter				**LV432648**

Communicating motor mechanism module supplied with SDE adapter




Motor mechanism module	MTc 100/160	220-240 V 50/60 Hz	**LV429441**
	MTc 250	220-240 V 50/60 Hz	**LV431549**
	MTc 400/630	220-240 V 50/60 Hz	**LV432652**
+			
Breaker and Status Communication Module	BSCM		**LV434205**
+			
NSX cord	Wire length L = 0.35 m		**LV434200**
	Wire length L = 1.3 m		**LV434201**
	Wire length L = 3 m		**LV434202**
	U > 480 V AC wire length L = 0.35 m		**LV434204**




F

ComPacT NSX100 DC to 1200 DC, NSX400 NA DC to NSX630 NA DC
Electrical Auxiliaries



Communication Option

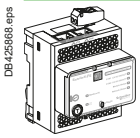 DB425868.eps	IFE	Ethernet interface for LV breaker	**LV434001**
		Ethernet interface for LV breakers and gateway	**LV434002**
 DB425706.eps	IFM Modbus-SL interface module		**LV434000**
 DB432550.eps	I/O application module		**LV434063**
	User guide IFE		**DOCA0084EN**
	User guide I/O application module		**DOCA0055EN**

ULP wiring accessories

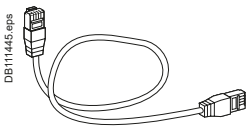 DB111442.eps	NSX cord L = 0.35 m	**LV434200**
	NSX cord L = 1.3 m	**LV434201**
	NSX cord L = 3 m	**LV434202**
	NSX cord for U > 480 V AC L = 1.3 m	**LV434204**
 DB115621.eps	10 stacking connectors for communication interface modules	**TRV00217**
 DB432584.ai	2 Modbus line terminators	**VW3A8306DRC** [1]
 DB115622.eps	RS 485 roll cable (4 wires, length 60 m)	**50965**
 DB115623.eps	5 RJ45 connectors female/female	**TRV00870**
 DB111444.eps	10 ULP line terminators	**TRV00880**
 DB111445.eps	10 RJ45/RJ45 male cord L = 0.3 m	**TRV00803**
	10 RJ45/RJ45 male cord L = 0.6 m	**TRV00806**
	5 RJ45/RJ45 male cord L = 1 m	**TRV00810**
	5 RJ45/RJ45 male cord L = 2 m	**TRV00820**
	5 RJ45/RJ45 male cord L = 3 m	**TRV00830**
	1 RJ45/RJ45 male cord L = 5 m	**TRV00850**

Power supply modules



 DB112278.eps	External power supply module 100-240 V AC 110-230 V DC/24 V DC-3 A class 2	**ABL8RPS24030** [2]
 DB112736.eps	External power supply module 24 V DC-1 A OVC IV	
	24-30 V DC	**54440**
	48-60 V DC	**54441**
	100-125 V AC	**54442**
	110-130 V AC	**54443**
	200-240 V AC	**54444**
	380-415 V AC	**54445**



[1] SDE adapter mandatory for trip unit TM,TMG.
[2] www.schneider-electric.com.




F

ComPacT NSX100 DC to 1200 DC, NSX400 NA DC to NSX630 NA DC

Operation and Locking/Interlocking

Rotary Handles		NSX100-250 DC	NSX400-1200 DC
Direct rotary handles			
 DB438131.ai	With black handle	LV429337T	LV432597T
	With red handle on yellow front	LV429339T	LV432599T
	MCC conversion accessory	LV429341T	LV432606T
	CNOMO conversion accessory	LV429342T	LV432602T
Extended rotary handle			
 DB438108.ai	With black handle	LV429338T	LV432598T
	With red handle on yellow front	LV429340T	LV432600T
	With telescopic handle for withdrawable device	LV429343T	LV432603T
Accessories			
	Indication auxiliary — 1 early-break contact	LV429345	LV432605
	Indication auxiliary — 2 early-break contacts	LV429346	LV429346

Locks		NSX100-250 DC	NSX400-1200 DC
Toggle locking device for 1 to 3 padlocks			
 DB438109.ai	By removable device	29370	29370
 DB438110.ai	By fixed device for 3P/4P (open or close position)	LV429371	LV432631
	By fixed device for 3P/4P (open position only)	LV429370	LV432630
Locking of the rotary handle			
 DB438111.ai	Keylock adapter (keylock not included)	LV429344	LV432604
	Keylock (keylock adapter not included) — Ronis 1351B.500	41940	41940
	Keylock (keylock adapter not included) — Profalux KS5 B24 D4Z	42888	42888
Locking of the motor mechanism modules			
 DB432104.eps	Keylock adapter + Ronis keylock (special)	LV429449	LV432649
	Keylock (keylock adapter not included) — Ronis 1351B.500		41940
	Keylock (keylock adapter not included) — Profalux KS5 B24 D4Z		42888



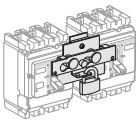
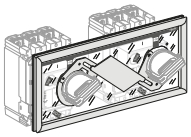
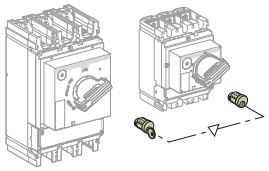
Interlocking		NSX100-250 DC	NSX400-1200 DC
Mechanical interlocking for circuit breakers			
 DB438112.ai	With toggles	LV429354T	LV432614T
 DB438183.ai	With rotary handles	LV429369T	LV432621T
Interlocking with key (2 keylocks/1 key) for rotary handles			
 DB438114.ai	Keylock kit (keylock not included)[1]	LV429344	LV432604
	1 set of 2 keylocks — Ronis 1351B.500	41950	41950
	(1 key only, keylock kit not included) — Profalux KS5 B24 D4Z	42878	42878


[1] NSX100-250 DC only.

F

ComPacT NSX100 DC to 1200 DC, NSX400 NA DC to NSX630 NA DC











Installation

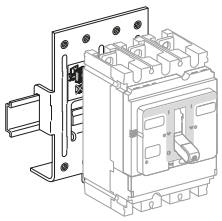Installation Accessories		NSX100-250 DC	NSX400-1200 DC
Front-panel escutcheons			
 DB112269.eps	IP30 escutcheon for all control types	**LV429525**	**LV432557**
	IP30 trip unit access escutcheon for toggle	**LV429526**	**LV432559**
IP30			
 DB112737.eps	IP40 escutcheon for all control types	**LV429317**	**LV432558**
IP40			
IP43 rubber toggle cover			
 DB112738.eps	1 toggle cover	**LV429319**	**LV432560**
Lead-sealing accessories			
 DB115615.eps	Bag of accessories	**LV429375**	**LV429375**
Din rail adapter			
 DB438115.ai	1 adapter	**LV429305**	

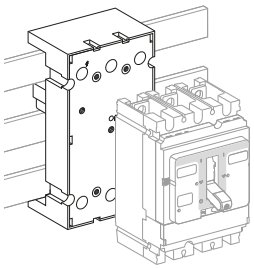60 Mm Plate Busbar Adapter		NSX100-250 DC	NSX400-630 DC
 DB438116.ai	3P 60 mm busbar adapter	**LV429372**	**LV432623**
	4P 60 mm busbar adapter	**LV429373**	**LV432624**









F

ComPacT NSX100 DC to NSX630 DC
Plug-in/Withdrawable Accessories

Plug-in/Withdrawable Version Accessories		NSX100-250 DC	NSX400-630 DC
Insulation accessories			
 DB117159.eps 1 connection adapter for plug-in base	3P	**LV429306**	**LV432584**
	4P	**LV429307**	**LV432585**
Auxiliary connections			
 DB117160.eps 1 9-wire fixed connector (for base)		**LV429273**	**LV429273**
 DB117161.eps 1 9-wire moving connector (for circuit breaker)		**LV429274**	**LV432523**
 DB116388.eps 1 support for 2 moving connectors		**LV429275**	**LV432525**
 DB115885.eps 9-wire manual auxiliary connector (fixed + moving)		**LV429272**	**LV429272**
Plug-in base accessories			
 DB117164.eps 2 long insulated right angle terminal extensions	Set of 2	**LV429276**	**LV432526**
 DB117165.eps 2 IP40 shutters for base		**LV429271**	**LV432521**
 DB117180.eps Base	2P	**LV429265**	
	3P	**LV429266**	**LV432516**
 DB117181.eps Base	4P	**LV429267**	**LV432517**
 DB117182.eps 2 power connections	2/3/4P	**LV429268**	**LV432518**
 DB117183.eps 1 short terminal shields	2/3P	**LV429515**	**LV432591**
 DB117184.eps 1 short terminal shields	4P	**LV429516**	**LV432592**
 DB117171.eps 1 safety trip interlock	2/3/4P	**LV429270**	**LV432520**
Installation and connection			
Kit for ComPacT	3P	**LV429289 +** **LV429282 +** **LV429283**	**LV432538 +** **LV432532 +** **LV432533**
	4P	**LV429290 +** **LV429282 +** **LV429283**	**LV432539 +** **LV432532 +** **LV432533**

F


Spare Parts: Com**PacT** NSX100 DC to 1200 DC, NSX400 NA DC to NSX630 NA DC

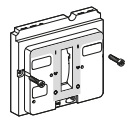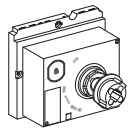Spare Parts			NSX100-250 DC	NSX400-1200 DC
 DB115633.eps	Additional toggle extension			**32595**
 DB111430.eps	10 spare toggle extensions (only for ComPacT NSX250)		**LV429313**	
	5 spare toggle extensions			**LV432553**
 DB115620.eps	Bag of screws		**LV429312**	**LV432552**
 DB111431.eps	12 snap-in nuts (fixed/FC)	M6 for NSX100N/H/L	**LV429234**	
		M8 for NSX160/250N/H/L	**LV430554**	
 DB438117.ai	NS retrofit escutcheon	Small cut-out	**LV429528**	**LV432571**
 DB432106.eps	IP40 toggle escutcheon	ComPacT NS type/small cut-out	**29315**	**32556**
 DB111438.eps	1 set of 10 identification labels		**LV429226**	**LV429226**
 DB438118.ai	1 base for extended rotary handle		**LV429502**	**LV432498**
 DB111434.eps	Torque limiting screws (set of 12)	3P/4P ComPacT NSX100-630	**LV429513**	**LV432513**
 DB111436.eps	5 transparent covers for trip unit	TM, MA, NA	**LV429481**	

F

ComPacT INS DC PV - ComPacT NSX80/500 TM DC PV to NSX100/500 NA DC PV


ComPacT INS DC PV - 1 [1]

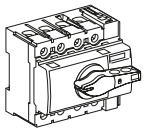
DB417876.eps

ComPacT INS PV - 1	4P	**28907**

ComPacT NSX TM DC PV 4P Circuit Breaker


Connection and Insulation Accessories Mandatory

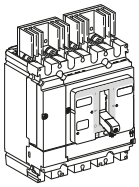
DB438421.ai

		Upstream connection (x2)		Upstream terminal shields	Downstream terminal shields
NSX80	**C10F4TM080D1**	connection plate with heatsink	**LV438328**	**LV438327**	**LV429518**
NSX125	**C16F4TM125D1**		**LV438328**	**LV438327**	**LV429518**
NSX160	**C16F4TM160D1**		**LV438328**	**LV438327**	**LV429518**
NSX200	**C25F4TM200D1**		**LV438328**	**LV438327**	**LV429518**
NSX250	**C25F4TM250D1**		**LV438338**	**LV438293**	**LV432594**
NSX320	**C40F4TM320D1**		**LV438338**	**LV438293**	**LV432594**
NSX400	**C40F4TM400D1**		**LV438338**	**LV438293**	**LV432594**
NSX500	**C63F4TM500D1**		**LV438338**	**LV438293**	**LV432594**

ComPacT NSX NA DC PV 4P Switch Disconnector


Connection and Insulation Accessories Mandatory

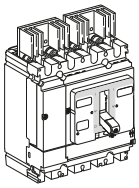
DB438421.ai

		Upstream connection (x2)		Upstream terminal shields	or interphase barrier	Downstream terminal shields	or interphase barrier
NSX100	**C104100D1S**	connection plate with heatsink	**LV438328**	**LV438327**	**LV429329**	**LV429518**	**LV429329**
NSX160	**C164160D1S**		**LV438328**	**LV438327**	**LV429329**	**LV429518**	**LV429329**
NSX200 (≤ 200 A at 40 °C)	**C254200D1S**		**LV438328**	**LV438327**	**LV429329**	**LV429518**	**LV429329**
NSX200 (= 200 A at 55 °C)	**C254200D1S**	connection plate with heatsink (long)	**LV438339**	not available	**LV429329**	**LV429518**	**LV429329**
NSX400	**C404400D1S**	connection plate with heatsink	**LV438338**	**LV438337**	**LV432570**	**LV432594**	**LV432570**
NSX500	**C634500D1S**		**LV438338**	**LV438337**	**LV432570**	**LV432594**	**LV432570**

ComPacT NSX TM DC EP 4P Circuit Breaker


Connection and Insulation Accessories Mandatory

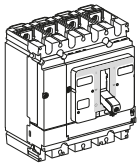
DB438422.ai

		Upstream connection (x2)		Upstream terminal shields	Dowstream terminal shields
NSX250-100	**C25F4TM100D3**	connection plate with heatsink	**LV438328**	**LV438327**	**LV429518**
NSX250-125	**C25F4TM125D3**		**LV438328**	**LV438327**	**LV429518**
NSX250-160	**C25F4TM160D3**		**LV438328**	**LV438327**	**LV429518**
NSX250-200	**C25F4TM200D3**		**LV438328**	**LV438327**	**LV429518**
NSX250-250	**C25F4TM250D3**		**LV438328**	**LV438327**	**LV429518**
NSX500-250	**C50F4TM250D3**		**LV438338**	**LV438293**	**LV432594**
NSX500-320	**C50F4TM320D3**		**LV438338**	**LV438293**	**LV432594**
NSX500-400	**C50F4TM400D3**		**LV438338**	**LV438293**	**LV432594**
NSX500-500	**C50F4TM500D3**		**LV438338**	**LV438293**	**LV432594**

ComPacT NSX NA DC EP 4P Switch Disconnector

Connection and Insulation Accessories Mandatory

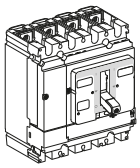
DB438422.ai







		Upstream connection (x2)		Upstream terminal shields	or interphase barrier	Downstream terminal shields	or interphase barrier
NSX250-100	**C254100D3S**	connection plate with heatsink	**LV438328**	**LV438327**	**LV429329**	**LV429518**	**LV429329**
NSX250-160	**C254160D3S**		**LV438328**	**LV438327**	**LV429329**	**LV429518**	**LV429329**
NSX250-200	**C254200D3S**		**LV438328**	**LV438327**	**LV429329**	**LV429518**	**LV429329**
NSX250-250	**C254250D3S**		**LV438328**	**LV438327**	**LV429329**	**LV429518**	**LV429329**
NSX630-320	**C634320D3S**		**LV438338**	**LV438293**	**LV432570**	**LV432594**	**LV432570**
NSX630-400	**C634400D3S**		**LV438338**	**LV438293**	**LV432570**	**LV432594**	**LV432570**
NSX630-500	**C634500D3S**		**LV438338**	**LV438293**	**LV432570**	**LV432594**	**LV432570**
NSX630-630	**C634630D3S**		**LV438338**	**LV438293**	**LV432570**	**LV432594**	**LV432570**

[1] For accessories, see catalog INS/INV page dedicated to INS40 to 160 A.

F

ComPacT NSX80/500 TM DC PV to NSX100/500 NA DC PV

Connection Accessories









Connection Accessories (Cu or Al)				NSX100-250 DC PV	NSX400-630 DC PV
Rear connections					
 DB112225.eps	2 short			**LV429235**	**LV432475**
	2 long			**LV429236**	**LV432476**
Terminal shield					
 DB432107.eps	1 short terminal shield for breaker or plug-in base		4P	**LV429516**	**LV432592**
Bare cable connectors					
 DB112226.eps	Steel connectors	1.5 to 95 mm² ; ≤ 160 A	Set of 2	**LV429246**	
			Set of 3	**LV429242**	
			Set of 4	**LV429243**	
 DB112725.eps	Aluminium connectors	25 to 95 mm² ; ≤ 250 A	Set of 2	**LV429255**	
			Set of 3	**LV429227**	
			Set of 4	**LV429228**	
		120 to 185 mm² ; ≤ 250 A	Set of 2	**LV429247**	
			Set of 3	**LV429259**	
			Set of 4	**LV429260**	
 DB112726.eps	Clips for connectors		Set of 10	**LV429241**	
 DB112227.eps	Aluminium connectors for 2 cables [1] 2 x (50 to 120 mm²) ; ≤ 250 A		Set of 3 (3P)	**LV429218**	
			Set of 4 (4P)	**LV429219**	
	Aluminium connectors 1 x (35 to 300 mm²)		Set of 3 (3P)		**LV432479**
			Set of 4 (4P)		**LV432480**
 DB112228.eps	Aluminium connectors [1] for 6 cables 6 x (1.5 to 35 mm²) ; ≤ 250 A		Set of 3 (3P)	**LV429248**	
			Set of 4 (4P)	**LV429249**	
	Aluminium connectors for 2 cables 2 x (35 to 300 mm²)		Set of 3 (3P)		**LV432481**
			Set of 4 (4P)		**LV432482**
 DB112724.eps	6.35 mm voltage tap for steel or aluminium connectors		Set of 10	**LV429348**	

[1] Supplied with 2 or 3 interphase barriers.

F

ComPacT NSX80/500 TM DC PV to NSX100/500 NA DC PV

Connection Accessories (Cont.)

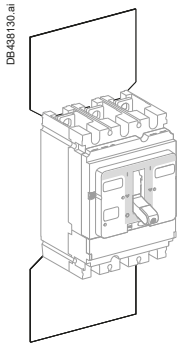Connection Accessories (Cu or Al)			NSX100-250 DC PV	NSX400-630 DC PV
Terminal extensions				
 DB432094.eps	Right-angle terminal extensions	Set of 2	**LV429250**	
		Set of 3	**LV429261**	**LV432484**
		Set of 4	**LV429262**	**LV432485**
 DB432095.eps	Straight terminal extensions	Set of 2	**LV429251**	
		Set of 3	**LV429263**	
		Set of 4	**LV429264**	
 DB112230.eps	45° terminal extension [1]	Set of 3	**LV429223**	
		Set of 4	**LV429224**	
 DB112231.eps	Edgewise terminal extensions [1]	Set of 3	**LV429308**	**LV432486**
		Set of 4	**LV429309**	**LV432487**
 DB112234.eps	Double-L terminal extensions [1]	Set of 3	**LV429221**	
		Set of 4	**LV429222**	
 DB112235.eps	Spreaders from 35 to 45 mm pitch [1]	3P	**LV431563**	
		4P	**LV431564**	
Crimp lugs for copper cable (supplied with 2 or 3 interphase barriers)				
 DB112237.eps	For cable 120 mm²	Set of 3	**LV429252**	
		Set of 4	**LV429256**	
	For cable 150 mm²	Set of 3	**LV429253**	
		Set of 4	**LV429257**	
	For cable 185 mm²	Set of 3	**LV429254**	
		Set of 4	**LV429258**	
	For cable 240 mm²	Set of 3		**LV432500**
		Set of 4		**LV432501**
	For cable 300 mm²	Set of 3		**LV432502**
		Set of 4		**LV432503**
Crimp lugs for aluminium cable (supplied with 2 or 3 interphase barriers)				
 DB112238.eps	For cable 150 mm²	Set of 3	**LV429504**	
		Set of 4	**LV429505**	
	For cable 185 mm²	Set of 3	**LV429506**	
		Set of 4	**LV429507**	
	For cable 240 mm²	Set of 3		**LV432504**
		Set of 4		**LV432505**
	For cable 300 mm²	Set of 3		**LV432506**
		Set of 4		**LV432507**
Barriers				
 DB432096.eps	Interphase barriers	Set of 6	**LV429329**	**LV432570**
Insulation screen				
 DB438130.ai	2 insulating screens for breaker (45 mm pitch)	3P	**LV429330**	
		4P	**LV429331**	
	2 insulating screens for breaker (70 mm pitch)	3P		**LV432578**
		4P		**LV432579**

[1] Supplied with 2 or 3 interphase barriers.


Note: Circuit breakers or switch-disconnectors must be in "off" position when fitting the mechanical or electrical accessories.

F

ComPacT NSX80/500 TM DC PV to NSX100/500 NA DC PV
Electrical Auxiliaries

Electrical Auxiliaries


Auxiliary contacts (changeover)



OF or SD or SDE or SDV		**29450**
OF or SD or SDE or SDV low level		**29452**
SDE adapter, mandatory for trip unit		**LV429451**




Voltage releases		MX	MN
AC	24 V 50/60 Hz	**LV429384**	**LV429404**
	48 V 50/60 Hz	**LV429385**	**LV429405**
	110-130 V 50/60 Hz	**LV429386**	**LV429406**
	220-240 V 50/60 Hz 208-277 V 60 Hz	**LV429387**	**LV429407**
	380-415 V 50 Hz 440-480 V 60 Hz	**LV429388**	**LV429408**
	525 V 50 Hz - 600 V 60 Hz	**LV429389**	**LV429409**
DC	12 V	**LV429382**	**LV429402**
	24 V	**LV429390**	**LV429410**
	30 V	**LV429391**	**LV429411**
	48 V	**LV429392**	**LV429412**
	60 V	**LV429383**	**LV429403**
	125 V	**LV429393**	**LV429413**
	250 V	**LV429394**	**LV429414**

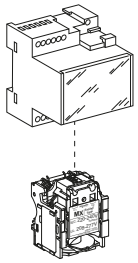

MN 48 V 50/60 Hz with fixed time delay		
Composed of:	MN 48 V DC	**LV429412**
	Delay unit 48 V 50/60 Hz	**LV429426**
MN 220-240 V 50/60 Hz with fixed time delay		
Composed of:	MN 250 V DC	**LV429414**
	Delay unit of 220-240 V 50/60 Hz	**LV429427**
MN 48 V DC/AC 50/60 Hz with adjustable time delay		
Composed of:	MN 48 V DC	**LV429412**
	Delay unit 48 V DC/AC 50/60 Hz	**33680**
MN110-130 V DC/AC 50/60 Hz with adjustable time delay		
Composed of:	MN 125 V DC	**LV429413**
	Delay unit 100-130 V DC/AC 50/60 Hz	**33681**
MN 220-250 V DC/AC 50/60 Hz with adjustable time delay		
Composed of:	MN 250 V DC	**LV429414**
	Delay unit 200-250 V DC/AC 50/60 Hz	**33682**


Motor Mechanism

Motor mechanism module supplied with SDE adapter




	Voltage	MT100/160/250	MT400-630
AC	48-60 V 50/60 Hz	**LV431548**	**LV432639**
	110-130 V 50/60 Hz	**LV431540**	**LV432640**
	220-240 V 50/60 Hz 208-277 V 60 Hz	**LV431541**	**LV432641**
	380-415 V 50/60 Hz 440-480 V 60 Hz	**LV431542**	**LV432642** **LV432647**
DC	24-30 V	**LV431543**	**LV432643**
	48-60 V	**LV431544**	**LV432644**
	110-130 V	**LV431545**	**LV432645**
	250 V	**LV431546**	**LV432646**
Operations counter			**LV432648**

Communicating motor mechanism module supplied with SDE adapter



Motor mechanism module	MTc 100/160/250	220-240 V 50/60 Hz	**LV431549**
	MTc 400/630	220-240 V 50/60 Hz	**LV432652**
+			
Breaker and Status Communication Module	BSCM		**LV434205**
+			
NSX cord	Wire length L = 0.35 m		**LV434200**
	Wire length L = 1.3 m		**LV434201**
	Wire length L = 3 m		**LV434202**
	U > 480 V AC wire length L = 0.35 m		**LV434204**






F





ComPacT NSX80/500 TM DC PV to NSX100/500 NA DC PV
Electrical Auxiliaries

Communication Option [1]



ULP communication module

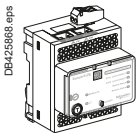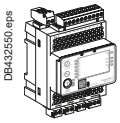 DB425868.eps	IFE	Ethernet interface for LV breaker	**LV434001**
		Ethernet interface for LV breakers and gateway	**LV434002**
 DB425706.eps	IFM Modbus-SL interface module		**LV434000**
 DB432550.eps	I/O application module		**LV434063**
	User guide IFE		**DOCA0084EN**
	User guide I/O application module		**DOCA0055EN**

ULP wiring accessories

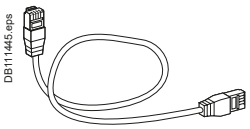 DB111442.eps	NSX cord L = 0.35 m	**LV434200**
	NSX cord L = 1.3 m	**LV434201**
	NSX cord L = 3 m	**LV434202**
	NSX cord for U > 480 V AC L = 1.3 m	**LV434204**
 DB115621.eps	10 stacking connectors for communication interface modules	**TRV00217**
 DB432584.ai	2 Modbus line terminators	**VW3A8306DRC** [2]
 DB115622.eps	RS 485 roll cable (4 wires, length 60 m)	**50965**
 DB115623.eps	5 RJ45 connectors female/female	**TRV00870**
 DB111444.eps	10 ULP line terminators	**TRV00880**
 DB111445.eps	10 RJ45/RJ45 male cord L = 0.3 m	**TRV00803**
	10 RJ45/RJ45 male cord L = 0.6 m	**TRV00806**
	5 RJ45/RJ45 male cord L = 1 m	**TRV00810**
	5 RJ45/RJ45 male cord L = 2 m	**TRV00820**
	5 RJ45/RJ45 male cord L = 3 m	**TRV00830**
	1 RJ45/RJ45 male cord L = 5 m	**TRV00850**

Power supply modules

 DB112278.eps	External power supply module 100-240 V AC 110-230 V DC/24 V DC-3 A class 2	**ABL8RPS24030**
 DB112736.eps	External power supply module 24 V DC-1 A OVC IV	
	24-30 V DC	**54440**
	48-60 V DC	**54441**
	100-125 V AC	**54442**
	110-130 V AC	**54443**
	200-240 V AC	**54444**
	380-415 V AC	**54445**


[1] NSX80-250 DC PV TM/NA only.
[2] www.schneider-electric.com.

F



ComPacT NSX80/500 TM DC PV to NSX100/500 NA DC PV

Operation and Locking/Interlocking


Rotary Handles

		NSX100-250 DC PV	NSX400-630 DC PV
Direct rotary handles			
 DB438131.ai	With black handle	**LV429337**	**LV432597**
	With red handle on yellow front	**LV429339**	**LV432599**
	MCC conversion accessory	**LV429341**	**LV432606**
	CNOMO conversion accessory	**LV429342**	**LV432602**
Extended rotary handle			
 DB438108.ai	With black handle	**LV429338**	**LV432598**
	With red handle on yellow front	**LV429340**	**LV432600**
	With telescopic handle for withdrawable device	**LV429343**	**LV432603**
Accessories			
Indication auxiliary	1 early-break contact	**LV429345**	**LV432605**
	2 early-break contacts	**LV429346**	**LV429346**

Locks

		NSX100-250 DC PV	NSX400-630 DC PV
Toggle locking device for 1 to 3 padlocks			
 DB438109.ai	By removable device	**29370**	**29370**
 DB438110.ai	By fixed device (open or close position)	**LV429371**	**LV432631**
	By fixed device (open position only)	**LV429370** [1]	**LV432630** [1]
Locking of the rotary handle			
 DB438111.ai	Keylock adapter (keylock not included)	**LV429344**	**LV432604**
	Keylock (keylock adapter not included) Ronis 1351B.500	**41940**	**41940**
	Keylock (keylock adapter not included) Profalux KS5 B24 D4Z	**42888**	**42888**
Locking of the motor mechanism modules			
 DB432104.eps	Keylock adapter + Ronis keylock (special)	**LV429449**	**LV432649**
	Keylock (keylock adapter not included) Ronis 1351B.500		**41940**
	Keylock (keylock adapter not included) Profalux KS5 B24 D4Z		**42888**




Interlocking

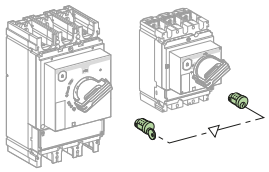		NSX100-250 DC PV	NSX400-630 DC PV
Interlocking with key (2 keylocks/1 key) for rotary handles			
 DB438114.ai	Keylock kit (keylock not included) [2]	**LV429344**	**LV432604**
	1 set of 2 keylocks Ronis 1351B.500	**41950**	**41950**
	(1 key only, keylock kit not included) Profalux KS5 B24 D4Z	**42878**	**42878**

[1] Available February 2014.
[2] NSX100-250 DC PV only.

F

ComPacT NSX80/500 TM DC PV to NSX100/500 NA DC PV
Installation

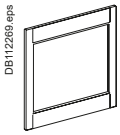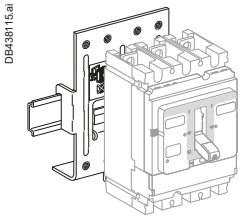Installation Accessories		NSX100-250 DC PV	NSX400-630 DC PV
Front-panel escutcheons			
 DB112269.eps	IP30 escutcheon for all control types	**LV429525**	**LV432557**
	IP30 trip unit access escutcheon for toggle	**LV429526**	**LV432559**
IP30			
 DB112737.eps	IP40 escutcheon for all control types	**LV429317**	**LV432558**
IP40			
IP43 rubber toggle cover			
 DB112738.eps	1 toggle cover	**LV429319**	**LV432560**
Lead-sealing accessories			
 DB115615.eps	Bag of accessories	**LV429375**	**LV429375**
Din rail adapter			
 DB438115.ai	1 adapter	**LV429305**	


F

Life Is On Schneider Electric

ComPacT NSX630b to 1600 NA DC PV Fixed Electrically Operated


Complete Device without Motor Mechanism Module

Complete Molded Case Switch-Disconnector (without Motor Mechanism Module)

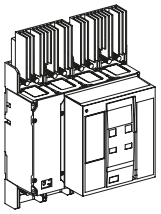

Molded case switch disconnector ComPacT NSX630b NA DC PV 630 A 4P	**LV438969**
Molded case switch disconnector ComPacT NSX800 NA DC PV 800 A 4P	**LV438970**
Molded case switch disconnector ComPacT NSX1000 NA DC PV 1000 A 4P	**LV438971**
Molded case switch disconnector ComPacT NSX1250 NA DC PV 1250 A 4P	**LV438972**
Molded case switch disconnector ComPacT NSX1600 NA DC PV 1500 A 4P	**LV438973**

Note: All references above include:

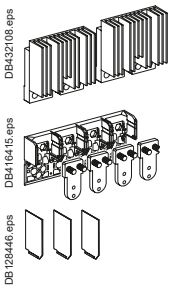

Basic frame	
Heatsink	Kit of 2 (LV438966)
Front connection:	Top (33612)
	Bottom (33613)
Interphase barriers	Kit of 3 (33646)

Electrical Auxiliaries for Complete Device


Indication contacts



	6 A - 240 V	Low level
OF, ON/OFF indication contacts	**33108**	**33109**

Up to 3 OF can be connected.

Instantaneous voltage releases



	MX	MN			
			Delay unit	**R** (non-adjustable)	**Rr** (adjustable)
12 V DC	**33658**				
24/30 V DC	**33659**	**33668**			
48/60 V DC	**33660**	**33669**	48/60 V DC		**33680**
100/130 V DC	**33661**	**33670**	100/130 V DC	**33684**	**33681**
200/250 V DC	**33662**	**33671**	200/250 V DC	**33685**	**33682**
			380/480 V DC		**33683**


F

ComPacT NSX630b to 1600 NA DC PV Fixed Electrically Operated

Device Based on Separate Components with or without Motor Mechanism Module

Basic Frame Molded Case Switch-Disconnector

DB432110.eps

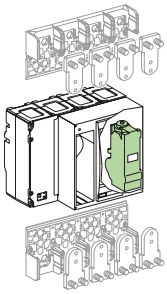


ComPacT NSX type NA

	4P
NSX630b NA DC PV	**LV453421**
NSX800 NA DC PV	**LV453423**
NSX1000 NA DC PV	**LV453425**
NSX1250 NA DC PV	**LV453427**
NSX1600 NA DC PV	**LV453429**

Note: The characteristics of the motor mechanism module for electrical operation are specified separately by selecting a part number from the table at the bottom of this page.

Connections for Basic Frame Molded Case Switch-Disconnectors


DB416415.eps




DB128446.eps



DB432108.eps



DB432111.eps

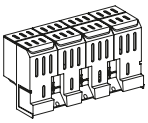

DB416416.eps



Front connection

				4P
Top		630-1000 A - NA		**33612**
		Heatsink mandatory	Kit of 2	**LV438966**
Bottom		interphase barriers*	Kit of 3	**33646**
	or	Terminal shield*		**LV438968**
		* interphase barriers or terminal shield is mandatory		
		Front connection 630-1000 A - NA	Bottom	**33609**
		630-1000 A - L	Bottom	**33611**
		1600 A - NA	Bottom	**33613**
		Rear connection Vertical NA	Bottom	**33615**
		Horizontal NA	Bottom	**33617**

Electrical Auxiliaries

Indication contacts


DB128428.eps



	6 A - 240 V	Low level
OF, ON/OFF indication contacts Up to 3 OF can be connected.	**33108**	**33109**

Instantaneous voltage releases


DB128429.eps



	MX	MN			
			Delay unit	**R** (non-adjustable)	**Rr** (adjustable)
12 V DC	**33658**				
24/30 V DC	**33659**	**33668**			
48/60 V DC	**33660**	**33669**	48/60 V DC		**33680**
100/130 V DC	**33661**	**33670**	100/130 V DC	**33684**	**33681**
200/250 V DC	**33662**	**33671**	200/250 V DC	**33685**	**33682**
			380/480 V DC		**33683**

Communication Options

DB432112.eps

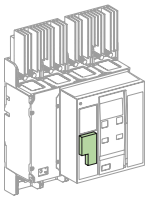


For fixed devices	Electrically operated
Modbus COM	**33708**

Motor Mechanism Module

DC

DB432113.eps



	Standard	Communicating
24/30 V	**33690**	**33697**
48/60 V	**33691**	**33698**
100/130 V	**33692**	**33699**
200/250 V	**33693**	**33700**

Note: To order a complete device, order:


- A basic frame switch disconnector
- Connections
- Electrical auxiliaries.
- Communication option as required.
- Motor mechanism as required.

F

ComPacT INS40 to 160 DC
Complete Fixed/FC Device and Accessories


ComPacT INS40 to 160 Standard Version with Black Handle

DB432114.eps

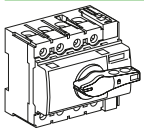

	3P	4P
ComPacT INS40	**28900**	**28901**
ComPacT INS63	**28902**	**28903**
ComPacT INS80	**28904**	**28905**
ComPacT INS80PV - Photovoltaic	**-**	**28907**


DB432115.eps

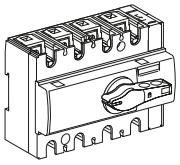

	3P	4P
ComPacT INS100	**28908**	**28909**
ComPacT INS125	**28910**	**28911**
ComPacT INS160	**28912**	**28913**


ComPacT INS40 to 160 with Red Handle and Yellow Front

DB432114.eps

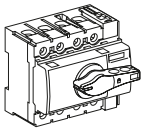

	3P	4P
ComPacT INS40	**28916**	**28917**
ComPacT INS63	**28918**	**28919**
ComPacT INS80	**28920**	**28921**

DB432115.eps

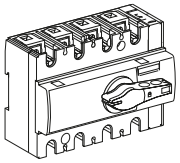


	3P	4P
ComPacT INS100	**28924**	**28925**
ComPacT INS125	**28926**	**28927**
ComPacT INS160	**28928**	**28929**

F

ComPacT INS40 to 160 DC
Accessories

Connection Accessories (Cont.)


Connectors for bare Cu or Al cables

 DB432116.eps	Snap-in	INS100 to 160 S ≤ 95 mm²	Set of 3	**28947**
			Set of 4	**28948**
 DB432117.eps	Distribution connector for 3 rigid cables up to 16 mm² or 3 flexible cables up to 10 mm²	INS40 to 80	Set of 3	**19096**
			Set of 4	**19091**
 DB432118.eps	Distribution connector for 4 rigid cables up to 25 mm² or 4 flexible cables up to 16 mm²	INS100 to 160	Set of 3	**28949**
			Set of 4	**28950**


Crimp lugs for copper cables

 DB432119.eps	For 95 mm² cables with interphase barriers	INS100 to 160	Set of 3	**28951**
			Set of 4	**28952**


Terminal shrouds

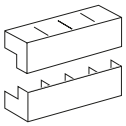 DB432120.eps	INS40 to 80	3P/4P	Set of 2	**28955**
	INS100 to 160	3P/4P	Set of 2	**28956**

Terminal shields


 DB432121.eps	INS40 to 80	3P/4P	Set of 2	**28957**
	INS100 to 160	3P/4P	Set of 2	**28958**

Interphase barriers

 DB432122.eps	INS100 to 160	3P/4P	Set of 6	**28959**

Electrical Auxiliaries


Auxiliary contacts

 DB438418.ai	1 CAF/CAO standard (early make or break)	INS40 to 160	**29450**
	1 CAF/CAO low level (early make or break)	INS40 to 160	**29452**

Rotary Handles

Direct front control or lateral control — Built-in

Accessories for conversion to extended rotary handles

 DB432124.eps	Front control	Black handle	INS40 to 160	**LV428941**
		Red handle on yellow front	INS40 to 160	**LV428942**
 DB432125.eps	Lateral control	Black handle	INS40 to 160	**28943**
		Red handle on yellow front	INS40 to 160 [1]	**28944**
	Lateral control on PRAGMA F functional enclosure	Black handle	INS40 to 160	**28945** [2]
		Red handle on yellow front	INS40 to 160 [1]	**28946**


[1] For red/yellow switch versions only.
[2] Not available with Prisma.

F

Locking and Interlocking

Handle locking


DB432126.eps



By 1 to 3 padlocks (OFF position), hasp dia. 5 to 8 mm, or by lead seals	**Built-in**

Interlocking for extended rotary handles

DB432127.eps

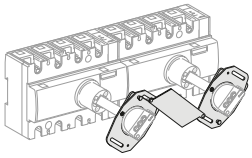


Mechanical	**28953**

ComPacT INS250-100 to 630 DC
Complete Fixed/FC Device and Accessories


ComPacT INS250 to 630 Standard Version with Black Handle

DB432128.eps

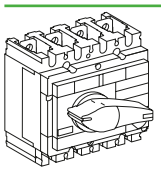

	3P	4P
ComPacT INS250-100A	**31100**	**31101**
ComPacT INS250-160A	**31104**	**31105**
ComPacT INS250-200A	**31102**	**31103**
ComPacT INS250	**31106**	**31107**


DB432129.eps

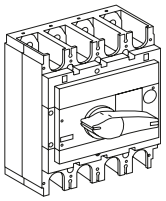

	3P	4P
ComPacT INS320	**31108**	**31109**
ComPacT INS400	**31110**	**31111**
ComPacT INS500	**31112**	**31113**
ComPacT INS630	**31114**	**31115**


ComPacT INS250 to 630 with Red Handle and Yellow Front

DB432128.eps

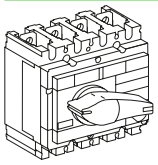

	3P	4P
ComPacT INS250-100A	**31120**	**31121**
ComPacT INS250-160A	**31124**	**31125**
ComPacT INS250-200A	**31122**	**31123**
ComPacT INS250	**31126**	**31127**

DB432129.eps

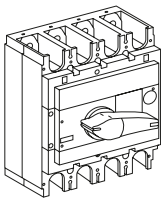

	3P	4P
ComPacT INS320	**31128**	**31129**
ComPacT INS400	**31130**	**31131**
ComPacT INS500	**31132**	**31133**
ComPacT INS630	**31134**	**31135**


F

ComPacT INV100 to 630 DC

Complete Fixed/FC Device and Specific Accessories


ComPacT INV100 to 630 Standard Version with Black Handle

DB432130.eps

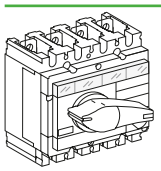

	3P	4P
ComPacT INV100	**31160**	**31161**
ComPacT INV160	**31164**	**31165**
ComPacT INV200	**31162**	**31163**
ComPacT INV250	**31166**	**31167**


DB432131.eps

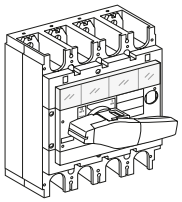

	3P	4P
ComPacT INV320	**31168**	**31169**
ComPacT INV400	**31170**	**31171**
ComPacT INV500	**31172**	**31173**
ComPacT INV630	**31174**	**31175**


ComPacT INV100 to 630 with Red Handle and Yellow Front

DB432130.eps

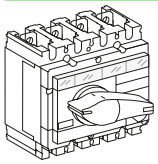

	3P	4P
ComPacT INV100	**31180**	**31181**
ComPacT INV160	**31184**	**31185**
ComPacT INV200	**31182**	**31183**
ComPacT INV250	**31186**	**31187**

DB432131.eps

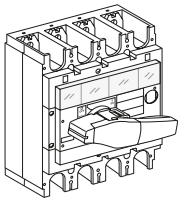


	3P	4P
ComPacT INV320	**31188**	**31189**
ComPacT INV400	**31190**	**31191**
ComPacT INV500	**31192**	**31193**
ComPacT INV630	**31194**	**31195**

F

ComPacT INS250-100 to 250 DC and ComPacT INV100 to 250 DC Accessories


Connection Accessories


Rear connections



Short (1 pair)			**LV429235**
Long (1 pair)			**LV429236**

Cable connectors






Snap-on, for cables:	Steel: 1.5 to 95 mm² ; ⩽ 160 A	Set of 3	**LV429242**
		Set of 4	**LV429243**
	Aluminium: 25 to 95 mm² ; ⩽ 250 A	Set of 3	**LV429227**
		Set of 4	**LV429228**
	Aluminium: 120 to 185 mm² ; ⩽ 250 A	Set of 3	**LV429259**
		Set of 4	**LV429260**




Tab connector for voltage tap on 185 mm² cable connector		Set of 10	**LV429348**



Clip for cable connector		Set of 10	**LV429241**





Distribution connector for six 1.5 to 35 mm² cables with interphase barriers		Set of 3	**LV429248**
		Set of 4	**LV429249**



Aluminium connectors for 2 cables: 2 x (50 to 120 mm²); ⩽ 250 A		Set of 3	**LV429218**
		Set of 4	**LV429219**

Linergy DX and DP distribution block






Linergy DX 160 A	For 6 cables (16 mm²) per pole [1]	1P	**04031**
Linergy DP 250 A	For 9 cables (6 x 10 mm² + 3 x 16 mm²) per pole [1]	3P	**04033**
		4P	**04034**
	Additional blocks of 2 x 35 mm² per pole [1]	3P	**04155**
		4P	**04156**

Linergy DS distribution block



Linergy DS 250 A	For 14 holes (1 x 15.3 mm² + 1 x 10 mm² + 4 x 6 mm² + 8 x 7.5 mm²)	1P	**LGY125014**

Terminal extensions (supplied with 2 or 3 interphase barriers)



Right-angle terminal extensions [1]		Set of 3	**LV429261**
		Set of 4	**LV429262**




Straight terminal extensions [1]		Set of 3	**LV429263**
		Set of 4	**LV429264**

Spreaders (for upstream or downstream connection)



Separate for each pole		3P	**LV431563**
		4P	**LV431564**




One-piece		3/4P	**LV431061**
Front alignment base for one-piece spreader (when mounting with LV432594 and LV432596, refer chapter dimensions and connection in catalog ComPacT INS/INV "LVPED213024EN")		3/4P	**LV431064**

Crimp lugs for copper cables (supplied with 2 or 3 interphase barriers)



For 120 mm² cables		Set of 3	**LV429252**
		Set of 4	**LV429256**
For 150 mm² cables		Set of 3	**LV429253**
		Set of 4	**LV429257**
For cable 185 mm² cables		Set of 3	**LV429254**
		Set of 4	**LV429258**

Crimp lugs for aluminium cables (supplied with 2 or 3 interphase barriers)



For 150 mm² cables		Set of 3	**LV429504**
		Set of 4	**LV429505**
For 185 mm² cables		Set of 3	**LV429506**
		Set of 4	**LV429507**

[1] Supplied with 2 or 3 interphase barriers.


F

ComPacT INS250-100 to 250 DC and ComPacT INV100 to 250 DC

Accessories


Connection Accessories

Terminal shields




1 Short	3/4 P		**LV429516**
1 Long	3/4 P		**LV429518**

Interphase barriers

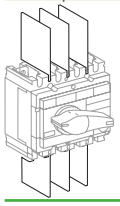

	Set of 6	**LV429329**


Special Connection Accessories for INS250-100 to 250DC and INV100 to 250DC

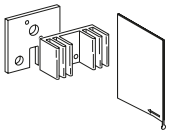

Terminal extensions for series or parallel connection of two poles [1]	1 terminal ext.	**LV438328**




Terminal extensions for parallel connection of three poles:		
Parallel connection of: 3 poles = set of 2 terminal extensions		**LV438329**



4P terminal shields for series connection of poles	Set of 1	**LV438326**
4P terminal shields for parallel connection of poles (2P/4P)	Set of 1	**LV438327**

Electrical Auxiliaries

Auxiliary contacts (changeover type)



CAM (early make or break)	**29450**
Low level CAM (early make or break)	**29452**


Rotary Handles

Front control



Direct for INS/INV250	Built-in
Extended	
For INS/INV250 with standard rotary handle	**LV431050**
For INS/INV250 with red handle on yellow front [2]	**LV431051**
For complete source changeover assembly	**31055**

Lateral control



Direct lateral control for INS/INV250	
Lateral support	**31054**
+ standard lateral control assembly	**31057**
or + red and yellow lateral control assembly [2]	**31058**
Extended lateral control for INS/INV250	
Standard lateral control assembly	**31057**
Red and yellow lateral control assembly [2]	**31058**

[1] Series connection of: 2 poles = 1 terminal extension
3 poles = 2 terminal extensions
4 poles = 3 terminal extensions

Parallel connection of: 2 poles = 2 terminal extensions
4 poles = 4 terminal extensions

[2] For red/yellow switch versions only.


F

ComPacT INS250-100 to 250 DC and ComPacT INV100 to 250 DC
Accessories

Locking and Interlocking for INS/INV and TransferPacT Source Changeover Systems

Locking for INS/INV


DB432141.eps

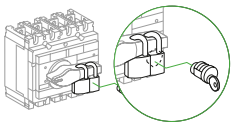

Handle locking by 1 to 3 padlocks (in OFF position)		Built-in
By keylock	Keylocking device 2 x	**31087**
	+ Ronis 1351B.500 keylock	**41940**
	or + Profalux KS5 B24 D4Z keylock	**42888**

Locking for INS complete TransferPacT source changeover assembly


DB432142.eps

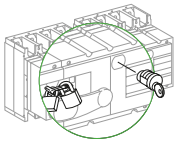

Handle locking by 1 to 3 padlocks (in OFF position)		Built-in
By keylock	Keylocking device	**31097**
	+ Ronis 1351B.500 keylock	**41940**
	or + Profalux KS5 B24 D4Z keylock	**42888**

Interlocking with key (2 keylocks/1 key)


DB432143.eps

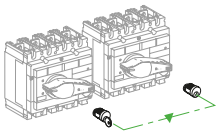

By 2 keylocks	INS250 keylocking device	2 x	**31087**
	INS320-630 keylocking device	2 x	**31088**
	+ Ronis 1351B.500 keylock	2 x	**41950**
	or + Profalux KS5 B24 D4Z keylock	2 x	**42878**

Interlocking for INS/INV with direct or extended rotary handle

DB432151.eps

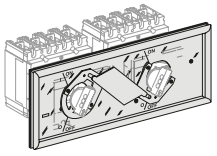

Mechanical interlocking for INS250	**31073**


F

ComPacT INS320 to 630 DC and ComPacT INV320 to 630 DC

Accessories

Connection Accessories

Rear connections



Short (1 pair)		**LV432475**
Long (1 pair)		**LV432476**

Cable connectors







For 1 cable, 35 mm² to 300 mm²	Set of 3	**LV432479** [1]
	Set of 4	**LV432480** [2]
For 2 cables, 35 mm² to 240 mm²	Set of 3	**LV432481** [1]
	Set of 4	**LV432482** [2]
Tab connector for voltage tap on cable connector	Set of 10	**LV429348**


Terminal extensions (supplied with 2 or 3 interphase barriers)





Right-angle terminal extensions	Set of 3	**LV432484**
	Set of 4	**LV432485**
Edgewise terminal extensions	Set of 3	**LV432486**
	Set of 4	**LV432487**

Spreaders (for upstream or downstream connection)




One-piece	52.5 mm	3P	**LV432490**
		4P	**LV432491**
	70 mm	3P	**LV432492**
		4P	**LV432493**

Crimp lugs for copper cables (supplied with 2 or 3 interphase barriers)



For 240 mm² cables	Set of 3	**LV432500**
	Set of 4	**LV432501**
For 300 mm² cables	Set of 3	**LV432502**
	Set of 4	**LV432503**

Crimp lugs for aluminium cables (supplied with 2 or 3 interphase barriers)




For 240 mm² cables	Set of 3	**LV432504**
	Set of 4	**LV432505**
For 300 mm² cables	Set of 3	**LV432506**
	Set of 4	**LV432507**

Terminal shields




1 Short	3/4P	**LV432592**
1 Long	3/4P	**LV432594**
1 Long for 52.5 mm spreader (supplied with insulating plate)	3/4P	**LV432596**


Interphase barriers

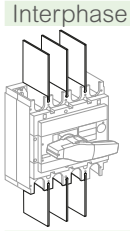

	Set of 6	**LV432570**

Special connection accessories for INS/INV320 to 630DC

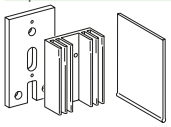



Terminal extensions for series or parallel connection of two poles [3]	1 connection plate equipped with heat sink + 1 interphase barrier	**LV438338**
4P terminal shields for series connection of poles	Set of 1	**LV438346**
4P terminal shields for parallel connection of poles	Set of 1	**LV438337**

[1] Kit comprising 2 interphase barriers.

[2] Kit comprising 3 interphase barriers.

[3] Series connection of: 2 poles = 1 terminal extension
3 poles = 2 terminal extensions
4 poles = 3 terminal extensions

Parallel connection of: 2 poles = 2 terminal extensions
4 poles = 4 terminal extensions


F

ComPacT INS320 to 630 DC and ComPacT INV320 to 630 DC Accessories

Electrical Auxiliaries

Auxiliary contacts (changeover type)

DB438418.ai




1 OF/CAF/CAO (early make or break)	**29450**
1 OF/CAF/CAO low level (early make or break)	**29452**

Rotary Handles

Extended front control

DB432152.eps




For INS320/400/630 with standard rotary handle		**31052**
For INS320/400/630 with red handle on yellow front	[1]	**31053**
For complete source changeover assembly		**31055**

Locking and Interlocking for INS/INV and TransferPacT Source Changeover Systems

Locking for INS/INV


DB432153.eps

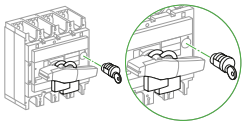

Handle locking by 1 to 3 padlocks (in OFF position)		Built-in
By keylock	Keylocking device	**31088**
	+ Ronis 1351B.500 keylock	**41940**
	or + Profalux KS5 B24 D4Z keylock	**42888**

Locking for INS complete TransferPacT source changeover assembly


DB432154.eps

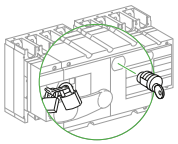

Handle locking by 1 to 3 padlocks (in OFF position)		Built-in
By keylock	Keylocking device	**31097**
	+ Ronis 1351B.500 keylock	**41940**
	or + Profalux KS5 B24 D4Z keylock	**42888**

Interlocking with key (2 keylocks/1 key)


DB432143.eps

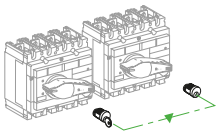

By 2 keylocks	INS250 keylocking device	2 x	**31087**
	INS320-630 keylocking device	2 x	**31088**
	+ Ronis 1351B.500 keylock	2 x	**41950**
	or + Profalux KS5 B24 D4Z keylock	2 x	**42878**

Interlocking for INS/INV with direct or extended rotary handle

DB432155.eps

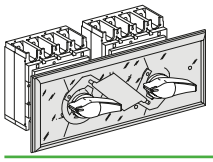

Mechanical interlocking for INS320/400/630	**31074**


F

ComPacT INS630b to 2500 DC

Complete Fixed/FC Device and Accessories


ComPacT INS630b to 2500 Standard Version with Black Handle

DB432156.eps

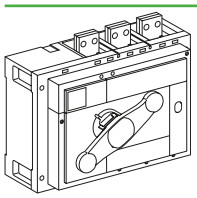

	3P	4P
ComPacT INS630b	**31342**	**31343**
ComPacT INS800	**31330**	**31331**
ComPacT INS1000	**31332**	**31333**
ComPacT INS1250	**31334**	**31335**
ComPacT INS1600	**31336**	**31337**


DB432157.eps

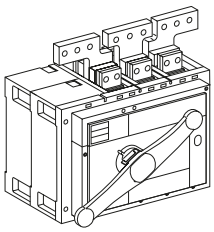

ComPacT INS2000	**31338**	**31339**
ComPacT INS2500	**31340**	**31341**

ComPacT INS800 to 1600 with Red Handle and Yellow Front

DB432156.eps

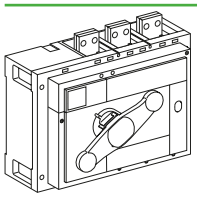


	3P	4P
ComPacT INS800	**31344**	**31345**
ComPacT INS1000	**31346**	**31347**
ComPacT INS1250	**31348**	**31349**
ComPacT INS1600	**31350**	**31351**

F

ComPacT INV630b to 2500 DC
Complete Fixed/FC Device and Specific Accessories


ComPacT INV630b to 2500 Standard Version with Black Handle

DB432158.eps

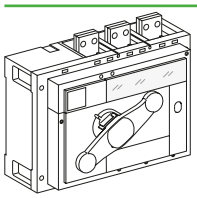

	3P	4P
ComPacT INV630b	**31370**	**31371**
ComPacT INV800	**31358**	**31359**
ComPacT INV1000	**31360**	**31361**
ComPacT INV1250	**31362**	**31363**
ComPacT INV1600	**31364**	**31365**


DB432159.eps

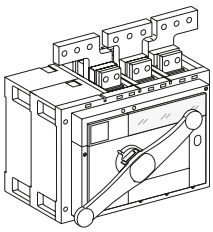

ComPacT INV2000	**31366**	**31367**
ComPacT INV2500	**31368**	**31369**

ComPacT INV800 to 1600 with Red Handle and Yellow Front

DB432158.eps

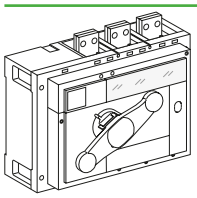

	3P	4P
ComPacT INV800	**31372**	**31373**
ComPacT INV1000	**31374**	**31375**
ComPacT INV1250	**31376**	**31377**
ComPacT INV1600	**31378**	**31379**

F

ComPacT INS630b to 2500 DC and ComPacT INV630b to 2500 DC
Accessories


Connection Accessories

Vertical connection adapters




INS/INV630b-1600	3P	Set of 3	**31301**
	4P	Set of 4	**31302**

Cable lug adapters



INS/INV630b-1600	3P	Set of 3	**33644**
	4P	Set of 4	**33645**

Busbar connection (not compatible with terminal shield)




INS/INV630b-1600	3P	Set of 3	**31305**
	4P	Set of 4	**31306**



Right angle connector for busbar (edgewise) to INS2000/2500			**31310**


Insulation Accessories

Base for terminal shield (not compatible with interphase barriers)




INS/INV630b-1600	3P		**31307**
	4P		**31308**

Terminal shield



INS/INV630b-1600	3P		**LV433638**
	4P		**LV433639**


Interphase barriers (not compatible with terminal shield and base)



INS/INV630b-1600	4P	Set of 6	**31315**
INS/INV2000/2500	4P	Set of 6	**31319**

Electrical Auxiliaries

Auxiliary contacts (changeover type) INS/INV630b-2500



1 OF/CAF/CAO standard (early make or break)	**29450**
1 OF/CAF/CAO low level (early make or break)	**29452**

Extended Front Control



INS/INV630b-2500	For standard rotary handle		**31288**
INS/INV630b-1600	For red handle on yellow front	[1]	**31289**


[1] For red/yellow switch versions only.

F

ComPacT INS630b to 2500 DC and ComPacT INV630b to 2500 DC
Accessories


Locking and Interlocking

Locking for INS/INV630b to 2500

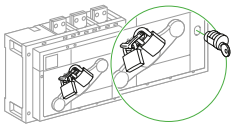
DB432168.eps

Handle locking by 1 to 3 padlocks (in OFF position)		Built-in
By keylock	Keylocking device	**31291**
	+ Ronis 1351B.500 keylock	**41940**
	or + Profalux KS5 B24 D4Z keylock	**42888**

Interlocking for INS/INV630b to 2500

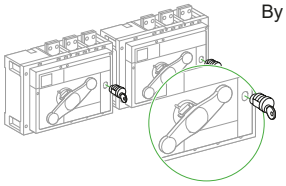
DB432169.eps

By keylock	Keylocking device	2 x	**31291**
	+ Ronis 1351B.500 keylock (1 key)	2 x	**41950**
	or + Profalux KS5 B24 D4Z keylock (1 key)	2 x	**42878**


F

NW10 DC to NW40 DC Fixed and Drawout Circuit Breakers and Switch-Disconnectors

A MasterPact DC circuit breaker is described by 2 catalog numbers corresponding to:
- The basic circuit breaker (fixed or drawout with chassis, including the power connections)
- A control unit.


A MasterPact switch-disconnector is described by 1 catalog number corresponding to:
- The switch-disconnector (fixed or drawout with chassis, including the power connections). Vertical connection is standard however the connectors can be rotated for on-site conversion to horizontal connection (except on the NW40). A communication option and various auxiliaries and accessories may also be added.

DB101915.eps

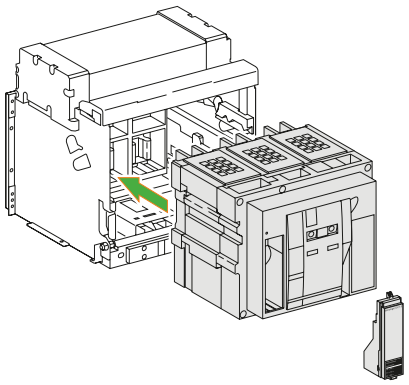

Basic circuit breaker + chassis ≤ 4000 A

DB404313.eps

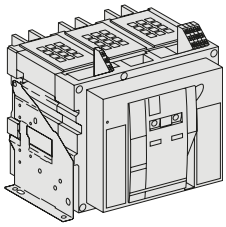

Switch-disconnector ≤ 4000 A

Basic Circuit Breaker

Type N

	In (A at 40 °C)	Icu (kA for U = 500 V DC)	Fixed	Drawout
NW10NDC-C	1000	35	**48645**	**48660**
NW20NDC-C	2000	35	**48646**	**48661**
NW40NDC-C	4000	35	**48647**	**48662**

Type H

	In (A at 40 °C)	Icu (kA for U = 500 V DC)	Fixed	Drawout
NW10HDC-C	1000	85	**48648**	**48663**
NW10HDC-D	1000	85	**48649**	**48664**
NW10HDC-E	1000	85	**48650**	**48665**
NW20HDC-C	2000	85	**48651**	**48666**
NW20HDC-D	2000	85	**48652**	**48667**
NW20HDC-E	2000	85	**48653**	**48668**
NW40HDC-C	4000	85	**48654**	**48669**
NW40HDC-D	4000	85	**48655**	**48670**
NW40HDC-E	4000	85	**48656**	**48671**

Circuit Breaker for Marine Application at 1100 V DC

Type EPCD

	In (A at 40 °C)	Icu (kA for U = 1100 V DC, L/R = 15 ms)	No Fixed Version	Drawout
NW10 EPDC-D	1000	65		**46921**
NW20 EPDC-D	2000	65		**46922**
NW40 EPDC-D	4000	65		**46924**

DC 1.0 MicroLogic Control Unit

Setting range

Minimum (A ±8 %)	Maximum (E ±10 %)	Type	Fixed	Drawout
1250	2500	N, H type C	**65266**	**65269**
2500	5400	N, H type C	**65267**	**65270**
5000	11000	N, H type C	**65268**	**65271**
1250	2500	H type D	**65272**	**65275**
2500	5400	H type D	**65273**	**65276**
5000	11000	H type D	**65274**	**65277**
1250	2500	H type E	**65278**	**65281**
2500	5400	H type E	**65279**	**65282**
5000	11000	H type E	**65280**	**65283**

Switch-Disconnector

Type HA

	In (A at 40 °C)	Icm (kA)	Fixed	Drawout
NW10HADC-C	1000	85	**48684**	**48698**
NW10HADC-D	1000	85	**48685**	**48699**
NW10HADC-E	1000	85	**48879**	**48882**
NW20HADC-C	2000	85	**48687**	**48701**
NW20HADC-D	2000	85	**48688**	**48702**
NW20HADC-E	2000	85	**48880**	**48883**
NW40HADC-C	4000	85	**48690**	**48704**
NW40HADC-D	4000	85	**48691**	**48705**
NW40HADC-E	4000	85	**48881**	**48884**

Switch-Disconnector for PV Application

Type HADCD-PV


	In	Icm (kA)	Fixed	Drawout
NW20HADCD-PV	2000	85	**48975**	**47651**
NW40HADCD-PV	4000	85	**48797**	**47652**

F

NW10 DC to NW40 DC Fixed Circuit Breakers
Indication Contacts

ON/OFF indication contacts (OF)


DB404314.eps



Block of 4 changeover contacts (6 A - 240 V)	1 block (standard)
1 additional block of 4 contacts (2 max.)	**48198**

“Fault trip” indication contacts (SDE)

DB404315.eps

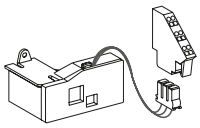

Changeover contact (5 A - 240 V)	1 (standard)
1 additional SDE (5 A - 240 V)	**48200**
1 additional low-level SDE	**48201**


F

NW10 DC to NW40 DC Fixed Circuit Breakers

Remote Operation


Remote ON/OFF

Gear motor

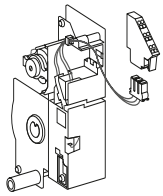


		MCH
AC 50/60 Hz	48 V	**48207**
	100/130 V	**48211**
	200/240 V	**48212**
	250/277 V	**48213**
	380/415 V	**48214**
	440/480 V	**48215**
DC	24/30 V	**48206**
	48/60 V	**48207**
	100/130 V	**48208**
	200/250 V	**48209**

Instantaneous voltage releases




		Closing release	Opening release
Standard		**XF**	**MX**
AC 50/60 Hz	12 V DC	**47349**	**47359**
DC	24/30 V DC, 24 V AC	**47350**	**47360**
	48/60 V DC, 48 V AC	**47351**	**47361**
	100/130 V AC/DC	**47352**	**47362**
	200/250 V AC/DC	**47353**	**47363**
	277 V AC	**47354**	**47364**
	380/480 V AC	**47355**	**47365**
Communicating		**XF com**	**MX com**
AC 50/60 Hz	12 V DC	**47310**	**47320**
DC	24/30 V DC, 24 V AC	**47311**	**47321**
	48/60 V DC, 48 V AC	**47312**	**47322**
	100/130 V AC/DC	**47313**	**47323**
	200/250 V AC/DC	**47314**	**47324**
	277 V AC	**47315**	**47325**
	380/480 V AC	**47316**	**47326**

"Ready to close" contact (1 max.)




	PF
1 changeover contact (5 A - 240 V)	**47342**
1 low-level changeover contact	**47343**

Electrical closing pushbutton



	BPFE
1 pushbutton	**48534**


Remote reset after fault trip

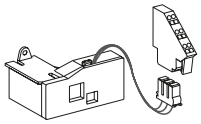

Electrical reset	RES
110/130 V AC	**48202**
220/240 V AC	**48203**
Automatic reset	**RAR**
Adaptation	**47346**


Remote Tripping

Instantaneous voltage release



		2nd MX	or	MN
AC 50/60 Hz	12 V DC	**47369**		
DC	24/30 V DC, 24 V AC	**47370**		**47380**
	48/60 V DC, 48 V AC	**47371**		**47381**
	100/130 V AC/DC	**47372**		**47382**
	200/250 V AC/DC	**47373**		**47383**
	277 V AC	**47374**		
	380/480 V AC	**47375**		**47385**

MN delay unit

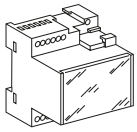


		R (non-adjustable)	Rr (adjustable)
AC 50/60 Hz	48/60 V AC/DC		**33680**
DC	100/130 V AC/DC	**33684**	**33681**
	200/250 V AC/DC	**33685**	**33682**
	380/480 V AC/DC		**33683**

F

NW10 DC to NW40 DC Drawout Circuit Breakers
Indication Contacts

ON/OFF indication contacts (OF)


DB404321.eps

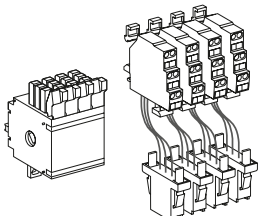

Block of 4 changeover contacts (6 A - 240 V)	1 block (standard)
1 additional block of 4 contacts (2 max.)	**48468**

Combined closed/connected contacts for use with 1 auxiliary contact


DB404322.eps



1 contact (5 A - 240 V) (8 max.)	**48477**
or 1 low-level contact (8 max.)	**48478**

“Fault trip” indication contacts (SDE)


DB404323.eps

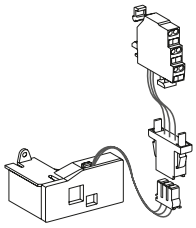

Changeover contact (5 A - 240 V)	1 (standard)
1 additional SDE (5 A - 240 V)	**48475**
or 1 additional low-level SDE	**48476**

Carriage switches (connected/disconnected/test position)

DB404324.eps



Changeover contacts (8 A - 240V)	
1 connected position contact (3 max.)	**33751**
1 test position contact (3 max.)	**33752**
1 disconnected position contact (3 max.)	**33753**
and/or low-level changeover contacts	
1 connected position contact (3 max.)	**33754**
1 test position contact (3 max.)	**33755**
1 disconnected position contact (3 max.)	**33756**
Actuator for additional carriage switches	**48560**


F

NW10 DC to NW40 DC Drawout Circuit Breakers (Cont.)

Chassis Locking and Accessories


Chassis Locking

"Disconnected" position locking




By padlocks		
	VPOC	Standard
By Profalux keylocks		
Profalux	1 lock with 1 key + adaptation kit	**48568**
	2 locks 1 key + adaptation kit	**48569**
	2 locks 2 different keys + adaptation kit	**48570**
1 keylock Profalux (without adaptation kit):	Identical key not identified combination	**33173**
	Identical key identified 215470 combination	**33174**
	Identical key identified 215471 combination	**33175**
By Ronis keylocks		
Ronis	1 lock with 1 key + adaptation kit	**48572**
	2 locks 1 key + adaptation kit	**48573**
	2 locks 2 different keys + adaptation kit	**48574**
1 keylock Ronis (without adaptation kit):	Identical key not identified combination	**33189**
	Identical key identified EL24135 combination	**33190**
	Identical key identified EL24153 combination	**33191**
	Identical key identified EL24315 combination	**33192**
Optional disconnected/test/connected position locking		**33779**
Adaptation kit (without keylock):	Adaptation kit Profalux/Ronis	**48564**
	Adaptation kit Kirk	**48565**
	Adaptation kit Castell	**48566**

Door interlock (1 part)



Right-hand side of chassis	**48579**
Left-hand side of chassis	**48580**

Racking interlock




1 part	**48582**

Racking interlock between crank and OFF pushbutton

1 part	**48585**

Automatic spring discharge before breaker removal



1 part	**48554**


Breaker mismatch protection



Breaker mismatch protection V DC	**33767**


Chassis Accessories

Arc chute cover

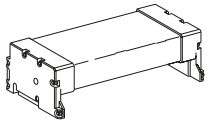


3P/4P	Standard

Auxiliary terminal shield (CB)



1000/4000 A	3P	**48595**
	4P	**48596**

Safety shutters + locking block



1000/4000 A	3P	Standard
	4P	Standard

Shutter locking block (for replacement)



2 parts for 1000/4000 A	**48591**

Front face shutter position indication and locking


1000/4000 A	3P/4P	**48592**

F

NW10 DC to NW40 DC Drawout Circuit Breakers
Remote Operation


Remote ON/OFF

Gear motor

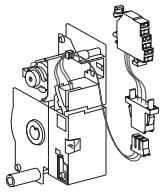
DB404334.eps


		MCH
AC 50/60 Hz	48 V	**48522**
	100/130 V	**48526**
	200/240 V	**48527**
	250/277 V	**48528**
	380/415 V	**48529**
	440/480 V	**48530**
DC	24/30 V	**48521**
	48/60 V	**48522**
	100/130 V	**48523**
	200/250 V	**48524**

Instantaneous voltage releases


DB404335.eps


		Closing release	Opening release
Standard		**XF**	**MX**
AC 50/60 Hz	12 V DC	**48480**	**48490**
DC	24/30 V DC, 24 V AC	**48481**	**48491**
	48/60 V DC, 48 V AC	**48482**	**48492**
	100/130 V AC/DC	**48483**	**48493**
	200/250 V AC/DC	**48484**	**48494**
	277 V AC	**48485**	**48495**
	380/480 V AC	**48486**	**48496**
Communicating		**XF com**	**MX com**
AC 50/60 Hz	12 V DC	**48448**	**48457**
DC	24/30 V DC, 24 V AC	**48449**	**48458**
	48/60 V DC, 48 V AC	**48450**	**48459**
	100/130 V AC/DC	**48451**	**48460**
	200/250 V AC/DC	**48452**	**48461**
	277 V AC	**48453**	**48462**
	380/480 V AC	**48454**	**48463**

"Ready to close" contact (1 max.)


DB404336.eps


	PF
1 changeover contact (5 A - 240 V)	**48469**
1 low-level changeover contact	**48470**

Electrical closing pushbutton


DB404319.eps

	BPFE
1 pushbutton	**48534**


Remote reset after fault trip

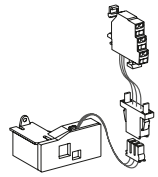
DB404323.eps

Electrical reset	RES
110/130 V AC	**48472**
220/240 V AC	**48473**
Automatic reset	RAR
Adaptation	**47346**


Remote Tripping

Instantaneous voltage release


DB404335.eps

		2nd MX or	MN
AC 50/60 Hz	12 V DC	**48510**	
DC	24/30 V DC, 24 V AC	**48511**	**48501**
	48/60 V DC, 48 V AC	**48512**	**48502**
	100/130 V AC/DC	**48513**	**48503**
	200/250 V AC/DC	**48514**	**48504**
	277 V AC	**48515**	
	380/480 V AC	**48516**	**48506**

MN delay unit

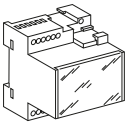
DB404320.eps


		R (non-adjustable)	Rr (adjustable)
AC 50/60 Hz	48/60 V AC/DC		**33680**
DC	100/130 V AC/DC	**33684**	**33681**
	200/250 V AC/DC	**33685**	**33682**
	380/480 V AC/DC		**33683**

F

Accessories for NW10 DC to NW40 DC Fixed and Drawout Circuit Breakers


Circuit Breaker Locking

Pushbutton locking device



By padlocks		**48536**

OFF position locking

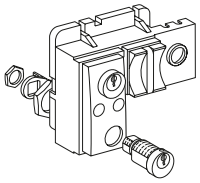

By padlocks

	VPOC	**48539**

By Profalux keylocks

Profalux	1 lock with 1 key + adaptation kit	**48545**
	2 locks 1 key + adaptation kit	**48546**
	2 locks 2 different keys + adaptation kit	**48547**
1 keylock Profalux (without adaptation kit)	Identical key not identified combination	**33173**
	Identical key identified 215470 combination	**33174**
	Identical key identified 215471 combination	**33175**

By Ronis keylocks

Ronis	1 lock with 1 key + adaptation kit	**48549**
	2 locks 1 key + adaptation kit	**48550**
	2 locks 2 different keys + adaptation kit	**48551**
1 keylock Ronis (without adaptation kit)	Identical key not identified combination	**33189**
	Identical key identified EL24135 combination	**33190**
	Identical key identified EL24153 combination	**33191**
	Identical key identified EL24315 combination	**33192**
Adaptation kit (without keylock):	Adaptation kit Profalux/Ronis	**48541**
	Adaptation kit Kirk	**48542**
	Adaptation kit Castell	**48543**


Other Circuit Breaker Accessories

Mechanical operation counter




Operation counter CDM	**48535**


Escutcheon and accessories

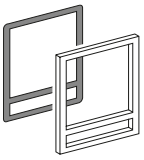

Escutcheon

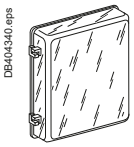

Cover

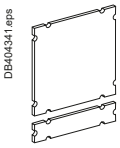

Blanking plate

	Fixed	Drawout
Escutcheon	**48601**	**48603**
Transparent cover IP54		**48604**
Escutcheon blanking plate	**48605**	**48605**


F

Spare Parts: MasterPact NW DC, EPDC, DC PV
Connection


Connection

		C or D type	E type
Fixed or drawout circuit breakers or switches			
Rear connection (vertical or horizontal mounting)/Replacement kit (3 or 4 parts)			
1000/2000 A	Vertical or horizontal Top or bottom	**47966**	**47967**
4000 A	Vertical or horizontal Top or bottom	**47968**	**47969**

DB404366.eps



DB413008.eps




Vertical mounting

Connection Accessories

Additional support brackets for mounting on a backplate		
For fixed rear-connected circuit breaker (2 parts)		**47829**

DB432170.eps





F

Spare Parts: MasterPact NW DC, EPDC, DC PV
Remote Operation

Remote Operation

Gear motor

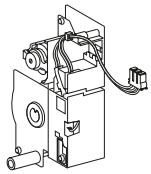







Fixed Drawout

MCH (1 part)

AC 50/60 Hz	48 V	**47889**
	100/130 V	**47893**
	200/240 V	**47894**
	250/277 V	**47895**
	380/415 V	**47896**
	440/480 V	**47897**
DC	24/30 V	**47888**
	48/60 V	**47889**
	100/125 V	**47890**
	200/250 V	**47891**
Terminal block (1 part)	For fixed circuit breaker	**47074**
	For drawout circuit breaker	**47849**
Installation manual		**47951**

Closing and opening release (XF or MX)







Fixed Drawout


Standard coil (1 part)


AC 50/60 Hz DC	12 V DC	**33658**
	24/30 V DC, 24 V AC	**33659**
	48/60 V DC, 48 V AC	**33660**
	100/130 V AC/DC	**33661**
	200/250 V AC/DC	**33662**
	277 V AC	**33663**
	380/480 V AC	**33664**

Communicating coil (1 part)

AC 50/60 Hz DC	12 V DC	**33032**
	24/30 V DC, 24 V AC	**33033**
	48/60 V DC, 48 V AC	**33034**
	100/130 V AC/DC	**33035**
	200/250 V AC/DC	**33036**
	277 V AC	**33037**
	380/480 V AC	**33038**
Terminal block (1 part)	For fixed circuit breaker	**47074**
	For drawout circuit breaker	**47849**
Installation manual		**47951**

Undervoltage release MN








Fixed Drawout

Undervoltage release (1 part)

AC 50/60 Hz DC	24/30 V DC, 24 V AC	**33668**
	48/60 V DC, 48 V AC	**33669**
	100/130 V AC/DC	**33670**
	200/250 V AC/DC	**33671**
	380/480 V AC	**33673**
Terminal block (1 part)	For fixed circuit breaker	**47074**
	For drawout circuit breaker	**47849**
Installation manual		**47951**

MN delay unit

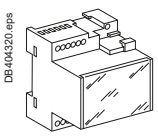

MN delay unit (1 part)


		R (non-adjustable)	**R** (adjustable)
AC 50/60 Hz DC	48/60 V AC/DC		**33680**
	100/130 V AC/DC	**33684**	**33681**
	200/250 V AC/DC	**33685**	**33682**
	380/480 V AC/DC		**33683**
Installation manual			**47951**

F

Spare Parts: MasterPact NW DC, EPDC, DC PV
Chassis Locking and Accessories


Chassis Locking

"Disconnected" position locking/1 part


DB404325.eps


		VCPO	Standard
By padlocks			
By Profalux keylocks			
Profalux		1 lock with 1 key + adaptation kit	**64934**
		2 locks 1 key + adaptation kit	**64935**
		2 locks 2 different keys + adaptation kit	**64936**
1 keylock Profalux (without adaptation kit):		identical key not identified combination	**33173**
		identical key identified 215470 combination	**33174**
		identical key identified 215471 combination	**33175**
By Ronis keylocks			
Ronis		1 lock with 1 key + adaptation kit	**64937**
		2 locks 1 key + adaptation kit	**64938**
		2 locks 2 different keys + adaptation kit	**64939**
1 keylock Ronis (without adaptation kit):		identical key not identified combination	**33189**
		identical key identified EL24135 combination	**33190**
		identical key identified EL24153 combination	**33191**
		identical key identified EL24315 combination	**33192**
Adaptation kit (without keylock):		adaptation kit Profalux/Ronis	**48564**
		adaptation kit Kirk	**48565**
		adaptation kit Castell	**48566**
Installation manual			**47952**

Door interlock/1 part


DB432174.eps


Right and left-hand side of chassis (VPECD or VPECG)			**47914**
Installation manual			**47952**

Racking interlock


DB432175.eps

5 parts			**64940**
Installation manual			**47952**


Breaker mismatch protection/1 part


DB404329.eps

Breaker mismatch protection (VDC)			**33767**
Installation manual			**47952**


Chassis Accessories

Auxiliary terminal shield (CB)/1 part


DB404331.eps

800/4000 A		3P	**64942**
		4P	**48596**
4000b/6300 A		3P	**48597**
		4P	**48598**

Safety shutters + locking block/1 part


DB404332.eps

800/4000 A		3P	**48721**
		4P	**48723**
4000b/6300 A		3P	**48722**
		4P	**48724**
Installation manual			**47952**

Shutter locking block (for replacement)/1 part


DB404333.eps

2 parts for 800/4000 A			**48591**
Installation manual			**47952**


Earthing Kit for Chassis

	3P	4P
Types for N1/H1/NA/HA		
	48433	**48434**

Note: The installation manual is enclosed.

Spare Parts: MasterPact NW DC, EPDC, DC PV
Clusters

Clusters




1 disconnecting contact cluster for chassis (see table below) (part 1)	**64906**

Table: number of clusters required for the different chassis models

Chassis rating (A)	MasterPact NW 3P				MasterPact NW 4P			
	N1	**H1/H2**	**H3**	**L1**	**N1**	**H1/H2**	**H3**	**L1**
250		12 (H1)						
630	6	12		24	8	16		32
800	6	12		24	8	16		32
1000	6	12		24	8	16		32
1250	6	12		24	8	16		32
1600	12	12		24	16	16		32
2000		24	24	42		32	32	56
2500		24	24			32	32	
3200		36	36			48	48	
4000		42	42			56	56	
4000b		72				96		
5000		72				96		
6300		72				96		

Note: The minimum order is 6 parts.


Racking handle




Racking handle	**47944**

DC Rear Connection

Serial connection kit



For NW10/20 DC	**48642**

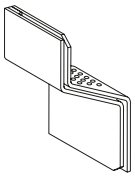


For NW40 DC	**48643**

F

Spare Parts: MasterPact NW DC, EPDC, DC PV
Circuit Breaker Locking and Accessories


Circuit Breaker Locking

Pushbutton locking device/1 part


DB404337.eps

By padlocks		**48536**
Installation manual		**47951**

OFF position locking/1 part

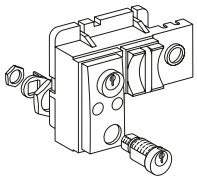
DB404411.eps

By padlocks		
		48539
By Profalux keylocks		
Profalux	1 lock with 1 key + adaptation kit	**64928**
	2 locks 1 key + adaptation kit	**64929**
	2 locks 2 different keys + adaptation kit	**64930**
1 keylock Profalux (without adaptation kit):	identical key not identified combination	**33173**
	identical key identified 215470 combination	**33174**
	identical key identified 215471 combination	**33175**
By Ronis keylocks		
Ronis	1 lock with 1 key + adaptation kit	**64931**
	2 locks 1 key + adaptation kit	**64932**
	2 locks 2 different keys + adaptation kit	**64933**
1 keylock Ronis (without adaptation kit):	identical key not identified combination	**33189**
	identical key identified EL24135 combination	**33190**
	identical key identified EL24153 combination	**33191**
	identical key identified EL24315 combination	**33192**
Adaptation kit (without keylock):	adaptation kit Profalux/Ronis	**64925**
	adaptation kit Kirk	**64927**
	adaptation kit Castell	**64926**
Installation manual		**47951**


Other Circuit Breaker Accessories

Mechanical operation counter/1 part


DB125617.eps

Operation counter CDM	**48535**
Installation manual	**47951**

Escutcheon and accessories/1 part

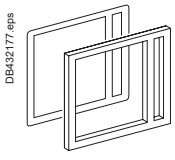
DB432177.eps DB403098.eps DB403099.eps

Escutcheon Cover Blanking plate


	Fixed	Drawout
Escutcheon	**48601**	**48603**
Transparent cover (IP 54)		**48604**
Escutcheon blanking plate	**48605**	**48605**
Installation manual		**47951**

Spring charging handle/1 part


DB404413.eps

Spring charging handle	**47940**
Installation manual	**47951**

Arc chute for MasterPact NW/1 part

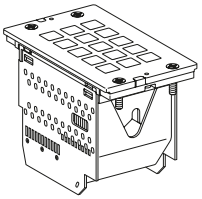
DB432178.eps

		C type		D type		E type
Type NW DC	2 x	**47934**	3 x	**47934**	4 x	**47934**
Installation manual						**47951**

Spare Parts: MasterPact NW DC, EPDC, DC PV
Mechanical Interlocking for Source Changeover

Cable-Type Door Interlock

1 complete assembly for MasterPact NW fixed or drawout device	**48614**


Note: The installation manual is enclosed.

Spare Parts: MasterPact NW DC, EPDC, DC PV
Indication Contacts

Indication Contacts

ON/OFF indication contacts (OF)/12 parts


DB432179.eps

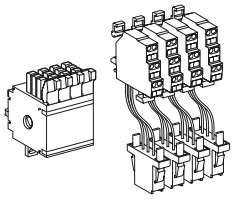

1 additional block of 4 contacts		**64922**
Wiring	For fixed circuit breaker	**47074**
	For drawout circuit breaker	**47849**
Installation manual		**47951**

"Fault trip" indication contacts (SDE)/1 part


DB432180.eps

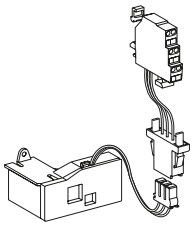

Changeover contact (SDE)	6 A - 240 V	**47915**
	Low-level	**47916**
Wiring	For fixed circuit breaker	**47074**
	For drawout circuit breaker	**47849**
Installation manual		**47951**

"Ready to close" contact (1 max.)/1 part


DB432181.eps



		PF
1 changeover contact (5 A - 240 V)		**47080**
1 low-level changeover contact		**47081**
Wiring	For fixed circuit breaker	**47074**
	For drawout circuit breaker	**47849**
Installation manual		**47951**

"Connected, disconnected, test position" indication contact (carriage switches)/1 part

DB404324.eps



Changeover contacts	6 A - 240 V	**33170**
CE, CD, CT	Low-level	**33171**
Installation manual		**47952**


Set of additional actuaters for carriage switches/1 set

1 set	**48560**

F

Combined closed/connected contacts for use with 1 auxiliary contact/1 part


DB432172.eps



1 contact (5 A - 240 V)	**48477**
or 1 low-level contact	**48478**
Installation manual	**47952**

Electrical closing pushbutton/1 part

DB432182.eps

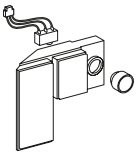

	BPFE
1 pushbutton	**48534**
Installation manual	**47951**

Auxiliary terminals for chassis alone

3 wire terminal (1 part)	**47849**
6 wire terminal (1 part)	**47850**
Jumpers (10 parts)	**47900**

Spare Parts: MasterPact NW DC, EPDC, DC PV
Instructions

Instructions

Chassis accessories		**47952**
Circuit breaker accessories		**47951**
Fixed and drawout circuit breaker		**47950**
User manual	NW DC (French)	**64923**
	NW DC (English)	**64924**
Modbus communication notice for manual		**33088**


F

Spare Parts: Master**Pact** NW DC, EPDC, DC PV Monitoring and Control Converter

Monitoring and Control

ULP display module

DB432551.eps



Switchboard front display module FDM121	**TRV00121**
FDM mounting accessory (diameter 22 mm)	**TRV00128**


ULP wiring accessories

DB127985.eps



Breaker ULP cord L = 0.35 m	**LV434195**
Breaker ULP cord L = 1.3 m	**LV434196**
Breaker ULP cord L = 3 m	**LV434197**

DB432584.ai



2 Modbus line terminators	**VW3A8306DRC** [1]

DB115623.eps



5 RJ45 connectors female/female	**TRV00870**

DB111444



10 ULP line terminators	**TRV00880**

DB111445.eps



10 RJ45/RJ45 male cord L = 0.3 m	**TRV00803**
10 RJ45/RJ45 male cord L = 0.6 m	**TRV00806**
5 RJ45/RJ45 male cord L = 1 m	**TRV00810**
5 RJ45/RJ45 male cord L = 2 m	**TRV00820**
5 RJ45/RJ45 male cord L = 3 m	**TRV00830**
1 RJ45/RJ45 male cord L = 5 m	**TRV00850**

[1] www.schneider-electric.com.

F

ComPacT NSX100 DC to NSX250 DC Circuit Breakers

Check the applicable ☐ and enter the appropriate ☐
square boxes information in the rectangles

Circuit breaker

		Quantity
ComPacT type	**NSX100/160/250**	
Rating	**A**	
Circuit breaker	**F, N, M, S**	
Number of poles	**1 or 2**	
Circuit breaker	**DC**	
Number of poles	**3 or 4**	
Number of poles tripped	**3d or 4d**	
Fixed device	Front conn. ☐ Long rear conn. ☐ Short rear conn. ☐	
Plug-in/withdr.	Plug-in ☐ Withdrawable ☐	

Thermal-magnetic trip unit

Thermal-magnetic NSX100 to 250	**TMD** rating (16…63 A)	
	TMG rating (16…250 A)	
	TMDC rating (80…250 A)	

Special connection accessories for parallel or series connection

Series connection	2 poles (1 connection plate)	
	3 poles (2 connection plates)	
	4 poles (3 connection plates)	
Parallel connection	2 poles (2 connection plates)	
	3 poles (NSX100 to 250, 1 set of 2 connection plates)	
	2 x 2 poles (4 connection plates)	

Special terminal shields for parallel or series connection

1P short	1 pair	
2P short	2 x 1 pair (1P)	
3P short for series connection of poles	1 set	
4P short for series connection of poles	1 set	
4P short for parallel connection of poles (2P/4P)	1 set	

Connection

NSX100/250 connectors	Steel 1.5□ to 95□ (< 160 A)				
	Aluminium 25□ to 95□ (< 250 A)				
	Aluminium 120□ to 185□ (< 250 A)				
Voltage measurement input	For bare cable connector	NSX100/250 ≤ 185□			
Right-angle terminal extensions					
Straight extensions	NSX100/250				
Double L terminal extension		3P ☐	4P		
Spreader from 35 to 45 mm		3P ☐	4P		
One piece spreader					
Front alignment					
Cu cable lugs	NSX100/250 120□ ☐	150□ ☐	185□		
		240□ ☐	300□		
Al cable lugs	NSX100/250	150□ ☐	185□		
		240□ ☐	300□		
Insulation screen	45 mm	3P ☐	4P		
	70 mm	3P ☐	4P		
Interphase barriers			Set of 6		

Indication and measurements

Auxiliary contact	OF ☐	SD ☐	SDE ☐	Standard ☐	Low level ☐	
SDE adapter (TM trip unit)						☐

Remote operation

Electrical operation	Motor mechanism		AC ☐	DC ☐	**V**	☐
Voltage releases	Instantaneous	MX	AC ☐	DC ☐	**V**	☐
		MN	AC ☐	DC ☐	**V**	☐
	Fixed time delay	MN	AC ☐	DC ☐	**V**	☐
	Adjust. time delay	MN	AC ☐	DC ☐	**V**	☐

Rotary handles

Direct	Black ☐	Red on yellow front	☐
	MCC conversion access. ☐	CNOMO conversion access.	☐
Extended	Black ☐	Red on yellow front	☐
		Telescopic handle for withdrawable device	☐
Indication auxiliary	1 early-break switch ☐	2 early-break switches	☐
		Wiring accessory for early-make switches	☐

Locking

Toggle (1 to 3 padlocks)	Removable ☐	Fixed Open/Close	☐
		Fixed Open	☐
Rotary handle	Keylock adapter (keylock not included)		☐
	Keylock Ronis 1351B.500 ☐	Profalux KS5 B24 D4Z	☐
Motor mechanism	Keylock adapter + Keylock Ronis (special)	NSX100/250	☐
	Keylock Ronis 1351B.500 ☐	Profalux KS5 B24 D4Z	☐

Interlocking

Mechanical	Toggle ☐	Rotary handle	☐
By key (2 Keylocks, 1 key)	Keylock adapter (keylock not included)		☐
For rotary handle	Keylock Ronis 1351B.500 ☐	Profalux KS5 B24 D4Z	☐

Installation accessories

Front-panel escutcheon	Toggle	☐
	Rotary handle, motor mechanism, escutcheon collar; IP40	☐
Toggle cover		☐
Sealing accessories		☐
DIN rail adapter	NSX100/250	☐

Plug-in/Drawout configuration accessories

Auxiliary connections	1 automatic connector fixed part with 9 wires (for base)			☐
	1 auto. conn. moving part with 9 wires (for circuit breaker)			☐
	1 support for 3 automatic connector moving parts			☐
	9-wire manual auxiliary connector (fixed + moving)			☐
Plug-in base accessories	Long insulated terminals	Set of 3 ☐	Set of 4	☐
	2 IP4 shutters for base			☐
Chassis accessories	Escutcheon collar	Toggle ☐		☐
	Locking kit (keylock not included)			☐
	2 carriage switches (conn./disconnected position indication)			☐
Parts of plug-in	Plug-in base FC/RC	2P ☐	3P ☐	4P ☐
	Set of 2 power connections	Standard ☐		☐
	Safety trip for advanced opening			☐
	For 3P/4P chassis		Moving part	☐
			Fixed part	☐

Communication

	NSX Cord L = 0.35 m ☐		NSX Cord L = 1.3 m ☐
	NSX Cord U > 480 V AC L = 0.35 m ☐		NSX Cord L = 3 m ☐
BSCM			☐
Communicating motor mechanism 220-240 V			☐
Switchboard front display module FDM121			☐
FDM mounting accessory			☐
Ethernet interface + gateway			☐
Ethernet interface			☐
Modbus interface			☐
I/O application module	Qty 1 ☐		Qty 2 ☐
Stacking accessory			☐
ULP line termination			☐
RJ45 connectors female/female ☐	Wire length RJ45 L = 0.3 m ☐		Wire length RJ45 L = 0.6 m ☐
	Wire length RJ45 L = 1 m ☐		Wire length RJ45 L = 2 m ☐
	Wire length RJ45 L = 3 m ☐		Wire length RJ45 L = 5 m ☐

F

Order Form

ComPacT NSX400 DC to NSX630 DC

Circuit Breakers and Switch-Disconnectors

Check the applicable square boxes ☐ and enter the appropriate information in the rectangles ▭

Circuit breaker/ Switch-disconnector — Quantity ▭

ComPacT type	**NSX400/630**		▭
	switch-disconnector ☐	circuit breaker ☐	
Rating	**A**		▭
Circuit breaker	**F, S**		▭
	DC		▭
Number of poles	**3 or 4**		▭
Fixed device	Front conn. ☐	Long rear conn. ☐	
	Short rear conn. ☐		
Plug-in/withdr.	Plug-in ☐	Withdrawable ☐	

Circuit breaker thermal-magnetic trip unit

Thermal-magnetic **TM-DC** rating (250…600 A) ▭

Special connection accessories for parallel or series connection

Series connection	2 poles (1 connection plate)	☐
	3 poles (2 connection plates)	☐
	4 poles (3 connection plates)	☐
Parallel connection	2 poles (2 connection plates)	☐
	2 x 2 poles (4 connection plates)	☐

Special terminal shields for parallel or series connection

Terminal shield for front connection ☐

Terminal shield for rear connection

Standard ☐ Short ☐

Connection

NSX400/630 connectors	1 cable 35▫ to 300▫				☐
	2 cables 35▫ to 240▫				☐
Voltage measurement input	For bare cable connector				☐
Right-angle terminal extensions					☐
Edgewise extensions					☐
Double L terminal extension		3P ☐		4P ☐	
Spreader from 35 to 45 mm		3P ☐		4P ☐	
One piece spreader					☐
Front alignment					☐
Cu cable lugs	NSX400/630 120▫ ☐	150▫ ☐		185▫ ☐	
		240▫ ☐		300▫ ☐	
Al cable lugs	NSX400/630	150▫ ☐		185▫ ☐	
		240▫ ☐		300▫ ☐	
Insulation screen	45 mm	3P ☐		4P ☐	
	70 mm	3P ☐		4P ☐	
Interphase barriers				Set of 6	☐

Indication and measurements

Auxiliary contact	OF ☐	SD ☐	SDE ☐	Standard ☐	Low level ☐
SDE adapter (TM trip unit)					☐

Remote operation

Electrical operation	Motor mechanism		AC ☐	DC ☐	**V** ▭
Voltage releases	Instantaneous	MX	AC ☐	DC ☐	**V** ▭
		MN	AC ☐	DC ☐	**V** ▭
	Fixed time delay	MN	AC ☐	DC ☐	**V** ▭
	Adjust. time delay	MN	AC ☐	DC ☐	**V** ▭

Rotary handles

Direct	Black ☐	Red on yellow front ☐	
	MCC conversion access. ☐	CNOMO conversion access. ☐	
Extended	Black ☐	Red on yellow front ☐	
		Telescopic handle for withdrawable device ☐	
Indication auxiliary	1 early-break switch ☐	2 early-break switches ☐	
		Wiring accessory for early-make switches ☐	

Locking

Toggle (1 to 3 padlocks)	Removable ☐	Fixed Open/Close ☐	
		Fixed Open ☐	
Rotary handle	Keylock adapter (keylock not included)		☐
	Keylock Ronis 1351B.500 ☐	Profalux KS5 B24 D4Z ☐	
Motor mechanism	Keylock adapter (keylock not included)	NSX400/630 ☐	
	Keylock Ronis 1351B.500 ☐	Profalux KS5 B24 D4Z ☐	

Interlocking

Mechanical	Toggle ☐	Rotary handle ☐	
By key (2 Keylocks, 1 key)	Keylock adapter (keylock not included)		☐
For rotary handle	Keylock Ronis 1351B.500 ☐	Profalux KS5 B24 D4Z ☐	

Installation accessories

Front-panel escutcheon	Toggle	☐
	Rotary handle, motor mechanism, escutcheon collar; IP40	☐
Toggle cover		☐
Sealing accessories		☐

Plug-in/Drawout configuration accessories

Auxiliary connections	1 automatic connector fixed part with 9 wires (for base)			☐
	1 auto. conn. moving part with 9 wires (for circuit breaker)			☐
	1 support for 3 automatic connector moving parts			☐
	9-wire manual auxiliary connector (fixed + moving)			☐
Plug-in base accessories	Long insulated terminals	Set of 3 ☐	Set of 4	☐
	2 IP4 shutters for base			☐
Chassis accessories	Escutcheon collar	Toggle ☐		☐
	Locking kit (keylock not included)			☐
	2 carriage switches (conn./disconnected position indication)			☐
Parts of plug-in	Plug-in base FC/RC	2P ☐	3P ☐	4P ☐
	Set of 2 power connections	Standard ☐		☐
	Safety trip for advanced opening			☐
	For 3P/4P chassis		Moving part	☐
			Fixed part	☐

Communication

	NSX Cord L = 0.35 m ☐		NSX Cord L = 1.3 m ☐
	NSX Cord U > 480 V AC L = 0.35 m ☐		NSX Cord L = 3 m ☐
BSCM			☐
Communicating motor mechanism 220-240 V			☐
Switchboard front display module FDM121			☐
FDM mounting accessory			☐
Ethernet interface + gateway			☐
Ethernet interface			☐
Modbus interface			☐
I/O application module	Qty 1 ☐		Qty 2 ☐
Stacking accessory			☐
ULP line termination			☐
RJ45 connectors female/female ☐	Wire length RJ45 L = 0.3 m ☐		Wire length RJ45 L = 0.6 m ☐
	Wire length RJ45 L = 1 m ☐		Wire length RJ45 L = 2 m ☐
	Wire length RJ45 L = 3 m ☐		Wire length RJ45 L = 5 m ☐

F

Life Is On Schneider Electric

Order Form

ComPacT NSX1200 DC Circuit Breakers

Check the applicable ☐ and enter the appropriate ☐
square boxes information in the rectangles

Circuit breaker		Quantity
Rating	**630A, 800 A, 1000 A, 1200 A**	☐
Fixed device	Without bare cable connector	☐
	With bare cable connector	☐

Connection

Voltage measurement input	For bare cable connector	☐

Indication auxiliaries

Auxiliary contact	OF ☐	SD ☐	SDE ☐	Standard ☐	Low level ☐	
SDE adapter (TM trip unit)						☐

Remote operation

Electrical operation	Motor mechanism		AC ☐	DC ☐	V	
Voltage releases	Instantaneous	MX	AC ☐	DC ☐	V	
		MN	AC ☐	DC ☐	V	
	Fixed time delay	MN	AC ☐	DC ☐	V	
	Adjust. time delay	MN	AC ☐	DC ☐	V	

Rotary handles

Direct	Black ☐	Red on yellow front	☐
	MCC conversion access. ☐	CNOMO conversion access.	☐
Extended	Black ☐	Red on yellow front	☐
		Telescopic handle for withdrawable device	☐
Indication auxiliary	1 early-break switch ☐	2 early-break switches	☐
		Wiring accessory for early-make switches	☐

Locking

Toggle (1 to 3 padlocks)	Removable ☐	Fixed Open/Close	☐
		Fixed Open	☐
Rotary handle	Keylock adapter (keylock not included)		☐
	Keylock Ronis 1351B.500 ☐	Profalux KS5 B24 D4Z	☐
Motor mechanism	Keylock adapter (keylock not included)	NSX400/630	☐
	Keylock Ronis 1351B.500 ☐	Profalux KS5 B24 D4Z	☐

Interlocking

Mechanical	Toggle ☐	Rotary handle	☐
By key (2 Keylocks, 1 key)	Keylock adapter (keylock not included)		☐
For rotary handle	Keylock Ronis 1351B.500 ☐	Profalux KS5 B24 D4Z	☐

Installation accessories

Front-panel escutcheon	Toggle	☐
	Rotary handle, motor mechanism, escutcheon collar; IP40	☐
Toggle cover		☐
Sealing accessories		☐

Communication

	NSX Cord L = 0.35 m ☐	NSX Cord L = 1.3 m	☐
	NSX Cord U > 480 V AC L = 0.35 m ☐	NSX Cord L = 3 m	☐
BSCM			☐
Communicating motor mechanism 220-240 V			☐
Switchboard front display module FDM121			☐
FDM mounting accessory			☐
Ethernet interface + gateway			☐
Ethernet interface			☐
Modbus interface			☐
I/O application module	Qty 1 ☐	Qty 2	☐
Stacking accessory			☐
ULP line termination			☐
RJ45 connectors female/female ☐	Wire length RJ45 L = 0.3 m ☐	Wire length RJ45 L = 0.6 m	☐
	Wire length RJ45 L = 1 m ☐	Wire length RJ45 L = 2 m	☐
	Wire length RJ45 L = 3 m ☐	Wire length RJ45 L = 5 m	☐

F

ComPacT NSX80/500 TM DC PV to NSX100/500 NA DC PV

Circuit Breakers and Switch-Disconnectors

Check the applicable square boxes ☐ and enter the appropriate information in the rectangles ☐

Circuit breaker ComPacT — Quantity ☐

NSX250-100 TM DC EP ☐	**NSX80 TM DC PV** ☐
NSX250-125 TM DC EP ☐	**NSX125 TM DC PV** ☐
NSX250-160 TM DC EP ☐	**NSX160 TM DC PV** ☐
NSX250-200 TM DC EP ☐	**NSX200 TM DC PV** ☐
NSX250-250 TM DC EP ☐	**NSX250 TM DC PV** ☐
NSX500-250 TM DC EP ☐	**NSX320 TM DC PV** ☐
NSX500-320 TM DC EP ☐	**NSX400 TM DC PV** ☐
NSX500-400 TM DC EP ☐	**NSX500 TM DC PV** ☐
NSX500-500 TM DC EP ☐	

Special connection and insulation accessories for circuit breakers (mandatory)

Upstream	connection plates with heatsink (x2)		☐
	special terminal shields		☐
Downstream	standard long terminal shields		☐
	or rear connections	short	☐
		long	☐
	+ short terminal shields		☐

Switch-disconnector ComPacT — Quantity ☐

NSX250-100 NA DC EP ☐	**NSX100 NA DC PV** ☐
NSX250-160 NA DC EP ☐	**NSX160 NA DC PV** ☐
NSX250-200 NA DC EP ☐	**NSX200 NA DC PV (160 A)** ☐
NSX250-250 NA DC EP ☐	
NSX630-320 NA DC EP ☐	**NSX200 NA DC PV (200 A)** ☐
NSX630-400 NA DC EP ☐	
NSX630-500 NA DC EP ☐	**NSX400 NA DC PV** ☐
NSX630-630 NA DC EP ☐	**NSX500 NA DC PV** ☐

Special connection and insulation accessories for switch-disconnectors (mandatory)

Upstream ≤ 200 A at 40 °C	connection plates with heatsink (x2)		☐
	special terminal shields		☐
	or interphase barriers		☐
Upstream = 200 A at 55 °C	connection plates with heatsink (x2) (long)		☐
	interphase barriers		☐
Upstream ≥ 400 A	connection plates with heatsink (x2)		☐
	special terminal shields		☐
	or interphase barriers		☐
Downstream	standard long terminal shields		☐
	or rear connections	short	☐
		long	☐
	+ short terminal shields		☐
	or interphase barriers		☐

Connection

NSX100/250 connectors	Steel 1.5▫ to 95▫ (< 160 A)		☐
	Aluminium 25▫ to 95▫ (< 250 A)		☐
	Aluminium 120▫ to 185▫ (< 250 A)		☐
NSX400/630 connectors	1 cable 35▫ to 300▫		☐
	2 cables 35▫ to 240▫		☐
Voltage measurement input	For bare cable connector	NSX100/250 ≤ 185▫	☐
	For bare cable connector	NSX400/630	☐

Right-angle terminal extensions						☐
Straight extensions	NSX100/250					☐
Edgewise extensions	NSX400/630					☐
Double L terminal extension				3P ☐	4P	☐
Spreader from 35 to 45 mm				3P ☐	4P	☐
Cu cable lugs	NSX100/250	120▫ ☐	150▫	☐	185▫	☐
	NSX400/630		240▫	☐	300▫	☐
Al cable lugs	NSX100/250		150▫	☐	185▫	☐
	NSX400/630		240▫	☐	300▫	☐
Insulation screen		45 mm	3P	☐	4P	☐
		70 mm	3P	☐	4P	☐
Interphase barriers				Set of 6		☐

Indication auxiliaries

Auxiliary contact	OF ☐	SD ☐	SDE ☐	Standard ☐	Low level	☐
SDE adapter (TM trip unit)						☐

Remote operation

Electrical operation	Motor mechanism		AC ☐	DC ☐	V	☐
Voltage releases	Instantaneous	MX	AC ☐	DC ☐	V	☐
		MN	AC ☐	DC ☐	V	☐
	Fixed time delay	MN	AC ☐	DC ☐	V	☐
	Adjust. time delay	MN	AC ☐	DC ☐	V	☐

Rotary handles

Direct	Black ☐	Red on yellow front	☐
	MCC conversion access. ☐	CNOMO conversion access.	☐
Extended	Black ☐	Red on yellow front	☐
		Telescopic handle for withdrawable device	☐
Indication auxiliary	1 early-break switch ☐	2 early-break switches	☐
		Wiring accessory for early-make switches	☐

Locking

Toggle (1 to 3 padlocks)	Removable ☐	Fixed Open/Close	☐
		Fixed Open	☐
Rotary handle	Keylock adapter (keylock not included)		☐
	Keylock Ronis 1351B.500 ☐	Profalux KS5 B24 D4Z	☐
Motor mechanism	Keylock adapter + Keylock Ronis (special)	NSX100/250	☐
	Keylock adapter (keylock not included)	NSX400/630	☐
	Keylock Ronis 1351B.500 ☐	Profalux KS5 B24 D4Z	☐

Interlocking

Mechanical	Toggle ☐	Rotary handle	☐
By key (2 keylocks, 1 key)	Keylock adapter (keylock not included)		☐
For rotary handle	Keylock Ronis 1351B.500 ☐	Profalux KS5 B24 D4Z	☐

Installation accessories

Front-panel escutcheon	Toggle	☐
	Rotary handle, motor mechanism, escutcheon collar; IP40	☐
Toggle cover		☐
Sealing accessories		☐
DIN rail adapter	NSX100/250	☐

Communication

	NSX Cord L = 0.35 m ☐	NSX Cord L = 1.3 m	☐
	NSX Cord U > 480 V AC L = 0.35 m ☐	NSX Cord L = 3 m	☐
BSCM			☐
Communicating motor mechanism 220-240 V			☐
Switchboard front display module FDM121			☐
FDM mounting accessory			☐
Ethernet interface + gateway			☐
Ethernet interface			☐
Modbus interface			☐
I/O application module	Qty 1 ☐	Qty 2	☐
Stacking accessory			☐
ULP line termination			☐
RJ45 connectors female/female ☐	Wire length RJ45 L = 0.3 m ☐	Wire length RJ45 L = 0.6 m	☐
	Wire length RJ45 L = 1 m ☐	Wire length RJ45 L = 2 m	☐
	Wire length RJ45 L = 3 m ☐	Wire length RJ45 L = 5 m	☐

F

Order Form

ComPacT NSX250/500 TM DC EP to NSX250/630 NA DC EP

Circuit Breakers and Switch-Disconnectors

Check the applicable square boxes ☐ and enter the appropriate information in the rectangles

Circuit breaker

ComPacT type		Quantity
	NSX250-100 TM DC EP	
	NSX250-125 TM DC EP	
	NSX250-160 TM DC EP	
	NSX250-200 TM DC EP	
	NSX250-250 TM DC EP	
	NSX500-250 TM DC EP	
	NSX500-320 TM DC EP	
	NSX500-400 TM DC EP	
	NSX500-500 TM DC EP	

Special connection and insulation accessories for circuit breakers (mandatory)

Upstream	connection plates with heatsink (x2)		
	special terminal shields		
Downstream	standard long terminal shields		
	or rear connections	short	
		long	
	+ short terminal shields		

Switch-disconnector

ComPacT type		Quantity
	NSX250-100 NA DC EP	
	NSX250-160 NA DC EP	
	NSX250-200 NA DC EP	
	NSX250-250 NA DC EP	
	NSX630-320 NA DC EP	
	NSX630-400 NA DC EP	
	NSX630-500 NA DC EP	
	NSX630-630 NA DC EP	

Special connection and insulation accessories for switch-disconnectors (mandatory)

Upstream ≤ 200 A at 40 °C	connection plates with heatsink (x2)		
	special terminal shields		
	or interphase barriers		
Upstream = 200 A at 55 °C	connection plates with heatsink (x2) (long)		
	interphase barriers		
Upstream ≥ 400 A	connection plates with heatsink (x2)		
	special terminal shields		
	or interphase barriers		
Downstream	standard long terminal shields		
	or rear connections	short	
		long	
	+ short terminal shields		
	or interphase barriers		

Connection

NSX100/250 connectors	Steel 1.5▫ to 95▫ (< 160 A)				
	Aluminium 25▫ to 95▫ (< 250 A)				
	Aluminium 120▫ to 185▫ (< 250 A)				
NSX400/630 connectors	1 cable 35▫ to 300▫				
	2 cables 35▫ to 240▫				
Voltage measurement input	For bare cable connector	NSX100/250 ≤ 185▫			
	For bare cable connector	NSX400/630			
Right-angle terminal extensions					
Straight extensions	NSX100/250				
Edgewise extensions	NSX400/630				
Double L terminal extension			3P		4P
Spreader from 35 to 45 mm			3P		4P
Cu cable lugs	NSX100/250	120▫		150▫	185▫
	NSX400/630			240▫	300▫
Al cable lugs	NSX100/250			150▫	185▫
	NSX400/630			240▫	300▫
Insulation screen		45 mm	3P		4P
		70 mm	3P		4P
Interphase barriers					Set of 6

Indication auxiliaries

Auxiliary contact	OF		SD		SDE	
	Standard		Low level			
SDE adapter (TM trip unit)						

Remote operation

Electrical operation	Motor mechanism		AC		DC		V
Voltage releases	Instantaneous	MX	AC		DC		V
		MN	AC		DC		V
	Fixed time delay	MN	AC		DC		V
	Adjust. time delay	MN	AC		DC		V

Rotary handles

Direct	Black		Red on yellow front	
	MCC conversion access.		CNOMO conversion access.	
Extended	Black		Red on yellow front	
	Telescopic handle for withdrawable device			
Indication auxiliary	1 early-break switch		2 early-break switches	
	Wiring accessory for early-make switches			

Locking

Toggle (1 to 3 padlocks)	Removable		Fixed Open/Close	
			Fixed Open	
Rotary handle	Keylock adapter (keylock not included)			
	Keylock Ronis 1351B.500		Profalux KS5 B24 D4Z	
Motor mechanism	Keylock adapter + Keylock Ronis (special)		NSX100/250	
	Keylock adapter (keylock not included)		NSX400/630	
	Keylock Ronis 1351B.500		Profalux KS5 B24 D4Z	

Interlocking

Mechanical	Toggle		Rotary handle	
By key (2 keylocks, 1 key)	Keylock adapter (keylock not included)			
For rotary handle	Keylock Ronis 1351B.500		Profalux KS5 B24 D4Z	

Installation accessories

Front-panel escutcheon	Toggle		
	Rotary handle, motor mechanism, escutcheon collar; IP40		
Toggle cover			
Sealing accessories			
DIN rail adapter	NSX100/250		

Communication

	NSX Cord L = 0.35 m		NSX Cord L = 1.3 m	
	NSX Cord U > 480 V AC L = 0.35 m		NSX Cord L = 3 m	
BSCM				
Communicating motor mechanism 220-240 V				
Switchboard front display module FDM121				
FDM mounting accessory				
Ethernet interface + gateway				
Ethernet interface				
Modbus interface				
I/O application module	Qty 1		Qty 2	
Stacking accessory				
ULP line termination				
RJ45 connectors female/female		Wire length RJ45 L = 0.3 m		Wire length RJ45 L = 0.6 m
		Wire length RJ45 L = 1 m		Wire length RJ45 L = 2 m
		Wire length RJ45 L = 3 m		Wire length RJ45 L = 5 m

F

ComPacT NSX630/1600 NA DC PV 4P, Fixed Version

Upside: Front Connection, 2 Kit Heatsink, Phase Separator Are Included

Name of customer: .....

Adress for delivery: .....

Requested delivery date: .....

Customer order no: .....

To indicate your choices,

Check the applicable square boxes ☐ and enter the appropriate information in the rectangles ☐

Switch-disconnector

Quantity ☐

Rating A ☐

Communication

COM module	Device (BCM-ULP)	☐	with Ethernet interface	☐
			with Ethernet interface + gateway	☐
			with Modbus interface	☐
Front Display Module (FDM121)		☐	Mounting accessory	☐
Breaker ULP Cord	L = 0.35 m	☐		
	L = 1.3 m	☐		
	L = 3 m	☐		
AD - external power-supply module		V ☐		

NSX630b/1600 DC PV connection

Horizontal rear connections	Bottom	☐
Vertical rear connections	Bottom	☐
Front connections	Bottom	☐
4 x 240° + bare cable connectors + shields	Bottom	☐
Vertical-connection adapters	Bottom	☐
Cable-lug adapters	Bottom	☐
Long connection shields [1] Top ☐	Bottom	☐
or interphase barriers	Bottom	☐

[1] Bottom long connection shield or Bottom interphase barriers kit is mandatory.

Indication contacts

OF - ON/OFF indication contacts (maixmum 3)

6 A-240 V AC qty ☐ Low level qty ☐

Remote operation

Electrical operation (NSX 630b/1600 DC PV)	Standard	☐	Communicating	☐		
	Power supply	AC ☐	DC ☐	V ☐		
Voltage releases	MX	AC ☐	DC ☐	V ☐		
	MN	AC ☐	DC ☐	V ☐		
	MN delay unit	Adjustable ☐	Non-adjustable ☐			

Locking

For electrically operated devices (NSX630b/1600 DC PV)	**VBP** - ON/OFF pushbutton locking (by transparent cover + padlocks)		☐
	OFF position locking:		
	VCPO - by padlocks		☐
	VSPO - by keylocks:		☐
	Keylock kit (w/o keylock)	Profalux ☐	Ronis ☐
	1 keylock	Profalux ☐	Ronis ☐
	2 identical keylocks, 1 key	Profalux ☐	Ronis ☐

Accessories

CDM - mechanical operation counter	☐
CDP - escutcheon	☐
CP - transparent cover for escutcheon	☐
OP - blanking plate for escutcheon	☐

F

Order Form
MasterPact NW DC

Name of customer: .....
Address for delivery: .....
.....
Requested delivery date: .....
Customer order no.: .....
To indicate your choices, check the applicable square boxes ☐
and enter the appropriate information in the rectangles ☐

Circuit breaker or switch-disconnector

		Qty
MasterPact type	**NW10**	☐
	NW20	☐
	NW40	☐
Circuit breaker	**N, H (up to 900 VDC), EPDC (11000 VDC)**	☐
Special PV switch-disconnectors	**HADCD-PV (NW20 or NW40 1000 VDC)**	☐
	HADCD-PV2 (NW32-1500 VDC FIXED)	☐
Switch-disconnector	**HA**	☐
Sensor version	**1250 to 2500 A**	☐
	2500 to 5400 A	☐
	5000 to 11000 A	☐
Version	**C, D, E**	☐
Type of equipment	Fixed	☐
	Drawout chassis	☐

Communication

COM module

Device (BCM-ULP)	☐	with Ethernet interface	☐	Cradle management with I/O application module (Chassis)	☐
		with Ethernet interface + gateway	☐		
		with Modbus interface	☐		

Front Display Module FDM121		☐	Mounting accessory ☐
Breaker ULP Cord	L = 0.35	☐	
	L = 1.3	☐	
	L = 3 m	☐	

Connection

Vertical	Standard version	Top	☒	Bottom	☒
Horizontal	Vertical connection is standard however the connectors can be rotated on-site conversion to horizontal connection (except on the NW40)				

Indication contacts

OF - ON/OFF indication contacts

Standard	4 OF 10 A/240 V AC and low level			
Additional	1 block of 4 OF	Max. 2	Qty	☐

EF - combined "connected/closed" contacts

	1 EF 6 A/240 V AC	Max. 8	Qty	☐
	1 EF low level	Max. 8	Qty	☐

SDE - "fault-trip" indication contact

Standard	1 SDE 6 A/240 V AC	☐			
Additional	1 SDE 6 A/240 V AC	☐	1 SDE low level		☐
Carriage switches	Low level	☐	6 A/240 V AC		☐
CE - "connected" position	Max. 3			Qty	☐
CD - "disconnected" position	Max. 3			Qty	☐
CT - "test" position	Max. 3			Qty	☐
AC - NW actuator for 6 CE - 3 CD - 0 CT additional carriage switches				Qty	☐

Remote operation

Electrical operation	**MCH** - gear motor	**V**	☐
	XF - closing voltage release	**V**	☐
	MX - opening voltage release	**V**	☐
	PF - "ready to close" contact Low level 6 A/240 V AC		☐
	BPFE - electrical closing pushbutton		☐
	RES - electrical reset option	**V**	☐
	RAR - automatic reset option		☐
Remote tripping	**MN** - undervoltage release	**V**	☐
	R - delay unit (non-adjustable)		☐
	Rr - adjustable delay unit		☐
	2e MX - shunt release	**V**	☐

Locking

VBP - ON/OFF pushbutton locking (by transparent cover + padlocks) ☐

OFF position locking:

VCPO - by padlocks ☐

VSPO - by keylocks	Keylock kit (w/o keylock)	Profalux	☐	Ronis	☐
	1 keylock	Profalux	☐	Ronis	☐
	2 identical keylocks, 1 key	Profalux	☐	Ronis	☐
	2 keylocks, different keys	Profalux	☐	Ronis	☐

Chassis locking in "disconnected" position:

VSPD - by keylocks	Keylock kit (w/o keylock)	Profalux	☐	Ronis	☐
		Kirk	☐	Castell	☐
	1 keylock	Profalux	☐	Ronis	☐
	2 identical keylocks, 1 key	Profalux	☐	Ronis	☐
	2 keylocks, different keys	Profalux	☐	Ronis	☐
	Optional connected/disconnected/test position locking				☐

VPEC - door interlock	On right-hand side of chassis	☐
	On left-hand side of chassis	☐
VPOC - racking interlock		☐
IPA - cable-type door interlock		☐
VDC - mismatch protection		☐
VIVC - shutter position indication and locking		☐
IBPO - racking interlock between crank and OFF pushbutton for NW		☐
DAE - automatic spring discharge before breaker removal for NW		☐

Accessories

VO - safety shutters on chassis	☐
CDM - mechanical operation counter	☐
CB - auxiliary terminal shield for chassis	☐
CDP - escutcheon	☐
CP - transparent cover for escutcheon	☐
OP - blanking plate for escutcheon	☐
KMT - Grounding kit	☐

F

Life Is On | Schneider Electric

Schneider Electric Industries SAS

35, rue Joseph Monier
CS 30323
92506 Rueil Malmaison Cedex
France

RCS Nanterre 954 503 439
Capital social 928 298 512 €
www.se.com

01/2021
© 2021 - Schneider Electric. All Rights Reserved.
All trademarks are owned by Schneider Electric Industries SAS or its affiliated companies.
Document reference: LVPED221002EN